



Installation and Operating instructions for  
**Control Cabinet Industrial PC  
C6640, C6650**

Version: 1.1  
Date: 2010-04-08

**BECKHOFF**



# Table of contents

<b>1. General instructions</b>	<b>3</b>
Notes on the Documentation	3
Liability Conditions	3
Description of safety symbols	3
Basic safety measures	4
Operator's obligation to exercise diligence	5
Operator requirements	5
<b>2. Product Description</b>	<b>6</b>
Appropriate Use	6
Opening the Housing	6
Configuration with 100-240 V <sub>AC</sub> Full Range Power Supply	8
Interfaces	9
PS/2 connections	9
Serial interface	9
Parallel interface	9
VGA connection	9
USB interfaces	9
Network connection 10/100MBit	9
Network connection 1Gbit (optional)	9
Sound-On-Board	9
Additional plug-in cards (optional)	9
<b>3. Installation Instructions</b>	<b>10</b>
Transport and Unpacking	10
Transport	10
Unpacking	10
Installation of the PC in the control cabinet	11
Earthing measures	11
Power Supply Connection with 100-240 V <sub>AC</sub> power supply unit	12
Mains Socket	12
Power supply cords	12
Power Supply Connection with 24 V <sub>DC</sub> power supply unit (optional)	13
Beckhoff power supply technology	13
Electrical Data	14
Pin assignment of the connectors	14
Pin assignment power supply	14
Pin assignment external wiring	15
Fitting the Cables	15
Fitting the connector	15
Connecting Power Supply	16
Cable Cross Sections	16
Configuration for shutting down the PC	16
PC_ON and Power Status functions	16
UPS output	16
UPS output function	16
Wiring diagram	17
Connecting devices	18
Connecting cables	18
Check voltage rating and connect.	18
<b>4. Operating Instructions</b>	<b>19</b>
Switching the Industrial PC on and off	19
First switching on and driver installation	19
Servicing and Maintenance	20
Cleaning the Industrial PC	20
Replacing the battery on the motherboard	20
Replacing the fan	20
Servicing	21

Shutting down	21
Disposal	21
<b>5. UPS Software Components (optional)</b>	<b>21</b>
Installation on the PC	21
Help files	21
<b>6. Troubleshooting</b>	<b>22</b>
Fault correction	22
Beckhoff Support & Service	23
Beckhoff branches and partner companies	23
Beckhoff Headquarters	23
Beckhoff Support	23
Beckhoff Service	23
<b>7. Assembly dimensions</b>	<b>24</b>
C6640, Configuration with 100-240 V <sub>AC</sub> Power Supply	24
C6640, Configuration with 24 V <sub>DC</sub> -Power Supply (optional)	25
C6650, Configuration with 100-240 V <sub>AC</sub> Power Supply	26
C6650, Configuration with 24 V <sub>DC</sub> -Power Supply (optional)	27
<b>8. Appendix</b>	<b>28</b>
Technical data	28
Approvals	28
FCC: Federal Communications Commission	28
Radio Frequency Interference Statement	28
FCC: Canadian Notice	28

# General instructions

## Notes on the Documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components.

## Liability Conditions

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. None of the statements of this manual represents a guarantee (Garantie) in the meaning of § 443 BGB of the German Civil Code or a statement about the contractually expected fitness for a particular purpose in the meaning of § 434 par. 1 sentence 1 BGB. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

© This documentation is copyrighted. Any reproduction or third party use of this publication, whether in whole or in part, without the written permission of Beckhoff Automation GmbH, is forbidden.

## Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.



**Danger**

This symbol is intended to highlight risks for the life or health of personnel.



**Warning**

This symbol is intended to highlight risks for equipment, materials or the environment.



**Note**

This symbol indicates information that contributes to better understanding.

## Basic safety measures

*Only switch the PC off after closing the software*

**Before the Industrial PC is switched off, software that is running must be properly closed.**

Otherwise it is possible that data on the hard disk is lost. Please read the section on [Switching the Industrial PC on and off](#).



**Warning**

**Switch off all parts of the equipment, then uncouple the fieldbus!**

Before opening the housing of the PC, and whenever the PC is being used for purposes other than plant control, such as during functional tests following repair, all parts of the equipment must first be switched off, after which the Industrial PC can be uncoupled from the plant.

Pulling out the fieldbus connection plug uncouples the PC (optional).

Items of equipment that have been switched off must be secured against being switched on again.

The Industrial PC's power supply unit must be supplied with 100 V<sub>AC</sub> - 240 V<sub>AC</sub> or 24 V<sub>DC</sub> (optional).



**Danger**

**Do not open the power supply unit while voltage is applied!**

The supply voltage must be switched off before the power supply unit housing is opened.



**Warning**

**Do not exchange any parts when under power!**

When components are being fitted or removed, the supply voltage must be switched off.

Fitting work on the Industrial PC can result in damage:

- If metal objects such as screws or tools fall onto operating circuit boards.
- If connecting cables internal to the PC are removed or inserted during operation.
- If plug-in cards are removed or inserted when the PC is switched on.

## Operator's obligation to exercise diligence

The operator must ensure that

- the Industrial PC is only used for its intended use (see also [Product Description](#)).
- the Industrial PC is in a sound condition and in working order during operation.
- the operation manual is in good condition and complete, and always available for reference at the location of the Industrial PC.
- the Industrial PC is operated, maintained and repaired only by sufficiently qualified and authorised personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating manual and in particular the safety notes contained herein.
- none of the safety and warning notes attached to the Industrial PC are removed, and that all notes remain legible.

*National regulations depending on the machine type*

Depending on the type of machine and plant in which the Industrial PC is being used, there will be national regulations for the control of such machines and plant that the operator must observe. These regulations cover, amongst other things, the intervals between inspections of the controller.

The operator must initiate such inspections in good time.



**Warning**

### **Only trained persons may open the Industrial PC housing!**

The operator is responsible for ensuring that only trained electrical staff opens the housing of the Industrial PC.

*Procedure in the event of a fault*

In the event of a fault in the Industrial PC, appropriate measures can be determined with the aid of the list in the [Fault correction](#) section.

## Operator requirements

*Read the operating instructions*

Every user of the Industrial PC must have read these operating instructions.

*Software knowledge*

Every user must be familiar with any of the functions of the software installed on the PC that he can reach.

# Product Description

## Appropriate Use

The C6640 and C6650 Industrial PCs are designed for mounting in control cabinets for machine and plant engineering applications.

## Opening the Housing

*View of the C6650,  
configuration with  
100-240 V<sub>AC</sub> power supply*



The housing cover is locked by a latch. After pressing the key (1) the cover can be folded up a little in the region of the connectors.

*Opening the housing*



After folding up the cover as shown, it can be pulled out of the slides in direction of the arrow.

*Taking off the housing cover*




Now the housing cover can be taken off completely, so providing access to the components.

The reassembly of the cover takes place in reverse order. Ensure that the cover engages into the slides (2).

### Configuration with 100-240 V<sub>AC</sub> Full Range Power Supply


View of the C6650 with 100-240 V<sub>AC</sub> full range power supply.

*Removing the card holder*

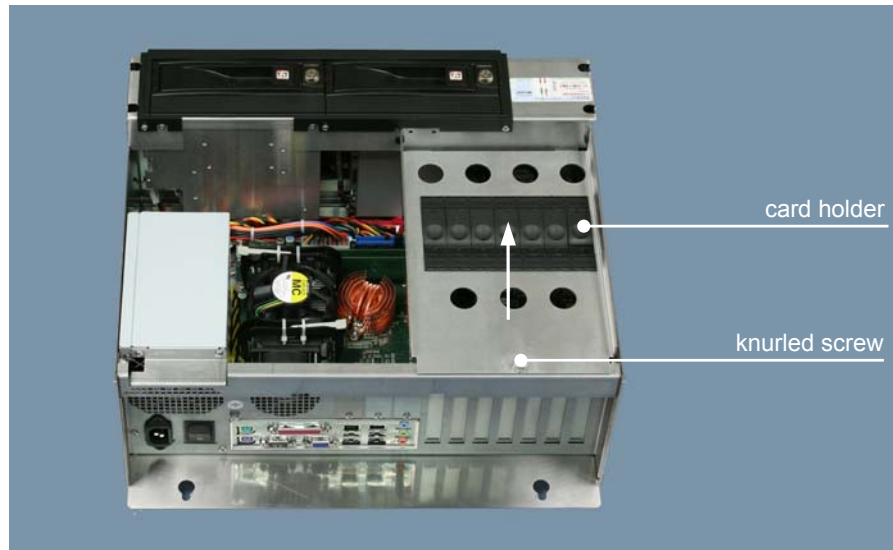

After loosening the knurled screw the card holder can be lifted off (see arrow).

*Components of the PCs*

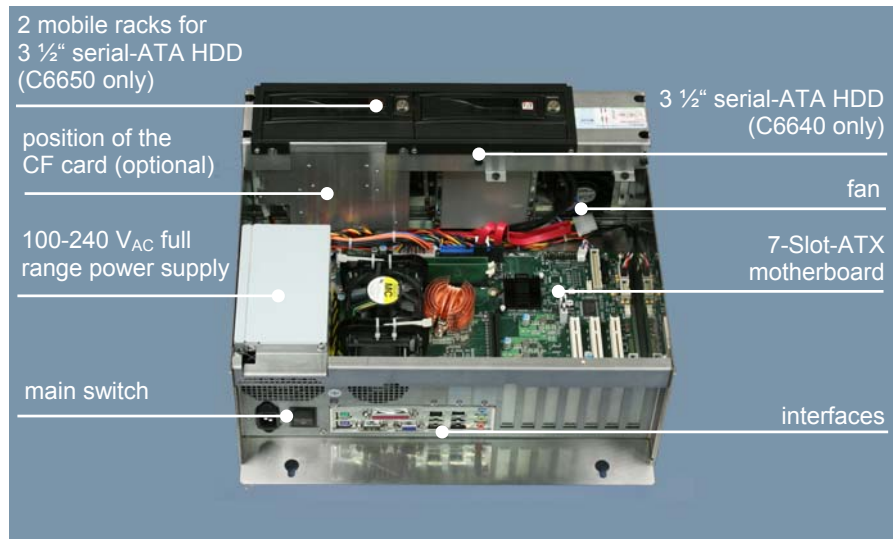

Under the housing cover there is a 7 slot computer core with standard ATX motherboard and different processor configuration.


The following configuration options of the motherboard are available:

Order option	Intel® Celeron® M	Intel® Pentium M	Intel® Core™ Duo	Intel® Core™ 2 Duo	Intel® Core™ 2 Quad
C6640-0000	1,5 GHz	1,8 GHz			
C6640-0010			2,0 GHz	2,16 GHz	
C6640-0020				2,53 GHz	2,26 GHz
C6650-0010			2,0 GHz	2,16 GHz	
C6650-0020				2,53 GHz	2,26 GHz

The connections of the Industrial PC are located on top of the housing.

## Interfaces

*Interfaces to the  
C6640, C6650*

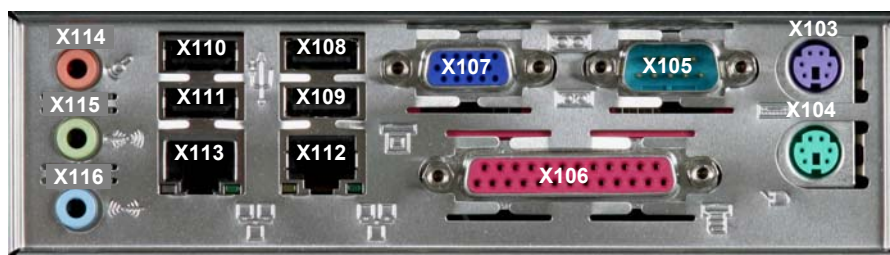

### PS/2 connections

*PS/2*

A PC keyboard can be connected to the upper PS/2 connector (**X103**), while the lower PS/2 connector (**X104**) allows a PS/2 mouse to be used.

### Serial interface

*RS 232  
COM1*

The basic version of the Industrial PC has 1 serial interface COM1, using the type RS232. The interface is brought to a 9 pin SUB-D plug connector (**X105**).

### Parallel interface

*Printer  
LPT1*

The parallel interface (**X106**) corresponds to the Centronics standard and is addressed by the software as LPT1.

### VGA connection

*VGA*

A 15-pin SUB-D socket connector (**X107**) allows a VGA monitor to be connected.

### USB interfaces

*USB1 – USB4*

The four USB interfaces (**X108 – X111**) are used to connect peripheral devices with USB connections. The USB2.0 standard is supported.

### Network connection 10/100MBit

*Network 10/100MBit*

The RJ-45 connector (**X112**) allows the PC to be connected to a 10/100MBit Local Area Network (LAN).

### Network connection 1Gbit (optional)

*Network 1GBit*

The RJ-45 connector (**X113**) allows the PC to be connected to a 1GBit Local Area Network (LAN).

### Sound-On-Board

*Sound*

The Industrial PC has a on-board-sound interface with the following connectors:  
Microphone jack (**X114**), Line Out jack (**X115**) and Line In jack (**X116**).

### Additional plug-in cards (optional)

*Type plate*

A type plate is located on top of the PC, providing information about the Industrial PC equipment as delivered.

# Installation Instructions

Please also refer to chapter [General instructions](#).

## Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

### Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, your Industrial PC should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



#### **Warning**

Danger of damage to the unit!

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

### Unpacking

Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

## Installation of the PC in the control cabinet

The C6640 and C6650 Industrial PCs are designed for mounting in control cabinets for machine and plant engineering applications.

The ambient conditions specified for operation must be observed (see chapter *Technical data*).



**Note**

**When the unit is installed in an enclosure, adequate space for ventilation and for opening the PC must be provided.**

**The clearance above and below the housing must be at least 50 mm in order to ensure adequate ventilation of the PC.**



**Warning**

**Extreme environmental conditions should be avoided as far as possible. Protect the PC from dust, moisture and heat.**

**The ventilation slots of the PC must not be covered.**

### Earthing measures

*Earthing measures*

Earthing connections dissipate interference from external power supply cables, signal cables or cables to peripheral equipment.



Establish a low-impedance connection from the earthing point on the PC housing to the central earthing point on the control cabinet wall, in which the computer is being installed.

## Power Supply Connection with 100-240 V<sub>AC</sub> power supply unit

*Supplied mains power unit* The Industrial PC is serially fitted with a 100-240 V<sub>AC</sub>, 50-60 Hz full range power supply unit .


*Current carrying capacity of the 100-240 V power supply unit*

Output voltages from the 100-240 V power supply unit	Current loading maximum
+3.3 V	16 A
+5 V stand by	2 A
+5 V	25 A
-5 V	0.3 A
+12 V	13 A
-12 V	0.8 A

### Mains Socket

A mains socket is located on top of the PC housing next to the main switch in order to connect the power supply.

*Mains socket and main switch at the PC housing*

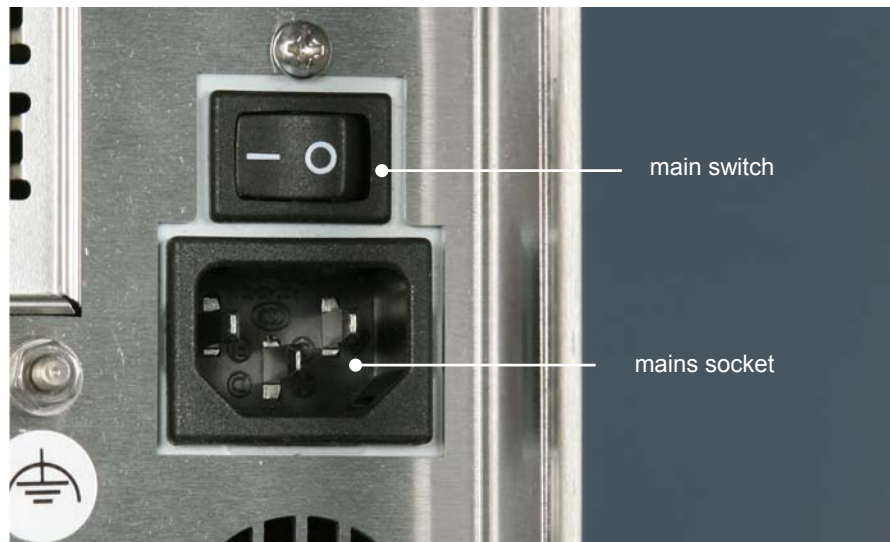

### Power supply cords

*Power cords Europe*

In the area Europe you use the provided cable with inlet connector for non-heating apparatus to connect the Industrial-PC to the power supply.

*Power cords USA / Canada*

In the area USA / Canada the power supply cable must show the following specifications according to the supply voltage:

Listed, Detachable, maximum 4.5 m (14.76 ft.) long; rated minimum 125 V, 10 A, Type SJT or Type SVT; one end terminates in NEMA 5-15P/-20P grounding-type attachment plug, other end in appliance coupler

or

Listed, Detachable, maximum 4.5 m (14.76 ft.) long; rated minimum 250 V, 10 A, Type SJT or Type SVT; one end terminates in NEMA 6-15P/-20P grounding-type attachment plug, other end in appliance coupler.

## Power Supply Connection with 24 V<sub>DC</sub> power supply unit (optional)

The Industrial PC is optionally fitted with a 24 V<sub>DC</sub> power supply unit .



**Note**

When the Industrial PC is provided with a power supply unit with integrated UPS (order option) you can realize an uninterruptible power supply (UPS) using the battery pack C9900-U330.




**Danger**

**Danger of Explosion if using other battery packs!**

### Beckhoff power supply technology

*Schematic diagram of power supply unit wirings*

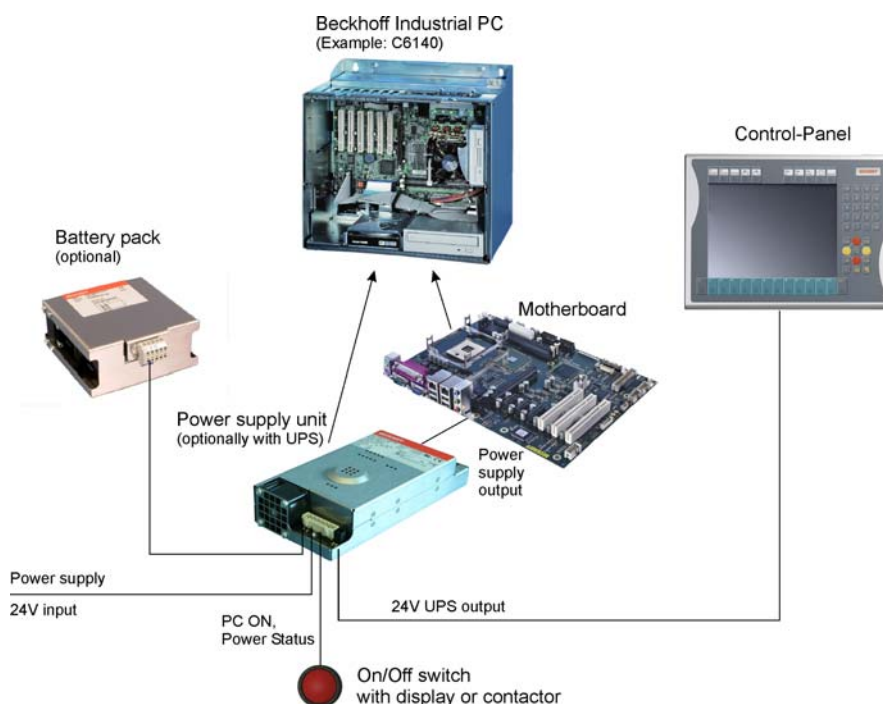

*Innovative solution for shutting down Industrial PCs*

Industrial PCs equipped with a UPS are in actual use frequently switched off by simply turning off the supply voltage. In this case the PC shuts down via the battery. However, over time this reduces the service life of the battery.

The new Beckhoff power supply technology approach addresses this problem and now offers the user the option of switching the PC off without the need for using the battery, thereby reducing the load on the battery.

In addition to the main switch this innovative solution uses an ON/OFF switch for the machine. Basically, the main switch remains switched on and provides the power supply for the PC during shutdown.

Once the PC has shut down, the PC power supply unit issues a signal to indicate that the process is complete and that the main voltage can be switched off. This can be done manually via a signal lamp connection or via a contactor. With this solution the main switch generally only has to be switched off if the control cabinet has to be opened.

In order to maintain a screen display for the Industrial PC in the event of a power failure, the power supply unit is equipped with a UPS output for connecting a Control Panel. This enables a power failure to be visualised and displayed to the user. Once the PC has shut down, the UPS output is

switched off in order to avoid total discharge of the battery.

For a detailed functional description please refer to section [Connecting Power Supply](#).

**Electrical Data**

Input voltage: 22 – 30 V DC  
 Current consumption: 10 A (22 V)  
 Output capacity: 150 W (max.)

*Current carrying capacity of the 24 V power supply unit*

Output voltages from the 24 V power supply unit	Current loading maximum
+ 5 V	14 A
- 5 V	0.3 A
+ 12 V	12 A
- 12 V	0.5 A
+ 3,3 V	12 A
5 V VSB	1.5 A

**Pin assignment of the connectors**

Two 5-pin plug connectors with CAGE CLAMP connection (see photo) are installed at the PC housing in order to connect the 24 V<sub>DC</sub> power supply and the external components.

*Plug connectors with CAGE CLAMP connection*



**Pin assignment power supply**

*Pin assignment for connecting the power supply and the battery pack (optional)*


X101



Pin	Function
1	- Battery Pack (with USV)
2	+
3	⊕
4	- 24V <sub>DC</sub>
5	+ Power Supply

### Pin assignment external wiring

*Pin assignment for connecting PC-ON, Power-Status und UPS-Output*

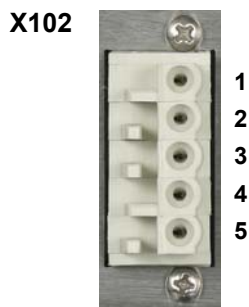

Pin	Function	
1	-	UPS-Output
2	+	
3	Power-Status	
4	PC-ON	
5	24V <sub>DC</sub> power supply +pole	

*Wiring in accordance with wiring diagram*

*Materials for assembly of the connector*

### Fitting the Cables

Fit the cables for the power supply of the Industrial PC, the connection of the battery pack as well as the connection of the power-switch in accordance with the wiring diagram, using the included material for assembling the connectors.

The example shows how to fit the 5-pole plug connector:



Female plug connector 5-pole



Strain relief housing

### Fitting the connector

*Fitting the connector to the cable*

The plug is fitted to the cable as follows:

1. Strip insulation from the cable ends (insulation length 8 – 9 mm).
2. Push the conductors into their mountings, simply by pushing them in as indicated on the pin assignment label.
3. Push the lower part (part **A**) of the strain relief housing onto the top of the female plug connector until it snaps into place.
4. Relieve the strain on the supply cable by fixing it in place with the cable clamp (part **C**) and fixing screws (part **D**).

*Applying the strain relief*



Fix the upper part (part **B**) of the strain relief housing by snapping it onto the lower part.

## Connecting Power Supply

The external wiring consists of the connection of the power supply, the battery pack (optional) and the connection of customized components for shutting down the PC.

### Cable Cross Sections

*Note cable cross sections, avoid voltage drop!*

For the connection of the power supply, wiring with a cable-cross-section of 1.5 mm<sup>2</sup> must be used.

With bigger distances between voltage source and PC, you take the voltage drop as a function of the cable-cross-section as well as voltage fluctuations of your distribution voltage into account, so that is secured that the voltage doesn't fall under 22 V at the power supply.

*Insert Fuse*

**The power supply must be protected with maximum 16 A.**

### Configuration for shutting down the PC

The connections for shutting down the Industrial PCs are established via the **PC\_ON** input and the **Power Status** output.

### PC\_ON and Power Status functions

- If the **PC\_ON** input is connected to 24 V via a switch, the PC shuts down according to the rules. The PC\_ON signal is inverted, i.e. the PC shuts down if the 24 V connection is live.
- If the **PC\_ON** input is *NOT* connected by the user, the PC can be booted in the familiar way by connecting the supply voltage and shut down via the battery by switching off the supply voltage.



**Warning**

This procedure significantly reduces the service life of the rechargeable battery and should therefore not be used.

- Once the PC has shut down, the **Power Status** output is switched from 24 V to 0 V. Via this output a signal lamp can be connected or a contactor for de-energising the whole system. The maximum load for the Power Status output is 0.5 A and a suitable fuse should be provided.

### UPS output

In order to maintain a screen display for the PC in the event of a power failure, the power supply unit is equipped with a **UPS output** for connecting a Control Panel. The maximum load for the output is 2.0 A.


### UPS output function

- The 24 V DC connection at the UPS output is live even after a power failure. The maximum load is 2.0 A.
- Once the PC has been de-energised via the UPS software, the **UPS output** is switched to 0 V. Any connected panel is thus switched off, and total discharge of the rechargeable battery is prevented.

### Wiring diagram

Wiring according to the wiring diagram (the circuit of PC\_ON and Power-Status is symbolical):

Wiring diagram power supply and external switch

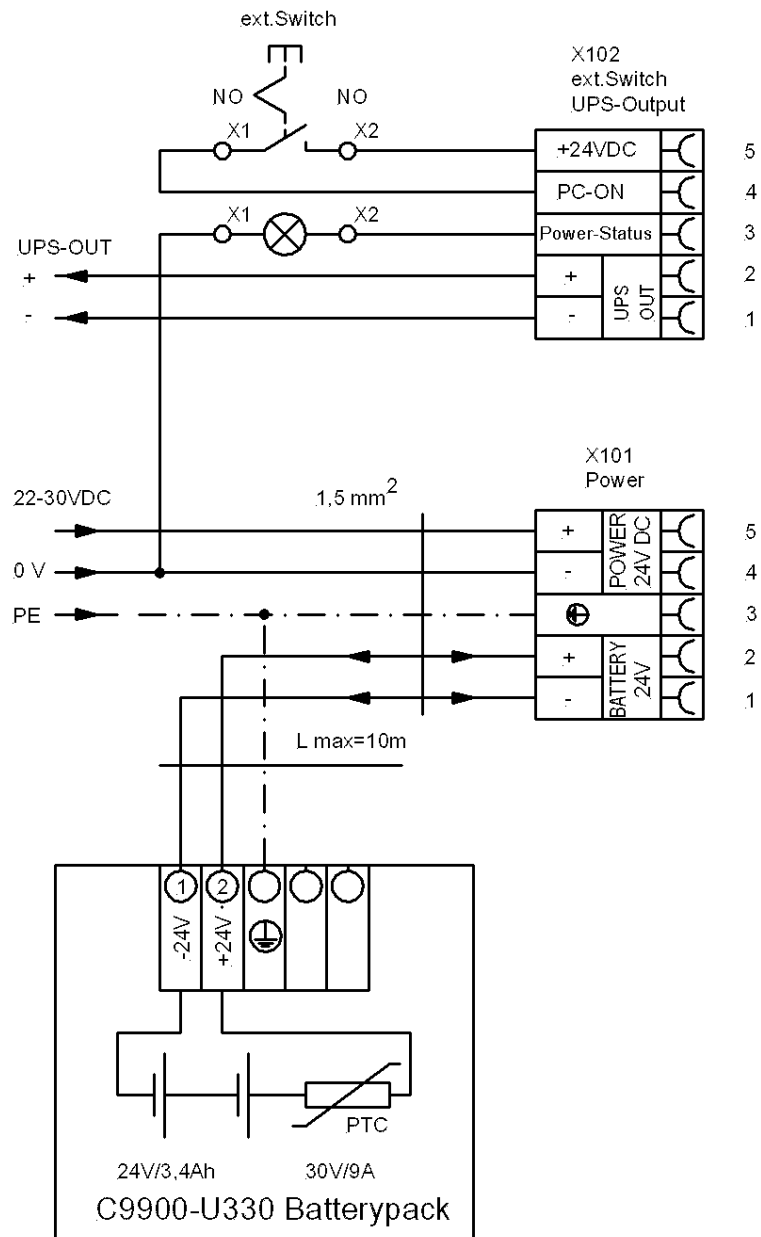

**i** Note

The battery pack can only be connected when the Industrial PC is provided with an integrated UPS (order option).

## Connecting devices



### Warning

The power supply plug must be withdrawn!

Please read the documentation for the external devices prior to connecting them.

During thunderstorms, plug connector must neither be inserted nor removed.

When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!

## Connecting cables

The connections are located at the top of the Industrial PC and are documented in the product description chapter.

When connecting the cables to the Industrial PC, proceed according to the following sequence:

- Switch off all the devices that are to be connected.
- Disconnect all the devices that are to be connected from the power supply.
- Connect all the cables between the Industrial PC and to the devices that are to be connected.
- Connect all data transfer cables (if present) to the appropriate plug-in receptacles of the data/telecommunication networks.
- Reconnect all devices to the power supply.

## Check voltage rating and connect.

### When fitted with 100-240 V<sub>AC</sub> 50/60 Hz power supply:

1. Check that the mains voltage is correct.
2. Insert the provided power supply cable into the Industrial PC's power supply socket. Then connect it to a power socket with a grounded earth connection.

### When fitted with the (optional) 24 V<sub>DC</sub> power supply unit:

1. Check that the external power supply is providing the correct voltage.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Cable](#)) into the Industrial PC's power supply socket. Then connect it to your external 24 V power supply.



### Warning

If a 24 V UPS is installed, the correct type of rechargeable battery must be used.

# Operating Instructions

Please also refer to chapter [General instructions](#).

## Switching the Industrial PC on and off

### Switch on

- The Industrial PC is switched on via the main switch beside the mains socket (see chapter [Power Supply Connection with 24 VDC power supply unit](#)).
- The Industrial PC with 24 V<sub>DC</sub> power supply equipment (optional) does not have its own mains switch. The Industrial PC will start when the equipment is switched on, or when it is connected to the power supply.

### Shutting down and switching off

When the plant is switched off, or when it is disconnected from its power supply, the Industrial PC will be switched off.

Control software such as is typically used on Industrial PCs permits various users to be given different rights. A user who may not close software may also not switch the Industrial PC off, since data can be lost from the hard disk by switching off while software is running.



**Warning**

### First shut down, then switch off the PC!

If the Industrial PC is switched off as the software is writing a file to the hard disk, the file will be destroyed. Control software typically writes something to the hard disk every few seconds, so that the probability of causing damage by switching off while the software is running is very high.



**Warning**

When you have shut down the Industrial PC, you have to switch off power supply for at least 10 seconds before rebooting the system. After resetting power supply the PC will start booting automatically.

## First switching on and driver installation

When you switch on the Industrial PC for the first time, the pre-installed operating system (optional) will be started. In this case, all the required drivers for any additional, optional hardware components ordered with the PC will already have been installed.

If the PC was ordered without operating system, you have to install the operating system and the driver software for any auxiliary hardware yourself. Please follow the instructions in the documentation for the operating system and the additional devices.

## Servicing and Maintenance

Please also refer to chapter [General instructions](#).

### Cleaning the Industrial PC



**Danger**

Switch off the Industrial PC and all connected devices, and disconnect the Industrial PC from the power supply.

The Industrial PC can be cleaned with a soft, damp cloth. Do not use any aggressive cleaning materials, thinners, scouring material or hard objects that could cause scratches.

### Replacing the battery on the motherboard

A used battery on the motherboard has to be replaced according to the rules of the board manufacturer.



**Danger**

Danger of Explosion if battery is incorrectly replaced. Replace only with same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

### Replacing the fan

Since the fan represents a consumable item in an Industrial PC, it must be replaced after a few years, depending on the number of operating hours.



**Note**

**For exchanging the fan cartridge, it can be necessary to remove the housing cover!**

#### Opening the fan cartridge

After loosening the knurled screw (1) the fan cartridge can be folded out in direction of the arrow.



#### Removing the fan

Disconnect the supply cable from the motherboard. Therefore it can be necessary to remove the housing cover.

After exchanging the fan cartridge the reassembly takes place in reverse order.



### Servicing

The Industrial PC requires no maintenance.

## Shutting down

### Disposal

*Dismantling the Industrial PC*

The device must be fully dismantled in order to dispose of it. The housing can be sent for metal recycling.

*Observe national electronics scrap regulations*

Electronic parts such as disk drives and circuit boards must be disposed of in accordance with national electronics scrap regulations.

## UPS Software Components (optional)

*Installing the UPS driver software*

For operating the power supply unit as a UPS, the UPS driver software and the associated UPS driver must be installed on the Industrial PC.

On delivery of the Beckhoff Industrial PC with operating system the software is already installed. Should the software not be installed on your PC, the drivers can be installed from the driver CD provided.

*Installation*

### Installation on the PC

To install the UPS driver software, execute file **Beckhoff\_UPS\_vx.xx.xx.exe** from the subdirectory of **UPS\...** from the CD provided on the Industrial PC (Driver-archive for the Industrial-PC, C9900-S700-xxxx).

The program is self-extracting and will guide the user through the installation routine.

*Beckhoff Information System*

### Help files

The driver software comes with a detailed help function. The help files can be called up either directly from the configuration register by clicking the Help button, or under via *Start > Programs > Beckhoff > UPS software components*.

# Troubleshooting

Please also refer to chapter [General instructions](#).

## Fault correction

<b>Fault</b>	<b>Cause</b>	<b>Procedure</b>
Nothing happens after the Industrial PC has been switched on	No power supply to the Industrial PC.	Check power supply cable.
	Other cause.	Call Beckhoff Service.
The Industrial PC does not boot fully	CD in the drive.	Remove CD and press any key.
	Setup settings are incorrect.	Check the setup settings.
	Other cause.	Call Beckhoff Service.
Computer boots, software starts, but control does not operate correctly	Cause of the fault is either in the software or in parts of the plant outside the Industrial PC.	Call the manufacturer of the machine or the software.
CD access error	Faulty CD.	Check CD in another drive.
	Faulty disk drive.	Call Beckhoff Service.
The Industrial PC functions only partially or only part of the time, e.g. no or dark picture, but disk drive responds when switching on	Defective components in the Industrial PC.	Call Beckhoff Service.

## Beckhoff Support & Service

Beckhoff and their partners around the world offer comprehensive support and service, guaranteeing fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Beckhoff branches and partner companies

Please contact your Beckhoff branch office or partner company for [local support and service](#) on Beckhoff products!

The contact addresses for your country can be found in the list of Beckhoff branches and partner companies: [www.beckhoff.com](http://www.beckhoff.com)

You will also find further [documentation](#) for Beckhoff components there.

### Beckhoff Headquarters

Beckhoff Automation GmbH  
Eiserstraße 5  
33415 Verl  
Germany

Phone: +49(0)5246/963-0  
Fax: +49(0)5246/963-198  
e-mail: [info@beckhoff.com](mailto:info@beckhoff.com)

### Beckhoff Support

Beckhoff offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with wide-ranging services:

- worldwide support
- design, programming and commissioning of complex automation systems
- training program for Beckhoff system components

Hotline: +49(0)5246/963-157  
Fax: +49(0)5246/963-9157  
e-mail: [support@beckhoff.com](mailto:support@beckhoff.com)

### Beckhoff Service

The Beckhoff service center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460  
Fax: +49(0)5246/963-479  
e-mail: [service@beckhoff.com](mailto:service@beckhoff.com)

*Quote the project number* If servicing is required, please quote the **project number** of your product.

# Assembly dimensions


The following pages show diagrams of the Industrial PC, with dimensions in mm.

## C6640, Configuration with 100-240 V<sub>AC</sub> Power Supply




**Warning**


The assembly of the unit must take place with the orientation diagrammed here.

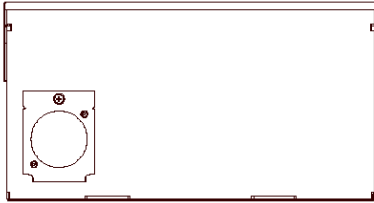


bottom view

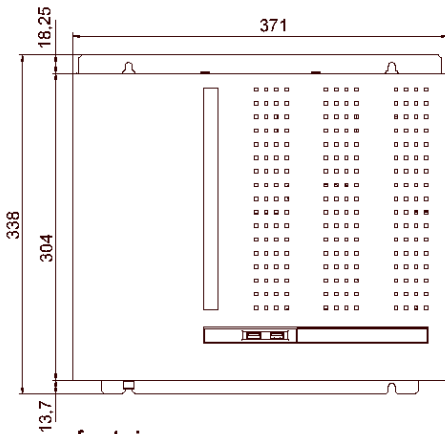


front view

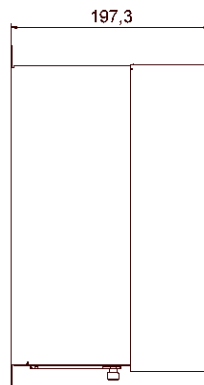

left view

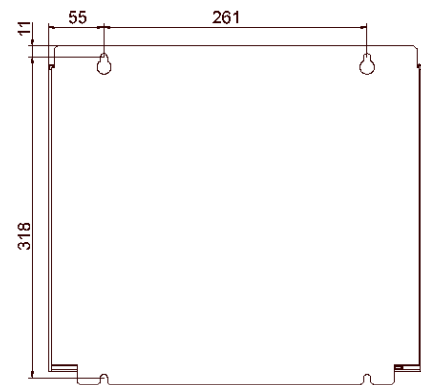

rear view

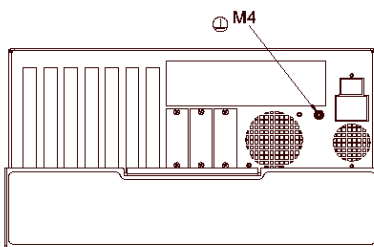


top view

### C6640, Configuration with 24 V<sub>DC</sub>-Power Supply (optional)




**Warning**

The assembly of the unit must take place with the orientation diagrammed here.

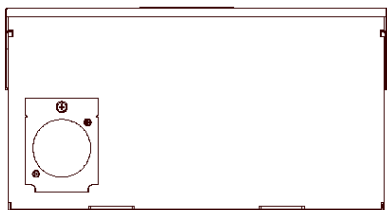


bottom view

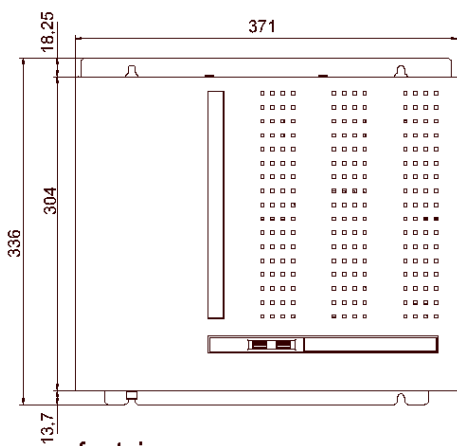


front view



left view

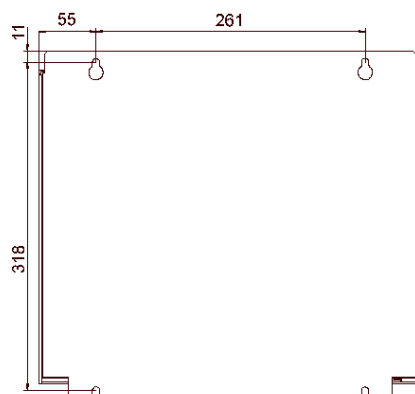

rear view

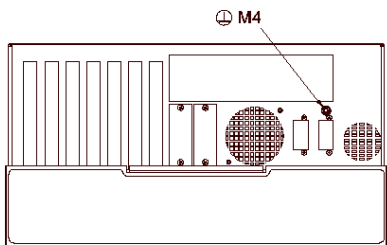

top view

### C6650, Configuration with 100-240 V<sub>AC</sub> Power Supply




**Warning**


The assembly of the unit must take place with the orientation diagrammed here.




bottom view

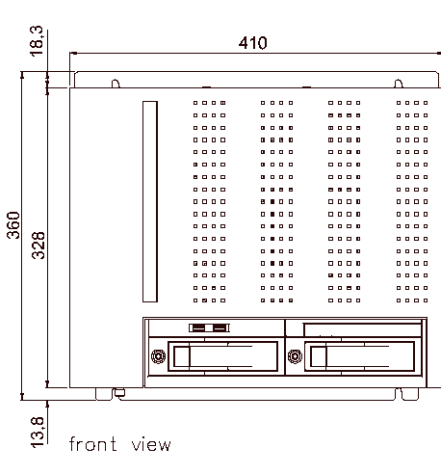


front view

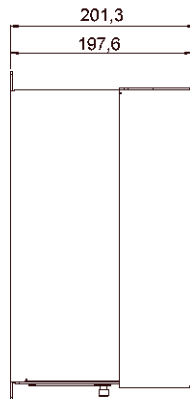

left view

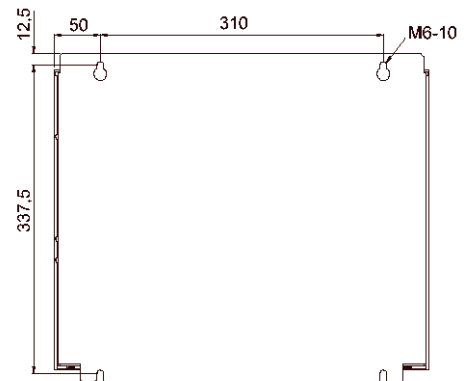

rear view

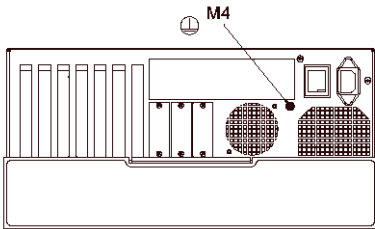

top view

### C6650, Configuration with 24 V<sub>DC</sub>-Power Supply (optional)




**Warning**


The assembly of the unit must take place with the orientation diagrammed here.




bottom view

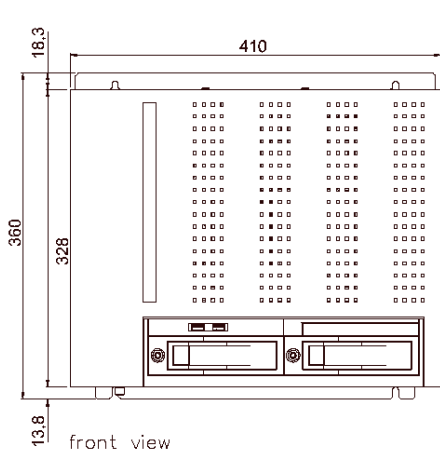


front view

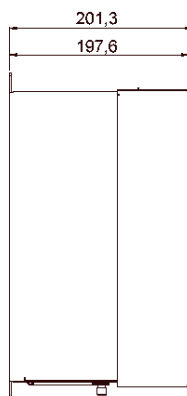

left view

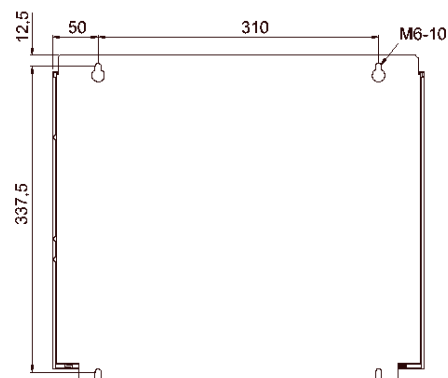

rear view

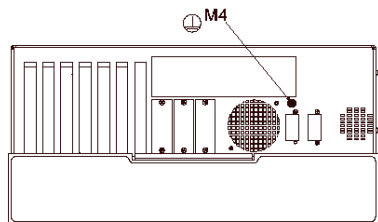

top view

# Appendix

## Technical data

*Industrial PC  
C6640, C6650*

**Dimensions (W x H x D):** see chapter [Assembly dimensions](#)

**Weight:** **C6640:** 11 kg (basic configuration)  
**C6650:** 12 kg (basic configuration)

*Do not use the PC in areas  
of explosive hazard*

**The Industrial PC may not be used in areas of explosive hazard.**

**The following conditions must be observed during operation:**

*Environmental conditions*

**Ambient temperature:** 0 to 55°C

**Atmospheric humidity:** Maximum 95%, non-condensing

*Shock resistance*

**Sinusoidal vibration:**

**(EN 60068-2-6)**

10 to 58 Hz: 0.035 mm

58 to 500 Hz: 0.5 G (~ 5 m/s<sup>2</sup>)

**During reading of CD-ROM:**

10 to 58 Hz: 0.019 mm

58 to 500 Hz: 0.25 G (~ 2.5 m/s<sup>2</sup>)

**Impact:**

**(EN 60068-2-27/ -29)**

5 G (~ 50 m/s<sup>2</sup>), duration: 30 ms

**During reading of CD-ROM:**

5 G (~ 50 m/s<sup>2</sup>), duration: 11 ms

*Protection class*

**Protection class:** IP20

*Power supply  
100-240 V<sub>AC</sub> power pack*

**Supply voltage:** 100-240 V<sub>AC</sub> 50-60 Hz

**Power consumption:** **C6640:** 65 W (for the basic version)  
**C6650:** 90 W (for the basic version)

*Power supply  
24 V<sub>DC</sub> power pack  
(optional)*

**Supply voltage:** 22 – 30 V<sub>DC</sub>

**Power consumption:** **C6640:** 65 W (for the basic version)  
**C6650:** 90 W (for the basic version)

*Electromagnetic  
Compatibility (EMC)*

**Interference resistance:** according to EN 61000-6-2

**Emitted resistance:** according to EN 61000-6-4

*Transport and storage*

The same values for atmospheric humidity and shock resistance are to be observed during transport and storage as in operation. The shock resistance during transport can be improved by means of suitably packing the Industrial PC. The ambient temperature during storage and transport must be between -20°C and +65°C.

## Approvals

### FCC: Federal Communications Commission

#### Radio Frequency Interference Statement

*FCC Approval for USA*

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### FCC: Canadian Notice

*CC Approval for Canada*

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.