

EN PS1011-2410-0000 Installation Manual  
DE PS1011-2410-0000 Installationsanleitung  
FR PS1011-2410-0000 Manuel d'installation  
ES PS1011-2410-0000 Manual de instalación

Power Supply 1-Phase, 24V, 10A, 240W  
Stromversorgung 1-Phase, 24V, 10A, 240W  
Alimentation d'Énergie 1-Phase, 24V, 10A, 240W  
Fuente De Alimentación 1-Phase, 24V, 10A, 240W

Doc. ID: PU-416.015.25-xxA (2020-06-03-MR1)



## Read this first! English

Before operating this device, please read this manual thoroughly and retain this manual for future reference! This device may only be installed and put into operation by qualified personnel. If damage or malfunction should occur during operation, immediately turn power off and send device to the factory for inspection. The device does not contain serviceable parts. The information presented in this document is believed to be accurate and reliable and may change without notice. For any clarifications the English translation will be used.

### **WARNING** Risk of electrical shock, fire, personal injury, or death:

Turn power off before working on the device and protect against inadvertent re-powering.  
Do not open, modify or repair the device.  
Use caution to prevent any foreign objects from entering the housing.  
Do not use in wet locations or in areas where moisture or condensation can be expected.  
Do not touch during power-on and immediately after power-off. Hot surfaces may cause burns.

## Vor Inbetriebnahme lesen! Deutsch

Bitte lesen Sie diese Warnungen und Hinweise sorgfältig durch, bevor Sie das Gerät in Betrieb nehmen. Bewahren Sie die Anleitung zum Nachlesen auf. Das Gerät darf nur durch fachkundiges und qualifiziertes Personal installiert werden. Bei Funktionsstörungen oder Beschädigungen schalten Sie sofort die Versorgungsspannung ab und senden das Gerät zur Überprüfung ins Werk. Das Gerät beinhaltet keine Servicebauteile. Die angegebenen Daten dienen allein der Produktbeschreibung und sind nicht als zugesicherte Eigenschaften im Rechtssinne aufzufassen. Im Zweifelsfall gilt der englische Text.

### **WARNUNG** Missachtung nachfolgender Punkte kann einen elektrischen Schlag, Brände, schwere Unfälle oder Tod zur Folge haben:

Schalten Sie die Eingangsspannung vor Installations-, Wartungs- oder Änderungsarbeiten ab und sichern Sie diese gegen unbeabsichtigtes Wiedereinschalten.  
Führen Sie keine Änderungen oder Reparaturen durch. Gerät nicht öffnen!  
Verhindern Sie das Eindringen von Fremdkörpern.  
Betreiben Sie das Gerät nicht in feuchter Umgebung oder in einer Umgebung, bei der mit Betauung oder Kondensation zu rechnen ist.  
Gehäuse nicht während des Betriebes oder kurz nach dem Abschalten berühren. Heiße Oberflächen können Verletzungen verursachen.

## A lire avant mise sous tension! Français

Veuillez lire ces instructions de montage et d'entretien avant de mettre l'alimentation sous tension. Conservez ce manuel qui vous sera toujours utile. Cette alimentation ne doit être installée que par du personnel qualifié et compétent. En cas de dommage ou dysfonctionnement, coupez immédiatement la tension d'alimentation et retournez l'appareil à l'usine pour vérification. ! L'alimentation ne contient pas de pièces échangeables Les données indiquées dans ce document servent uniquement à donner une description du produit et n'ont aucune valeur juridique. En cas de divergences, le texte anglais fait foi.

### **AVERTISSEMENT** Prendre en compte les points suivants, afin d'éviter toute détérioration électrique, incendie, dommage aux personnes ou mort:

Mettre l'alimentation hors tension avant toute intervention sur celle-ci et s'assurer qu'il n'y a pas risque de redémarrage.  
Ne pas ouvrir, modifier ou réparer l'alimentation.  
Veiller à ce qu'aucun objet ne rentre en contact avec l'intérieur de l'alimentation (tombones, pièces métalliques).  
Ne pas faire fonctionner l'appareil dans un environnement humide ou dans un environnement où il peut y avoir de la condensation.  
Ne pas toucher le carter pendant le fonctionnement ou directement après la mise hors tension. Surface chaude risquant d'entraîner des blessures.

## Lea primero! Español

Conserve este manual como referencia para futuras consultas. La fuente de alimentación solo puede ser instalada y puesta en funcionamiento por personal cualificado. Por favor lea detenidamente este manual antes de conectar la fuente de alimentación. Si se produce un fallo o mal funcionamiento durante la operación, desconecte inmediatamente la tensión de alimentación. En ambos casos, el equipo debe ser inspeccionado en fábrica. La información presentada en este documento es exacta y fiable en cuanto a la descripción del producto y puede cambiar sin aviso. En casa de duda, prevalece el texto inglés.

### **ADVERTENCIA** Riesgo de descarga eléctrica, incendio, accidente grave o muerte:

Desconectar la tensión de red antes de trabajar en la fuente de alimentación. Evite una posible reconexión involuntaria.  
No realizar ninguna modificación o reparación de la unidad. No abrir la unidad.  
Evitar la introducción en la carcasa de objetos extraños.  
No usar el equipo en ambientes húmedos. No operar el equipo en ambientes donde se espere la formación de rocío o condensación.  
No tocar durante el funcionamiento ni inmediatamente después del apagado. El calor de la superficie puede causar quemaduras graves.

## Product Description

The PS1011-2410-0000 is a DIN-rail mountable single-phase-input power supply, which provides a floating, stabilized and galvanically separated SELV/PELV/ES1 output voltage.

## Intended Use

This device is designed for installation in an enclosure and is intended for commercial use, such as in industrial control, process control, monitoring, measurement, Audio/Video, information or communication equipment or the like. Do not use this device in equipment where malfunction may cause severe personal injury or threaten human life.

If this device is used in a manner outside of its specification, the protection provided by the device may be impaired.

Without additional measures to reduce the conducted emissions on the output (e.g. by using a filter), the device is not suited to supply a local DC power network in residential, commercial and light-industrial environments. No restrictions apply for local DC power networks in industrial environments.

## Installation Instructions

Install device in an enclosure providing protection against electrical, mechanical and fire hazards. Install the device on a DIN-rail acc. to EN 60715 with the input terminals on the bottom of the device. Make sure that the wiring is correct by following all local and national codes. Use appropriate copper cables that are designed for a minimum operating temperature of 60°C for ambient temperatures up to +45°C, 75°C for ambient temperatures up to +55°C and 90°C for ambient temperatures up to +70°C. Ensure that all strands of a stranded wire enter the terminal connection. Unused screw terminals should be securely tightened.

The device is designed for pollution degree 2 areas in controlled environments. No condensation or frost is allowed.

The enclosure of the device provides a degree of protection of IP20. The enclosure does not provide protection against spilled liquids.

The device is designed for overvoltage category II zones. Below 2000m altitude the device is tested for impulse withstand voltages up to 4kV, which corresponds to OVC III according to IEC 60664-1.

The device is designed as "Class of Protection" I equipment according to IEC 61140. Do not use without a proper PE (Protective Earth) connection.

The device is suitable to be supplied from TN, TT or IT mains networks. The continuous voltage between the input terminal and the PE potential must not exceed 300Vac.

A disconnection means shall be provided for the input of the device.

The device is designed for convection cooling and does not require an external fan. Do not obstruct airflow and do not cover ventilation grid!

The device is designed for altitudes up to 5000m (16400ft). Above 2000m (6560ft) a reduction in output current is required.

Keep the following minimum installation clearances: 40mm on top, 20mm on the bottom, 5mm left and right side. Increase the 5mm to 15mm in case the adjacent device is a heat source. When the device is permanently loaded with less than 50%, the 5mm can be reduced to zero.

The device is designed, tested and approved for branch circuits up to 20A without additional protection device. For higher branch circuits use an additional protection device. If an external input protection device is utilized, do not use one smaller than a 10A B- or 6A C-characteristic to avoid a nuisance tripping of the circuit breaker.

The maximum surrounding air temperature is +70°C (+158°F). The operational temperature is the same as the ambient or surrounding air temperature and is defined 2cm below the device.

The device is designed to operate in areas between 5% and 95% relative humidity.

## Functional Description

The circuit is electronically protected against no-load, overload and short circuit and can supply any kind of loads, including unlimited inductive and capacitive loads. If capacitors with a capacitance >2F are connected, the unit might charge the capacitor in an intermittent mode.

Do not apply return voltages from the load to the output terminals higher than 35V.

The output voltage can be adjusted with a small flat-blade screwdriver on the front of the unit.

The green DC OK LED reports an output voltage above 18V of a running device.

The DC OK relay monitors the output voltage of a running device. The contact is closed when the output voltage is above 22V. Contact ratings: 60Vdc 0.3A, 30Vdc 1A, 30Vac 0.5A for resistive loads. The device is equipped with an over-temperature protection. In case of a high temperature, the output shuts down and starts automatically again after cooling off.

At heavy overloads (when output voltage falls below 13V), the device delivers continuous output current for 2-5s. After this, the output is switched off for 7s before a new start attempt with 1s is automatically performed. This cycle is repeated as long as the overload exists.

Do not parallel devices for higher output currents.

Same devices can be connected in series for higher output voltages. It is allowed to connect as many devices in series as needed, providing the sum of the output voltage does not exceed 150Vdc.


In case of an internal defect, a redundant circuit limits the maximum output voltage to 32V. The output shuts down and automatically attempts to restart.

## Technical Data


All values are typical figures specified at 230Vac 50Hz input voltage, 24V 10A output load, 25°C ambient temperature and after a 5 minutes run-in time unless otherwise noted.

|                                   |   |                       |
|-----------------------------------|---|-----------------------|
| <b>Output voltage</b>             | DC 24V                                  | Nominal               |
| <b>Adjustment range</b>           | 24 – 28Vdc                              | Factory setting 24.1V |
| <b>Output current</b>             | 10.0 – 8.6A                             | Below +55°C ambient   |
|                                   | 6.25 – 5.4A                             | At +70°C ambient      |
|                                   | Derate linearly between +55°C and +70°C |                       |
| <b>Input voltage AC</b>           | AC 100 - 240V                           | ±10%                  |
| <b>Mains frequency</b>            | 50 – 60Hz                               | ±6%                   |
| <b>Input current AC</b>           | 2.15 / 1.15A                            | At 120 / 230Vac       |
| <b>Power factor</b>               | 0.99 / 0.95                             | At 120 / 230Vac       |
| <b>Input inrush current</b>       | 14 / 26A pk                             | At 40°C, 120 / 230Vac |
| <b>Efficiency</b>                 | 94.0 / 95.2%                            | At 120 / 230Vac       |
| <b>Power losses</b>               | 15.3 / 12.1W                            | At 120 / 230Vac       |
| <b>Hold-up time</b>               | 37 / 37ms                               | At 120 / 230Vac       |
| <b>Temperature range</b>          | -25 to +70°C                            |                       |
| <b>Max. wire size (litz wire)</b> | 4mm <sup>2</sup>                        | Power terminals       |
| <b>Wire size AWG</b>              | AWG 20-10                               | Power terminals       |
| <b>Max. wire diameter</b>         | 2.8mm                                   | Power terminals       |
| <b>Wire stripping length</b>      | 7mm / 0.28inch                          | Power terminals       |
| <b>Tightening torque</b>          | 1Nm / 9lb.inch                          | Power terminals       |
| <b>Max. wire size (litz wire)</b> | 1.5mm <sup>2</sup>                      | DC-OK terminals       |
| <b>Wire size AWG</b>              | AWG 24-16                               | DC-OK terminals       |
| <b>Max. wire diameter</b>         | 1.6 mm                                  | DC-OK terminals       |
| <b>Wire stripping length</b>      | 7mm / 0.28inch                          | DC-OK terminals       |
| <b>Size (wxhxd)</b>               | 49x124x124mm Without DIN-rail           |                       |
| <b>Weight</b>                     | 540g / 1.2lb                            |                       |

## Functional Diagram

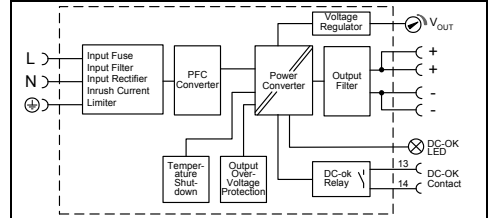

## Output Characteristic

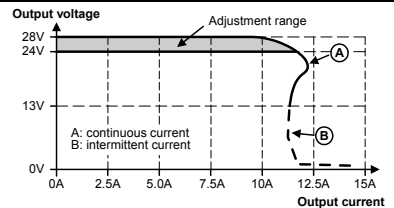

## Temperature Range

