

Documentation | EN

ED1829

EtherCAT Terminal, 16-channel digital input, 24 V DC, 3 ms,
positive / ground switching, push-in

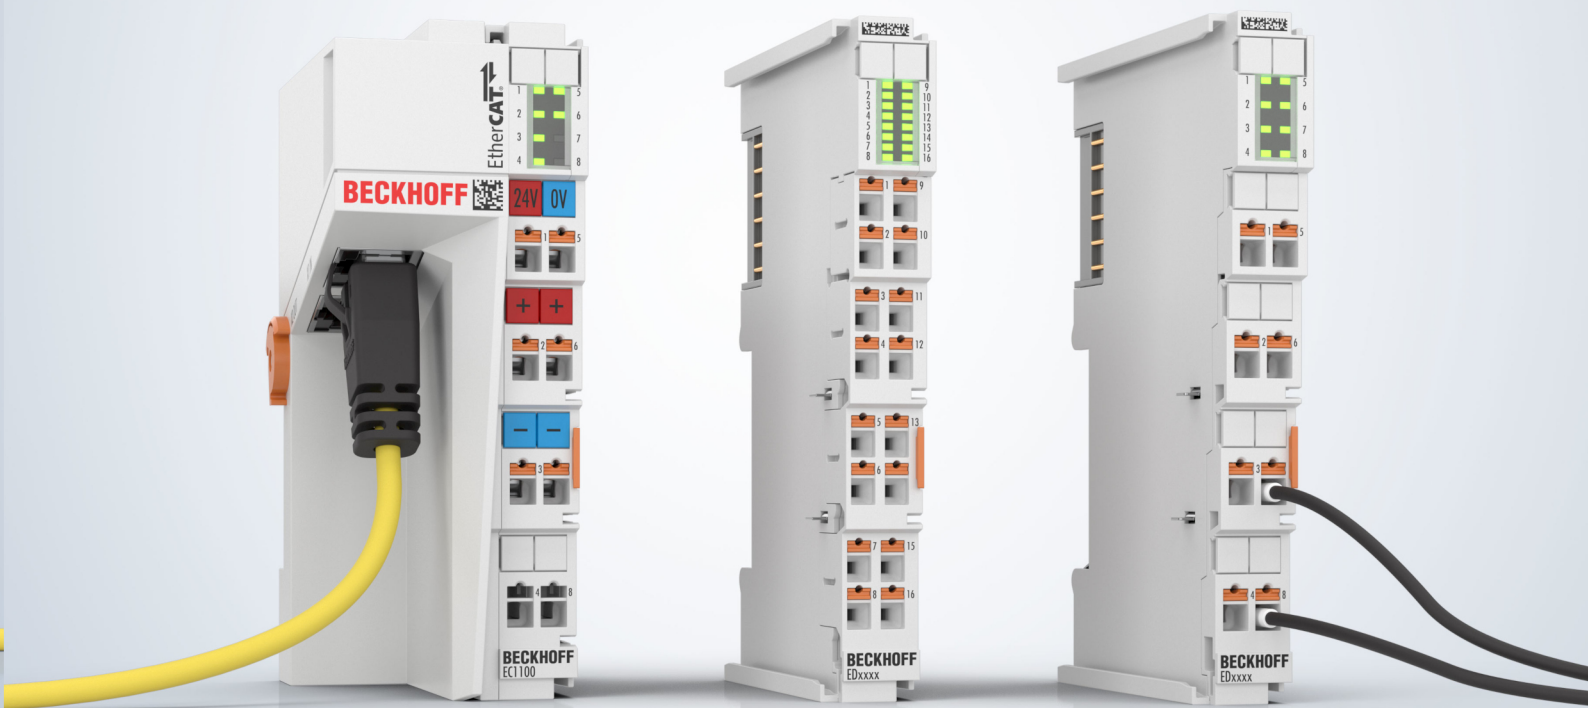


Table of contents

1 Foreword	5
1.1 Product overview	5
1.2 Notes on the documentation	6
1.3 Guide through documentation	7
1.4 Safety instructions	8
2 Product description	9
2.1 ED1829	9
2.1.1 Technical data	10
2.1.2 Connection and LEDs	12
3 Mounting and wiring	13
3.1 Notes on ESD protection	13
3.2 Mounting rail installation	14
3.3 Positioning of passive terminals	17
3.4 Installation positions	18
3.5 Push-in connection technology (EC/ED/EFxxxx)	21
3.5.1 EC/ED/EFxxxx wiring with push-in connection technology	22
3.5.2 Shielding	22
3.6 Note on power supply	23
3.7 Disposal	24
4 Commissioning	25
5 Appendix	26
5.1 Firmware compatibility	26
5.2 Documentation issue status	27
5.3 Support and Service	28

1 Foreword

1.1 Product overview

EtherCAT Terminal, 16-channel digital input, 24 V DC, 3 ms, positive/ground switching, push-in

This documentation covers the following products:

ED1829 |  9 | EtherCAT Terminal, 16-channel digital input, 24 V DC, 3 ms, positive/ground switching, push-in

Use the tabular product overview or the product finder to find the right product for your application (<https://www.beckhoff.com/IO>).

1.2 Notes on the documentation

Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

The qualified personnel is obliged to always use the currently valid documentation.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

Trademarks

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.



EtherCAT® and EtherCAT P® are registered trademarks and patented technologies, licensed by Beckhoff Automation GmbH, Germany.

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Third-party brands

Trademarks of third parties may be used in this documentation. You can find the trademark notices here:

<https://www.beckhoff.com/trademarks>

1.3 Guide through documentation

NOTICE



Further components of documentation

This documentation describes device-specific content. It is part of the modular documentation concept for Beckhoff I/O components. For the use and safe operation of the device / devices described in this documentation, additional cross-product descriptions are required, which can be found in the following table.

Title	Description
EtherCAT System Documentation (PDF)	• System overview • EtherCAT basics • Cable redundancy • Hot Connect • EtherCAT devices configuration
Infrastructure for EtherCAT/Ethernet (PDF)	Technical recommendations and notes for design, implementation and testing
Software Declarations I/O (PDF)	Open source software declarations for Beckhoff I/O components

The documentations can be viewed at and downloaded from the Beckhoff website (www.beckhoff.com) via:

- the “Documentation and Download” area of the respective product page,
- the [Download finder](#),
- the [Beckhoff Information System](#).

If you have any suggestions or proposals for our documentation, please send us an e-mail stating the documentation title and version number to: documentation@beckhoff.com

1.4 Safety instructions

Safety regulations

Please note the following safety instructions and explanations!

Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

Exclusion of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

Signal words

The signal words used in the documentation are classified below. In order to prevent injury and damage to persons and property, read and follow the safety and warning notices.

Personal injury warnings

DANGER

Hazard with high risk of death or serious injury.

WARNING

Hazard with medium risk of death or serious injury.

CAUTION

There is a low-risk hazard that could result in medium or minor injury.

Warning of damage to property or environment

NOTICE

The environment, equipment, or data may be damaged.

Information on handling the product



This information includes, for example:
recommendations for action, assistance or further information on the product.

2 Product description

2.1 ED1829



EtherCAT Terminal, 16-channel digital input, 24 V DC, 3 ms, positive/ground switching, push-in

The ED1829 digital input terminal acquires the binary 24 V DC control signals from the process level and transmits them, in electrically isolated form, to the higher-level automation device.

The EtherCAT Terminal contains 16 channels whose signal state is indicated by LEDs. Due to the flexible switching logic, each channel can be used for positive or ground switching. The switching mode is determined automatically by the connected reference potential without configuration. This creates two defined voltage ranges in which the signal is reliably recognized as logical "1."

Special features:

- intelligent switching logic per channel: positive or ground switching without configuration
- no bouncing due to mechanical switches thanks to 3 ms input filter
- space-saving use in the control cabinet
- direct connection of multi-channel sensors using 1-wire connection technology in the smallest space

The ED-series EtherCAT Terminals have push-in connection technology which makes wiring easy and tool-free.

2.1.1 Technical data

General	ED1829
Number of channels Total	16
Internal communication protocol	EtherCAT

Digital input Standard digital Positive switching	ED1829
Number of channels	max. 16
Connection technology	1-wire
Signal range Nominal	24 V DC
Signal voltage "0"	9...15 V DC at 24 V DC
Signal voltage "1"	19...24 V DC at 24 V DC
Input filter	typ. 3 ms
Input current	typ. 2.5 mA at 24 V DC

Digital input Standard digital Ground switching	ED1829
Number of channels	max. 16
Connection technology	1-wire
Signal range Nominal	24 V DC
Signal voltage "0"	9...15 V DC at 24 V DC
Signal voltage "1"	0...5 V DC at 24 V DC
Input filter	typ. 3 ms
Input current	typ. 2.5 mA at 24 V DC

XFC	ED1829
Distributed clocks	no
Timestamp	no
Oversampling	no

Supply and electrical isolation	ED1829
Electronics Supply voltage	via E-bus, via power contacts
E-bus Current consumption	95 mA
Power contacts Input voltage	24 V DC (-15%/+20%)
Power contacts Current carrying capacity	max. 10 A
Power contacts Current consumption	typ. 5 mA + load
Power contacts Output voltage	corresponds to Power contacts Input voltage
Electrical isolation Channel/channel	no
Electrical isolation Channel/bus	functional, 707 V DC (type test)

Environmental conditions	ED1829
Operating temperature	-25...+60°C
Storage temperature	-40...+85°C
Relative humidity	95%, no condensation
Installation position	variable

Standards and approvals	ED1829
Vibration resistance	conforms to EN 60068-2-6
Shock resistance	conforms to EN 60068-2-27
EMC immunity	conforms to EN 61000-6-2
EMC emission	conforms to EN 61000-6-4
Markings*)	CE
*) Real applicable approvals/markings, see name plate on the side (product labeling)	

Housing data	ED-12-16pin
Weight	approx. 60 g
Protection rating	IP20
Material	polycarbonate
Dimensions Width (single)	15 mm
Dimensions Width (stacked)	12 mm
Dimensions Height	100 mm
Dimensions Depth	65 mm
Installation Terminal/back wall	DIN rail, 35 mm (EN 60715)
Installation Terminal/terminal	double slot and key connection
Pluggable wiring level	no
Connection mechanism	push-in
Connection cross-section Solid wire	0.08...1.5 mm ²
Connection cross-section Stranded wire	0.25...1.5 mm ²
Connection cross-section With ferrule	0.14...0.75 mm ²
Connection cross-section AWG Solid wire	AWG28...16
Connection cross-section AWG Stranded wire	AWG22...16
Connection cross-section AWG With ferrule	AWG26...19
Stripping length	8...9 mm
Power contact "+" (left)	yes
Power contact "+" (right)	yes
Power contact "-" (left)	yes
Power contact "-" (right)	yes
Power contact "⊥" (left)	no
Power contact "⊥" (right)	no
Insertion lock for power contact "⊥"	yes

2.1.2 Connection and LEDs

⚠ WARNING

Risk of injury through electric shock and damage to the device!

Bring the bus terminal system into a safe, de-energized state before beginning to mount, disassemble, or wire the bus terminals!

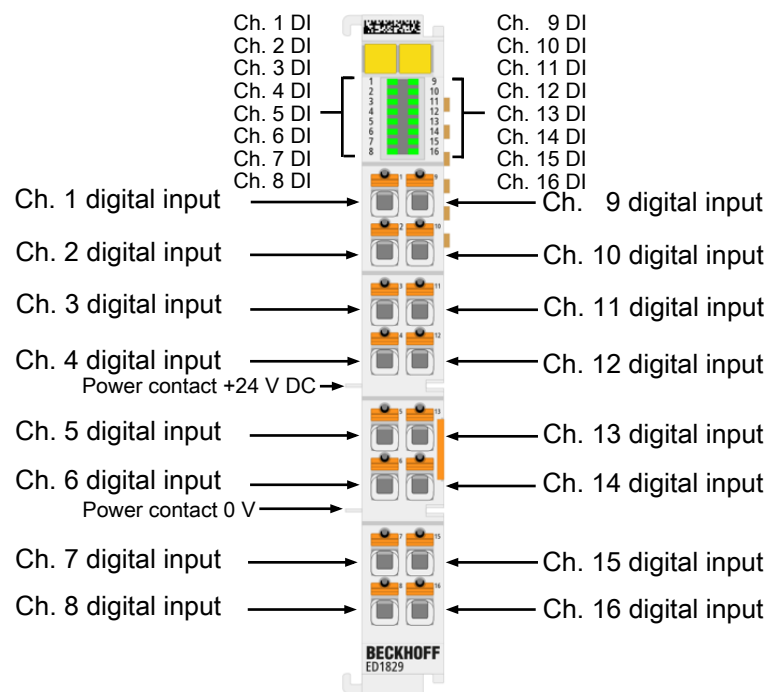


Fig. 1: ED1889

Connection

Terminal point		Description
Abbreviation	No.	
Ch 1	1	input 1
...	...	...
Ch 16	16	input 16

LEDs

Name	No.	Color	Meaning	
Input status Ch1 ...16	1...16	green	off	signal voltage "0": 9...15 V _{DC}
			on	positive switching: signal voltage "1" (19...24 V _{DC}) ground switching: signal voltage "1" (0...5 V _{DC})

3 Mounting and wiring

3.1 Notes on ESD protection

NOTICE

Devices can be destroyed by electrostatic charging!

The devices contain electrostatically sensitive components which can be damaged by improper handling.

- When handling the components, take care to avoid electrostatic discharge; also, prevent direct contact with the spring-loaded contacts (see illustration).
- Contact with highly insulating materials (synthetic fibers, plastic films, etc.) should be avoided when simultaneously handling components.
- When handling the components, ensure proper earthing of the environment (workplace, packaging, and persons).
- Each bus station must be terminated with the [EL9011](#) or [EL9012](#) end cap on its right side to guarantee the protection rating and ESD protection.

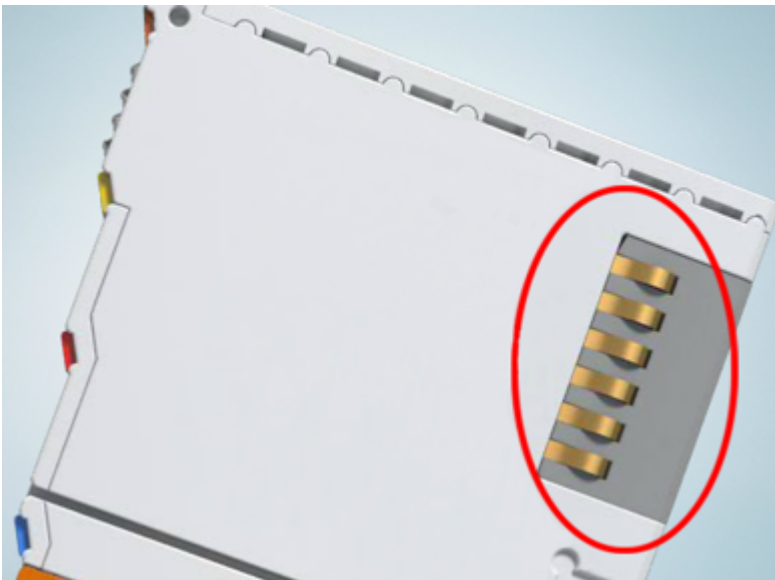


Fig. 2: Spring contacts of Beckhoff I/O components

3.2 Mounting rail installation

⚠ WARNING

Risk of injury through electric shock and damage to the device!

Bring the bus terminal system into a safe, de-energized state before beginning to mount, disassemble, or wire the bus terminals!

The bus terminal system is designed for installation in a control cabinet or junction box.

Installation

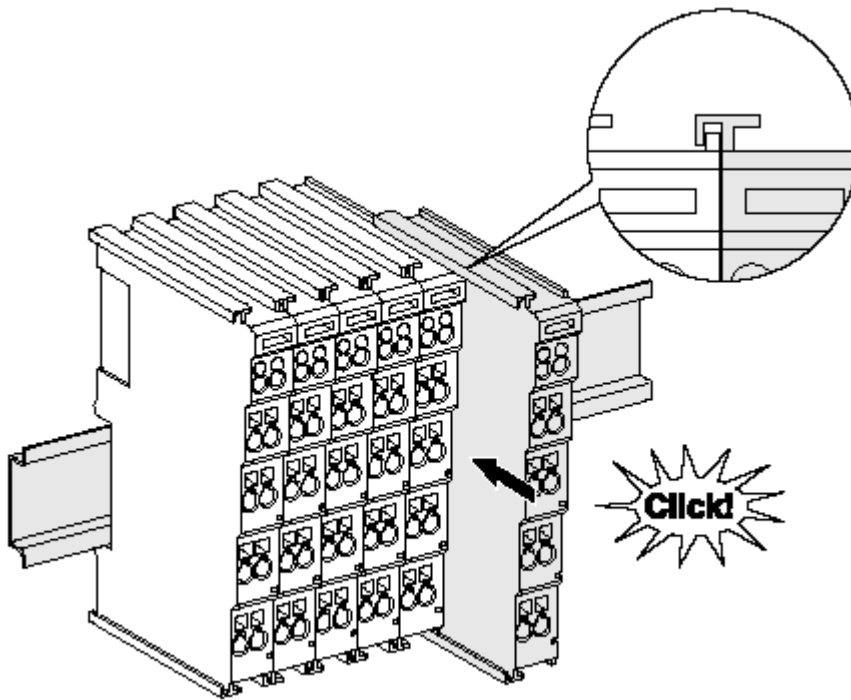


Fig. 3: Installation on the mounting rail

The bus couplers and bus terminals are attached to commercially available 35 mm mounting rails (DIN rail according to EN 60715) by applying slight pressure:

1. First attach the fieldbus coupler to the mounting rail.
2. The bus terminals are now attached on the right-hand side of the fieldbus coupler. To do this, connect the components with the slot and key and push the terminals against the mounting rail until the latch audibly engages on the mounting rail.

If you snap the terminals onto the mounting rail first and then push them next to each other without the slot and key engaging, no functional connection will be established! When correctly assembled, no significant gap should be visible between the housing units.

● Fastening the mounting rails

i The locking mechanism of the terminals and couplers protrudes into the profile of the mounting rail. When installing the components, make sure that the locking mechanism doesn't come into conflict with the fixing bolts of the mounting rail. When fastening mounting rails with a height of 7.5 mm under the terminals and couplers, use flat fastening components such as countersunk head screws or blind rivets.

NOTICE

Earth the mounting rail!

Make sure the mounting rail is properly earthed.

Connections within a bus terminal block

The electric connections between the bus coupler and the bus terminals are made automatically by joining the components:

- The six spring-loaded contacts of the E-bus/K-bus deal with the data transfer and the supply of the bus terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminal points on the bus coupler (up to 24 V) or via power supply terminals for higher voltages.

i Power contacts

When configuring a bus terminal block, note the contact assignments of the individual bus terminals, as some types

- do not loop through the power contacts or do not loop them through completely (e. g. analog bus terminals or digital 4-channel bus terminals),
- the power contacts are disconnected, thus marking the start of a new supply rail (power supply terminals).

Power contact $\perp$

The power contact marked $\perp$ (ground connection in accordance with IEC 60417-5017) can be used as a ground. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

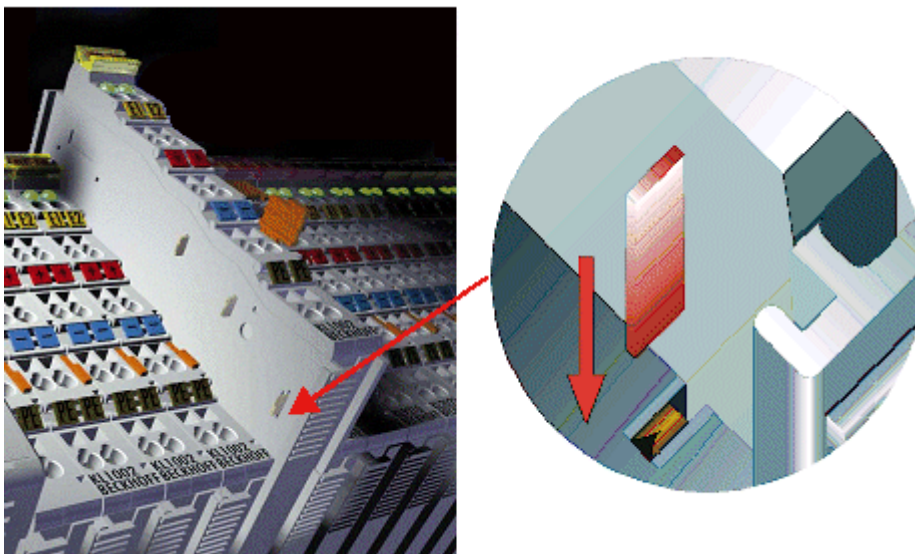


Fig. 4: Power contact on the left

⚠ WARNING

Risk of injury from electric shock!

The power contact marked $\perp$ may not be used for other potentials!

NOTICE

Risk of damage to the device

Note that, for electromagnetic compatibility, the earth contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage to the terminal (e.g. disruptive discharge to the earth line during insulation testing of a consumer with a rated voltage of 230 V). For insulation testing, disconnect the earth supply line at the bus coupler or the power supply terminal! In order to decouple further supply points for testing, these power supply terminals can be released and pulled at least 10 mm from the group of terminals.


Disassembly

Fig. 5: Removal from mounting rail

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

1. Pull down the terminal at its orange-colored straps from the mounting rail by approx. 1 cm. The rail locking of this terminal is automatically released, and you can now pull the terminal out of the bus terminal block with little effort.
2. To do this, grasp the unlocked terminal simultaneously at the top and bottom of the housing surfaces with your thumb and index finger and pull it out of the bus terminal block.

3.3 Positioning of passive terminals

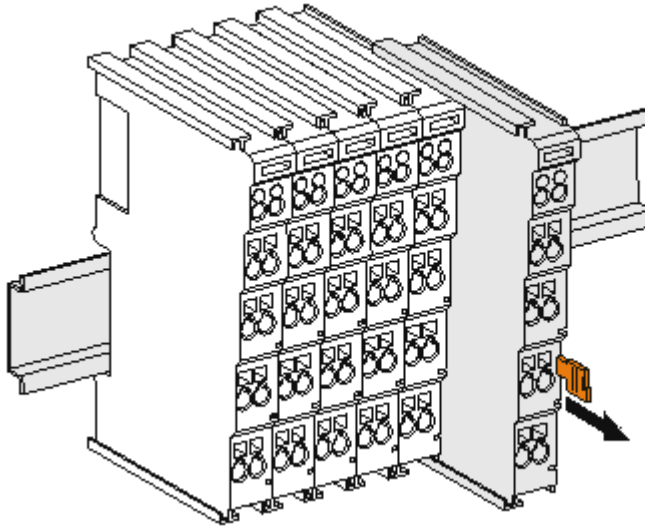

Note on the placement of passive terminals in the bus terminal block

EtherCAT Terminals that do not take part in active data exchange within the bus terminal block are referred to as passive terminals. These terminals can be recognized because they do not consume power from the E-bus. To ensure optimal data exchange, no more than two passive terminals may be connected directly to each other!

Examples of the placement of passive terminals (highlighted in light color)

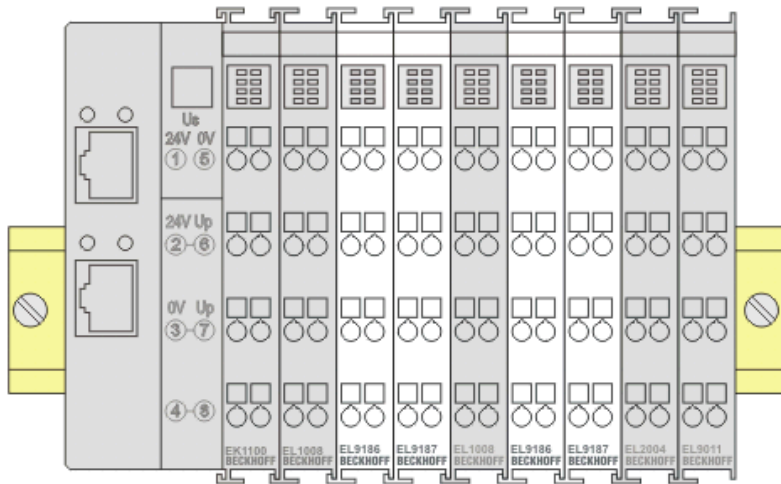


Fig. 6: Proper positioning

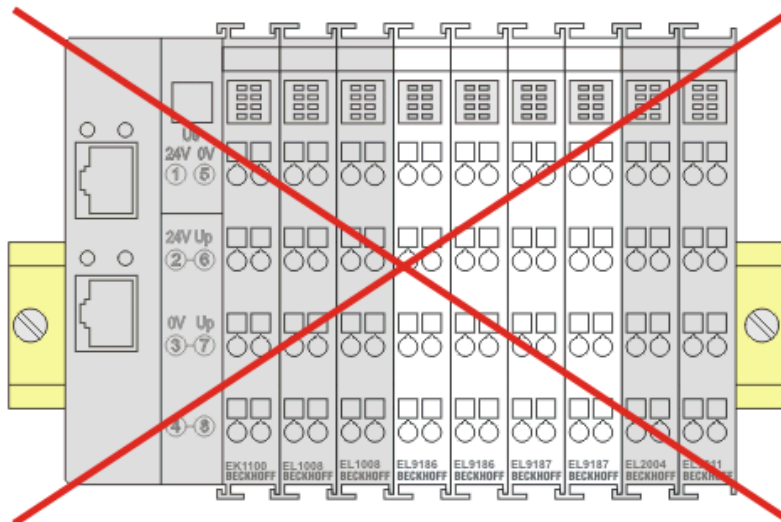


Fig. 7: Incorrect positioning

3.4 Installation positions

NOTICE

Constraints regarding installation position and operating temperature range

- Please refer to the technical data of the device to ascertain whether any restrictions regarding the installation position and/or the operating temperature range have been specified.
- When installing devices with increased heat dissipation, ensure that there is sufficient space above and below the devices during operation to guarantee adequate ventilation!

The installation positions and their names for mounting devices on mounting rails are specified below. The illustration of the devices in the following figures is an example.

The following applies to all installation positions: the reference direction “down” (see arrow) is the direction of the earth's gravitational force.

Horizontal installation (standard installation)

The mounting rail is mounted horizontally on a vertical mounting plate.
The connection level of the devices points to the front.

The devices are ventilated from below, which enables optimum cooling of the electronics through convection. This is therefore also the recommended installation position.

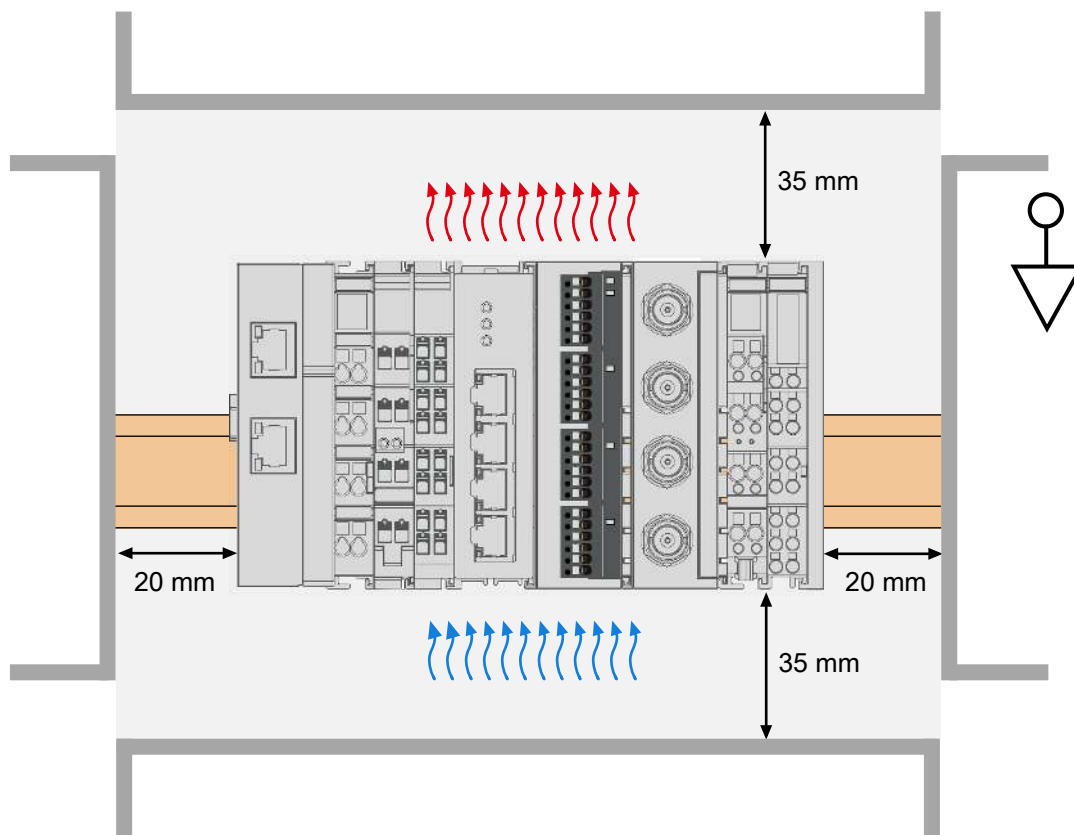


Fig. 8: Recommended minimum distances for standard installation position

NOTICE

Compliance with the minimum distances

Compliance with the minimum distances shown in the figure “Recommended minimum distances for standard installation position” is strongly recommended in all installation positions.

Vertical installation

The mounting rail is mounted vertically on a vertical mounting plate.
The connection level of the devices faces the front.
The devices can be arranged as follows:

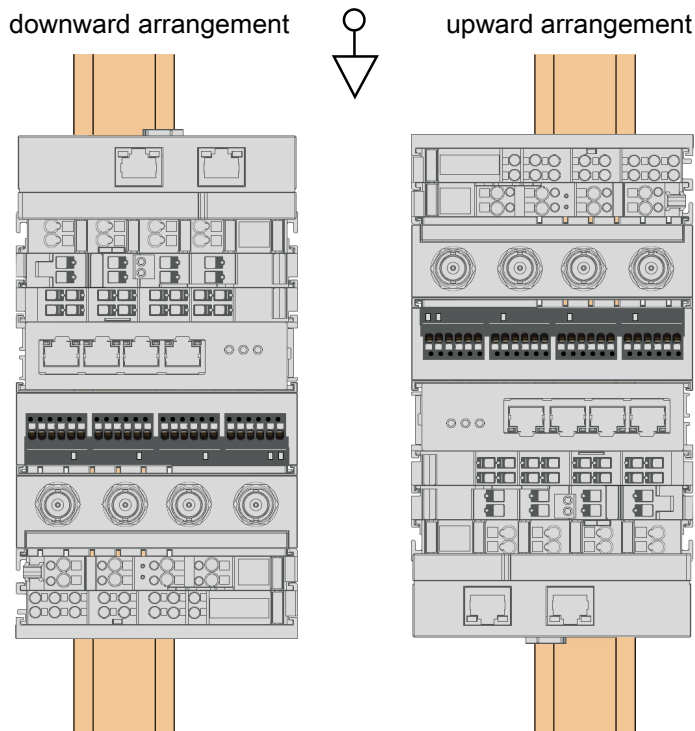


Fig. 9: Installation position: Vertical, downward arrangement (left)/upward arrangement (right)

Flat installation

The mounting rail is mounted on a horizontal mounting plate.
The connection level of the devices points upwards.



Fig. 10: Flat installation

NOTICE

Danger of sliding off the mounting rail

Particularly in the “vertical” installation position, but also in other installation positions under corresponding mechanical load, the terminal segment may move on the mounting rail. These can lead to undesirable malfunctions.

- If this risk exists, secure the terminal segment with appropriate locking devices, e.g. by clamping it to the mounting rail.

NOTICE

Compliance with the minimum distances

Compliance with the minimum distances shown in the figure “Recommended minimum distances for standard installation position” is strongly recommended in all installation positions.

Installation positions with ZB8610 fan cartridge

If the cooling should or must be increased for the intended application, the ZB8610 fan cartridge can be mounted on the underside of the device. In the horizontal installation position, the devices are ventilated from bottom to top by the fan cartridge. This optimum cooling is further enhanced by convection ventilation (see following figure).

The fan cartridge can be used in any installation position.

Further information on operation with and without a fan can be found in the technical data for the device (e.g. derating, information on installation positions, etc.).

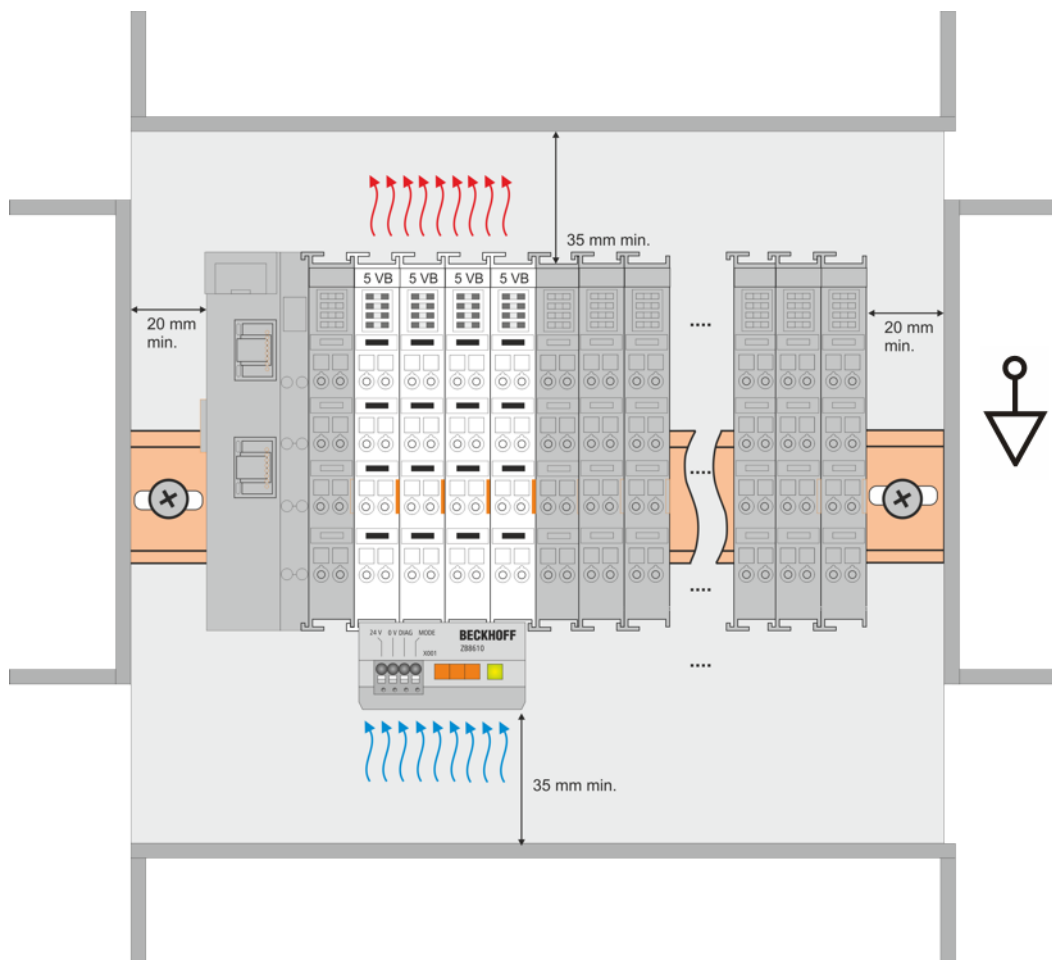


Fig. 11: Recommended minimum distances for operation with fan, using horizontal installation position as an example

NOTICE

Compliance with the minimum distances

Compliance with the minimum distances as shown in the figure “Recommended minimum distances for operation with fan” is strongly recommended.

3.5 Push-in connection technology (EC/ED/EFxxxx)

⚠ WARNING

Risk of injury through electric shock and damage to the device!

Bring the bus terminal system into a safe, de-energized state before beginning to mount, disassemble, or wire the bus terminals!

In the case of EC/ED/EFxxxx-series Terminals with push-in connection technology, solid conductors fitted with wire end ferrules can be plugged in directly without tools (see “Wiring [▶ 22]” section).

● Ultrasonically compacted wires

i Ultrasonically compacted (ultrasonically welded) wires can also be connected.

- Please note the information on the connection cross-section in the table housing data in the chapter Technical data of the relevant device!



Fig. 12: Tool-free push-in connection; housing types ED-12-8pin, ED-12-16pin, and EF-12-8pin

The following connection options are available for optimum adaptation to the application:

- The EC/EDxxxx-series Terminals contain electronics and the connection level in one housing unit.
- The EFxxxx-series Terminals have a pluggable connection level. For servicing, the pluggable connection level allows the entire wiring to be removed from the top of the housing as a single plug. This reduces the installation time and eliminates the risk of wires being mixed up. The plug is only slightly protruding (for dimensions, see Technical data -> Housing data of the corresponding product). Installation and wiring are carried out as for the EDxxxx-series Terminals. Proceed as follows when replacing:
 - Press the unlocking hub and pull the lower part out of the terminal block.
 - Push in the replacement component and plug the connector with the upright wiring back in.

● Strain relief of the cable

i A tab for strain relief of the cable simplifies assembly in many applications and prevents entangling of the individual connection wires when the connector is pulled.

Overview of housing designs

EC/EDxxxx housing designs, contain the electronics and connection level in one housing	EFxxxx housing designs with pluggable wiring level	Description
EC-40-8pin	-	8 connection points on 40 mm
ED-12-8pin	EF-12-8pin	8 connection points on 12 mm
ED-24-2x8pin	EF-24-2x8pin	16 connection points on 24 mm
ED-12-16pin	-	16 connection points on 12 mm
ED-24-2x16pin	-	32 connection points on 24 mm


3.5.1 EC/ED/EFxxxx wiring with push-in connection technology

⚠ WARNING

Risk of injury through electric shock and damage to the device!

Bring the bus terminal system into a safe, de-energized state before beginning to mount, disassemble, or wire the bus terminals!

1.) Tool-free connection for solid conductors and conductors with ferrules

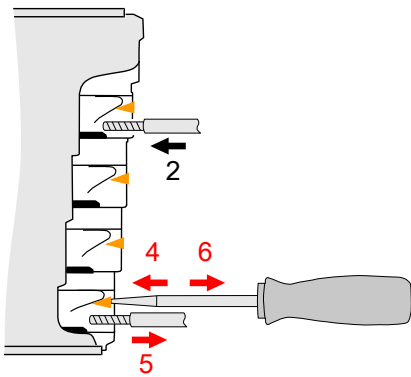

2.) Connection by push-button actuation for stranded wire conductors and **loosening the conductor (with tools)**

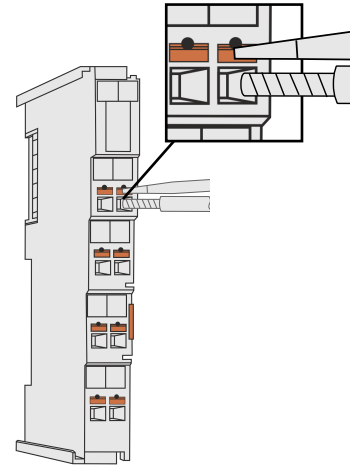
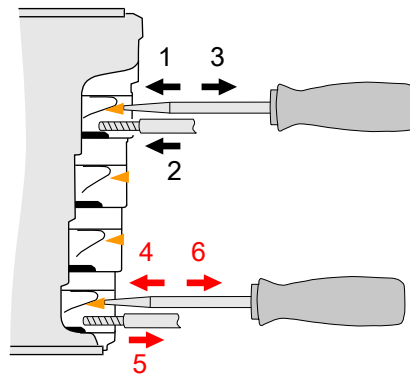


Fig. 13: Connecting and disconnecting the conductors

1. Connecting solid conductors and conductors with ferrules (Fig. top left, step 2)

These can be connected using a direct plug-in technique, without tools.

- Insert the conductor into the terminal point after stripping the insulation (2)

2. Connect stranded cables (Fig. top right, steps 1–3)

These must be connected via the push-button.

- Use a screwdriver to press the push-button to open the contact point (1).
- Then insert the conductor (2).
- Release the push-button by pulling back the screwdriver to close the terminal point (3).

Disconnect cables (Fig. above steps 4–6)

The release is performed using the push-button for all conductor types.

- Use a screwdriver to press the push-button to unlock the contact (4).
- Then pull out the conductor (5).
- Release the push-button by pulling back the screwdriver to close the terminal point (6).

NOTICE



Observe the permissible connection cross-sections and stripping lengths

The permissible conductor cross-section and stripping length depend on the type of housing, please refer to the housing data in the "Technical data" chapter for the device in question.

3.5.2 Shielding



Shielding

Encoders, analog sensors, and actuators should always be connected with shielded, pair-wise twisted cables.

3.6 Note on power supply

WARNING

Power supply from SELV / PELV power supply unit!

SELV / PELV circuits (safety extra-low voltage / protective extra-low voltage) according to IEC 61010-2-201 must be used to supply this device.

Notes:

- SELV / PELV circuits may give rise to further requirements from standards such as IEC 60204-1 et al, for example with regard to cable spacing and insulation.
- A SELV supply provides safe electrical isolation and limitation of the voltage without a connection to the protective conductor, a PELV supply also requires a safe connection to the protective conductor.

3.7 Disposal



Products marked with a crossed-out wheeled bin shall not be discarded with the normal waste stream. The device is considered as waste electrical and electronic equipment. The national regulations for the disposal of waste electrical and electronic equipment must be observed.

4 Commissioning

NOTICE



Further information

For information on commissioning with TwinCAT and EtherCAT basics, please refer to the [EtherCAT system documentation](#).

5 Appendix

5.1 Firmware compatibility

The terminals described in this documentation do not have firmware.

5.2 Documentation issue status

Version	Comment
1.1.0	• Update structure
1.0.0	• first release

5.3 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Support

The Beckhoff Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963 157
e-mail: support@beckhoff.com
web: www.beckhoff.com/support

Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963 460
e-mail: service@beckhoff.com
web: www.beckhoff.com/service

Headquarters Germany

Beckhoff Automation GmbH & Co. KG

Hülshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963 0
e-mail: info@beckhoff.com
web: www.beckhoff.com

Trademark statements

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

More Information:
www.beckhoff.com/ed1xxx

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

