

Manual | EN

MO2338-0000-1112

8-channel digital combi, 24 V DC/0.5 A, M12

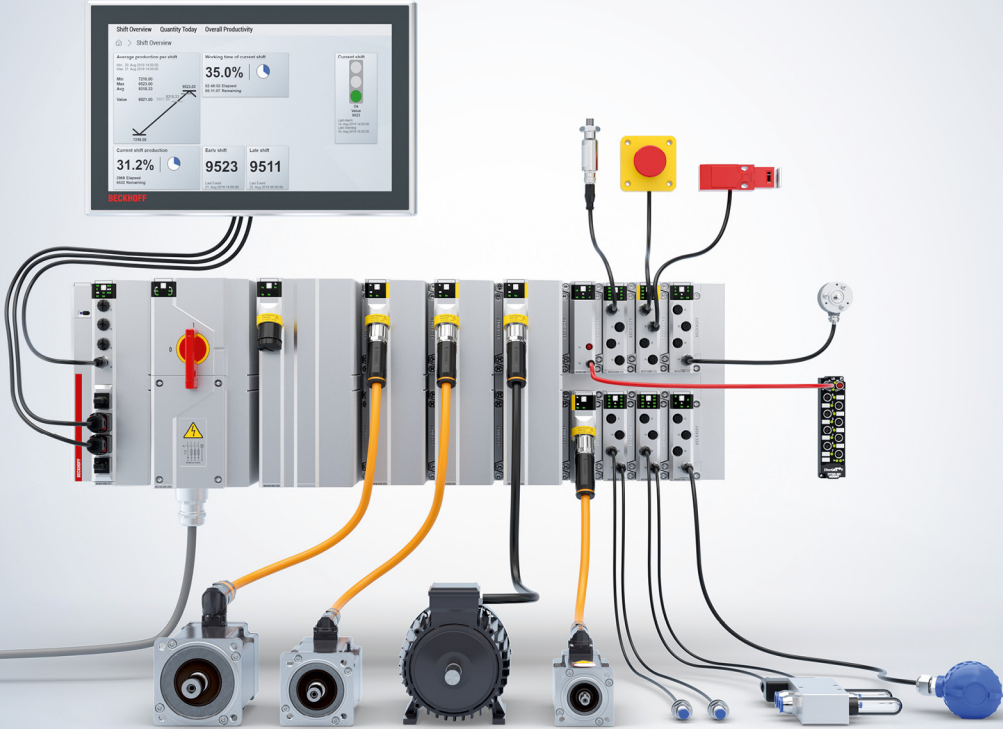


Table of contents

1 Foreword	5
1.1 Notes on the documentation	5
1.2 For your safety	6
1.3 Intended use	7
2 Product overview	8
2.1 Product functions	10
2.2 Block diagram	11
2.3 Type key.....	12
2.4 Status display.....	13
2.5 Dimensions	14
3 Technical data	15
4 Software functions	16
5 Mechanical installation	18
5.1 Preparation.....	18
5.2 Placement of the module on the baseplate	19
5.3 Mounting the module.....	20
6 Commissioning and operation	21
7 Connection	22
7.1 Required accessories.....	22
7.2 Principles.....	22
8 Decommissioning	24
8.1 Disassembly	24
8.2 Disposal	24
9 Appendix	25
9.1 CoE parameters	25
9.2 Manual version history	26
9.3 Support and Service.....	27
9.4 Accessories	28

1 Foreword

1.1 Notes on the documentation

This description is intended exclusively for trained specialists in control and automation technology who are familiar with the applicable national standards.

The documentation and the following notes and explanations must be complied with when installing and commissioning the components.

The trained specialists must always use the current valid documentation.

The trained specialists must ensure that the application and use of the products described is in line with all safety requirements, including all relevant laws, regulations, guidelines, and standards.

Disclaimer

The documentation has been compiled with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without notice.

Claims to modify products that have already been supplied may not be made on the basis of the data, diagrams, and descriptions in this documentation.

Trademarks

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar®, and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

If third parties make use of the designations or trademarks contained in this publication for their own purposes, this could infringe upon the rights of the owners of the said designations.

EtherCAT 

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The distribution and reproduction of this document, as well as the use and communication of its contents without express authorization, are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event that a patent, utility model, or design are registered.

Third-party trademarks

Trademarks of third parties may be used in this documentation. You can find the trademark notices here: <https://www.beckhoff.com/trademarks>.

1.2 For your safety

Safety regulations

Read the following explanations for your safety.

Always observe and follow product-specific safety instructions, which you may find at the appropriate places in this document.

Exclusion of liability

All the components are supplied in particular hardware and software configurations which are appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

Personnel qualification

This description is only intended for trained specialists in control, automation, and drive technology who are familiar with the applicable national standards.

Signal words

The signal words used in the documentation are classified below. In order to prevent injury and damage to persons and property, read and follow the safety and warning notices.

Personal injury warnings

DANGER

Hazard with high risk of death or serious injury.

WARNING

Hazard with medium risk of death or serious injury.

CAUTION

There is a low-risk hazard that could result in medium or minor injury.

Warning of damage to property or environment

NOTICE

The environment, equipment, or data may be damaged.

Information on handling the product



This information includes, for example:
recommendations for action, assistance or further information on the product.

1.3 Intended use

Intended use of an MX-System

Application in machines and systems in industrial environments and exclusively inside buildings.

The electrical wiring must be permanent wiring.

Improper use


Improper use is not permitted and will result in the exclusion of liability on the part of Beckhoff Automation GmbH & Co.

2 Product overview


The I/O modules in the MX-System offer a wide choice for all signal types and directions. With eight digital channels, each of which can be operated as inputs or outputs, the MO2338-0000-1112 can be used universally to operate a wide variety of inputs and outputs in any combination. Configuration is not required; the input circuit is internally permanently connected to the output driver so that a set output is automatically displayed in the input process image.

Each output can handle an output current up to a maximum of 0.5 A and is limited to a total of 4 A. The inputs record binary control signals from the process level and transfer them, with electrical isolation, to the controller. The signal state is shown on the display; the signal interface is established via screw-type M12 connectors, each containing two channels for convenient integration of sensors/actuators with two channels.

Various diagnostic options are available for each channel. The short-circuit proof 24 V DC sensor/actuator supply for the M12 connectors is protected by an electronic fuse.

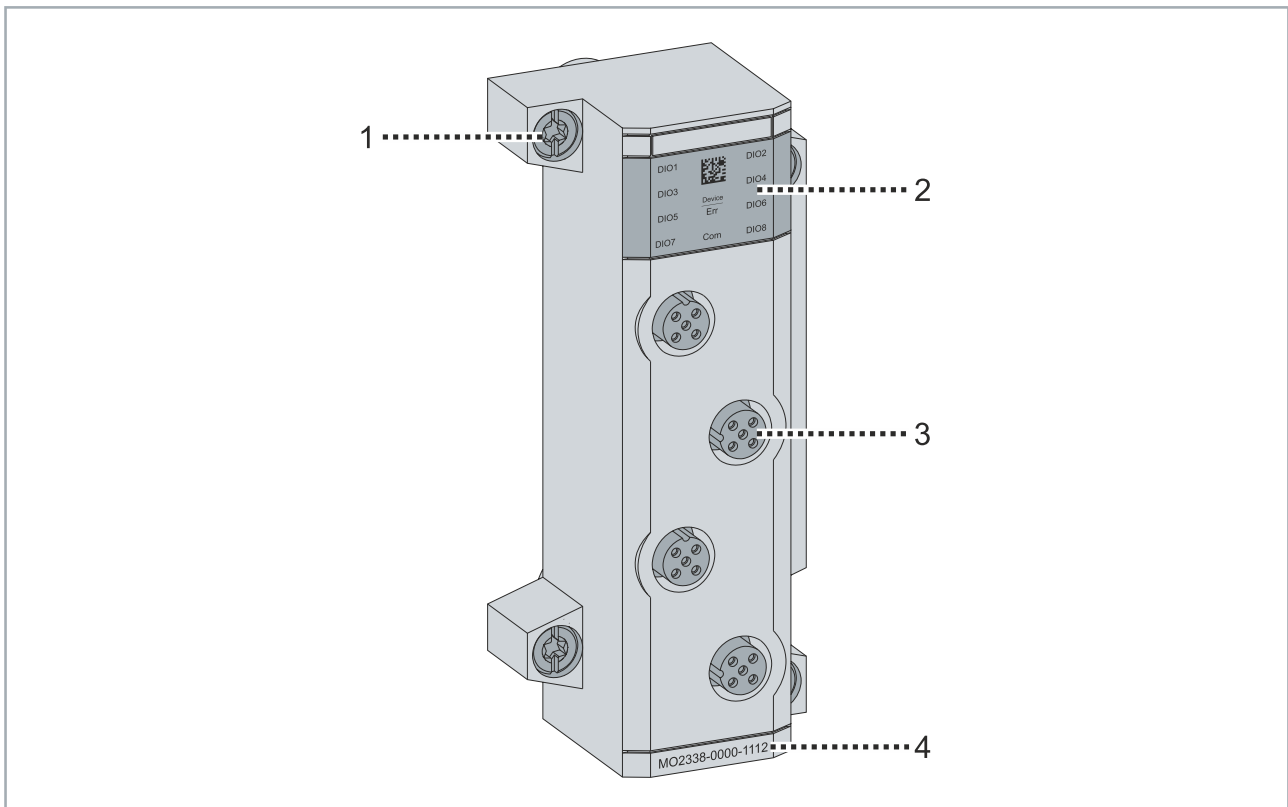

Position	Name
1	Fastening screw, captive, 4 x
2	Status display
3	Digital combi channel, can be used as input or output, 8 x
4	Module name

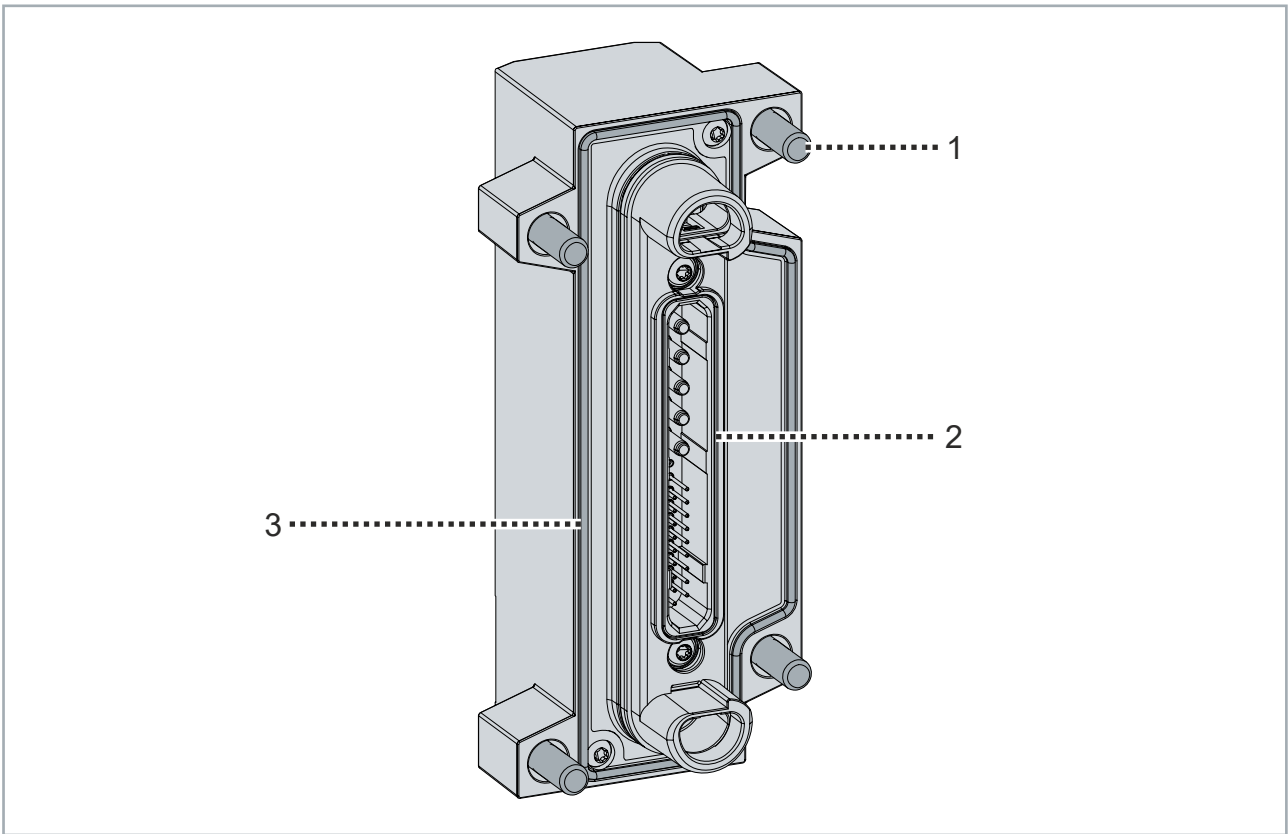

Position	Name
1	Fastening screw, captive, 4 x
2	Data connector
3	Seal

2.1 Product functions

2.1.1 Digital combi channels

You can use a digital combi channel either as a digital input or as a digital output. Each digital combi channel consists of a digital input and a digital output that are directly connected to each other.

If the digital output is set, the digital input detects a high level.

Properties of the digital inputs

The digital inputs are current-sinking inputs type 3 in accordance with EN 61131-2. The rated input voltage is 24 V DC.

Each digital input is equipped with an input filter and wire break detection. The filter time of the input filters is adjustable. The wire break detection can be enabled or disabled. It only works for sensors with PNP output.

Properties of the digital outputs


The digital outputs are current-supplying outputs in accordance with EN 61131-2. The output voltage is $U_B = 24$ V DC.

2.1.2 Supply voltage outputs


There is also a sensor power supply output on each connection. If required, this supplies the connected device with 24 V DC from the supply voltage U_B .

The module has a common electronic fuse for all supply voltage outputs. If a short circuit occurs at a supply voltage output, the fuse trips and all supply voltage outputs of the module are shut down.


2.2 Block diagram

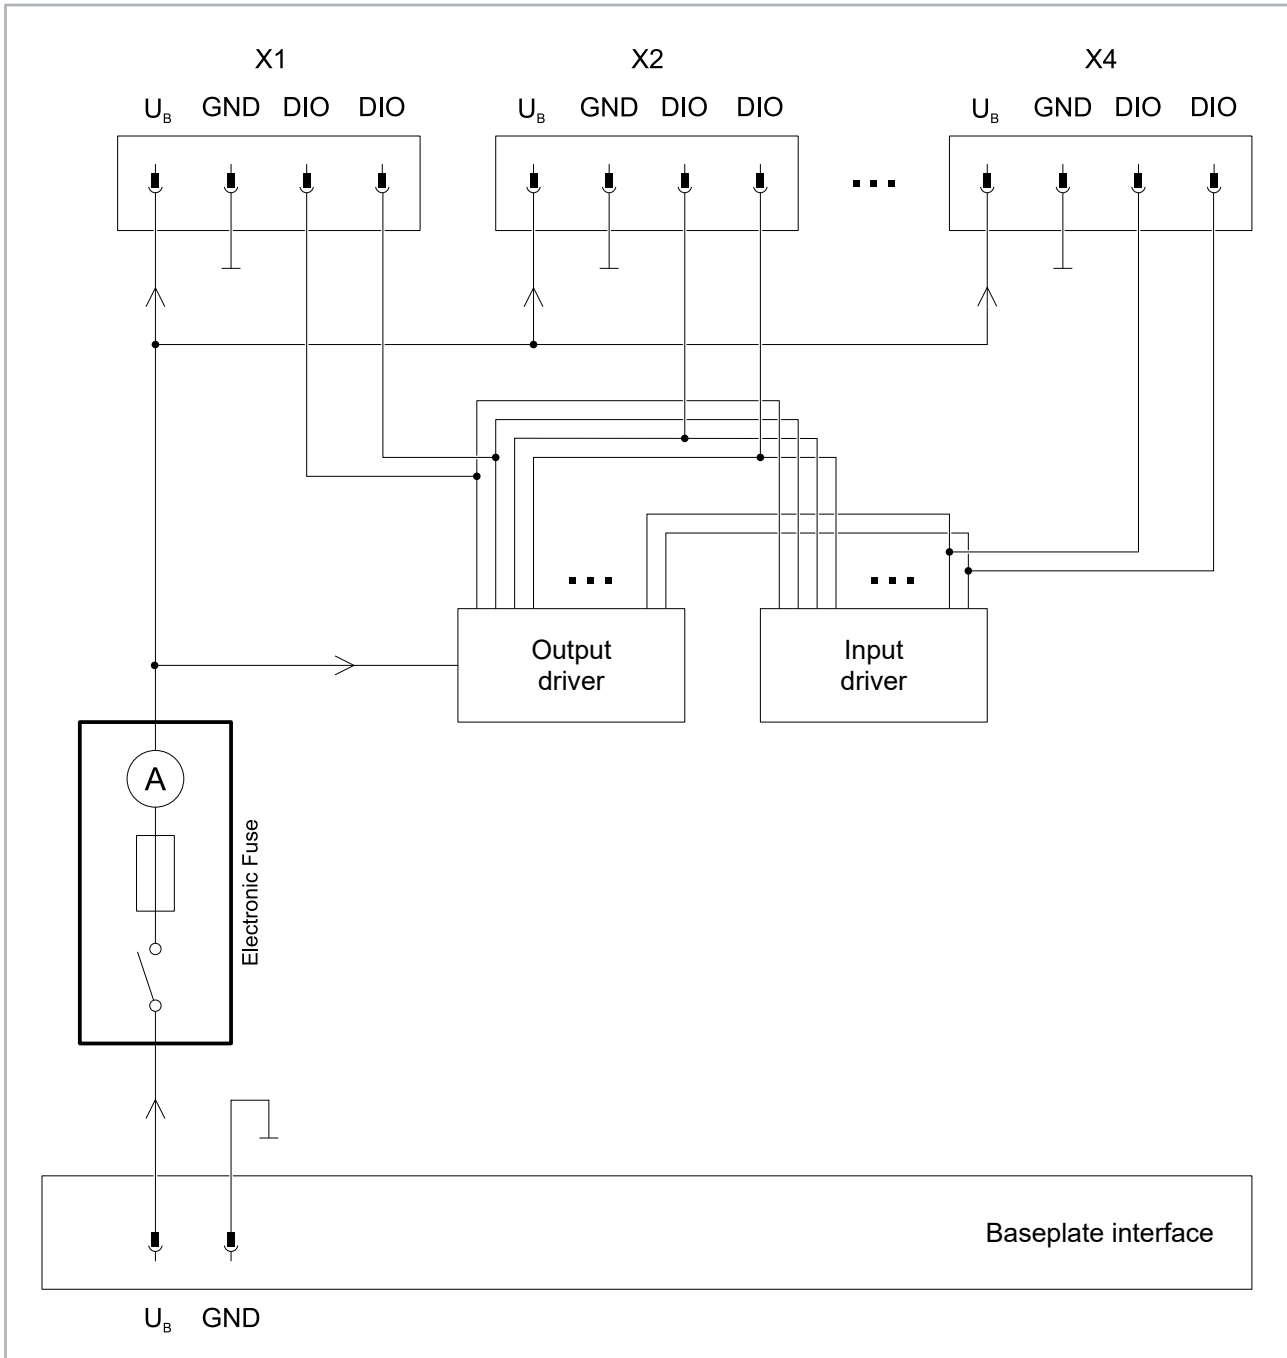

2.3 Type key

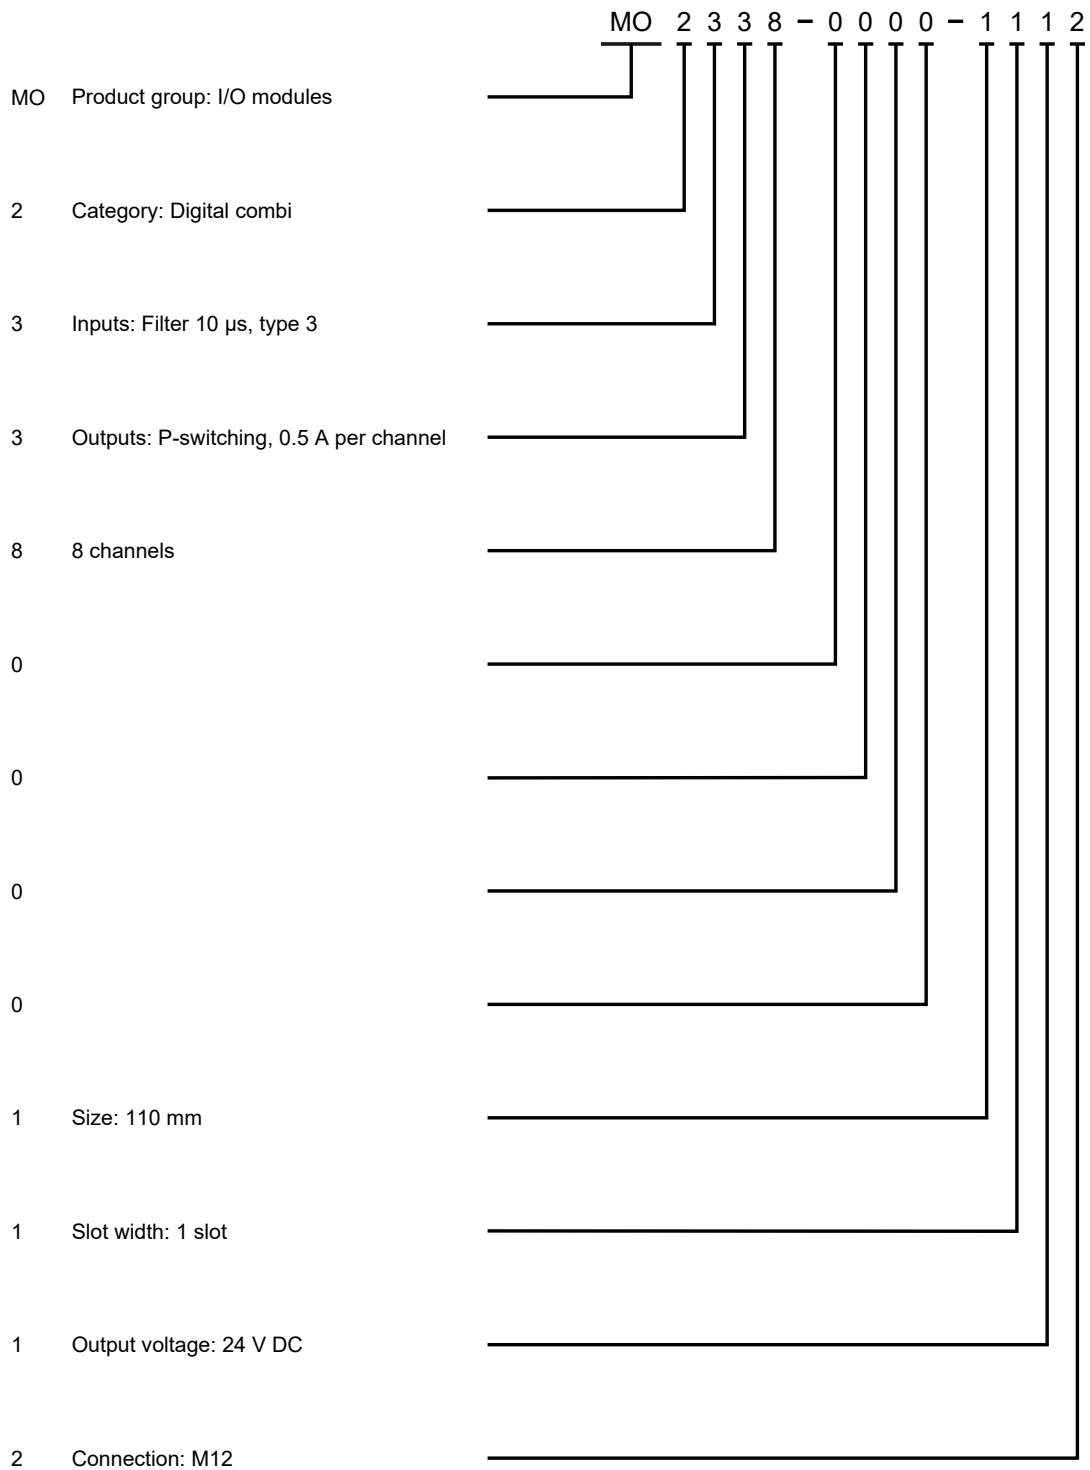


2.4 Status display

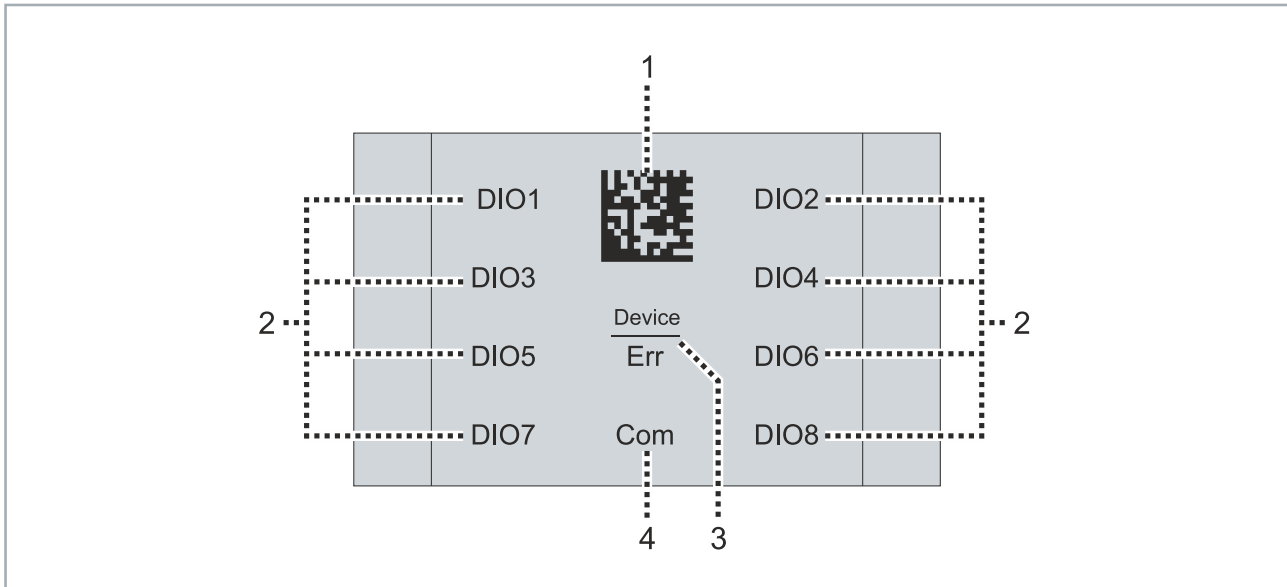

Position	Status display	Status	Explanation
1	-	-	Beckhoff Identification Code as DataMatrix code
2	DIO1 ... DIO8	Green	Indicates that a high level is present on the corresponding digital combi channel.
3	Err	Red	„Error“
4	Com	Green	„Communication“ Displays the status of communication to the baseplate. See system manual, chapter "".

2.5 Dimensions

All dimensions in mm

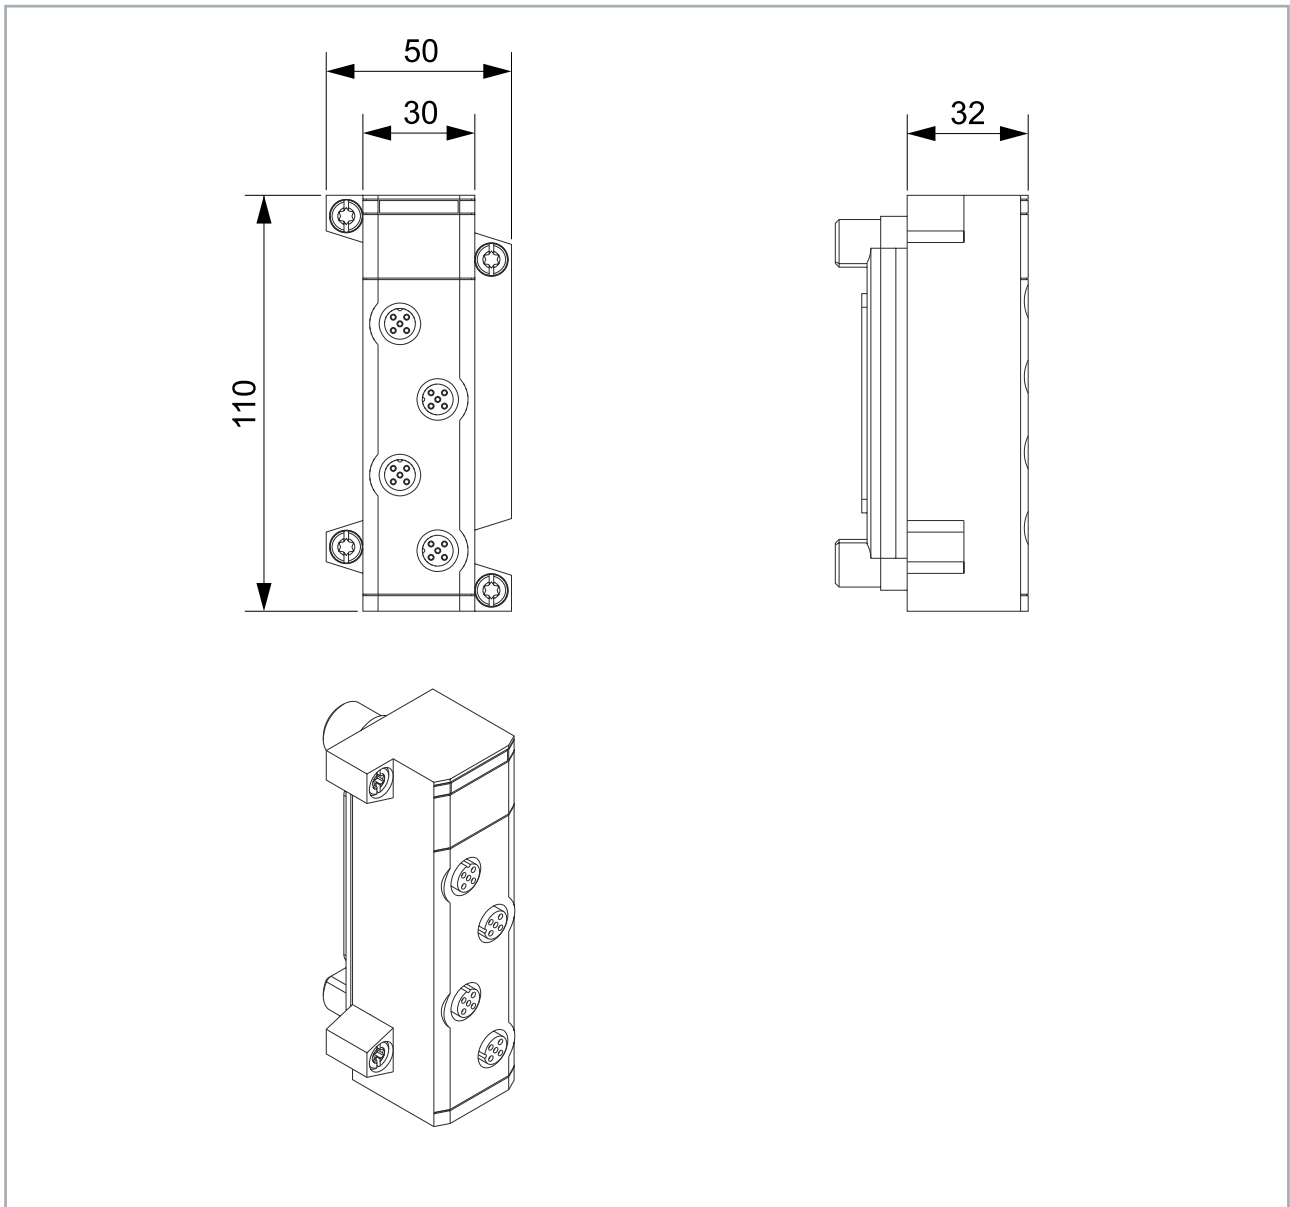

3 Technical data

All values are typical values over the entire temperature range, unless stated otherwise.

Baseplate interface	
Connector	1 data connector
Fieldbus	EtherCAT

Digital inputs / outputs	
Number of channels	8
Connection	4x M12 socket, 5-pin, A-coded
Characteristics of the inputs	EN61131-2, type 3
Rated voltage	24 V DC (-15% ... +20%)
Max. output current for the entire module	4 A
Max. output current for the digital output per channel	0.5 A
Max. output current of the sensor power supply per connector	0.5 A

Housing data	
Width (slots)	1
Height (rows)	1
Dimensions W × H × D	50 mm × 110 mm × 32 mm 50 mm × 110 mm × 32 mm (housing only)
Material	Zinc die-cast and aluminum die-cast
Cooling	Convection
Weight	-
Installation position	Vertical. See system manual, chapter "Installation conditions".


Environmental conditions	
Operating temperature	0 ... 50 °C
Storage temperature	-25 ... +60 °C
Air humidity	95 %, no condensation
Protection rating	IP20 as a separate module IP65 / IP67 as part of a fully and correctly assembled MX-System
Pollution degree	2
Overvoltage category	III
Maximum installation altitude	2000 m

Standards, approvals	
Device safety	conforms to EN 61010-2-201
EMC immunity/emission	conforms to EN IEC 61000-6-2 / EN IEC 61000-6-4
Vibration/shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27
Approvals	CE, UL in preparation

4 Software functions

PDOs

The process data objects (PDOs) can be displayed in TwinCAT for each module.

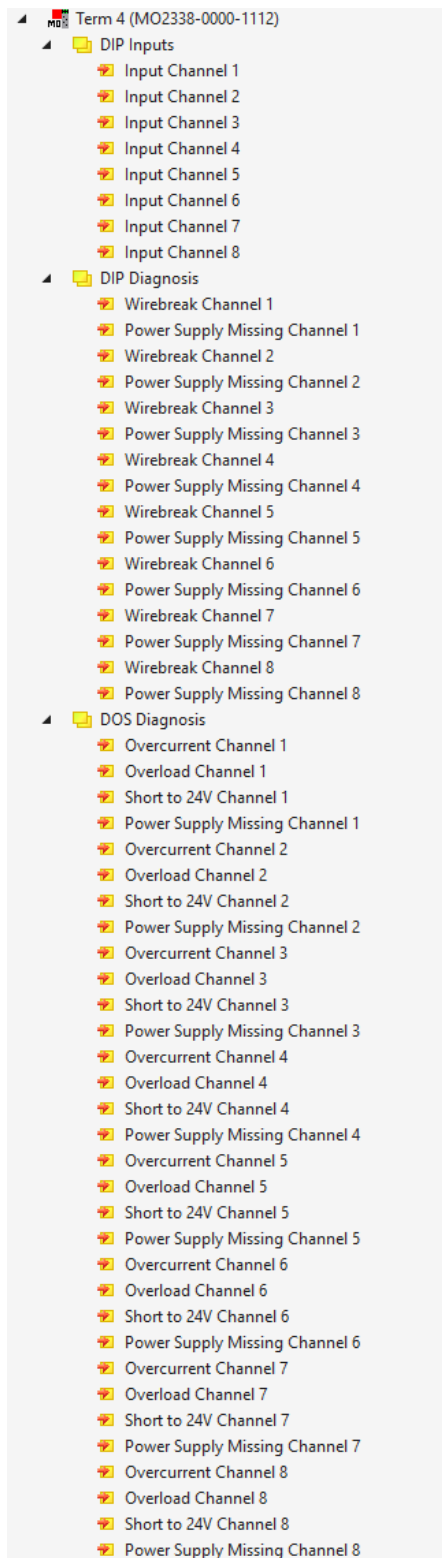

- Warning
 - Error
 - Tripped
 - Enabled
 - Input Cycle Counter
 - Current
 - Output Channel 1
 - Output Channel 2
 - Output Channel 3
 - Output Channel 4
 - Output Channel 5
 - Output Channel 6
 - Output Channel 7
 - Output Channel 8
 - Enable
 - Control via Process Data
 - Reset
 - WcState
 - InputToggle
 - State
 - AdsAddr

5 Mechanical installation



Required tools


- Torx T25 screwdriver
- Torque wrench 5 Nm

5.1 Preparation

NOTICE

Check the module for damage


If the seal is worn or damaged, liquids and dirt can penetrate and damage the MX-System. The IP65/IP67 protection rating is not met if the seals are worn or damaged.

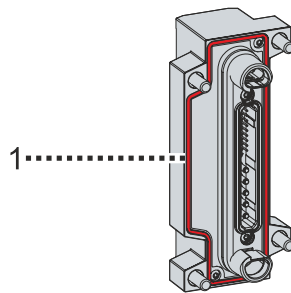

1. Check the seal [1] of the module for wear and damage
2. Replace worn and damaged seals

5.2 Placement of the module on the baseplate

The module can be plugged into the following areas marked in green:

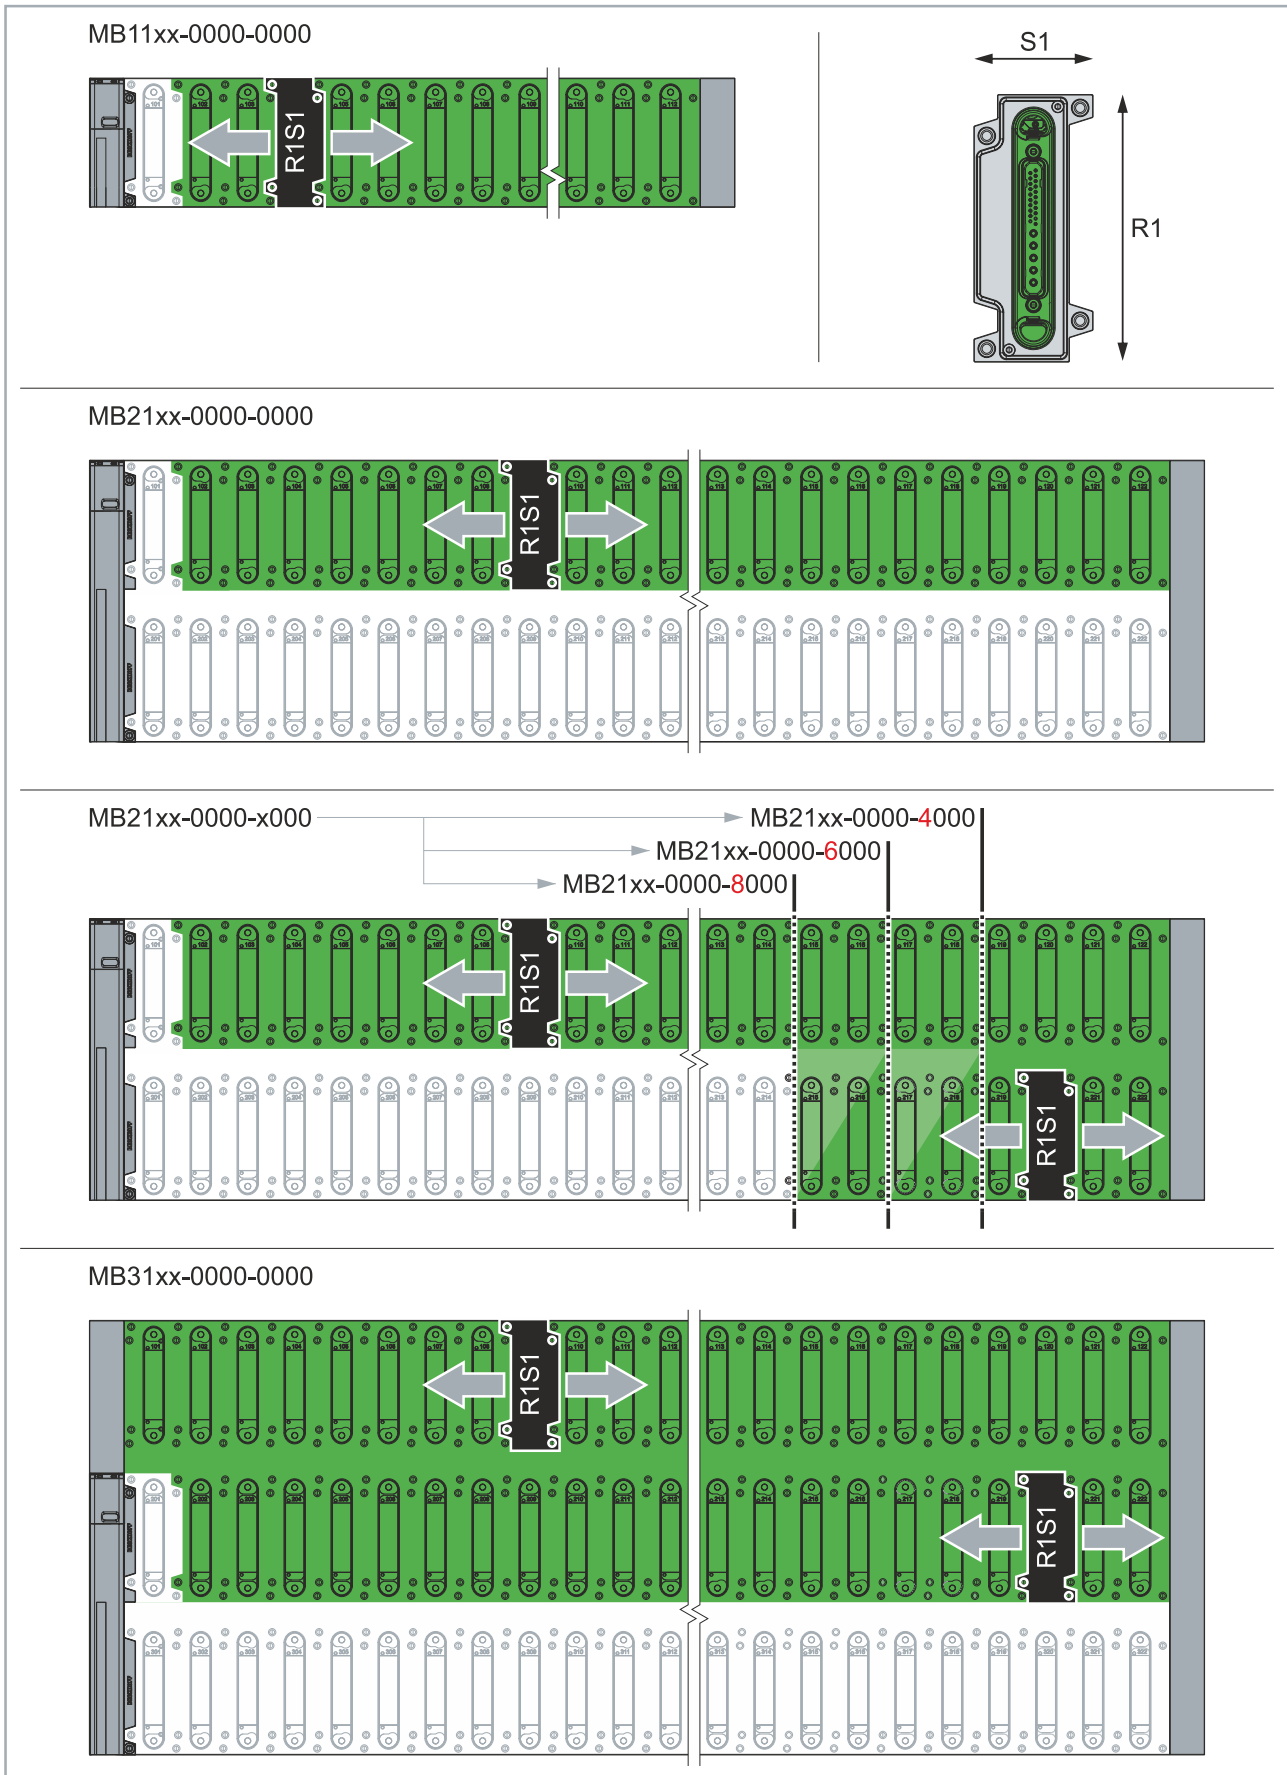

5.3 Mounting the module

⚠ CAUTION

Danger due to the high weight of an equipped baseplate

First mount the baseplate and then the modules to the baseplate. If you mount the modules on the baseplate first, the total weight of the MX-System will increase. Another person is required to transport and assemble an equipped baseplate.

- Wear personal protective equipment.
- The equipped baseplate must be transported and mounted by two people.

NOTICE

Ensure correct installation

If the module is not installed correctly, liquids and dirt may enter and damage the MX-System. The IP65/IP67 protection rating is not met if the installation is incorrect.

NOTICE

Limited number of mating cycles

The module may be plugged in a maximum of 25 times to attach it to the baseplate. If the module is plugged into the baseplate more than 25 times, a secure connection between the module and the baseplate cannot be guaranteed.

- Observe the permissible number of mating cycles.
- Replace the module if the number of mating cycles is exceeded.
- Replace the baseplate if the number of mating cycles is exceeded.

The module can be plugged into any position on a data slot on a baseplate. Slot *101* must not be used.

1. Plug the module on the baseplate
2. Tighten all screws
3. Observe tightening torques:

Components	Tightening torque [Nm]
Screws	5

Further information on installation can be found in the system manual in the "Mounting" chapter.

6 Commissioning and operation

NOTICE

Damage to property due to operation in an unsuitable environment

Before commissioning, ensure that the environmental conditions at the place of commissioning and operation are complied with at all times.

1. Plug the module onto a baseplate.
2. Screw the module onto the baseplate.
3. Wire the module.
4. Switch on the external supply voltage.

7 Connection

NOTICE

Risk of material damage

Failure to observe the following instructions may result in property damage

- Avoid contaminating the connectors before connecting them
- Only connect or disconnect cables when they are de-energized
- Observe the tightening torques
- Close unused connections with protective caps
- Only use cables that are suitable for the expected heating and insulation voltage
- Lay the cables in accordance with the installation requirements of the applicable standards.

7.1 Required accessories

You will need the following accessories for the electrical connection:



Installation material required

- Sensor cables with M12 connector, 4-pin or 5-pin



Required tools

- Torque wrench

7.2 Principles

Tightening torques for connectors

Use a torque wrench to tighten the M12 connectors, e.g. ZB8801 from Beckhoff.


Tighten the M12 connectors to 0.6 Nm.

Protective caps

Cover unused sockets with protective caps.

IP67 protection rating is only guaranteed if plugs are connected to all sockets and unused sockets are covered with protective caps.

7.3 Digital combi connections

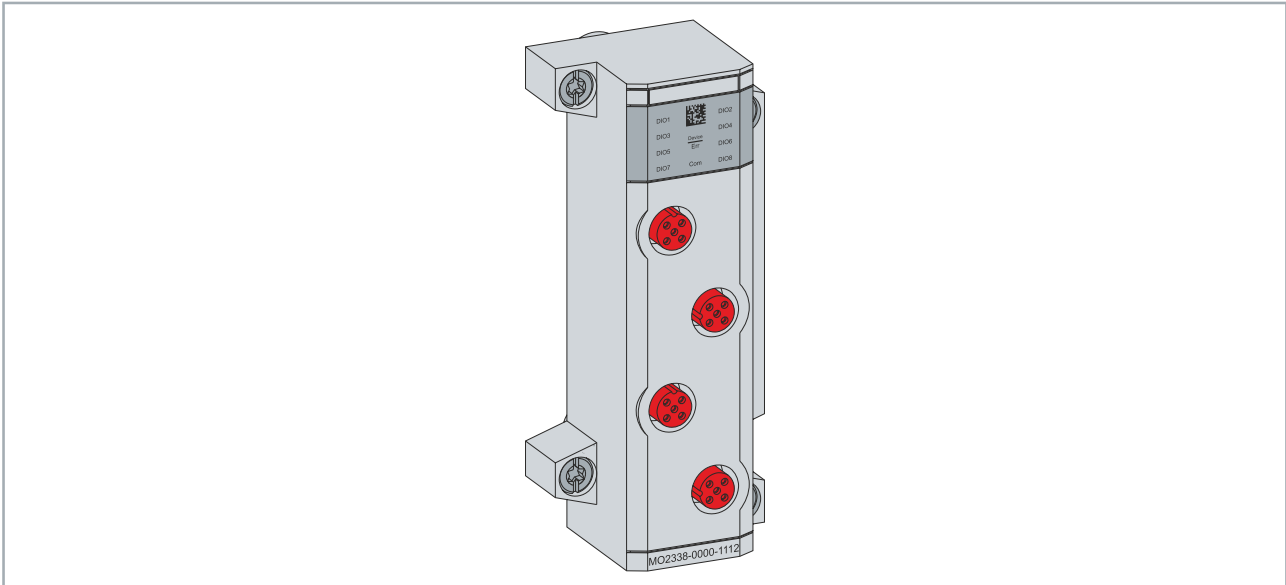

The digital combi connections are 5-pin A-coded M12 connectors.

Tightening torque: 0.6 Nm

Pin assignment

NOTICE

Do not feed supply voltage output backwards
Material damage due to overcurrent is possible.

M12 socket, A-coded	Pin	Symbol	Function
	1	U_B	Supply voltage output 24 V DC
	2	DIO B	Digital input/output combi B
	3	GND	GND
	4	DIO A	Digital input/output combi A
	5	n.c.	--

8 Decommissioning

8.1 Disassembly

NOTICE

Damage to property due to electrical voltage

Disassembling this module under voltage can lead to material damage.

- Switch off the supply voltage before disassembling.

Disassembly may only be carried out by qualified and trained technical personnel.

- ✓ The supply voltage is shut down.
 - 1. Remove cables.
 - 2. Loosen all mounting screws of the module.
 - 3. Take the module off the baseplate.
- ⇒ The module has been removed correctly.

8.2 Disposal



Products marked with a crossed-out wheeled bin shall not be discarded with the normal waste stream. The device is considered as waste electrical and electronic equipment. The national regulations for the disposal of waste electrical and electronic equipment must be observed.

9 Appendix

9.1 CoE parameters

See parameter list in the Beckhoff Information System: [Link](#)

9.2 Manual version history

The following table shows the version history of this manual.

Version	Comment
1.0	• First release

9.3 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Download finder

Our [download finder](#) contains all the files that we offer you for downloading. You will find application reports, technical documentation, technical drawings, configuration files and much more.

The downloads are available in various formats.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on our internet page: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963-157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963-460
e-mail: service@beckhoff.com

Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963-0
e-mail: info@beckhoff.com
web: www.beckhoff.com

9.4 Accessories


Suitable accessories can be found on the product website:

<https://www.beckhoff.com/mo2338-0000-1112>

Product	Description
ZMX1000-0010	M5x17.5 combi-TX25 replacement screws for module fastening (PU = 10 pcs.)
ZMX3001-0011	1-row, 1-slot replacement seal for module base
ZMX4001-0001	Replacement cover for potential equalization for 1-row baseplate with Beckhoff logo
ZMX4001-0002	Replacement cover for potential equalization for 2- and 3-row baseplate with Beckhoff logo

The following items are also available for replacing worn parts:

MX module base S1R1 with seal

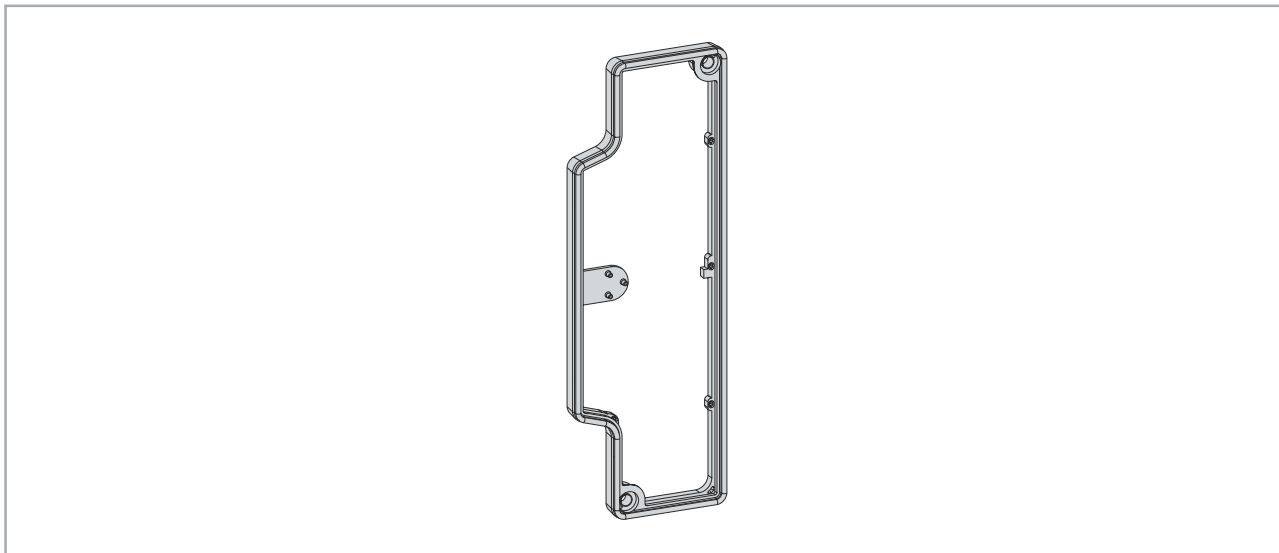

The module base S1R1 with seal is available for replacing worn and damaged seals on a 1-row MX module with one slot.

Trademark statements

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

More Information:

www.beckhoff.com/mo2338-0000-1112

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

