
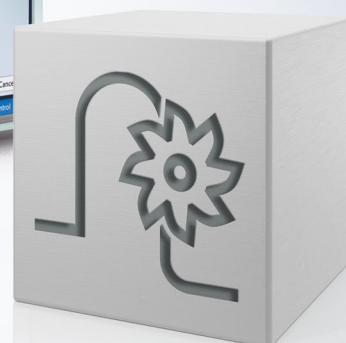


Functional description | EN

TF5200 | TwinCAT 3 CNC

Direct data transfer HLI-Drive

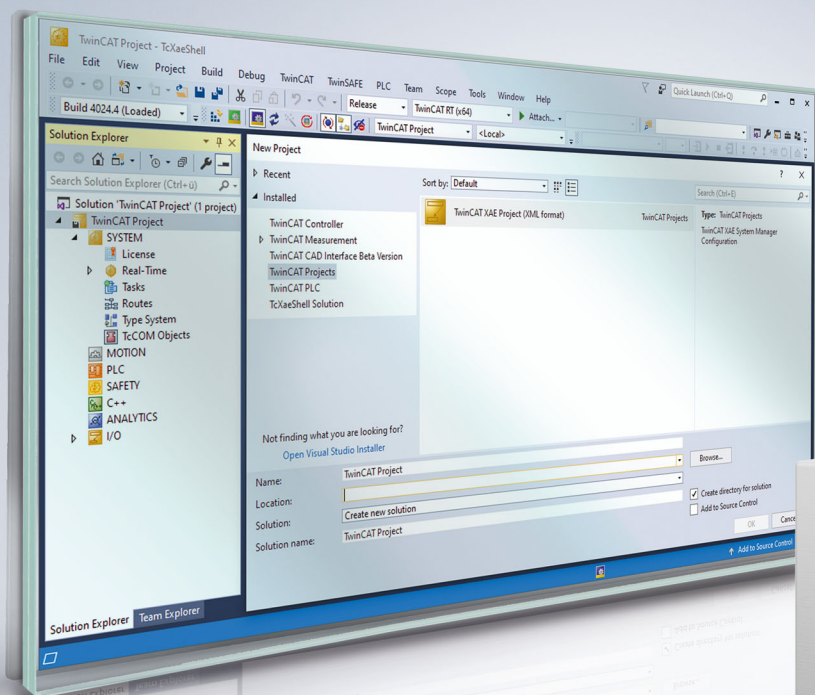

Notes on the documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning the components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patent Pending

The EtherCAT technology is patent protected, in particular by the following applications and patents:

EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702

with corresponding applications or registrations in various other countries.



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilisation of this document as well as the communication of its contents to others without express authorisation are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

General and safety instructions

Icons used and their meanings

This documentation uses the following icons next to the safety instruction and the associated text. Please read the (safety) instructions carefully and comply with them at all times.

Icons in explanatory text

1. Indicates an action.

⇒ Indicates an action statement.

DANGER

Acute danger to life!

If you fail to comply with the safety instruction next to this icon, there is immediate danger to human life and health.

CAUTION

Personal injury and damage to machines!

If you fail to comply with the safety instruction next to this icon, it may result in personal injury or damage to machines.

NOTICE

Restriction or error

This icon describes restrictions or warns of errors.

Tips and other notes

 This icon indicates information to assist in general understanding or to provide additional information.

General example

Example that clarifies the text.

NC programming example

Programming example (complete NC program or program sequence) of the described function or NC command.

Specific version information

 Names a specific version number as of which a new or revised functionality is available. Availability is dependent on the exact version and, where applicable, the license.

Table of contents

Notes on the documentation..... 3

General and safety instructions 4

1 Overview 8

2 Description 9

2.1 Read and write access..... 10

2.2 Data display only..... 10

3 Parameterisation 11

3.1 Overview of parameters 11

3.2 HLI parameters 11

3.3 Axis parameters 12

4 Support and Service 19

Index..... 20

List of figures

1 Overview

Task

This functionality permits the cyclic transfer of drive data between the drive controller and the HLI.



Function available as of V3.1.3135.0.

Properties

The functionality is available for drive types SERCOS, CANopen, PROFIdrive and Terminal.

Up to 4 data items per axis can be transferred cyclically in each direction.

Parameterisation

Parameterisation requires entering the [axis parameters](#) [► 12] in the relevant axis parameter list.

Mandatory note on references to other documents

For the sake of clarity, links to other documents and parameters are abbreviated, e.g. [PROG] for the Programming Manual or P-AXIS-00001 for an axis parameter.

For technical reasons, these links only function in the Online Help (HTML5, CHM) but not in pdf files since pdfs do not support cross-linking.

2 Description

The functionality transfers drive data directly from the drive controller of the field bus to the HLI.

There are 2 options for this:

1. read and write access using [lr_mc_control.uns32_1 \[► 11\]](#) to [lr_mc_control.uns32_4 \[► 11\]](#); here, the parameters from [antr.plc_to_drive\[i\]](#) are used for parameterisation.
2. data display only using [lr_state.uns32_1 \[► 12\]](#) to [lr_state.uns32_4 \[► 12\]](#); here, the parameters from [antr.drive_to_plc\[i\]](#) are used for parameterisation.

4 data items can be transferred in each direction simultaneously, i.e. a total of 8.

Drive data to be transferred

Various data item types can be transferred. The data type must be specified by [P-AXIS-00855 \[► 13\]](#) or [P-AXIS-00863 \[► 16\]](#).

Starting with this parameterisation, the drive value is read into the CNC: The data is output on the HLI in a UNS32 variable (UDINT). If the parameterised data is an SGN data type, the sign is transferred to the HLI in bit 32 (counting from 0). It is also possible to read or write individual bits. The data types "BITARRAY_xx" are used for this purpose.



The functionality need not be enabled. Parameterisation in the axis parameter list is sufficient.

2.1 Read and write access

The data item is output to control units `lr_mc_control.uns32_1` [► 11] to `lr_mc_control.uns32_4` [► 11]. Read access is possible at all times. To ensure write access, the data item may not be used by the CNC. This includes both internal use as well as use by other drive functions, z.B. #DRIVE command or „Moving to a fixed stop“.

The following variants exist:

- read only □ Data item is only parameterised in the input telegram
- write only □ Data item is only parameterised in the output telegram
- read and write □ Data item is parameterised in the input and output telegrams

Limitation of the output value

The value transferred to the drive can be configured with maximum (`P-AXIS-00859` [► 14]) and minimum (`P-AXIS-00860` [► 15]) values. When writing to the control unit, a check is made whether the value lies within the permissible parameterised value range. Limit values are automatically scaled using the scaling factor (`P-AXIS-00858` [► 14]).

Initial value after controller start-up

Since this is a cyclically transferred value, a start value must be specified, otherwise the value 0 is transferred to the drive. The start value can be set in `P-AXIS-00861` [► 15]. If a scaling factor (`P-AXIS-00858` [► 14]) is parameterised, the start value is first scaled before it is written to the drive.

Parameterisation for a CANopen drive data item

Objects for positive (`60E0_00`) and negative (`60E0_01`) torque limit values

```
antr.plc_to_drive[0].data_type      UNS16
antr.plc_to_drive[0].wr_ident      60E0_00
antr.plc_to_drive[0].min_limit     0
antr.plc_to_drive[0].max_limit     5000
antr.plc_to_drive[0].scaling_factor 2
antr.plc_to_drive[0].scaling_type  LINEAR
antr.plc_to_drive[0].startup_value 222

antr.plc_to_drive[1].data_type      UNS16
antr.plc_to_drive[1].wr_ident      60E0_01
antr.plc_to_drive[1].min_limit     0
antr.plc_to_drive[1].max_limit     5000
antr.plc_to_drive[1].scaling_factor 2
antr.plc_to_drive[1].scaling_type  LINEAR
antr.plc_to_drive[1].startup_value 222
```

2.2 Data display only

The data item is output by `lr_state.uns32_1` [► 12] to `lr_state.uns32_4` [► 12]. The data item must only be parameterised in the input telegram

Parameterisation for reading a CANopen drive data item

Objects for the positive (`60E0_00`) torque limit value

```
antr.drive_to_plc[0].data_type      UNS16
antr.drive_to_plc[0].wr_ident      60E0_00
antr.drive_to_plc[0].scaling_factor 2
antr.drive_to_plc[0].scaling_type  LINEAR
```

3 Parameterisation

3.1 Overview of parameters

ID	Description
P-AXIS-00854	Name of the telegram element to be written
P-AXIS-00855	Data type of the data item to be transferred
P-AXIS-00856	Bit mask for drive value
P-AXIS-00857	Scaling of the data item to be transferred
P-AXIS-00858	Scaling of the output value
P-AXIS-00859	Maximum output value
P-AXIS-00860	Minimum output value
P-AXIS-00861	Initial value of the telegram element
P-AXIS-00862	Name of the telegram element to be read
P-AXIS-00863	Data type of the data item to be transferred
P-AXIS-00864	Bit mask for drive value
P-AXIS-00865	Scaling of the data item to be transferred
P-AXIS-00866	Scaling of the output value

3.2 HLI parameters

Read/write drive data cyclically	
Description	This control unit reads and writes a drive signal that is not used by the CNC. Parameterisation is executed using • Parameterising drive data from PLC to drive or • Parameterising drive data from PLC to drive. A read access is always executed when an ID was parameterised for <u>P-AXIS-00854</u> [► 12]. A write access is only executed if the ID is not used by the CNC. The control unit can be used in read-only, write-only or both read and write modes. This is dependent on <u>P-AXIS-00854</u> [► 12] and <u>P-AXIS-00862</u> [► 15].
Data type	MC_CONTROL_UN32_UNIT, see description of Control unit
Access	PLC reads request_r + state_r and writes command_w + enable_w
ST path	gpAx[axis_idx]^lr_mc_control.uns32_<i> where i = [1, 4] e.g. gpAx[axis_idx]^lr_mc_control.uns32_2
Commanded and requested values	
ST element	.command_w .request_r
Data type	UDINT
Return value	
ST path	.state_r
Data type	UDINT
Redirection	
ST path	.enable_w

Special feature	Available as of Build V3.1.3081.21 or V3.1.3135.0 Is an SGN value was parameterised as data type in P-AXIS-00855 [► 13], the sign information is located at Bit 31 (counting from 0). These values can also be provided to the position controller interface. See Read drive data cyclically (gpAx[axis_idx]^lr_state.uns32_1)
-----------------	---

Read drive data	
Description	Data transferred by the drive to the NC kernel. The content is application-specific This data is also provided in parallel in the state of the control unit, see Read/write drive data cyclically
Signal flow	CNC → PLC
ST path	gpAx[axis_idx]^lr_state.uns32_<i> where i = [1, 4] e.g. gpAx[axis_idx]^lr_state.uns32_2
Data type	UDINT
Access	PLC is reading
Special features	Therefore, enable transfer of the value in the axis parameter list to the drive, e.g.: <pre># Cyclically read the 4 byte PLC value # uns32_3 to S-0-0819 antr.drive_to_plc[2].wr_ident S_0_0092 antr.drive_to_plc[2].scaling_type LINEAR antr.drive_to_plc[2].scaling_factor 10</pre>

3.3 Axis parameters

P-AXIS-00854	Name of the telegram element to be written	
Description	This parameter defines which telegram element in the cyclic telegram is to be treated as control unit on the HLI. The index i + 1 corresponds to the relevant control unit. This is the assignment ($0 \leq i \leq 3$): antr.plc_to_drive[0].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_1 antr.plc_to_drive[1].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_2 antr.plc_to_drive[2].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_3 antr.plc_to_drive[3].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_4 The name of the ID must be identical with the drive reference configured in the axis parameter list.	
Parameter	antr.plc_to_drive[i].wr_ident ($0 \leq i \leq 3$)	
Data type	STRING	
Data range	Maximum of 29 characters	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	*	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	* Note: The default value of variables is a blank string. Available as of Build V3.1.3081.21 or V3.1.3135.0 Parameterisation example: The torque limit value for a SERCOS drive should be linked to the control unit in the HLI. antr.plc_to_drive[0].wr_ident S_0_0092	

P-AXIS-00855	Data type of the data to be transferred	
Description	This parameter defines the data type of the telegram element in the cyclic telegram that is to be treated as control unit on the HLI.	
Parameter	antr.plc_to_drive[i].data_type	
Data type	STRING	
Data range	SGN08: Signed 8 bit integer. UNS08: Unsigned 8 bit integer. SGN16: Signed 16 bit integer. UNS16: Unsigned 16 bit integer. SGN32: Signed 32 bit integer. UNS32: Unsigned 32 bit integer. BITARRAY_08: Bit array 8 bits. BITARRAY_16: Bit array 16 bits. BITARRAY_32: Bit array 32 bits.	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	SGN16	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0 The data item is transferred by a UNS32 value to the HLI; if it is an SGN data type, the sign is at bit 31 (0-based).	

P-AXIS-00856	Writing of drive values by bit mask	
Description	This parameter specifies the bit mask that must be used if bitwise writing is defined. If the value specified in the control unit is greater than zero, the bit mask are set. With a programmed value of zero, the bits in the bit mask are deleted from the value transferred to the drive. This value is only used if the data type configured in P-AXIS-00855 [► 13] has either the value 'BITARRAY_08', 'BITARRAY_16' or 'BITARRAY_32'. The value of this parameter must be less than or equal to the maximum values defined by the parameter in P-AXIS-00855 [► 13], otherwise error message ID 70403 is output.	
Parameter	antr.plc_to_drive[i].mask	
Data type	STRING	
Data range	Dependent on P-AXIS-00855: BITARRAY_08: Bit array 08 bit - 0 ... MAX(UNS08) BITARRAY_16: Bit array 16 bit - 0 ... MAX(UNS16) BITARRAY_32: Bit array 32 bit - 0 ... MAX(UNS32)	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	NOT USED	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-00857	Scaling of the data item to be transferred
Description	This parameter defines the scaling of the value that is transferred to the drive.
Parameter	antr.plc_to_drive[i].scaling_type
Data type	STRING

Data range	UNSCALED	Unscaled output of the value programmed in the NC program; scaling factor = 1 (default).
	LINEAR	The value is weighted by a scaling factor (see P-AXIS-00858 [► 14])
	TORQUE_DRIVE_SIDE	The programmed value is a torque value related to the motor shaft and is scaled to the drive torque format by the parameters P-AXIS-00325, P-AXIS-00326 and P-AXIS-00392. The scaling factor does not change during gear change.
		The scaling factor is: $f = \frac{1}{P-AXIS-00392} * \frac{P-AXIS-00325}{P-AXIS-00326}$
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	UNSCALED	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0 Example: The torque limit in the SERCOS drive is specified in per mil units of the maximum motor torque. However, on the HLI, the torque should be specified in per cent: <pre>antr.plc_to_drive[0].wr_ident S_0_0092 antr.plc_to_drive[0].scaling_type LINEAR antr.plc_to_drive[0].scaling_factor 10</pre>	

P-AXIS-00858	Scaling of the output value	
Description	This parameter executes a scaling for reading and writing the drive object. This parameter is only effective if the scaling type is specified with P-AXIS-00857. The parameters for the start value P-AXIS-00861 [► 15] and for the minimum and maximum permissible output values (P-AXIS-00860 [► 15] and P-AXIS-00859 [► 14]) are also scaled.	
Parameter	antr.plc_to_drive[i].scaling_factor	
Data type	REAL64	
Data range	REAL range, except value 0	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	1	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-00859	Maximum permissible output value	
Description	This parameter defines the maximum permissible output value. If the value specified by the control unit exceeds the maximum value, the drive output value is corrected automatically to the maximum value. No error message is then output. If the parameter is greater than the maximum value of the specified data type defined in P-AXIS-00855 [► 13], the warning ID 70383 is output and the value of the parameter is corrected. If P-AXIS-00860 [► 15] is configured, P-AXIS-00860 must be smaller than this parameter. If this is not the case, the warning ID 70385 is output and the minimum and maximum values are exchanged. If this parameter is not configured, no limitation is executed.	
Parameter	antr.plc_to_drive[i].max_limit	
Data type	REAL64	
Data range	Dependent on P-AXIS-00855 [► 13] and P-AXIS-00858 [► 14]	

Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	1.000000e+199	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-000860	Minimum permissible output value	
Description	This parameter defines the minimum permissible output value. If the value specified by the control unit exceeds the minimum value, the drive output value is corrected automatically to the minimum value. No error message is then output. If the parameter is smaller than the minimum value of the set data type defined by <u>P-AXIS-00855 [► 13]</u>, the warning ID 70384 is output and the value of the parameter is corrected. If P-AXIS-00859 [► 14] is configured, P-AXIS-00859 must be greater than the value of P-AXIS-00860. If this is not the case, the warning ID 70385 is output and the values are exchanged. If these parameters are not configured, no limitation is executed.	
Parameter	antr.plc_to_drive[i].min_limit	
Data type	REAL64	
Data range	Dependent on <u>P-AXIS-00855 [► 13]</u> and <u>P-AXIS-00858 [► 14]</u>	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	1.000000e+199 [Kommentar: Stimmt der Wert!??]	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-00861	Value of data element after controller start-up	
Description	This parameter defines the value of the cyclic telegram element after controller start-up. The scaling factor <u>P-AXIS-00858 [► 14]</u> is calculated using this value and written to the drive.	
Parameter	antr.plc_to_drive[i].startup_value	
Data type	REAL64	
Data range	When <u>P-AXIS-00855 [► 13]</u> = 'SGN16': $\text{MIN}(\text{SGN16}) \leq \text{startup_value} * \text{scaling_factor} \leq \text{MAX}(\text{SGN16})$ When <u>P-AXIS-00855 [► 13]</u> = 'SGN32': $\text{MIN}(\text{SGN32}) \leq \text{startup_value} * \text{scaling_factor} \leq \text{MAX}(\text{SGN32})$	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	0	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-00862	Name of the telegram element to be read
---------------------	--

Description	This parameter defines which telegram element in the cyclic telegram is to be treated as control unit on the HLI. The index $i + 1$ corresponds to the relevant control unit. This is the assignment ($0 \leq i \leq 3$): antr.drive_to_plc[0].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_1 antr.drive_to_plc[1].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_2 antr.drive_to_plc[2].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_3 antr.drive_to_plc[3].wr_ident -> gpAx[axis_idx]^lr_mc_control.uns32_4 The name of the ID must be identical with the drive reference configured in the axis parameter list.	
Parameter	antr.drive_to_plc[i].wr_ident ($0 \leq i \leq 3$)	
Data type	STRING	
Data range	Maximum of 29 characters	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	*	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	* Note: The default value of variables is a blank string. Available as of Build V3.1.3081.21 or V3.1.3135.0 Parameterisation example: The torque limit value for a SERCOS drive should be linked to the control unit in the HLI. antr.drive_to_plc[0].wr_ident S_0_0092	

P-AXIS-00863	Data type of the data to be transferred	
Description	This parameter defines the data type of the telegram element in the cyclic telegram that is to be treated as control unit on the HLI.	
Parameter	antr.drive_to_plc[i].data_type	
Data type	STRING	
Data range	SGN08: Signed 8 bit integer. UNS08: Unsigned 8 bit integer. SGN16: Signed 16 bit integer. UNS16: Unsigned 16 bit integer. SGN32: Signed 32 bit integer. UNS32: Unsigned 32 bit integer. BITARRAY_08: Bit array 8 bits. BITARRAY_16: Bit array 16 bits. BITARRAY_32: Bit array 32 bits.	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	SGN16	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0 The data item is transferred by a UNS32 value to the HLI; if it is an SGN data type, the sign is at bit 31 (0-based).	

P-AXIS-00856	Writing of drive values by bit mask
---------------------	--

Description	This parameter specifies the bit mask that must be used if bitwise writing is defined. If the value specified by the control unit is greater than zero, the bit mask is set. With a programmed value of zero, the bits in the bit mask are deleted from the value to be transmitted to the drive. This value is only used if the data type configured in P-AXIS-00855 [► 13] has either the value 'BITARRAY_08', 'BITARRAY_16' or 'BITARRAY_32'. The value of this parameter must be less than or equal to the maximum values defined by the parameter in P-AXIS-00855 [► 13], otherwise error message ID 70403 is output.	
Parameter	antr.drive_to_plc[i].mask	
Data type	STRING	
Data range	Dependent on P-AXIS-00855: BITARRAY_08: Bit array 08 bit - 0 ... MAX(UNS08) BITARRAY_16: Bit array 16 bit - 0 ... MAX(UNS16) BITARRAY_32: Bit array 32 bit - 0 ... MAX(UNS32)	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	NOT USED	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

P-AXIS-00865	Scaling of the data to be transferred	
Description	This parameter defines the scaling of the value before transfer to the drive.	
Parameter	antr.drive_to_plc[i].scaling_type	
Data type	STRING	
Data range	UNSCALED	Unscaled output of the value programmed in the NC program; scaling factor = 1 (default).
	LINEAR	The value is weighted by a linear scaling factor (see P-AXIS-00866 [► 17])
	TORQUE_DRIVE_SIDE	The programmed value is a torque value related to the motor shaft and is scaled to the drive torque format by the parameters P-AXIS-00325, P-AXIS-00326 and P-AXIS-00392. The scaling factor does not change during gear change. The scaling factor is: $f = \frac{1}{P - AXIS - 00392} * \frac{P - AXIS - 00325}{P - AXIS - 00326}$
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	UNSCALED	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0 Example: The torque limit in the SERCOS drive is specified in per mil units of the maximum motor torque. However, on the HLI, the torque should be specified in per cent: <pre>antr.drive_to_plc[0].wr_ident S_0_0092 antr.drive_to_plc[0].scaling_type LINEAR antr.drive_to_plc[0].scaling_factor 10</pre>	

P-AXIS-00866	Scaling of the output value	
Description	This parameter executes a scaling for reading and writing the drive object. This parameter is only effective if the scaling type is specified in P-AXIS-00865 [► 17] .	
Parameter	antr.drive_to_plc[i].scaling_factor	

Data type	REAL64	
Data range	REAL range, except value 0	
Axis types	T, R, S	
Dimension	T: ----	R, S: ----
Default value	1	
Drive types	SERCOS, Profidrive, CANopen, Terminal	
Remarks	Available as of Build V3.1.3081.21 or V3.1.3135.0	

4 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Download finder

Our [download finder](#) contains all the files that we offer you for downloading. You will find application reports, technical documentation, technical drawings, configuration files and much more.

The downloads are available in various formats.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on our internet page: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963-157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963-460
e-mail: service@beckhoff.com

Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963-0
e-mail: info@beckhoff.com
web: www.beckhoff.com

Index

D

drive	
data	12

P

P-AXIS-000860	15
P-AXIS-00854	12
P-AXIS-00855	13, 16
P-AXIS-00856	13, 16
P-AXIS-00857	13
P-AXIS-00858	14
P-AXIS-00859	14
P-AXIS-00861	15
P-AXIS-00862	15
P-AXIS-00865	17
P-AXIS-00866	17

R

read drive data	12
read/write drive data cyclically	11

More Information:
www.beckhoff.com/TF5200

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

