

**BECKHOFF** New Automation Technology

Manual | EN

CP6700-0001-0050/0060

Economy Panel PC





# Table of contents

|           |  |           |
|-----------|--|-----------|
| <b>1</b>  | <b>Notes on the documentation.....</b>           | <b>5</b>  |
| <b>2</b>  | <b>For your safety .....</b>                     | <b>6</b>  |
| 2.1       | Signal words.....                                | 6         |
| 2.2       | Intended use .....                               | 6         |
| 2.3       | Fundamental safety instructions .....            | 7         |
| 2.4       | Operator's obligation to exercise diligence..... | 7         |
| 2.5       | Notes on information security.....               | 8         |
| <b>3</b>  | <b>Product overview .....</b>                    | <b>9</b>  |
| 3.1       | Structure.....                                   | 10        |
| 3.2       | Interface description .....                      | 12        |
| 3.2.1     | Power supply.....                                | 13        |
| 3.2.2     | Ethernet RJ45 .....                              | 14        |
| 3.2.3     | USB.....   | 15        |
| 3.2.4     | DVI .....  | 16        |
| 3.3       | Status LEDs .....                                | 17        |
| 3.4       | Name plate .....                                 | 18        |
| 3.5       | 1-second UPS .....                               | 19        |
| 3.6       | TwinCAT version .....                            | 20        |
| <b>4</b>  | <b>Commissioning .....</b>                       | <b>21</b> |
| 4.1       | Transport and unpacking .....                    | 22        |
| 4.2       | Control cabinet installation .....               | 23        |
| 4.3       | Connecting the panel PC .....                    | 26        |
| 4.3.1     | Grounding the panel PC.....                      | 27        |
| 4.3.2     | Connecting cables and power supply .....         | 28        |
| 4.4       | Switching the panel PC on and off .....          | 29        |
| <b>5</b>  | <b>Beckhoff Device Manager .....</b>             | <b>30</b> |
| <b>6</b>  | <b>Decommissioning .....</b>                     | <b>32</b> |
| 6.1       | Disconnecting the power supply and cables .....  | 32        |
| 6.2       | Disassembly and disposal.....                    | 33        |
| <b>7</b>  | <b>Maintenance .....</b>                         | <b>34</b> |
| 7.1       | Cleaning .....                                   | 34        |
| 7.2       | Maintenance.....                                 | 35        |
| 7.2.1     | Replacing the battery .....                      | 37        |
| 7.2.2     | Replacing the storage media .....                | 38        |
| <b>8</b>  | <b>Troubleshooting .....</b>                     | <b>40</b> |
| <b>9</b>  | <b>Technical data .....</b>                      | <b>41</b> |
| <b>10</b> | <b>Chemical resistance .....</b>                 | <b>42</b> |
| <b>11</b> | <b>Appendix.....</b>                             | <b>43</b> |
| 11.1      | Service and support .....                        | 43        |
| 11.2      | Approvals .....                                  | 44        |



# 1 Notes on the documentation

This description is intended exclusively for trained specialists in control and automation technology who are familiar with the applicable national standards.

The documentation and the following notes and explanations must be complied with when installing and commissioning the components.

The trained specialists must always use the current valid documentation.

The trained specialists must ensure that the application and use of the products described is in line with all safety requirements, including all relevant laws, regulations, guidelines, and standards.

## Disclaimer

The documentation has been compiled with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without notice.

Claims to modify products that have already been supplied may not be made on the basis of the data, diagrams, and descriptions in this documentation.

## Trademarks

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar®, and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

If third parties make use of the designations or trademarks contained in this publication for their own purposes, this could infringe upon the rights of the owners of the said designations.



EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

## Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The distribution and reproduction of this document, as well as the use and communication of its contents without express authorization, are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event that a patent, utility model, or design are registered.

## Third-party trademarks

Trademarks of third parties may be used in this documentation. You can find the trademark notices here: <https://www.beckhoff.com/trademarks>.

## 2 For your safety

The signal words and their meanings are explained in the chapter on safety. They contain fundamental safety instructions that are essential for preventing personal injuries and damage to property.

### Exclusion of liability

Beckhoff shall not be held liable in the event that this documentation is not complied with and the devices are therefore not used in line with the documented operating conditions.

## 2.1 Signal words

The signal words used in the documentation are classified below.

### Warning on personal injuries

|  |
|--|
|  <b>DANGER</b>  |
| High-risk hazard that will result in death or serious injury.                                    |
|  <b>WARNING</b> |
| Medium-risk hazard that may result in death or serious injury.                                   |
|  <b>CAUTION</b> |
| Low-risk hazard that may result in minor injury.   |

### Warning on property and environmental damage

|   |
|---|
| <b>NOTICE</b>                                       |
| The environment, equipment, or data may be damaged. |

## 2.2 Intended use

The device is intended for use as a control system for automation, visualization and communication in machine and system engineering.

The front of the device is designed for an IP54 working environment. There is complete protection against contact and against dust in harmful quantities, as well as protection against splash water on all sides.

The rear side is designed for a working environment that meets the IP20 protection rating. This involves finger protection and protection against solid foreign objects up to 12.5 mm. There is no protection against water. Operation of the device in wet and dusty environments is not permitted.

If you have ordered your device with a stainless steel front, the front has an IP65 protection rating. It offers full protection against contact (dust-tight) and against water jets (nozzle) from any angle. The protection rating of the back of the device does not change.

The specified limits for technical data must be adhered to.

The device can be used within the documented operating conditions.

### Improper use

Do not use the device outside the documented operating conditions.

## 2.3 Fundamental safety instructions

The following safety instructions must be observed when handling the device.

### Application conditions

- Do not use the device under extreme environmental conditions.
- Do not use the device in hazardous areas.
- Do not carry out any work on the device while it is live. Always switch off the supply voltage for the device before mounting it, replacing device components or rectifying malfunctions.
- Never plug or unplug connectors during thunderstorms. There is a risk of electric shock.
- Ensure that the device has a protective and functional earth connection.

### Damage to property, loss of data and impairment of functions

- If you change the hardware and software configurations, you must keep within the specified limits of power consumption and power loss (please refer to the respective data sheet).
- Ensure that only trained specialists with a control and automation engineering background, operate the device. Use by unauthorized persons can lead to damage to property and loss of data.
- Fuse the power supply line to protect the supply line in the event of a short circuit according to its cross-section.
- In case of fire, extinguish the device with powder or nitrogen.

## 2.4 Operator's obligation to exercise diligence

The operator must ensure that

- the products are used only for their intended purpose (see Chapter 2.2 [Intended use](#) [► 6]).
- the products are only operated in sound condition and in working order.
- the products are operated only by suitably qualified and authorized personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating instructions and in particular the safety instructions contained herein.
- the operating instructions are in good condition and complete, and always available for reference at the location where the products are used.

## 2.5 Notes on information security

The products of Beckhoff Automation GmbH & Co. KG (Beckhoff), insofar as they can be accessed online, are equipped with security functions that support the secure operation of plants, systems, machines and networks. Despite the security functions, the creation, implementation and constant updating of a holistic security concept for the operation are necessary to protect the respective plant, system, machine and networks against cyber threats. The products sold by Beckhoff are only part of the overall security concept. The customer is responsible for preventing unauthorized access by third parties to its equipment, systems, machines and networks. The latter should be connected to the corporate network or the Internet only if appropriate protective measures have been set up.

In addition, the recommendations from Beckhoff regarding appropriate protective measures should be observed. Further information regarding information security and industrial security can be found in our <https://www.beckhoff.com/secguide>.

Beckhoff products and solutions undergo continuous further development. This also applies to security functions. In light of this continuous further development, Beckhoff expressly recommends that the products are kept up to date at all times and that updates are installed for the products once they have been made available. Using outdated or unsupported product versions can increase the risk of cyber threats.

To stay informed about information security for Beckhoff products, subscribe to the RSS feed at <https://www.beckhoff.com/secinfo>.

### 3 Product overview

The CP6700 built-in panel PC is designed for installation in the front of a control cabinet or control housing and can be used in a variety of ways in machine and system engineering.

The panel PC has the following features:

- 3½-inch motherboard
- Intel® processor
- DDR4-RAM
- 1 slot for CFast
- 24 V DC power supply

#### Push-button extension

You have the possibility to order the panel PC with the following push-button extensions:

- C9900-G072: push button extension for CP6x06 with horizontal 10.1-inch display
- C9900-G073: push button extension for CP6x06 with horizontal 10.1-inch display

For explanations of the push button extensions and the functions, refer to the manual [C9900-G072/G073](#). Figure 1 shows an example of the panel PC without (1) and with (2) push button extension.

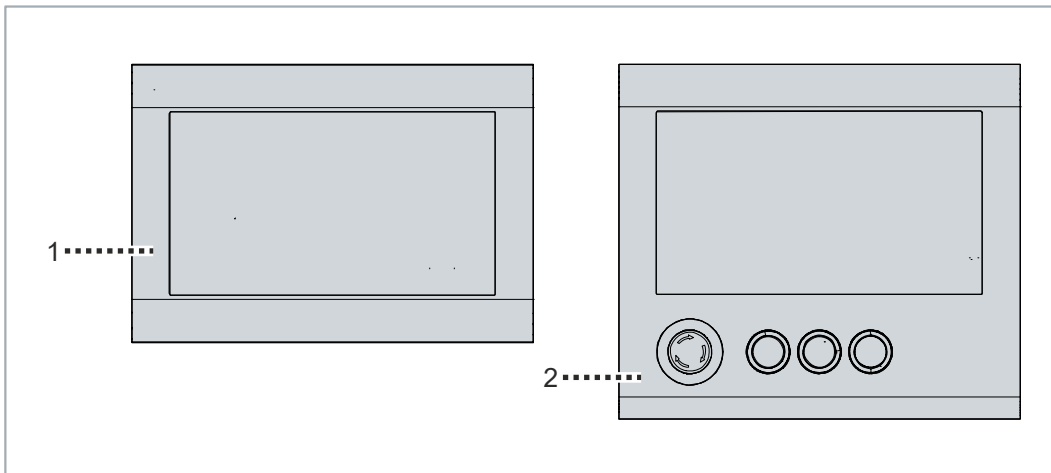


Fig. 1: Panel PC with and without push-button extension

If you have opted for a stainless steel device, you cannot order a push-button extension.

### 3.1 Structure

The figure shows an example of the panel PC's structure.



Fig. 2: Structure

Table 1: Legend: C6700 structure

| No. | Component                      | Description                                       |
|-----|--------------------------------|---|
| 1   | Name plate                     | Information on the equipment of the panel PC      |
| 2   | Clamping lever                 | Mounting the panel PC in the control cabinet wall |
| 3   | Access to interfaces           | Interfaces on the underside                       |
| 4   | Display and touch screen glass | Operation of the panel PC                         |

You can optionally order the device with a stainless steel front:

- CP6700-1400

The following figure shows the structure of a stainless steel device.

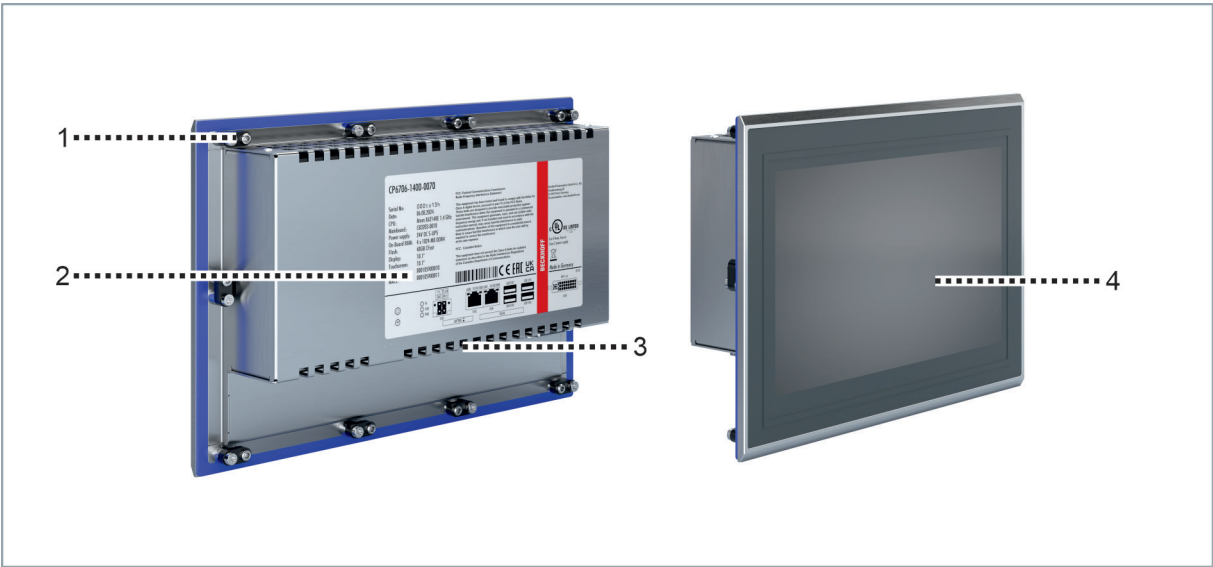


Fig. 3: Structure stainless steel device

*Table 2: Legend structure stainless steel device*

| No. | Component                      | Description                                       |
|-----|--------------------------------|---|
| 1   | Clamping lever                 | Mounting the panel PC in the control cabinet wall |
| 2   | Name plate                     | Information on the equipment of the panel PC      |
| 3   | Access to interfaces           | Interfaces on the underside                       |
| 4   | Display and touch screen glass | Operation of the panel PC                         |

## 3.2 Interface description

In the basic configuration, the CP6700 includes the following interfaces:

- Power supply (X101)
- Ethernet RJ45 (X103, X104)
- USB (X105 - X108)
- DVI (X109)

The interfaces are located on the rear side of the panel PC at the bottom in the connection section.

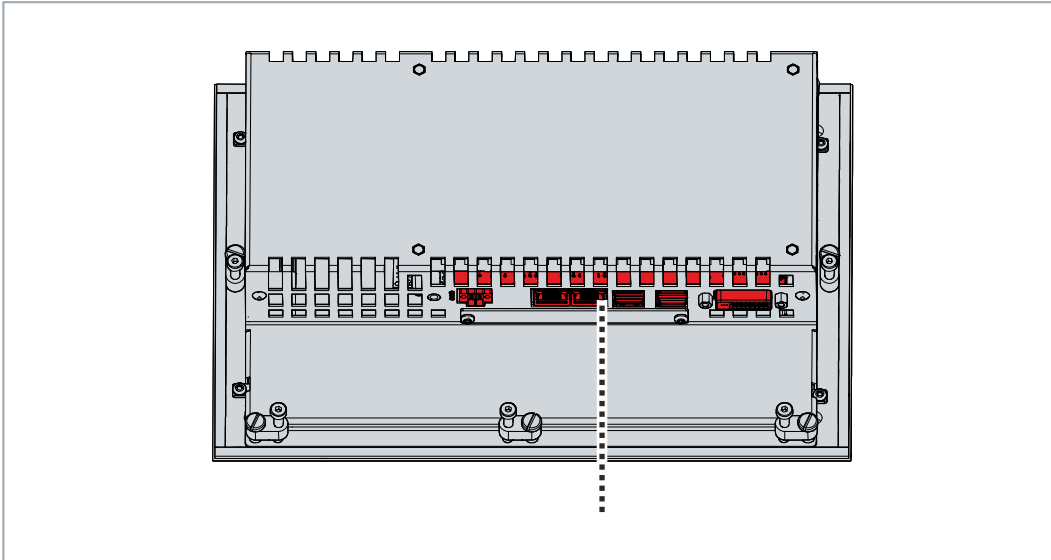


Fig. 4: Connection section

### 3.2.1 Power supply

The panel PC is supplied with a nominal voltage of 24 V. The 2x2-pin voltage socket (X101) is used for connection to the power supply and the external wiring of the panel PC. The main supply voltage is applied between PIN 3 (0 V) and PIN 4 (24 V) of the socket.

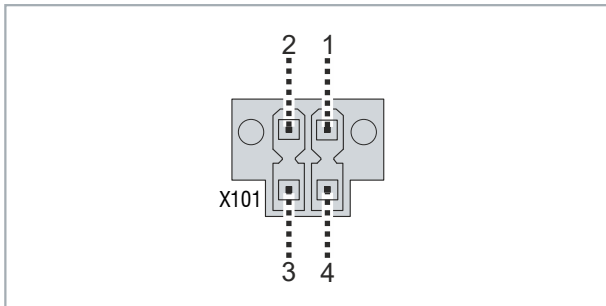


Fig. 5: Voltage socket pin numbering

Table 3: Voltage socket pin assignment

| Pin | Signal | Description         |
|-----|--------|---------------------|
| 1   | PC-ON  | Input PC-ON         |
| 2   | P-S    | Power status output |
| 3   | GND    | 0 V                 |
| 4   | 24 V   | Power supply        |

The plug for the power supply is specified for 8 A and can accommodate wire cross-sections of up to 1.5 mm<sup>2</sup>. For long supply lines, use 1.5 mm<sup>2</sup> cables to achieve a low voltage drop on the supply lines. There should be at least 22 V at the power supply plug of the industrial PC, so that the industrial PC remains switched on during voltage fluctuations. The plug is included in the scope of delivery. You can obtain a replacement plug from your Beckhoff Sales using the following ordering option:

- C9900-P943

### 3.2.2 Ethernet RJ45

The panel PC has two Gigabit LAN ports (X103, X104). The 100Base-T and 1000Base-T Ethernet standards enable the connection of corresponding network components and data rates of 100/1000 Mbit/s. The required speed is selected automatically.

The RJ45 connection technology with twisted-pair cables is used. The maximum length of the cable connection is 100 m.

The controllers are used as follows, based on the device generation:

Table 4: Controller classification based on device generation

| Device generation | Controller            | Mbit/s   |
|-------------------|-----------------------|----------|
| CP6700-0001-0050  | Intel® i210 (MAC/PHY) | 100/1000 |
| CP6700-0001-0060  | Intel® i210 (MAC/PHY) | 100/1000 |

The Ethernet ports connected via PCIe with the i210/i226 controller are suitable for cycle times  $\leq 1$  ms and for distributed clock applications with EtherCAT.

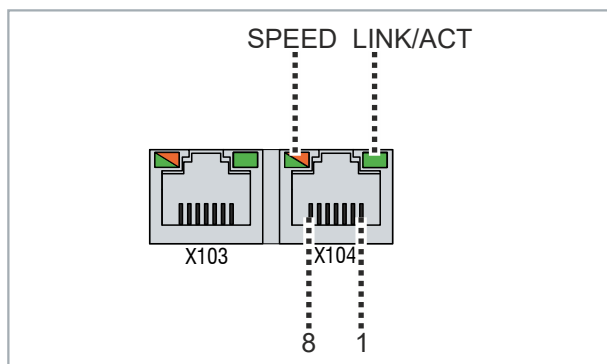


Fig. 6: Ethernet interface pin numbering

Table 5: Ethernet interface pin assignment

| Pin | Signal | Description |
|-----|--------|-------------|
| 1   | T2 +   | Pair 2      |
| 2   | T2 -   |             |
| 3   | T3 +   | Pair 3      |
| 4   | T1 +   | Pair 1      |
| 5   | T1 -   |             |
| 6   | T3 -   | Pair 3      |
| 7   | T4 +   | Pair 4      |
| 8   | T4 -   |             |

The LEDs of the LAN interfaces indicate the activity and the data transmission rate (Mbit/s). The LED shown completely green in the figure indicates whether the interface is connected to a network. If this is the case, the LED lights up green. The LED flashes green when data transmission is in progress on the interface.

The green/orange LED shown in the figure indicates the data transmission rate.

The following table shows the LED meaning according to the possible data transmission speed:

Table 6: LED meaning: speed 100/1000 Mbit/s

| Mbit/s | LED              |
|--------|------------------|
| 100    | Lights up orange |
| 1000   | Lights up green  |

3.2.3 USB

The industrial PC has four USB interfaces (X105-X108). They are used to connect peripheral devices with USB interfaces. The following table shows the interface assignment based on the device generation:

Table 7: USB interface device generation

| Device generation | USB interface           |
|-------------------|-------------------------|
| CP6700-0001-0050  | 4x USB 2.0 (X105-X108)  |
| CP6700-0001-0060  | 2x USB 3.0 (X107, X108) |
|                   | 2x USB 2.0 (X105, X106) |

The two USB interfaces each supply up to 500 mA current and are electronically protected.

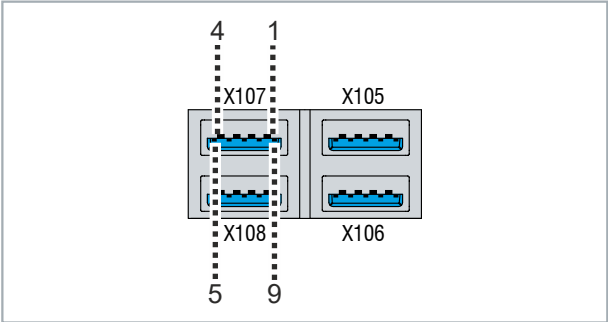


Fig. 7: USB interface pin numbering

Table 8: USB interface pin assignment

| Pin | Connection  |
|-----|-------------|
| 1   | Vbus        |
| 2   | D -         |
| 3   | D +         |
| 4   | GND         |
| 5   | StdA_SSRX - |
| 6   | StdA_SSRX + |
| 7   | GND_DRAIN   |
| 8   | StdA_SSTX - |
| 9   | StdA_SSTX + |

Only pins 1 to 4 and the shield are relevant for USB 2.0.

### 3.2.4 DVI

The industrial PC has a DVI connection (X109), to which a DVI-capable monitor can be connected. Only digital signals are transmitted.

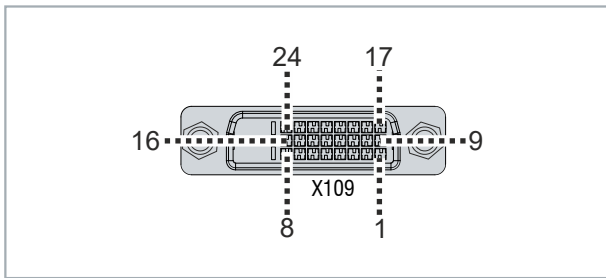


Fig. 8: DVI interface pin numbering

Table 9: DVI interface pin assignment

| Pin | Connection           | Pin | Connection                      | Pin | Connection           |
|-----|----------------------|-----|---------------------------------|-----|----------------------|
| 1   | TMDS Data 2 -        | 9   | TMDS Data 1 -                   | 17  | TMDS Data 0 -        |
| 2   | TMDS Data 2 +        | 10  | TMDS Data 1 +                   | 18  | TMDS Data 0 +        |
| 3   | TMDS Data 2/4 Shield | 11  | TMDS Data 1/3 Shield            | 19  | TMDS Data 0/5 Shield |
| 4   | not connected        | 12  | not connected                   | 20  | not connected        |
| 5   | not connected        | 13  | not connected                   | 21  | not connected        |
| 6   | DDC Clock            | 14  | + 5 V Power                     | 22  | TMDS Clock Shield    |
| 7   | DDC Data             | 15  | Ground (+ 5 V, Analog H/V Sync) | 23  | TMDS Clock +         |
| 8   | Analog Vertical Sync | 16  | Hot Plug Detect                 | 24  | TMDS Clock -         |

### 3.3 Status LEDs

The panel PC has three status LEDs: FB, HDD and PWR. They provide information on the following aspects:

- the fieldbus status
- the hard disk activity
- the status of the power controller

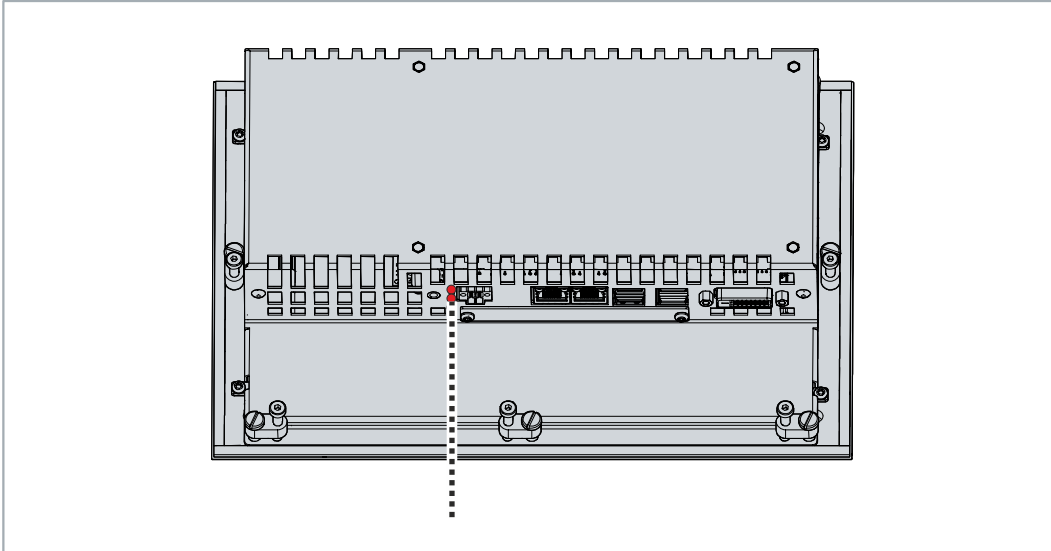


Fig. 9: Status LEDs

#### FB LED

The upper FB LED indicates the fieldbus status. The colors and flashing intervals have the following meanings:

Table 10: Meaning FB LED

| Color     | Flashing interval | Meaning                         |
|-----------|-------------------|---------------------------------|
| Red       | Steadily lit      | TwinCAT Stop                    |
| Blue      | Steadily lit      | TwinCAT Config                  |
| Blue/red  | Flashing          | TwinCAT Config (fieldbus error) |
| Green     | Steadily lit      | TwinCAT Run                     |
| Green/red | Flashing          | TwinCAT Run (fieldbus error)    |

#### HDD LED

| Color | Flashing interval | Meaning                  |
|-------|-------------------|--------------------------|
| Red   | Steadily lit      | Access to storage medium |

#### PWR LED

| Color | Flashing interval | Meaning |
|-------|-------------------|---------|
| Green | Steadily lit      | PC on   |
| -     | -                 | PC off  |

### 3.4 Name plate

The name plate provides information about the panel PC equipment. The name plate shown here serves only as an example.

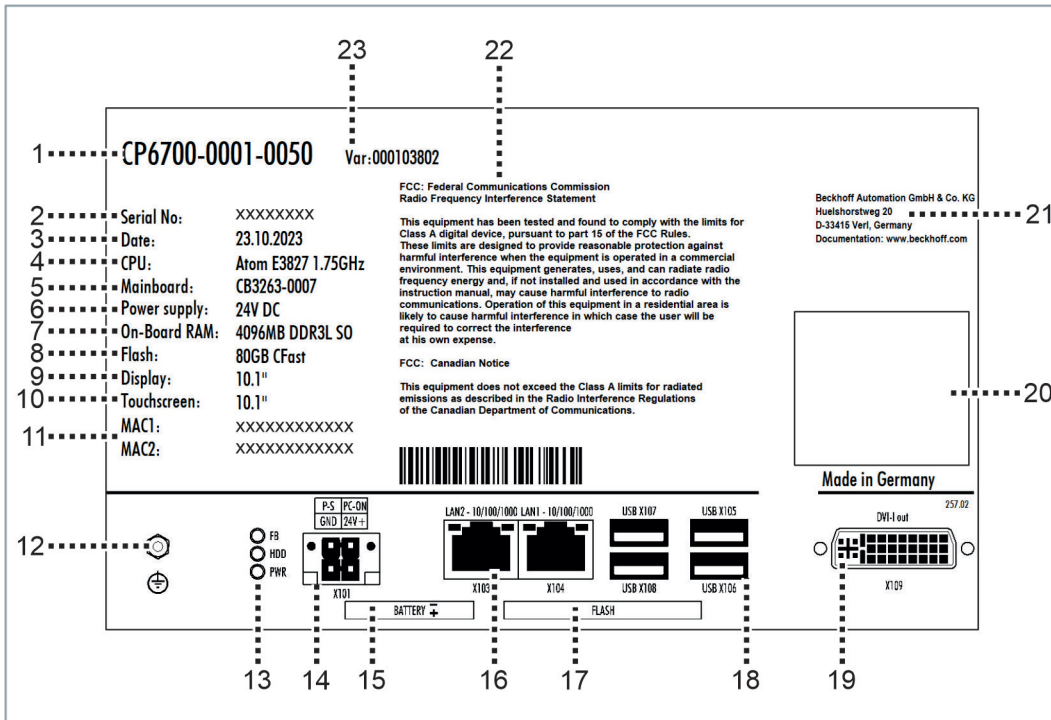




Fig. 10: Name plate

Table 11: Name plate legend

| No. | Description   |
|-----|---|
| 1   | Model: the last four digits indicate the device generation.   |
| 2   | Serial number (BTN)   |
| 3   | Date of manufacture   |
| 4   | CPU   |
| 5   | Mainboard   |
| 6   | Power supply  |
| 7   | Main memory   |
| 8   | CFast   |
| 9   | Display   |
| 10  | Touch screen  |
| 11  | MAC addresses of the Ethernet interfaces (X103, X104)   |
| 12  | PE protective conductor connection for low-resistance protective earthing and functional earthing of the panel PC |
| 13  | Status LEDs   |
| 14  | Power supply connection (X101)  |
| 15  | Battery position  |
| 16  | Ethernet interfaces (X103, X104)  |
| 17  | Storage medium position   |
| 18  | USB interfaces (X105-X108)  |
| 19  | DVI interface (X109)  |

|    |  |
|----|--|
| 20 | Symbols  |
|    |  <p>Note: Here are the symbols applicable to the device such as CE, . The approvals of your device can be found on the name plate and in chapter 10.2 Approvals.</p> |
| 21 | Address of the vendor  |
| 22 | FCC approval   |
| 23 | Variant number: commercial number of the order code including ordering options   |

### 3.5 1-second UPS

#### NOTICE

##### Loss of data

Using the 1-second UPS beyond the documented possibilities can lead to data loss or corrupt data.

- Use only TwinCAT to control the 1-second UPS and save only persistent data with a maximum size of 1 MB.

There is an option to order the industrial PC with an internal uninterruptible power supply (UPS). This is a capacitive 1-second UPS for the reliable saving of persistent application data on the storage medium. This requires TwinCAT and Windows Embedded Compact 7, Windows Embedded Standard 7 or Windows 10 IoT Enterprise.

You can order the industrial PC with internal UPS ex factory by specifying the order identifier C9900-U214.

The capacitive 1-second UPS continues to supply the processor with power if the power supply fails. During this time, the persistent data can be stored on the storage medium and will be available when the device is turned on again. The UPS only works for a few seconds.

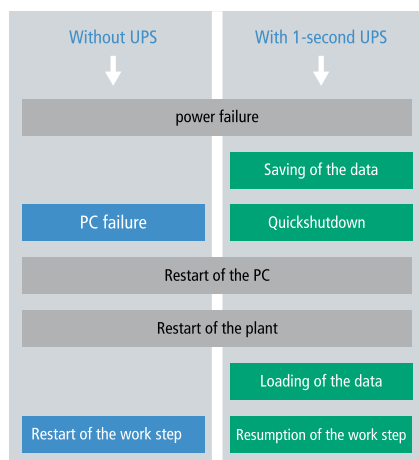


Fig. 11: UPS function

The UPS can be controlled from the PLC with the function block FB\_S\_UPS\_BAPI. For more information, please visit the Beckhoff Information System at the following link: [https://infosys.beckhoff.com/english.php?content=../content/1033/tcplclib\\_tc2\\_supps/3716524299.html&id=7162402166301276776](https://infosys.beckhoff.com/english.php?content=../content/1033/tcplclib_tc2_supps/3716524299.html&id=7162402166301276776)

## 3.6 TwinCAT version

To ensure optimal performance and access to all the functions of your device when using the TwinCAT control software, Beckhoff recommends using the latest version of TwinCAT. In addition, you should never go below the minimum requirement for the TwinCAT version. This consists of the hardware requirements and the general TwinCAT system requirements. The general TwinCAT system requirements can be found [here](#). The following table shows the minimum TwinCAT version according to the device generation based on the hardware requirements:

*Table 12: Minimum TwinCAT version hardware-based*

| Device generation | Minimum TwinCAT version hardware-based |
|-------------------|--|
| CP6700-0001-0050  | 2.11 build 2254 or 3.1 build 4020.0    |
| CP6700-0001-0060  | 3.1 build 4024.7                       |

## 4 Commissioning

In order to use the device, you must first commission it. The first step is to transport the device to its operating location and unpack it. The device is then installed in the control cabinet, the cables and power supply are connected, and finally the device is switched on.

### Operating the device

The device is operated via the touch screen.

#### NOTICE

##### Damage to the touch screen

Operating the touch screen with unsuitable objects may damage the touch screen.

- Operate the touch screen only with bare fingers or wearing suitable gloves.
- If you use gloves, make sure that no hard particles such as metal shavings, glass splinters or similar adhere to the glove.

If you, as the user, require additional protection for the touch screen against dirt and scratching, for example due to dirty hands, this can be achieved with a protective film. The film provides short-term protection for a few days.

You can either order a protective film individually and fit it yourself retrospectively, or you can order the film for fitting directly ex factory. The protective films available for the display size of your device can be found on the Beckhoff website.

Proceed as follows to attach the protective film to the touch screen:

1. Ensure that the environment is as dust-free as possible.
  2. Thoroughly clean the surface of the device to be fitted with the film and remove all grease residues.
  3. Detach the film from the backing at the short edge and place it on the surface.
  4. Gradually remove the film from the backing. At the same time, use a doctor blade or other object with a soft rubber or felt edge to apply the film.
  5. Brush away air bubbles towards the edge with a doctor blade or other object with a soft rubber or felt edge.
- ⇒ The film is now fitted.

If you want to remove the protective film again, you must proceed with caution so as not to damage the touch foil, which is located between the glass pane of the panel PC and the applied protective film.

To remove the protective film, proceed as follows:

1. Carefully loosen one corner of the protective film.
  2. Carefully pull the protective film off the control panel at the loosened corner at as flat an angle as possible.
- ⇒ You have removed the protective film.

You can use the Dimming, Screensaver and Cleaning mode functions with the Display Control Tool. The Beckhoff Information System provides more information about the tool: <https://infosys.beckhoff.com/content/1031/panelconfigurationtools/11725543179.html?id=7993182328699786200>.

## 4.1 Transport and unpacking

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport the device must therefore be protected from mechanical stress. Appropriate packaging of the device, such as the original packaging, can improve the vibration resistance during transport.

### NOTICE

#### Hardware damage due to condensation

Unfavorable weather conditions during transport can cause damage to the device.

- Protect the device against moisture (condensation) during transport in cold weather or in case of extreme temperature fluctuations.
- Do not put the device into operation until it has slowly adjusted to the room temperature.
- Should condensation occur, wait for about 12 hours before switching the device on.

## 4.2 Control cabinet installation

### NOTICE

#### Extreme environmental conditions

Extreme environmental conditions can cause damage to the device.

- Avoid extreme environmental conditions.
- Protect the device against dust, moisture and heat.

### NOTICE

#### Lack of air circulation

Incorrect installation of the device prevents air circulation in the device and thus causes overheating and impaired functioning.

- Only install the device in the corresponding wall in the orientation shown.

### NOTICE

#### Incorrect installation

Mounting the device in a way that deviates from the documentation can impair its functionality.

- Mount the device only in the orientations shown in the documents.

The device is designed for installation in a control cabinet for machine and system engineering. The environmental conditions specified for operation must be observed.

### Dimensions

The dimensions are used to prepare the control cabinet front and to ensure correct installation of the panel PC in the control cabinet front.

All dimensions are in mm.

The following figure shows the dimensions of the panel PC without push-button extension.

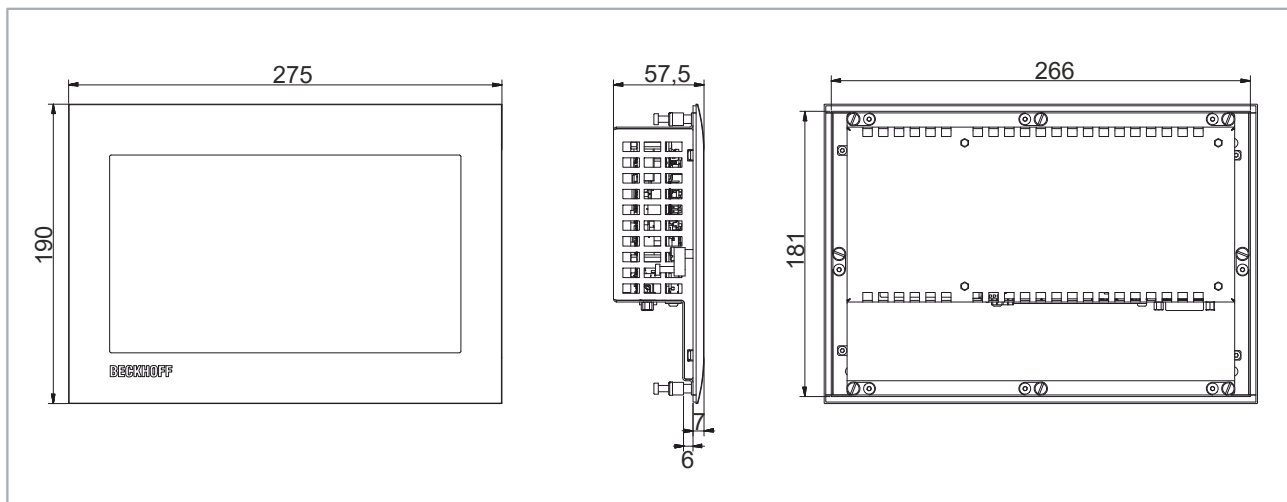


Fig. 12: Dimensions

The following figure shows the dimensions of the panel PC with push-button extension.

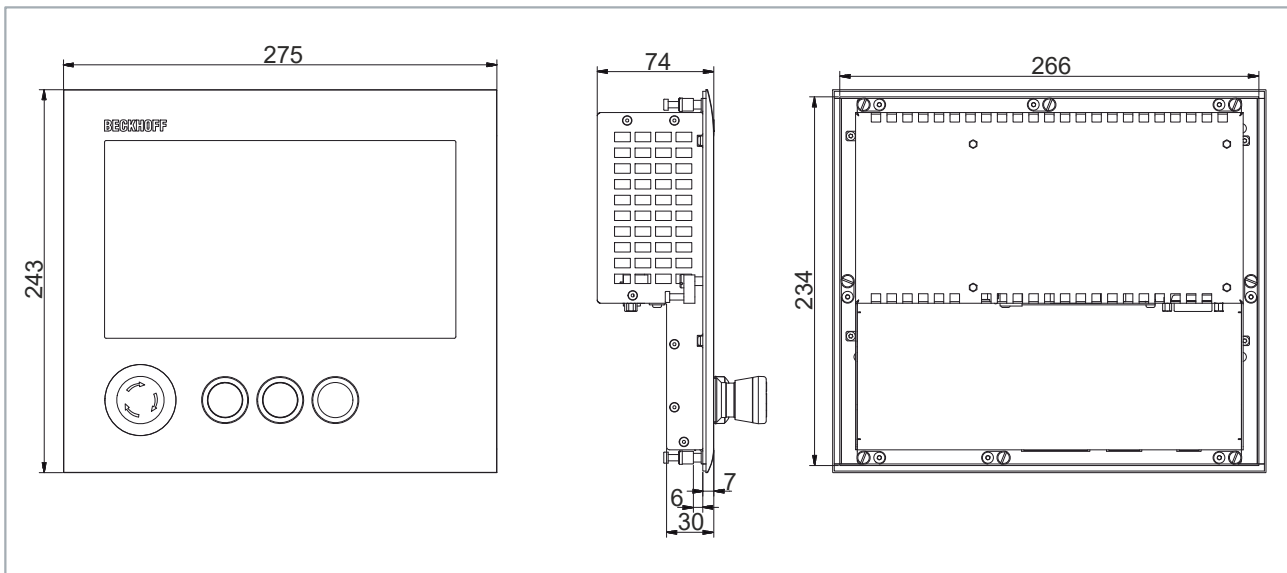


Fig. 13: Dimensions push-button extension

### Preparation of the control cabinet

The control cabinet must have the required installation cutout according to the device dimensions of the panel PC.

The wall thickness must be between 1 mm and 5 mm for installation. After installation, be sure to check the tightness between the panel PC and the wall.

Please also note the following for installation in a control cabinet:

- Ensure that there is 5 cm of free space above and below the device for air circulation.
- Position the panel PC such that reflections from light sources on the screen are avoided as far as possible.
- For the correct installation height, use the position of the screen for guidance. This should always be optimally visible to the user.
- Do not expose the panel PC to direct sunlight.

### Installation in the control cabinet

Once you have made the required cutout in the control cabinet, you can install the panel PC in the control cabinet. Clamping levers are provided at the rear side of the housing for mounting of the device. In the delivery state, the clamping levers are turned onto the device (see Fig.).

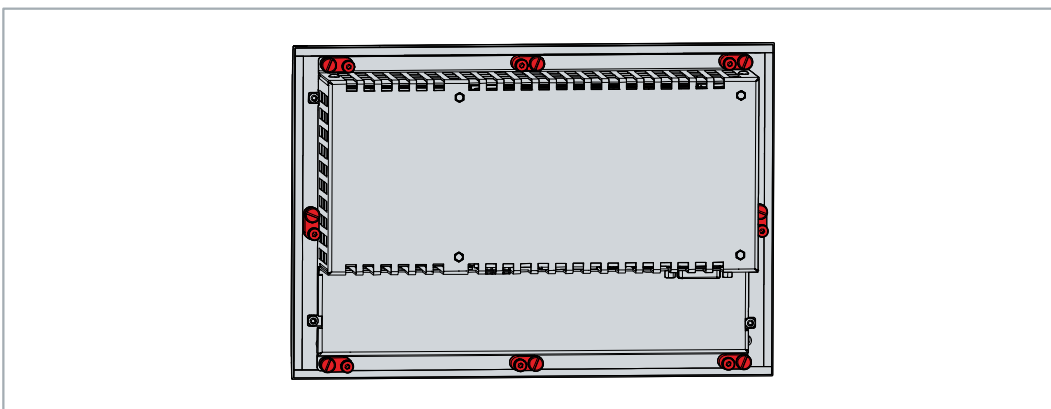


Fig. 14: Delivery state clamping lever

To install and secure the control panel in the control cabinet, follow the steps shown in the following figure:

1. Insert the control panel at the intended position in the control cabinet wall. Make sure that the device is secured against falling out until it is fastened properly.

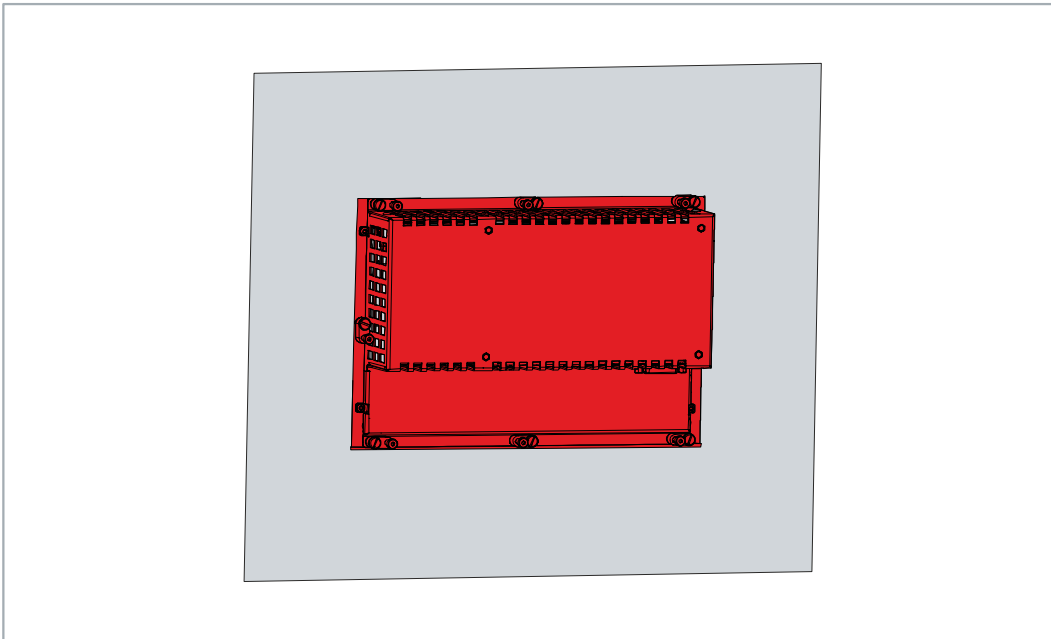


Fig. 15: Wall positioning

2. Turn the clamping levers 90° outwards (sections A and B).
  3. Tighten the clamping levers with the Allen key 2.5 mm (section C).
- ⇒ You have mounted the control panel in the control cabinet.

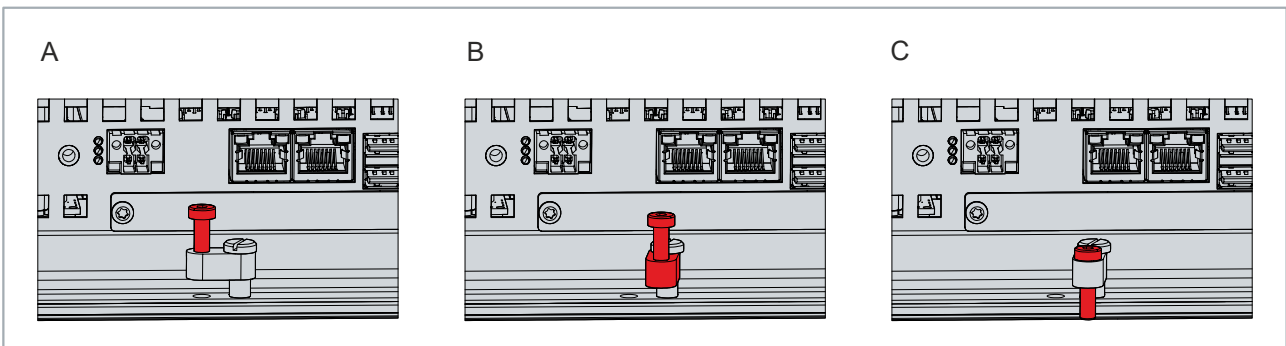


Fig. 16: Control cabinet installation

## 4.3 Connecting the panel PC

### ⚠ CAUTION

#### **Risk of electric shock**

Dangerous touch voltages can lead to electric shock. To avoid electric shock, observe the following:

- Never connect or disconnect the device cables during a thunderstorm.
- Provide protective earthing for handling the device.

To make the device ready for operation, you have to connect it. The first step is to ground the device. Then you can connect the cables and the power supply.

An external power supply providing 24 V DC from an isolated source is required. This must be protected by a fuse in accordance with UL 248 with a maximum nominal value of 4 A. A nominal voltage of at least 22 V must be applied to the power supply plug of the device at all times.

The cabling of the device in the control cabinet must be done in accordance with the standard EN 60204-1:2006 PELV = Protective Extra Low Voltage:

- The PE conductor (protective earth) and the "0 V" conductor of the voltage source must be on the same potential (connected in the control cabinet).
- Standard EN 60204-1:2006, section 6.4.1:b stipulates that one side of the circuit, or a point of the energy source for this circuit must be connected to the protective conductor system.

Peripheral devices connected to the device with their own power supply must have the same potential for the PE and "0 V" conductors (no potential difference).

### 4.3.1 Grounding the panel PC

Potential differences are minimized and electrical currents are diverted to the ground through grounding or potential equalization of electronic devices. This is to prevent dangerous touch voltages and electromagnetic interference.

#### Protective earth

The protective grounding of a device serves to avoid dangerous touch voltages. According to the EN 60204-1 standard (Chapter 8 Potential equalization), protective grounding is required if:

- the device exceeds dimensions of 50 mm x 50 mm,
- the device can be touched or encompassed over a large area,
- contact between the device and active parts is possible,
- an insulation fault may occur.

Establish the low-resistance protective earthing via the protective conductor connection PE on the rear of the housing to avoid dangerous touch voltages.

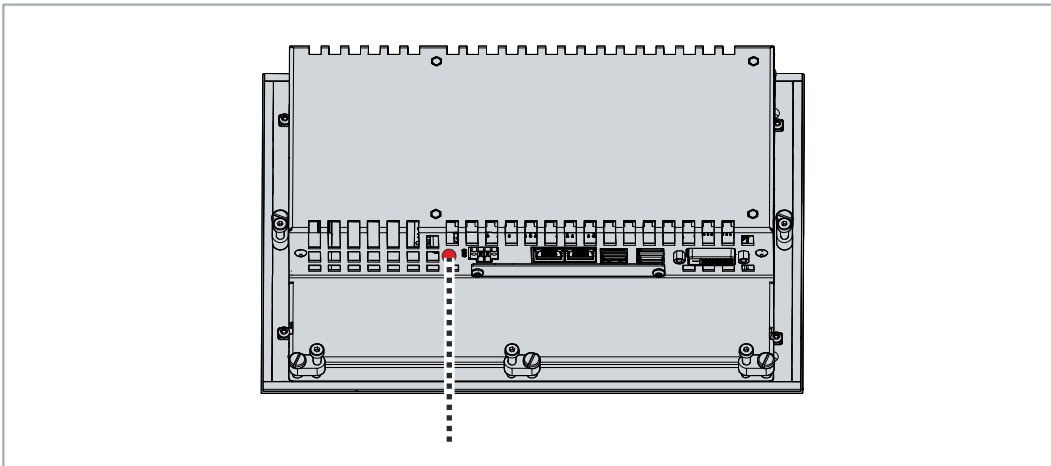


Fig. 17: Protective conductor connection PE

#### EMC

##### NOTICE

##### Hardware damage due to electromagnetic interference

The use of the device without a functional earth can lead to material damage due to electromagnetic interference.

- Only use the device with functional earth.

Electromagnetic compatibility (EMC) of the device includes on the one hand not affecting other devices and equipment by electromagnetic interference and on the other hand not being disturbed by electrical or electromagnetic effects itself.

To do this, the device must comply with certain protection requirements. The device has EMC interference immunity according to EN 61000-6-2. The EMC interference emission of the device meets the requirements of EN 61000-6-4.

The functional earth is necessary for the EMC of the device. The functional earth is also established via the protective conductor connection PE on the rear of the housing. Use cables with a minimum cross-section of 4 mm<sup>2</sup> for the ground connection.

## 4.3.2 Connecting cables and power supply

### NOTICE

#### Incorrect connection procedure

Incorrect procedure when connecting the cables and the power supply can cause hardware damage.

- Follow the documented procedure for connecting the cables and the power supply.
- Always connect the cables first and only then switch on the power supply.
- Please read the documentation for the external devices prior to connecting them.

The connections are located at the rear of the device.

#### Connecting cables

Make sure that you first ground the device (see chapter 4.3.1 [Grounding the panel PC \[► 27\]](#)) and then plug in all data transmission cables.

#### Connecting the power supply

Cables with a maximum cable cross-section of 1.5 mm<sup>2</sup> can be used for connecting the power supply. For long supply lines, use 1.5 mm<sup>2</sup> cables to achieve a low voltage drop on the supply line. There should be at least 22 V at the voltage connector of the device, so that the device remains switched on during voltage fluctuations.

Proceed as follows to connect the 24 V<sub>DC</sub> power supply unit:

1. Plug the voltage connector into the voltage socket on the device.
  2. Screw the voltage connector to the voltage socket.
  3. Connect the device to your external 24 V power supply.
  4. Switch on the 24 V power supply.
- ⇒ You have connected the power supply.

## 4.4 Switching the panel PC on and off

### NOTICE

#### Public networks

Connecting the device to public networks without additional protective measures can compromise the safety of the device.

- Protect the device before connecting it to public networks.

### NOTICE

#### Data loss due to switching off the device while the software is running

Switching off the device before the running software is terminated and the operating system is shut down can lead to data loss.

- Quit the running software and shut down the operating system before switching off the device.

The industrial PC is started or switched off when the system is switched on or off or when the power supply to the PC is connected or disconnected.

You can use the PC-ON input of the PC to control the startup and shutdown of the operating system. The PC-ON signal is inverted, which is why the operating system boots up at 0 V at the input and shuts down at 24 V. During operation, 0 V must therefore be permanently applied to the input. If you want to shut down the operating system, you must apply 24 V to the PC-ON input. Once the operating system has shut down, the PC power supply unit sets the Power Status output from 24 V to 0 V. This indicates that the shutdown is complete. You can then switch off the power supply. If you remove the 24 V from the PC-ON input before you have switched off the power supply, the operating system restarts. Therefore, 24 V must be applied to the PC-ON input until you have switched off the power supply.

To shut down the operating system properly, you can install an additional ON/OFF switch next to the machine's main switch to turn the machine on and off. The main switch can thus remain switched on in principle and thus ensures that the PC is still supplied with power during the shutdown of the operating system. Via the Power Status output, you can switch, for example, a contactor that switches off the entire system. The load capacity of the Power Status output is limited to max. 0.5 A. No fuse protection is required.

### Driver installation

When you switch on the device for the first time, the optionally pre-installed operating system will be started. For any additional hardware you have connected, you have to install the drivers yourself afterwards. In addition, the Beckhoff Device Manager starts automatically. The Device Manager is a software from Beckhoff that supports you in configuring the device.

If you have ordered the device without an operating system, you must install this and the driver software for the additional hardware you have connected and for the components inside the device. Please follow the instructions in the documentation for the operating system and the additional components.

## 5 Beckhoff Device Manager

The Beckhoff Device Manager enables detailed system diagnostics with uniform secure access to the existing hardware and software components. System data is recorded, analyzed and evaluated during operation. The data helps to detect deviations at an early stage and prevent device downtimes.

The user interface screenshots shown in this chapter are examples only and do not represent the actual state of your device.

The Beckhoff Device Manager always starts automatically after the device has been booted. In addition, you have the option of manually starting the previously closed Device Manager at any time.

The device is supplied with predetermined access data by default:

- User name: Administrator
- Password: 1

You also have the option of using the Beckhoff Device Manager to remotely configure the device via a web browser. More detailed information is available in the Beckhoff Device Manager [manual](#).

### First start of Beckhoff Device Manager

When your device is booted for the first time, the Beckhoff Device Manager also starts automatically for the first time. The Security Wizard opens. It informs you that you should reset the default password set by Beckhoff. Proceed as follows:

1. Click **Next** on the Security Wizard start page.  
⇒ This will take you to the **Change Passwords** page:

**BECKHOFF Device Manager**

**Change Passwords**

Your Beckhoff IPC is delivered with default user accounts and related default passwords! It is strongly recommended to change the default passwords to prohibit unauthorized access to your Beckhoff IPC. Please note that these passwords are valid for the access to the Beckhoff Device Manager, too.

Change the default password of the user account(s) to prohibit unauthorized access to your Beckhoff IPC.

| Local Users   | Password |
|---------------|----------|
| Administrator |          |

New Password:

New Password (confirm):

Auto Logon Enabled: ☒

<< Back Next >>

Fig. 18: Beckhoff Device Manager – Change passwords

2. Enter the access data of the Device Manager on delivery.
3. Choose a secure new password. Instructions for choosing a secure password are given below.
4. Confirm the changes by clicking on the tick in the red box on the right.
5. Exit the Security Wizard.  
⇒ You have reached the Device Manager start page.

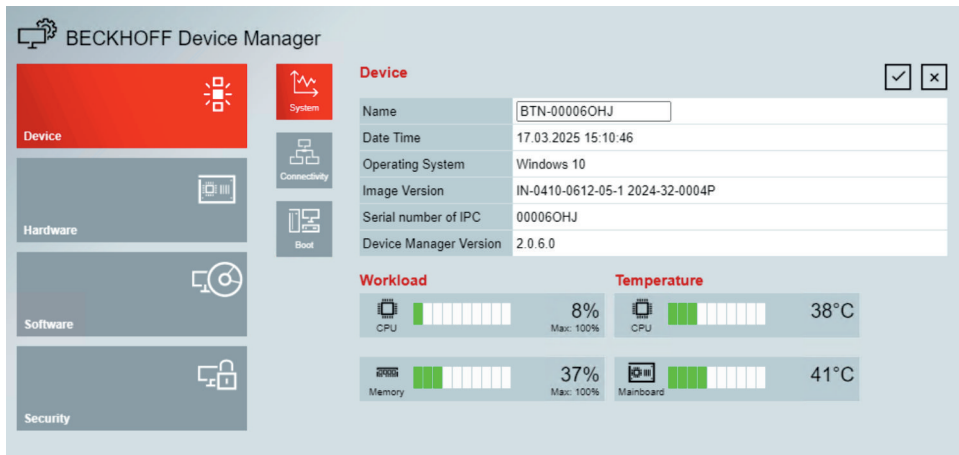


Fig. 19: Beckhoff Device Manager – Start page

Continue to navigate in the menu and to configure the device. Note that modifications only become active once they have been confirmed.

### Manual start of Beckhoff Device Manager

To start the Beckhoff Device Manager manually, proceed as follows:

1. Open a web browser locally on the device.
  2. Enter *localhost/config* in the web browser to start the Beckhoff Device Manager.
- ⇒ The Beckhoff Device Manager starts. The Security Wizard appears.

### Secure passwords

Strong passwords are an important prerequisite for a secure system.

Beckhoff supplies the device images with standard user names and standard passwords for the operating system. It is imperative that you change these.

Controllers are shipped without a password in the UEFI/BIOS setup. Beckhoff recommends assigning a password here as well.

Please note the following:

- Passwords should be unique for each user and service.
- Only change passwords after an incident in which passwords have become known without authorization.
- Train the device users in the use of passwords.

A secure password has the following characteristics:

- Password complexity: The password should contain capital and lower-case letters, numbers, punctuation marks and special characters.
- Password length: The password should be at least 10 characters long.

## 6 Decommissioning

### NOTICE

#### Hardware damage due to power supply

A connected power supply can cause damage to the device during disassembly.

- Disconnect the power supply from the device before starting to disassemble it.

As part of the decommissioning of the device, you must first disconnect the power supply and cables. You can then remove the device from the control cabinet. If you do not wish to use the device any further, chapter Disassembly and disposal provides information on the correct disposal of the device.

### 6.1 Disconnecting the power supply and cables

#### ⚠ CAUTION

#### Risk of electric shock

Dangerous touch voltages can lead to electric shock. To avoid electric shock, observe the following:

- Never connect or disconnect the device cables during a thunderstorm.
- Provide protective earthing for handling the device.

Before disassembling the device, you must disconnect the cables and the power supply. Follow the steps below:

1. Shut down the device.
  2. Disconnect the device from your external 24 V power supply.
  3. Pull the power supply plug out of the power supply socket.
  4. Make a note of the wiring of all data transmission cables if you want to restore the cabling with another device.
  5. Disconnect all data transmission cables from the device.
  6. Finally, disconnect the ground connection.
- ⇒ You have disconnected the cables and the power supply.

## 6.2 Disassembly and disposal

Before you can remove the device from the control cabinet, you must first disconnect the power supply and the cables (see Chapter Disconnecting the power supply and cables).

To remove the device from the control cabinet front, follow the steps shown in the following figure:

1. Loosen the clamping levers with a 2.5 mm Allen key (section A). Make sure that the device is secured against falling out of the control cabinet front.
2. Turn the clamping levers back by 90° onto the housing (section B).  
⇒ You can now remove the device from the control cabinet front.
3. To reattach the clamping levers to the housing, retighten them with the Allen key (section C).  
⇒ You have disassembled the device.

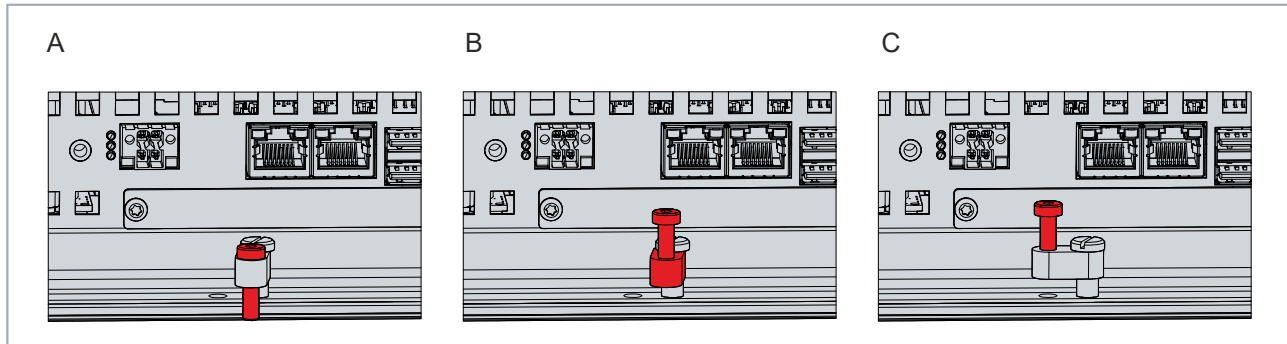


Fig. 20: Removal from the control cabinet

### Disposal of the panel PC

When disposing of the device follow the national electronic scrap regulations. In order to dispose of the device, it must be removed and fully dismantled. Dispose of the components in the following way:

- Send plastic parts (polycarbonate, polyamide (PA6.6)) for plastics recycling.
- Take metal parts to the metal recycling collection point.
- Electronic parts such as fans and circuit boards must be disposed of in accordance with national electronic scrap regulations.
- Stick insulating tape over the poles of the CR2032 battery on the motherboard and dispose of the battery via the local battery recycling.

### Also see about this

- Disconnecting the power supply and cables [► 32]

## 7 Maintenance

### ⚠ CAUTION

#### Risk of electric shock

Working on the device when live can lead to electric shock.

- Switch off the power supply before replacing device components. This does not apply to the replacement of storage media in a RAID configuration.

Maintenance measures increase the efficiency of the device by ensuring long-term functionality. Cleaning and maintenance by replacing certain device components contribute to this.

### 7.1 Cleaning

#### NOTICE

#### Unsuitable cleaning agents

The use of unsuitable cleaning agents can damage the device.

- Clean the device only as specified.

It is essential to observe the following points when cleaning the device:

- Observe to the boundary conditions of protection rating IP54/IP20.
- Never use compressed air to clean the device.
- Maintain an ambient temperature range of 0 °C to 55 °C.

#### Cleaning agents

In order to avoid damage to the front of the panel PC during cleaning, you must use suitable cleaning agents. Examples include:

- benzine
- spirit
- glass cleaner

Avoid the following cleaning agents:

- detergents with scouring or abrasive components
- metal cleaning objects such as razor blades or steel spatulas
- steam jet cleaner or very hot water
- cold water with a heated device
- high water pressure, e.g. high-pressure cleaner

#### Cleaning the front screen

You can clean the front screen of the device during operation. In order to avoid inadvertent touch entries when doing this, you must first set the device to "Cleaning Mode" with the help of the Beckhoff Display Control Tool. Also make sure that you not only clean the display area, but also the edge of the glass pane. Impurities in the edge area or liquids that do not run down the glass pane as drops but as a long short-circuit bridge create an electrically conductive connection between the touch screen area and the metal housing of the device. This unintentionally triggers a touch event at the edge of the touch screen, which can lead to incorrect operation.

The Beckhoff Display Control Tool does not start automatically when the device starts up. Proceed as follows to activate the "Cleaning Mode" of the tool:

1. Click the Beckhoff Display Control Tool icon to start it.  
⇒ When the tool is started, a small sun symbol appears in the taskbar.
2. Right-click the sun symbol.

3. Select the "Cleaning Mode" (see Fig.).

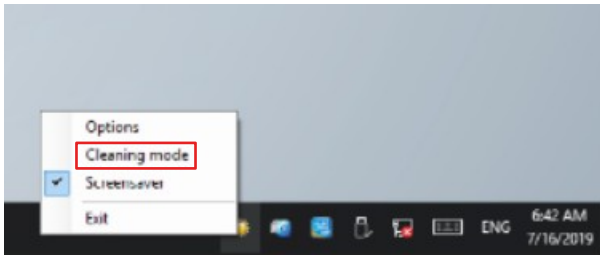


Fig. 21: Select "Cleaning Mode"

⇒ "Cleaning Mode" is activated. You can now clean the front panel.

You can set the duration for which the device should remain in "Cleaning Mode". The period can be set between 5 and 120 seconds. Right-click the sun symbol again and click "Options". Now select the appropriate duration (see Fig.).

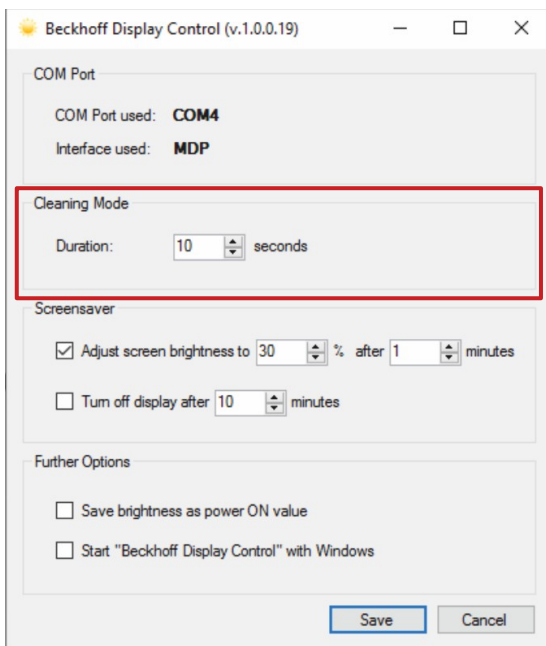


Fig. 22: Configuration "Cleaning Mode"

## 7.2 Maintenance

### NOTICE

#### Use of incorrect spare parts

The use of spare parts not ordered from Beckhoff Service can lead to unsafe and faulty operation.

- Only use spare parts that you have ordered from Beckhoff Service.

Beckhoff devices are manufactured from components of the highest quality and robustness. They are selected and tested for best interoperability, long-term availability and reliable function under the specified environmental conditions.

Nevertheless, some components of the devices may be subject to a limited service life if they are operated under certain conditions, such as at increased ambient temperatures during operation or during storage or during long periods of storage out of operation.

Beckhoff therefore recommends replacing some of the components of the devices after the time after which predictions of the remaining service life of such components can no longer be reliably calculated.

The following table provides recommendations for the regular, precautionary replacement of the device components:

Table 13: Device component replacement recommendations

| Component                          | Recommendation for replacement intervals (years)  |
|------------------------------------|---|
| UPS battery pack                   | 5 years   |
| 2.5-inch hard disk                 | 5 years or after 20,000 operating hours at more than 40 °C or after 30,000 operating hours at less than 40 °C |
| 3.5-inch hard disk                 | 5 years, irrespective of the operating hours  |
| Fan                                | 7 years   |
| CFast, SSD, MicroSD, Compact Flash | 10 years  |
| Motherboard battery                | 5 years   |

Beckhoff is excluded from liability in the event of possible damage occurring during maintenance work. In order to avoid damage caused by electrostatic discharge when replacing device components, protective measures are recommended. Below are some suggestions.

### Maintenance seal stainless steel device

If you have opted for a device with a stainless steel front, there is a silicone seal on the back of the device to protect the connection section from aggressive cleaning agents, water and dirt.

The silicone seal may become porous after a long operating time. Check the seal regularly for leaks. As soon as you notice any damage to the seal, contact the service department and have the seal replaced.

### ESD protection

#### NOTICE

#### Electrostatic discharge

The replacement of device components without ESD protection can lead to functional impairment and destruction of the device.

- If possible, apply ESD protection measures during maintenance work.

When working on electronic devices, there is a risk of damage due to ESD (electrostatic discharge), which can impair the function or destroy the device.

Protect the device and create an ESD-protected environment in which existing electrostatic charges are safely discharged to ground and charging is prevented.

An ESD-protected environment can best be created by setting up ESD protection zones. The following measures serve this purpose:

- ESD-compliant floors with sufficient conductivity to the reference potential PE;
- ESD-compatible work surfaces such as tables and shelves;
- Wrist grounding strap, especially for sedentary activities;
- grounded and electrostatically dissipating equipment and operating materials (e.g. tools) within the ESD protection zone.

If it is not possible to create an ESD protection zone, you can still protect the device against ESD damage. For example, the following measures can be used:

- Use conductive mats connected to the ground potential as underlays.
- Dissipate possible charges from your own body by touching grounded metal (e.g. control cabinet door).
- Wear a wrist grounding strap.
- Only remove new electronic components from the ESD packaging (tinted plastic bag) after putting on the wrist grounding strap.
- Do not walk around with electronic components in your hand if they are not in ESD packaging.

## Access to device components

To be able to replace the battery and the storage medium, you must first gain access to these device components. The battery and storage medium are accessible from the bottom of the panel PC. The device components are located behind a cover. Loosen the two M3 screws to gain access to the battery (1) and storage medium (2) (see Fig.).

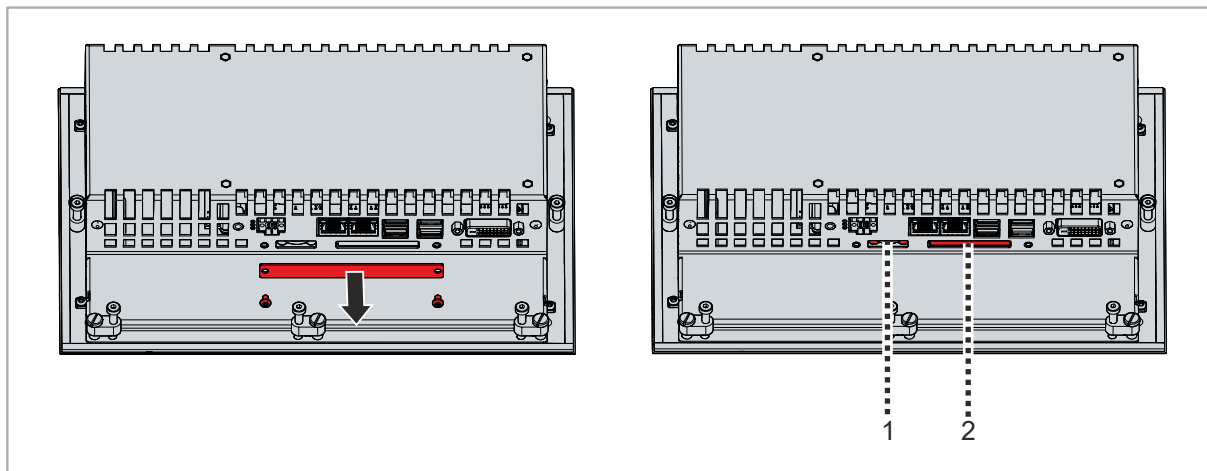


Fig. 23: Access to battery and storage medium

### 7.2.1 Replacing the battery

#### ⚠ DANGER

##### Incorrect battery type

Using a different type of battery can lead to a fire or explosion.

- Only replace the battery with a type R/C (BBCV2) battery, article number RC2032, nominal voltage 3 V.
- When replacing the battery, make sure that the polarity is correct.

#### ⚠ DANGER

##### Incorrect handling of the battery

Handling the motherboard battery incorrectly can cause an explosion.

- Do not recharge the battery.
- Do not take the battery apart.
- Do not dispose of the battery in fire.
- Do not open the battery.
- Protect the battery against direct sunlight and moisture.

#### NOTICE

##### Failure of the electronics due to mechanical damage

Scratches or damaged components on PCBs can cause the electronics to fail.

- Be very careful when replacing the battery and avoid mechanical damage to the electronics.

The device does not contain a lithium-ion battery. The motherboard battery is a CR2032 lithium-metal cell. It is used to supply power to the clock integrated on the motherboard. If the battery is depleted or missing, the date and time are displayed incorrectly.

Table 14: Technical data of the battery

| Battery type | Electrical properties (at 20 °C) |                  | Dimensions |         |        |
|--------------|----------------------------------|------------------|------------|---------|--------|
|              | Nominal voltage                  | Nominal capacity | Diameter   | Height  | Weight |
| CR2032       | 3.0 V                            | 225 mAh          | 20.0 mm    | 3.20 mm | 3.1 g  |

Chapter 7.2 [Maintenance](#) [► 35] shows how to access the battery.

To replace the battery, proceed as follows:

1. Pull the battery out of the panel PC with needle-nose pliers.
2. Insert the new battery into the PC by hand. The negative pole must point upwards.

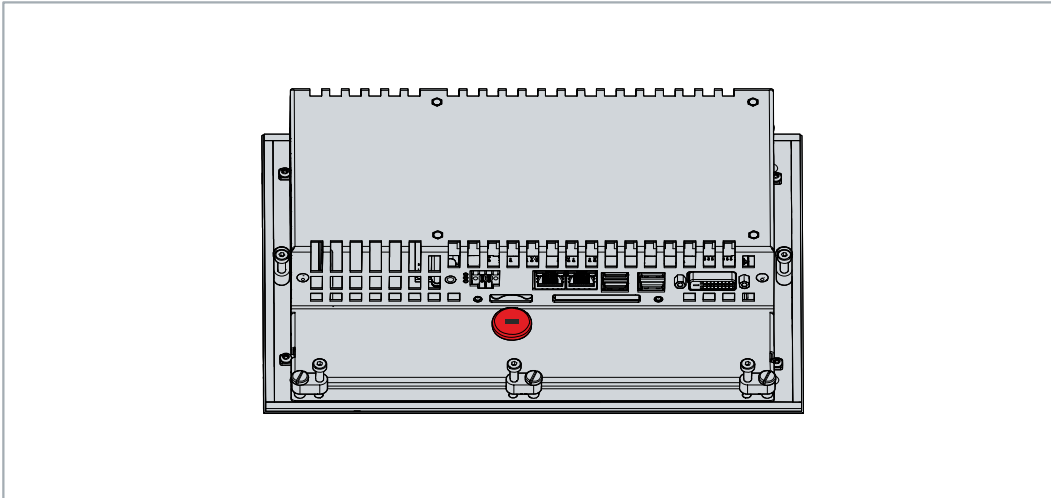


Fig. 24: Replacing the battery

⇒ You have successfully replaced the battery.

### Battery disposal

To dispose of the battery, remove it, tape off the poles and put it in the battery disposal.

## 7.2.2 Replacing the storage media

### Data transmission before replacement

If you want to exchange a storage medium according to Beckhoff's recommendation, you must copy the data from the old to the new storage medium. You can use the Beckhoff Service Tool (BST) for this purpose. BST is a graphical backup and restore program for devices with a Windows operating system. You can create an image of your operating system and use it to back up the operating system. Then you can restore the created image to a new data carrier. The BST is available on a bootable BST USB flash drive. This includes Windows and a backup tool. Select the size of the BST USB flash drive according to the size of the backup copy of your operating system. You can then keep the flash drive as a backup copy. For this purpose, the BST USB flash drives are designed for particularly long data preservation by means of special flash. For more information on the function of the BST, please refer to the corresponding [manual](#).

If your storage medium is defective and there is no backup, Beckhoff Service can provide you with a fresh Windows image. For this to be possible, your Beckhoff device must already have been delivered with a valid operating system license. After installing the fresh image, the applications must be reinstalled.

### Replacing the CFast

Chapter 7.2 [Maintenance](#) [► 35] shows how to access the CFast.

To replace the CFast, follow the steps shown below in the following figure:

1. Press lightly on the CFast, like on a button (section A).  
⇒ When you release the CFast, the push-pull mechanism guides the CFast out of the slot far enough for you to grab it.
2. Pull the CFast out of the PC (section B).

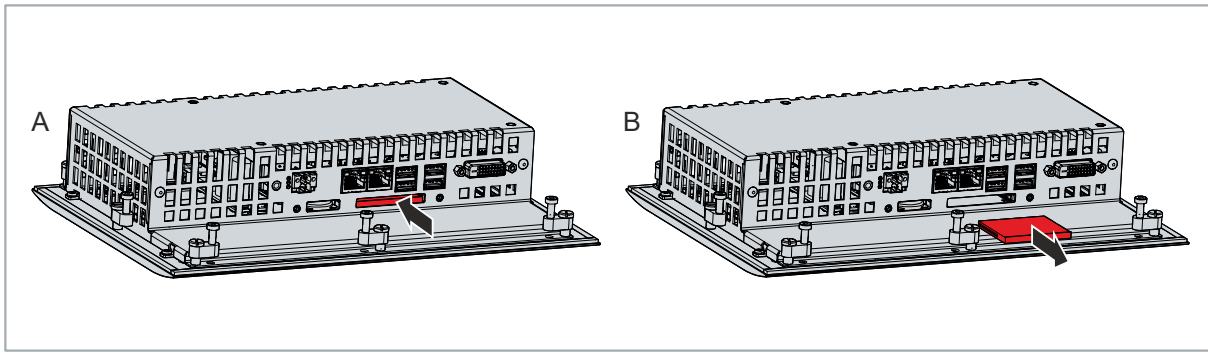


Fig. 25: Replacing the CFast

3. Insert the new CFast into the device in the same orientation until it protrudes just a bit from the PC.
  4. Press the CFast into the PC.
- ⇒ You have replaced the CFast.

### Disposal of storage media

Delete confidential or technologically important data from the storage media before disposing of it. If a storage medium is defective, you must destroy it mechanically to prevent access to the data.

The old storage media must be disposed of in accordance with the national electronic waste regulations.

## 8 Troubleshooting

Table 15: Troubleshooting

| Fault   | Cause   | Measures   |
|---|---|--|
| No function of the panel PC   | No power supply to the panel PC<br>Other cause                                | Check the power supply cable<br>Call Beckhoff Service              |
| The panel PC does not boot completely   | BIOS setup settings are incorrect<br>Other causes                             | Check BIOS setup settings (load defaults)<br>Call Beckhoff Service |
| Panel PC boots, software starts, but controller does not work properly                        | The cause of the error is the software or plant parts outside of the panel PC | Call the machine and software manufacturer                         |
| The panel PC only works partially or only temporarily (e.g. dark screen image or none at all) | Defective backlight in the display<br>Defective components in the panel PC    | Call Beckhoff Service<br>Call Beckhoff Service                     |
| USB error during access with TwinCAT via USB  | Cycle times in TwinCAT set to 10 ms (default)                                 | Increase the cycle times to between 50 ms and 80 ms                |

## 9 Technical data

Table 16: Technical data

| Product designation  | CP6700-0001  |                                  |                   |
|--|--|----------------------------------|-------------------|
| Weight   | CP6700-0001: 1.8 kg  |                                  |                   |
| Supply voltage   | 22-30 V <sub>DC</sub> (24 V DC power supply)   |                                  |                   |
| Power consumption  | Data sheet for power consumption and power loss in the download finder:<br><br><a href="https://www.beckhoff.com/en-en/support/download-finder/search-result/?download_group=691754572">https://www.beckhoff.com/en-en/support/download-finder/search-result/?download_group=691754572</a> |                                  |                   |
| Secure element   | CP6700-0001-0050: fTPM 2.0 not enabled<br>CP6700-0001-0060: fTPM 2.0 enabled<br>CP6700-0001-0070: fTPM 2.0 enabled<br>(see <a href="#">TPM documentation</a> )   |                                  |                   |
| Standard protection rating/<br>Stainless steel protection rating | Front IP54, rear IP20/<br>Front IP65, rear IP20  |                                  |                   |
| Vibration resistance (sinusoidal vibration)                      | EN 60068-2-6:  | 10 ... 58 Hz:                    | 0.035 mm          |
|  |  | 58 ... 500 Hz:                   | 0.5 G (~ 5 m/ s²) |
| Shock resistance (shock)   | EN 60068-2-27:   | 5 G (~ 50 m/s²), duration: 30 ms |                   |
| EMC interference immunity  | conforms to EN 61000-6-2   |                                  |                   |
| EMC interference emission  | conforms to EN 61000-6-4   |                                  |                   |
| Permissible ambient temperature                                  | Operation: 0 °C ... +55 °C<br>Transport/storage: -20 °C ... +65 °C   |                                  |                   |
| Permissible relative air humidity                                | Maximum 95%, no condensation   |                                  |                   |
| Transport and storage  | The values for air humidity and shock resistance are to be observed during transport and storage and in operation. The vibration resistance during transport can be improved by suitable packaging of the device.  |                                  |                   |

## 10 Chemical resistance

The following table provides information on the chemical resistance of stainless steel devices with flush-mounted touch screen.

| Description                             | Properties  |
|---|---|
| Observe the maximum ambient temperature | Liquids and vapors that act on the device for several minutes must not exceed a temperature of 45 °C at the device.                           |
|   | Flush-mounted Beckhoff touch screens are resistant to many solvents. The following solvents have been explicitly tested.                      |
| Solvent resistance                      | According to DIN 42115 Part 2, with an action time of more than 24 hours:   |
|   | - ethanol, cyclohexanol, glycol, glycerine, methanol  |
|   | - acetone, methylene chloride, methyl ethyl ketone  |
|   | acetic acid (< 50%), phosphoric acid (< 30%), hydrochloric acid (< 36%), nitric acid (< 10%), sulfuric acid (< 10%), chloracetic acid (< 50%) |
|   | ammonia (< 40%), caustic soda (< 40%)*, alkali carbonate solution*, potassium ferrocyanide, potassium hydroxide (< 30%)                       |
|   | paraffin oil, castor oil, pure turpentine   |
|   | isopropanol, hexanol, diacetone alcohol   |
|   | turpentine, mineral oils, cutting oil, linseed oil  |
|   | unleaded petrol, diesel oil, petroleum benzine*, white spirit   |
|   | engine oil, gearbox oil, antifreeze   |
|   | bleach*, SBP 60/95*   |
| Not resistant to                        | concentrated mineral acids, concentrated alkaline solutions, high-pressure steam over 100 °C  |
|   | benzyl alcohol, methylene chloride, dimethylformamide, tetrahydrofuran  |
|   | The same applies to a large number of household chemicals. The following household chemicals have been explicitly tested.                     |
| Resistance to household chemicals       | according to DIN 42115 Part 2 with an action time of more than 24 hours:  |
|   | dissolved Ariel* powder, dissolved Persil* powder, Wisk, Lenor*, Downey*  |
|   | Ajax, dissolved Vim, Windex*  |
|   | glass cleaner (ammonia-based)   |
|   | detergents  |
|   | household cleaners (Fantastic, Formula 401, Joy, Gumption*, etc.)   |
|   | vinegar, coffee, tea, cooking fat, salad oil, salt  |
|   | tomato ketchup  |
| Splash resistance                       | Flush-mounted Beckhoff touch screens are resistant to splash water.   |
|   |   |
|   | * Very minimal sheen formation was noted  |

# 11 Appendix

In the appendix you will find information for servicing and details of the approvals that your device has.

## 11.1 Service and support

Beckhoff and its worldwide subsidiaries offer comprehensive service and support, providing fast and competent assistance for all issues relating to Beckhoff products and system solutions.

### Beckhoff Service

The Beckhoff Service Center provides support in all forms of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: + 49 5246/963-460  
email: [service@beckhoff.com](mailto:service@beckhoff.com)

If your device requires attention, please state its serial number, which you can find on the name plate.

### Beckhoff Support

Support offers you comprehensive technical assistance to help you with the application of individual Beckhoff products, and also with other extensive services:

- world-wide support
- design, programming, and commissioning of complex automation systems
- extensive training program for Beckhoff system components

Hotline: + 49 5246/963-157  
email: [support@beckhoff.com](mailto:support@beckhoff.com)

### Headquarters

Beckhoff Automation GmbH & Co. KG  
Hülshorstweg 20  
33415 Verl  
Germany

Phone: + 49 5246/963-0  
email: [info@beckhoff.de](mailto:info@beckhoff.de)

The addresses of the worldwide Beckhoff branches and agencies can be found on our website at <http://www.beckhoff.com/>.

You can also find further documentation for Beckhoff components there.

## 11.2 Approvals

Your device has at least the following approvals:

- CE
- FCC

You will find all other applicable approvals on the name plate of your device.

### **FCC approvals for the United States of America**

FCC: Federal Communications Commission Radio Frequency Interference Statement

This device was tested and complies with the limits for a digital device of class A, according part 15 of the FCC regulations. These limits are designed to provide adequate protection against adverse interference, if the device is used in a commercial environment. This device generates, uses and may emit radio frequency energy and may cause adverse interference with radio communications, if it is not installed and used in accordance with the operating instructions. If this device is used in a residential area it is likely to cause adverse interference, in which case the user must take appropriate countermeasures in order to eliminate the interference at his own expense.

### **FCC approvals for Canada**

FCC: Canadian Notice

This device does not exceed the class A limits for radiation, as specified by the Radio Interference Regulations of the Canadian Department of Communications.

## List of figures

|         |  |    |
|---------|--|----|
| Fig. 1  | Panel PC with and without push-button extension..... | 9  |
| Fig. 2  | Structure.....                                       | 10 |
| Fig. 3  | Structure stainless steel device.....                | 10 |
| Fig. 4  | Connection section.....                              | 12 |
| Fig. 5  | Voltage socket pin numbering.....                    | 13 |
| Fig. 6  | Ethernet interface pin numbering.....                | 14 |
| Fig. 7  | USB interface pin numbering.....                     | 15 |
| Fig. 8  | DVI interface pin numbering.....                     | 16 |
| Fig. 9  | Status LEDs.....                                     | 17 |
| Fig. 10 | Name plate.....                                      | 18 |
| Fig. 11 | UPS function.....                                    | 19 |
| Fig. 12 | Dimensions.....                                      | 23 |
| Fig. 13 | Dimensions push-button extension.....                | 24 |
| Fig. 14 | Delivery state clamping lever.....                   | 24 |
| Fig. 15 | Wall positioning.....                                | 25 |
| Fig. 16 | Control cabinet installation.....                    | 25 |
| Fig. 17 | Protective conductor connection PE.....              | 27 |
| Fig. 18 | Beckhoff Device Manager – Change passwords.....      | 30 |
| Fig. 19 | Beckhoff Device Manager – Start page.....            | 31 |
| Fig. 20 | Removal from the control cabinet.....                | 33 |
| Fig. 21 | Select "Cleaning Mode".....                          | 35 |
| Fig. 22 | Configuration "Cleaning Mode".....                   | 35 |
| Fig. 23 | Access to battery and storage medium.....            | 37 |
| Fig. 24 | Replacing the battery.....                           | 38 |
| Fig. 25 | Replacing the CFast.....                             | 39 |

## List of tables

|          |  |    |
|----------|--|----|
| Table 1  | Legend: C6700 structure.....                               | 10 |
| Table 2  | Legend structure stainless steel device .....              | 11 |
| Table 3  | Voltage socket pin assignment .....                        | 13 |
| Table 4  | Controller classification based on device generation ..... | 14 |
| Table 5  | Ethernet interface pin assignment.....                     | 14 |
| Table 6  | LED meaning: speed 100/1000 Mbit/s .....                   | 14 |
| Table 7  | USB interface device generation.....                       | 15 |
| Table 8  | USB interface pin assignment.....                          | 15 |
| Table 9  | DVI interface pin assignment .....                         | 16 |
| Table 10 | Meaning FB LED.....  | 17 |
| Table 11 | Name plate legend .....                                    | 18 |
| Table 12 | Minimum TwinCAT version hardware-based .....               | 20 |
| Table 13 | Device component replacement recommendations .....         | 36 |
| Table 14 | Technical data of the battery .....                        | 37 |
| Table 15 | Troubleshooting .....                                      | 40 |
| Table 16 | Technical data.....  | 41 |

## **Trademark statements**

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

## **Third-party trademark statements**

Intel, the Intel logo, Intel Core, Xeon, Intel Atom, Celeron and Pentium are trademarks of Intel Corporation or its subsidiaries.

Microsoft, Microsoft Azure, Microsoft Edge, PowerShell, Visual Studio, Windows and Xbox are trademarks of the Microsoft group of companies.

More Information:  
**[www.beckhoff.com/cp6700-0001](http://www.beckhoff.com/cp6700-0001)**

Beckhoff Automation GmbH & Co. KG  
Hülshorstweg 20  
33415 Verl  
Germany  
Phone: +49 5246 9630  
[info@beckhoff.com](mailto:info@beckhoff.com)  
[www.beckhoff.com](http://www.beckhoff.com)

