

Manual | EN

# CX8080

Embedded PC with RS232/RS485



# Table of contents

|          |                                                   |           |
|----------|---------------------------------------------------|-----------|
| <b>1</b> | <b>Notes on the documentation.....</b>            | <b>5</b>  |
| 1.1      | Representation and structure of warnings .....    | 6         |
| 1.2      | Documentation issue status .....                  | 7         |
| <b>2</b> | <b>For your safety .....</b>                      | <b>8</b>  |
| 2.1      | Intended use .....                                | 8         |
| 2.2      | Staff qualification .....                         | 8         |
| 2.3      | Safety instructions .....                         | 9         |
| 2.4      | Notes on information security .....               | 10        |
| <b>3</b> | <b>Transport and storage .....</b>                | <b>11</b> |
| <b>4</b> | <b>Product overview .....</b>                     | <b>12</b> |
| 4.1      | CX80xx - System overview .....                    | 12        |
| 4.2      | CX8080 - Introduction .....                       | 14        |
| 4.3      | Technical data .....                              | 15        |
| 4.4      | CX80xx - MicroSD cards .....                      | 16        |
| <b>5</b> | <b>Mounting and wiring .....</b>                  | <b>17</b> |
| 5.1      | Mounting .....                                    | 17        |
| 5.1.1    | Dimensions .....                                  | 17        |
| 5.1.2    | Installation on mounting rails .....              | 17        |
| 5.2      | Wiring .....                                      | 20        |
| 5.2.1    | Power supply .....                                | 20        |
| 5.2.2    | Ethernet .....                                    | 21        |
| 5.2.3    | RS232/RS485 interface .....                       | 23        |
| 5.3      | Changing the battery .....                        | 24        |
| <b>6</b> | <b>Parameterization and commissioning .....</b>   | <b>25</b> |
| 6.1      | DIP switch .....                                  | 25        |
| 6.2      | Setting the IP adress .....                       | 25        |
| 6.2.1    | IP address .....                                  | 25        |
| 6.2.2    | Setting the address via DHCP server .....         | 26        |
| 6.2.3    | Subnet mask .....                                 | 26        |
| 6.3      | Configuration .....                               | 27        |
| 6.3.1    | CX80xx - Operating system .....                   | 27        |
| 6.3.2    | Power supply terminal .....                       | 29        |
| 6.3.3    | RS232/485 .....                                   | 31        |
| 6.3.4    | Web Services .....                                | 34        |
| 6.3.5    | Real Time Clock (RTC) .....                       | 36        |
| 6.3.6    | 1-second UPS (Uninterruptible Power Supply) ..... | 37        |
| 6.3.7    | CPU load .....                                    | 38        |
| <b>7</b> | <b>Programming .....</b>                          | <b>39</b> |
| 7.1      | Library for CX80xx .....                          | 39        |
| 7.2      | Seconds UPS .....                                 | 39        |
| 7.2.1    | Function blocks .....                             | 39        |
| 7.2.2    | Data types .....                                  | 42        |
| 7.3      | CX8080 LED .....                                  | 43        |

|           |                                              |           |
|-----------|----------------------------------------------|-----------|
| 7.3.1     | Function .....                               | 43        |
| 7.3.2     | Data types .....                             | 45        |
| 7.4       | Diagnostics .....                            | 45        |
| 7.4.1     | FUNCTION F_CX80xx_ADDRESS .....              | 45        |
| 7.5       | RS232/RS485 .....                            | 45        |
| 7.5.1     | Programming of the RS232/485 interface ..... | 45        |
| <b>8</b>  | <b>Ethernet .....</b>                        | <b>49</b> |
| 8.1       | System introduction .....                    | 49        |
| 8.1.1     | Ethernet .....                               | 49        |
| 8.1.2     | Topology example .....                       | 51        |
| 8.2       | ModbusTCP .....                              | 52        |
| 8.2.1     | ModbusTCP Server - Overview .....            | 52        |
| 8.2.2     | ModbusTCP Protocol .....                     | 53        |
| 8.2.3     | Mapping between Modbus and ADS .....         | 54        |
| 8.3       | TCP/IP .....                                 | 56        |
| 8.4       | ADS-Communication .....                      | 57        |
| <b>9</b>  | <b>Serial interface .....</b>                | <b>59</b> |
| 9.1       | RS232/RS485 system overview .....            | 59        |
| <b>10</b> | <b>Error handling and diagnosis .....</b>    | <b>60</b> |
| 10.1      | Diagnostic LEDs .....                        | 60        |
| <b>11</b> | <b>Appendix .....</b>                        | <b>63</b> |
| 11.1      | First steps .....                            | 63        |
| 11.2      | Image Update .....                           | 68        |
| 11.3      | Certification .....                          | 70        |
| 11.3.1    | Ex .....                                     | 70        |
| 11.3.2    | FCC .....                                    | 71        |
| 11.3.3    | UL .....                                     | 71        |
| 11.4      | Support and Service .....                    | 72        |

# 1 Notes on the documentation

This description is intended exclusively for trained specialists in control and automation technology who are familiar with the applicable national standards.

For installation and commissioning of the components, it is absolutely necessary to comply with the documentation and the following notes and explanations.

The qualified personnel is always obliged to use the currently valid documentation.

The responsible staff must ensure that the application or use of the products described satisfies all safety requirements, including all the relevant laws, regulations, guidelines, and standards.

## Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without notice.

No claims to modify products that have already been supplied may be made on the basis of the data, diagrams, and descriptions in this documentation.

## Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered and licensed trademarks of Beckhoff Automation GmbH.

If third parties make use of designations or trademarks used in this publication for their own purposes, this could infringe upon the rights of the owners of the said designations.

## Patents

The EtherCAT Technology is covered by the following patent applications and patents, without this constituting an exhaustive list:

EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702

and similar applications and registrations in several other countries.



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

## Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The distribution and reproduction of this document, as well as the use and communication of its contents without express authorization, are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event that a patent, utility model, or design are registered.

## 1.1 Representation and structure of warnings

The following warnings are used in the documentation. Read and follow the warnings.

### Warnings relating to personal injury:

|                                                                                                  |
|--------------------------------------------------------------------------------------------------|
|  <b>DANGER</b>  |
| Hazard with high risk of death or serious injury.                                                |
|  <b>WARNING</b> |
| Hazard with medium risk of death or serious injury.                                              |
|  <b>CAUTION</b> |
| There is a low-risk hazard that can result in minor injury.                                      |

### Warnings relating to damage to property or the environment:

|                                                               |
|---------------------------------------------------------------|
| <b>NOTICE</b>                                                 |
| There is a potential hazard to the environment and equipment. |

### Notes showing further information or tips:



This notice provides important information that will be of assistance in dealing with the product or software. There is no immediate danger to product, people or environment.

## 1.2 Documentation issue status

| Version | Comment                                                                                                                                    |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 1.0     | First release                                                                                                                              |
| 1.1     | <ul style="list-style-type: none"><li>• Foreword revised</li><li>• Chapter "For your safety" added</li><li>• ATEX warnings added</li></ul> |
| 1.2     | <ul style="list-style-type: none"><li>• Chapter "Transport and storage" added</li></ul>                                                    |
| 1.3     | <ul style="list-style-type: none"><li>• Chapter "FCC" added</li></ul>                                                                      |
| 1.4     | <ul style="list-style-type: none"><li>• Warnings for hazardous areas revised</li><li>• IECEx certificate added</li></ul>                   |
| 1.5     | <ul style="list-style-type: none"><li>• Chapter "RS232/RS485 interface" and "D-Sub connector ZB3180" adapted</li></ul>                     |
| 1.6     | <ul style="list-style-type: none"><li>• Information on hazardous areas adapted.</li></ul>                                                  |

Image version CX8080

### Requirements

| Firmware   | Description                                                                                                    |
|------------|----------------------------------------------------------------------------------------------------------------|
| Build 2248 | <ul style="list-style-type: none"><li>• First version (required TwinCAT version: 2.11 R3 Build 2249)</li></ul> |

## 2 For your safety

Read the chapter on safety and follow the instructions in order to protect from personal injury and damage to equipment.

### Limitation of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Unauthorized modifications and changes to the hardware or software configuration, which go beyond the documented options, are prohibited and nullify the liability of Beckhoff Automation GmbH & Co. KG.

In addition, the following actions are excluded from the liability of Beckhoff Automation GmbH & Co. KG:

- Failure to comply with this documentation.
- Improper use.
- Use of untrained personnel.
- Use of unauthorized replacement parts.

## 2.1 Intended use

The Embedded PC is designed for a working environment that meets the requirements of protection class IP20. This involves finger protection and protection against solid foreign objects up to 12.5 mm, but not protection against water. Operation of the devices in wet and dusty environments is not permitted, unless specified otherwise. The specified limits for electrical and technical data must be adhered to.

### Potentially explosive atmospheres

The Embedded PC is suitable only for the following potentially explosive atmospheres:

1. For Zone 2 atmospheres in which gas is present as a combustible material. Zone 2 means that an explosive atmosphere does usually not occur during normal operation, or only for a short time.
2. For Zone 22 atmospheres in which dust is present as a combustible material. Zone 22 means that an explosive atmosphere in the form of a cloud does usually not occur during normal operation, or only for a short time.

The Embedded PC must be installed in a housing, which ensures protection class IP 54 for gas according to EN 60079-15. A housing with protection class IP 54 is required for non-conductive dust. IP 6X is required for conductive dust according to EN 60079-31.

### Improper use

The Embedded PC is not suitable for operation in the following areas:

- In potentially explosive atmospheres, the Embedded PC may not be used in other zones except for 2/22 and not without a suitable housing.
- Areas with an aggressive environment, e.g. aggressive gases or chemicals.
- Living areas. In living areas, the relevant standards and guidelines for interference emissions must be adhered to, and the devices must be installed in housings or control boxes with suitable attenuation of shielding.

## 2.2 Staff qualification

All operations involving Beckhoff software and hardware may only be carried out by qualified personnel with knowledge of control and automation engineering. The qualified personnel must have knowledge of the administration of the Industrial PC and the associated network.

All interventions must be carried out with knowledge of control programming, and the qualified personnel must be familiar with the current standards and guidelines for the automation environment.

## 2.3 Safety instructions

The following safety instructions must be followed during installation and working with networks and the software.

### Explosion protection

#### **WARNING**

##### **Risk of explosion**

Gases or dusts can be ignited in potentially explosive atmospheres. Read and follow the safety instructions to prevent deflagrations or explosions.

The Embedded PC must be installed in a housing, which ensures protection class IP54 for gas according to EN 60079-15. A housing with protection class IP54 is required for non-conductive dust. IP6X is required for conductive dust according to EN 60079-31.

Observe the temperature at the cable entry points into the housing. If the temperature during nominal operation is higher than 70 °C at the entry points or higher than 80 °C at the wire branching points, cables must be selected that are designed for these high temperatures and operation in potentially explosive atmospheres.

Tighten the screws of the fieldbus connectors firmly so that the connectors do not slip out due to vibrations. Only use RJ45 connectors with an intact latching lug.

Maintain the prescribed ambient temperature during operation. The permissible ambient temperature range during operation is 0 °C to +55 °C.

Take measures to prevent the rated operating voltage exceeding 119 V through short-term interference voltages.

Switch off the power supply and ensure that no explosive atmosphere occurs when:

- Bus Terminals are connected or removed,
- the Embedded PC is wired or cables are connected,
- DIP switches or ID switches are set,
- the front flap is opened,
- the MicroSD card or battery is replaced,
- the USB port behind the front flap is used.

### Mounting

- Never work on live equipment. Always switch off the power supply for the device before installation, troubleshooting or maintenance. Protect the device against unintentional switching on.
- Observe the relevant accident prevention regulations for your machine (e.g. the BGV A 3, electrical systems and equipment).
- Ensure standard-compliant connection and avoid risks to personnel. Ensure that data and supply cables are laid in a standard-compliant manner and ensure correct pin assignment.
- Observe the relevant EMC guidelines for your application.
- Avoid polarity reversal of the data and supply cables, as this may cause damage to the equipment.
- The devices contain electronic components, which may be destroyed by electrostatic discharge when touched. Observe the safety precautions against electrostatic discharge according to DIN EN 61340-5-1/-3.

### Working with networks

- Restrict access to all devices to an authorized circle of persons.
- Change the default passwords to reduce the risk of unauthorized access.
- Protect the devices with a firewall.

- Apply the IT security precautions according to IEC 62443, in order to limit access to and control of devices and networks.

### Working with the software

- The sensitivity of a PC against malicious software increases with the number of installed and active software.
- Uninstall or disable unnecessary software.

Further information about the safe handling of networks and software can be found in the Beckhoff Information System:

<http://infosys.beckhoff.com>

| Document name          |
|------------------------|
| IPC Security Guideline |

## 2.4 Notes on information security

The products of Beckhoff Automation GmbH & Co. KG (Beckhoff), insofar as they can be accessed online, are equipped with security functions that support the secure operation of plants, systems, machines and networks. Despite the security functions, the creation, implementation and constant updating of a holistic security concept for the operation are necessary to protect the respective plant, system, machine and networks against cyber threats. The products sold by Beckhoff are only part of the overall security concept. The customer is responsible for preventing unauthorized access by third parties to its equipment, systems, machines and networks. The latter should be connected to the corporate network or the Internet only if appropriate protective measures have been set up.

In addition, the recommendations from Beckhoff regarding appropriate protective measures should be observed. Further information regarding information security and industrial security can be found in our <https://www.beckhoff.com/secguide>.

Beckhoff products and solutions undergo continuous further development. This also applies to security functions. In light of this continuous further development, Beckhoff expressly recommends that the products are kept up to date at all times and that updates are installed for the products once they have been made available. Using outdated or unsupported product versions can increase the risk of cyber threats.

To stay informed about information security for Beckhoff products, subscribe to the RSS feed at <https://www.beckhoff.com/secinfo>.

### 3 Transport and storage

#### Transport

##### NOTICE

##### Short circuit due to moisture

Moisture can form during transport in cold weather or in the event of large temperature fluctuations.

Avoid moisture formation (condensation) in the Embedded PC, and leave it to adjust to room temperature slowly. If condensation has occurred, wait at least 12 hours before switching on the Embedded PC.

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport the Embedded PC must be protected from

- mechanical stress and
- use the original packaging.

Table 1: Weight and Dimensions.

|                        | CX80xx                 |
|------------------------|------------------------|
| Weight                 | 180 g                  |
| Dimensions (W x H x D) | 64 mm x 100 mm x 73 mm |

#### Storage

- The battery should be removed if the Embedded PC is stored at temperatures above 60 °C. The battery should be stored separate from the Embedded PC in a dry environment at a temperature between 0 °C and 30 °C.  
The preset date and time are lost if the battery is removed.
- Store the Embedded PC in the original packaging.

## 4 Product overview

### 4.1 CX80xx - System overview

CX80xx is a device family of programmable controllers with 32-bit ARM-based CPU, which can be used for processing of PLC programs or as slave devices for higher-level fieldbus systems. Unlike with the non-programmable EtherCAT couplers of the EK series, which only act as gateway between the associated fieldbus system and the connected EtherCAT terminals, the CX80xx is programmable and able to run its own control program.


The devices from the CX80xx series represent a further development of the well-known and proven 16-bit microcontroller-based Bus Terminal Controllers from the BC and BX series including more efficient 32-bit processors. As with the BC/BX, it is also ensured in the case of the CX80xx that the control and the local program continue to be executed in the case of interruption of the higher-level fieldbus system. The CX80xx devices can therefore be used as local controllers. Alternatively, Bus Terminals (K-bus) or EtherCAT Terminals (E-bus) can be connected; the CX80xx automatically recognizes which terminal system is connected during the start-up phase. The use of EtherCAT gives rise to further options, such as the realization of different topologies, the integration of further bus systems such as CANopen, PROFIBUS and PROFINET and – with the EtherCAT Box Modules – connection to the IP67 world.

Like all CX products, the CX80xx devices are programmed and commissioned via the Ethernet interface, which can, of course, also be used for connection of the control system with a regular network. Some of the Embedded PCs have further Ethernet interfaces with switch functions, so that a linear "daisy chain" topology can be constructed inexpensively, without additional hardware. The other connections on the lower plug level are fieldbus-specific. Under the cover at the upper housing level there is an exchangeable button cell for date and time, a set of DIP switches for setting function modes, a slot for Micro-SD Flash memory cards and a type B USB connection. Thanks to their low power consumption, the devices are fanless.

Microsoft Windows CE is used as the operating system. In the absence of a monitor port, the operating system and its "virtual" display can only be accessed via the network. As for all other Beckhoff devices, the TwinCAT software is used for system configuration and the programming of the PLC functionality. The CX80xx target device features a pre-installed TwinCAT PLC runtime environment. All software required for operating the device, including the operating system, the TwinCAT files and user files and data, is stored on the MicroSD Flash card. This simplifies exchange in the case of service. Commercial card readers can be used to access the card data. The size of the MicroSD Flash card (e.g. 512 MB) can be chosen depending on the application and the quantity of data to be stored.

The CX80xx device family features an integrated, capacitive 1-second UPS, which in the event of a failure of the supply voltage provides sufficient energy for saving persistent data. Important data are thus preserved in a non-volatile manner without battery backup.

With a high-performance but nevertheless energy-saving 32-bit ARM processor, EtherCAT as I/O bus and TwinCAT PLC with extensive PLC libraries, the Embedded Controllers from the CX80xx series represent high-performance and versatile controllers with slave fieldbus connection.

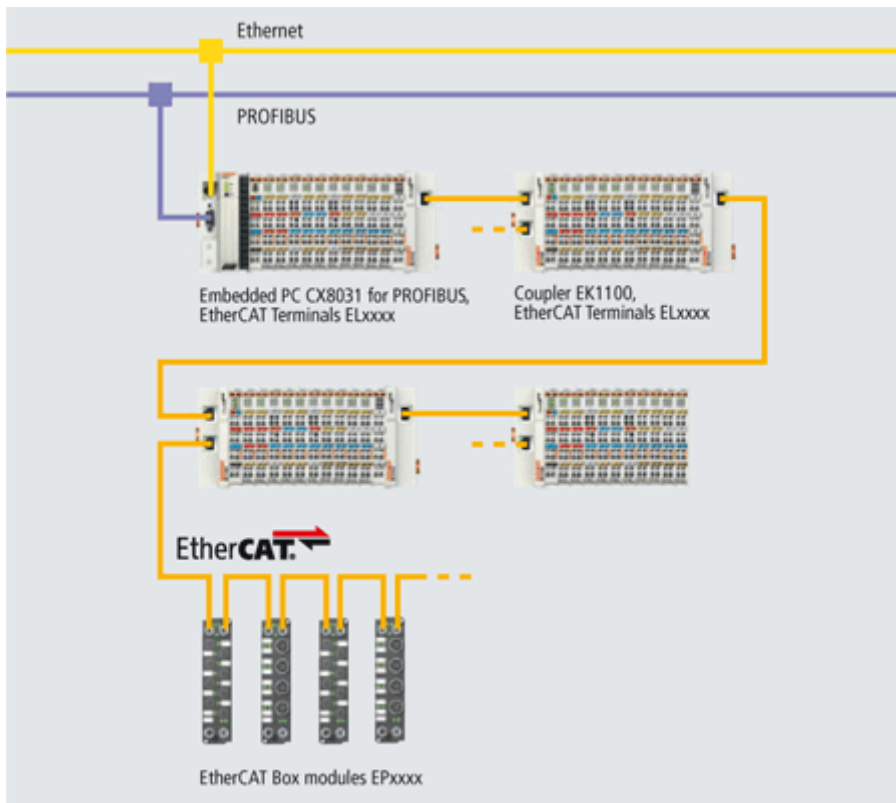

## Fieldbus interface

The variants from the CX80xx series differ by their fieldbus interfaces. Various versions cover the most important fieldbus systems:

- [CX8010](#): EtherCAT Slave
- [CX8030](#): PROFIBUS DP Master  
[CX8031](#): PROFIBUS DP Slave
- [CX8050](#): CAN Master  
[CX8051](#): CANopen Slave
- [CX8080](#): RS232/485
- [CX8090](#): Ethernet (RT-Ethernet, EAP, ModbusTCP, TCP/IP, UDP/IP, Web Services)
- [CX8091](#): BACnet IP/OPC UA
- [CX8093](#): PROFINET RT Device (Slave)
- [CX8095](#): Ethernet/IP Slave
- [CX8097](#): Sercos III Slave

## Programming

The CX80xx controller is programmed according to the high-performance IEC 61131-3 standard. As with all other Beckhoff controllers, the TwinCAT automation software is the basis for parameterization and programming. Users therefore have the familiar TwinCAT tools available, e.g. PLC programming interface, System Manager and TwinCAT Scope.

## Configuration


The configuration is also carried out using TwinCAT. The fieldbus interface and the real-time clock can be configured and parameterized via the System Manager. The System Manager can read all connected devices and Bus Terminals. The configuration is stored on the CX after the parameterization. The configuration thus created can be accessed again later.

## 4.2 CX8080 - Introduction

In the basic version the CX80xx contains a 512 MB MicroSD card. A fieldbus interface, an Ethernet interface and a K-bus or E-bus interface are included as standard.

The smallest task time to be used is 1 ms (a task time of 1 to 50 ms is recommended for the I/O data, further tasks can also be set slower). When using shorter cycle times, the total system load is to be observed. If too short a cycle time is selected, the Web visualization and remote desktop may operate very slowly or cause timeouts. The user is responsible for projecting and configuring his system such that it is not overloaded.

### CX8080

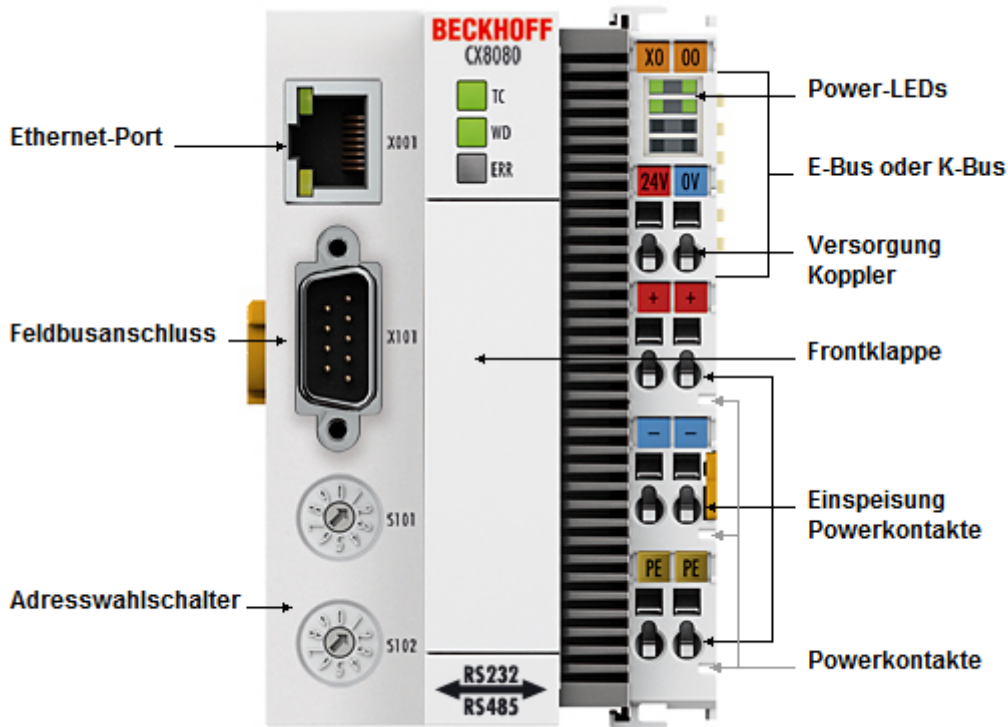

The CX8080 is a controller with an Ethernet port and two serial interfaces.

From TwinCAT 2.11 R3 build 2249, the Ethernet port is used for programming and/or configuration.

The serial interfaces can be operated with RS232 or RS485 hardware. It is also possible to operate the two interfaces simultaneously.

The interfaces are protocol-neutral and can be connected to a wide range of devices with the aid of various serial supplements. Custom protocols can also be used and can be implemented quite quickly with the aid of the *Serial Communication TS6340* library. Baud rates between 300 baud and 115 kbaud are supported.

Alternatively K-bus or E-bus terminals can be series-connected; the CX8080 automatically detects which type of terminal is connected during the start-up phase.

## 4.3 Technical data

| Technical data                                   | CX8080                                                                                                                           |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Processor                                        | Arm9™, 400 MHz                                                                                                                   |
| Internal main memory                             | 64 MB RAM (internal, not expandable)                                                                                             |
| Web-based Management                             | yes                                                                                                                              |
| Flash memory                                     | microSD card (ATP) 512 MB (optional 1, 2, 4, 8 GB)                                                                               |
| Interfaces                                       | 1 x USB device (behind the front flap)<br>1 x RJ45 Ethernet, 10/100 Mbit/s (ADS over TCP/IP)<br>1 x D-sub (1 x RS232, 1 x RS485) |
| Protocols (serial)                               | any                                                                                                                              |
| Interface for I/O terminals                      | K-bus or E-bus, automatic recognition                                                                                            |
| Process data on the K-bus                        | max. 2 kB input data<br>max. 2 kB output data                                                                                    |
| Diagnostic LED                                   | 1 x power, 1 x TC status, 2 x bus status                                                                                         |
| Clock                                            | internal battery-backed clock (RTC) for time and date (battery exchangeable)                                                     |
| Control software                                 | TwinCAT PLC runtime (from version 2.11 R3)                                                                                       |
| Operating system                                 | Microsoft Windows CE 6 <sup>1)</sup>                                                                                             |
| Programming                                      | TwinCAT PLC                                                                                                                      |
| Programming languages                            | IEC 61131-3                                                                                                                      |
| Online Change                                    | Yes                                                                                                                              |
| Up/download code                                 | yes/yes                                                                                                                          |
| Power supply                                     | 24 V <sub>DC</sub> (-15%/+20%)                                                                                                   |
| 1-second UPS                                     | integrated (1 MB on microSD card)                                                                                                |
| Power supply for I/O terminals                   | max. 2 A                                                                                                                         |
| Max. power consumption                           | 3 W                                                                                                                              |
| Max. power consumption E-bus/K-bus               | 10 W (5 V/max. 2 A)                                                                                                              |
| Dielectric strength                              | 500 V (supply / internal electronics)                                                                                            |
| Dimensions (W x H x D)                           | 64 mm x 100 mm x 73 mm                                                                                                           |
| Weight                                           | approx. 180 g                                                                                                                    |
| Permissible ambient temperature during operation | 0° C ... +55 °C                                                                                                                  |
| Permissible ambient temperature during storage   | -25° C ... +85° C<br>see notes under: <a href="#">Transport and storage [► 11]</a>                                               |
| Correct installation position                    | see chapter Installation positions                                                                                               |
| Relative humidity                                | 95% no condensation                                                                                                              |
| Vibration/shock resistance                       | conforms to EN 60068-2-6 / EN 60068-2-27                                                                                         |
| EMC immunity/emission                            | conforms to EN 61000-6-2/EN 61000-6-4                                                                                            |
| Protection rating                                | IP20                                                                                                                             |
| System data                                      | RS232 (CX8080)                                                                                                                   |
| Number of I/O modules                            | 1                                                                                                                                |
| Data transfer medium                             | shielded copper cable, 3 x 0.25 mm <sup>2</sup>                                                                                  |
| Cable length                                     | 15 m                                                                                                                             |
| Data transfer rate                               | 300 baud...115 kbaud                                                                                                             |
| Topology                                         | peer to peer                                                                                                                     |
| System data                                      | RS485 (CX8080)                                                                                                                   |
| Number of I/O modules                            | 4                                                                                                                                |
| Data transfer medium                             | shielded copper cable, 2 x 0.25 mm <sup>2</sup>                                                                                  |
| Cable length                                     | 200 m                                                                                                                            |
| Data transfer rate                               | 300 baud...115 kbaud                                                                                                             |
| Topology                                         | Line topology                                                                                                                    |

<sup>1)</sup> The support period for the Microsoft Windows Embedded CE 6 operating system has already expired. Security updates can therefore no longer be provided.

## 4.4 CX80xx - MicroSD cards

### ⚠ CAUTION

#### MicroSD card as ignition source in potentially explosive atmospheres

Gases or dusts can be ignited by a spark discharge when the MicroSD card is inserted or removed. Switch off the power supply and wait until the 1-second UPS has discharged. Ensure that there is no explosive atmosphere before you insert or remove the MicroSD card.

In the basic version the CX80xx contains a MicroSD card with 512 MB. You can order it as an option with larger cards (up to 8 GB).

The cards employed are SLC memory with extended temperature range for industrial applications. Use exclusively MicroSD cards approved by Beckhoff.

Example of a MicroSD card:



| Order identifier | Capacity | Description                                                                                                                        |
|------------------|----------|------------------------------------------------------------------------------------------------------------------------------------|
| CX1900-0123      | 1 GB     | MicroSD card (SLC memory) with extended temperature range for industrial applications instead of the 512 MB card (ordering option) |
| CX1900-0125      | 2 GB     |                                                                                                                                    |
| CX1900-0127      | 4 GB     |                                                                                                                                    |
| CX1900-0129      | 8 GB     |                                                                                                                                    |
| Order identifier | Capacity | Description                                                                                                                        |
| CX1900-0122      | 512 MB   | MicroSD card (SLC memory) with extended temperature range for industrial applications as spare part.                               |
| CX1900-0124      | 1 GB     |                                                                                                                                    |
| CX1900-0126      | 2 GB     |                                                                                                                                    |
| CX1900-0128      | 4 GB     |                                                                                                                                    |
| CX1900-0130      | 8 GB     |                                                                                                                                    |

Further Information: <https://www.beckhoff.com/CX8000>

## 5 Mounting and wiring

### 5.1 Mounting

#### ⚠ CAUTION

##### Application in potentially explosive atmospheres

The Embedded PC must be fitted with a suitable housing and suitable cables for use in potentially explosive atmospheres.

In potentially explosive atmospheres, the Embedded PC must always be installed in a housing with the correct protection class, and suitable cables must be used.

Install the Embedded PC in a housing or a control cabinet, if it is to be used in potentially explosive atmospheres.

Table 2: Embedded PC installation, requirements for housing in potentially explosive atmospheres.


| Ex area | Flammable substance  | Protection class                |
|---------|----------------------|---------------------------------|
| Zone 2  | Gas                  | IP 54, according to EN 60079-15 |
| Zone 22 | dust, non-conductive | IP 54, according to EN 60079-31 |
|         | dust, conductive     | IP 6x, according to EN 60079-31 |

Observe the temperature at the cable entry points into the housing. If the temperature during nominal operation is higher than 70 °C at the entry points or higher than 80 °C at the wire branching points, cables that are designed for these higher temperatures and Ex operation must be used.

#### 5.1.1 Dimensions

The following drawings show the dimensions of the CX80xx Embedded PCs.

##### Dimensions

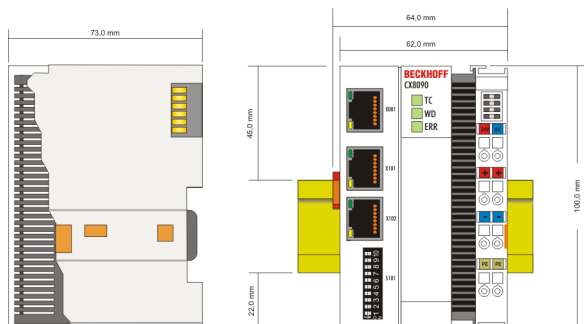


Drawings in various CAD formats can be found at: <https://www.beckhoff.com>

#### 5.1.2 Installation on mounting rails

##### Snapping onto the mounting rail

The CX80xx can simply be snapped onto the mounting rail. To this end simply position the block on the mounting rail and push it slightly until it engages on the right-hand side. This is indicated by a distinct click. Use a screwdriver to push up the lock on the left-hand side, thereby turning it and causing it to engage audibly.

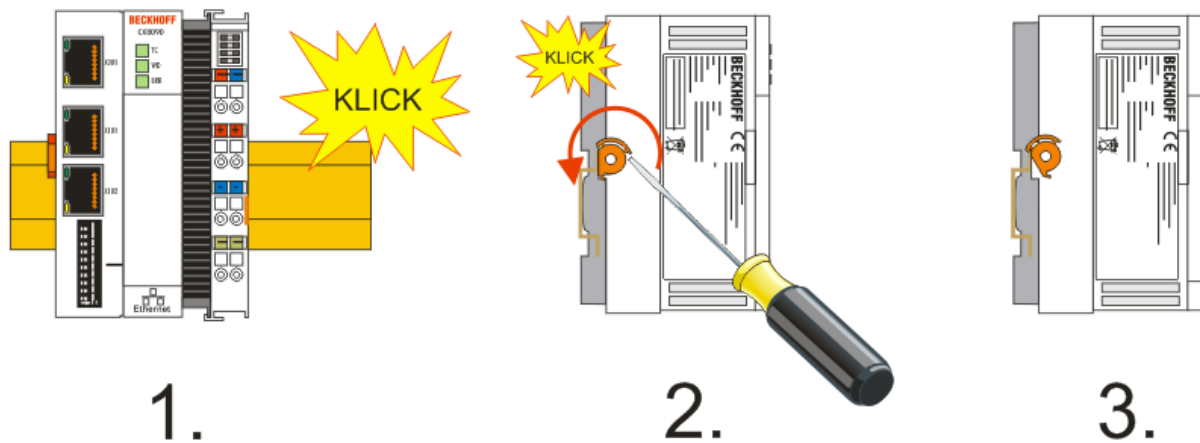

### NOTICE


#### Avoid damage!

Do not force the module or apply excessive pressure!

#### Permissible installation positions and minimum distances

Installation positions

Installation position up to 55 °C

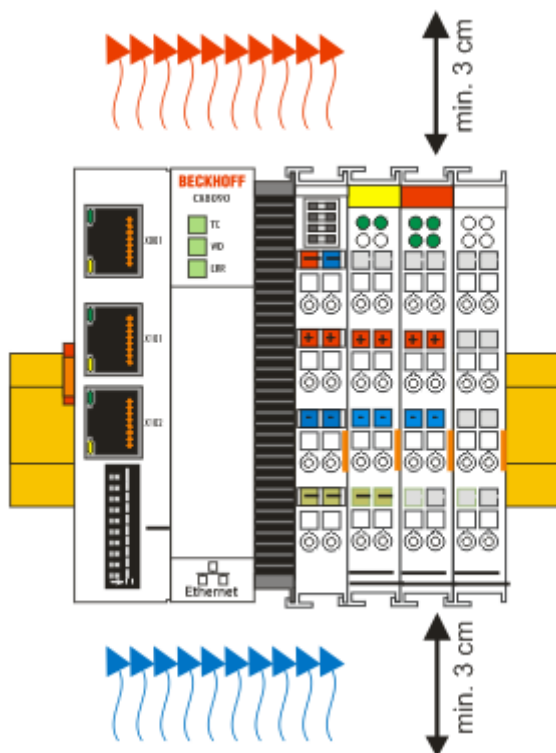


**NOTICE****Comply with the permitted installation position and minimum distances!**

The maximum ambient temperature for CPU modules mounted on a DIN rail is 55°C. The orientation in which the device is fitted must be selected in such a way that cooling air can flow vertically through the ventilation holes. The images show the permitted and restricted installation positions. Mounting must provide a clearance of 30 mm both above and below a CX80xx device combination to ensure adequate ventilation of the base CPU module and the power supply unit.

The high performance and the compact design of the CX80xx systems may result in increased heat generation. The heat is dissipated via a passive ventilation system. This system requires the unit to be mounted correctly. Ventilation openings are located at the top and bottom of the housing. The system therefore has to be installed horizontally. This ensures optimum air flow.

**Installation positions with reduced temperature range up to 45 °C**

Other installation positions are permitted with a temperature range up to 45 °C.

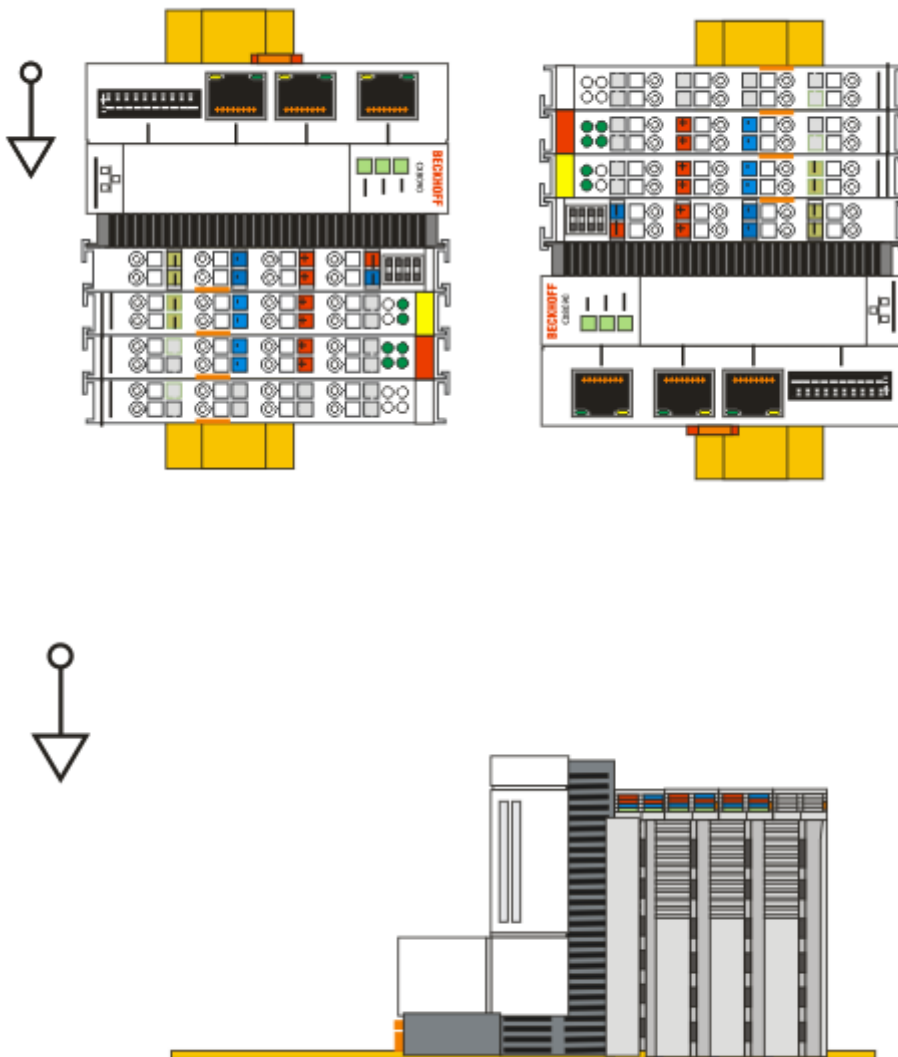

## 5.2 Wiring

### 5.2.1 Power supply

#### ⚠ WARNING

##### Risk of injury through electric shock and damage to the device!

Bring the CX80xx into a safe, de-energized state before starting assembly, disassembly or wiring!

#### ⚠ CAUTION

##### Connections as ignition source in potentially explosive atmospheres

Gases or dusts can be ignited by a spark discharge when the Embedded PC is wired.

Switch off the power supply and wait until the 1-second UPS has discharged. Ensure that there is no explosive atmosphere before you wire the Embedded PC and connect or disconnect Bus Terminals.


This power supply unit is equipped with an I/O interface, which permits connection of the Beckhoff Bus Terminals. The power is supplied via the upper spring-loaded terminals with the designation 24 V and 0 V.

The supply voltage supplies the CX system and, via the terminal bus, the Bus Terminals with a voltage of 24 V<sub>DC</sub> (15 %/+20 %). The dielectric strength of the power supply is 500 V. Since the Terminal Bus (K- and E-bus) only transfers data, a separate power supply is required for the Bus Terminals. This is provided by means of the power contacts, which are not connected to the power supply. Only 24 V DC may be connected to the power contacts; the maximum current load of the power contacts is 10 A.

#### ⚠ CAUTION

##### Power contact PE

The PE power contact must not be used for other potentials.

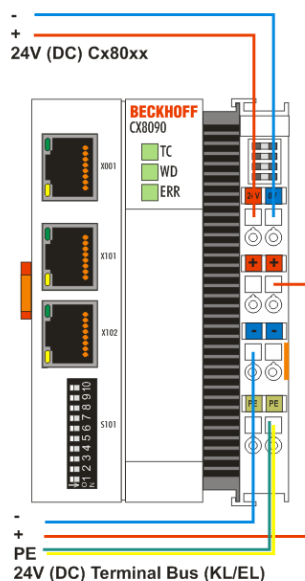

#### Requirements for the power supply (24 V)

In order to guarantee the operation of the CPU (CX80xx module) and the terminal strand in all cases, the power supply must supply 2.0 A at 24 V.

#### LED

If the power supply unit is connected correctly and the power supply is switched on, the two upper LEDs in the terminal prism are green. The left LED (Us) indicates the CPU supply. The right LED (Up) indicates the terminal supply. The other LEDs indicate the Terminal Bus status. A detailed description of the LEDs can be found in section "LED troubleshooting".

## 5.2.2 Ethernet

### Ethernet connections



#### Assignment of the RJ45 interface, port 1

X001

| PIN | Signal    | Description |
|-----|-----------|-------------|
| 1   | TD +      | Transmit +  |
| 2   | TD -      | Transmit -  |
| 3   | RD +      | Receive +   |
| 4   | connected | reserved    |
| 5   |           |             |
| 6   | RD -      | Receive -   |
| 7   | connected | reserved    |
| 8   |           |             |

#### Assignment of the RJ45 interface, port 2

X001 / X002

| PIN | Signal    | Description |
|-----|-----------|-------------|
| 1   | TD +      | Transmit +  |
| 2   | TD -      | Transmit -  |
| 3   | RD +      | Receive +   |
| 4   | connected | reserved    |
| 5   |           |             |
| 6   | RD -      | Receive -   |
| 7   | connected | reserved    |
| 8   |           |             |

### Transmission standards

#### 10Base5

The transmission medium for 10Base5 consists of a thick coaxial cable ("yellow cable") with a max. data transfer rate of 10 Mbaud arranged in a line topology with branches (drops) each of which is connected to one network device. Because all the devices are in this case connected to a common transmission medium, it is inevitable that collisions occur often in 10Base5.

#### 10Base2

10Base2 (Cheaper net) is a further development of 10Base5, and has the advantage that the coaxial cable is cheaper and, being more flexible, is easier to lay. It is possible for several devices to be connected to one 10Base2 cable. It is frequent for branches from a 10Base5 backbone to be implemented in 10Base2.

#### 10BaseT

Describes a twisted pair cable for 10 Mbaud. The network here is constructed as a star. It is no longer the case that every device is attached to the same medium. This means that a broken cable no longer results in failure of the entire network. The use of switches as star couplers enables collisions to be reduced. Using full-duplex connections they can even be entirely avoided.

**100BaseT**

Twisted pair cable for 100 Mbaud. It is necessary to use a higher cable quality and to employ appropriate hubs or switches in order to achieve the higher data rate.

**10BaseF**

The 10BaseF standard describes several optical fiber versions.

**Short description of the 10BaseT and 100BaseT cable types**

Twisted-pair copper cable for star topologies, where the distance between two devices may not exceed 100 meters.

**UTP**

Unshielded twisted-pair

This type of cable belongs to category 3, and is not recommended for use in an industrial environment.

**S/UTP**

Screened/unshielded twisted-pair (shielded with copper braid)

Has an overall shield of copper braid to reduce influence of external interference. This cable is recommended for use with Bus Couplers.

**FTP**

Foiled shielded twisted-pair (shielded with aluminum foil)

This cable has an outer shield of laminated aluminum and plastic foil.

**S/FTP**

Screened/foiled shielded twisted-pair (shielded with copper braid and aluminum foil)

Has a laminated aluminum shield with a copper braid on top. Such cables can provide up to 70 dB reduction in interference power.

**STP**

Shielded twisted-pair

Describes a cable with overall shielding without further specification of the type of shielding.

**S/STP**

Screened/shielded twisted-pair (wires are individually shielded)

This identification refers to a cable with a shield for each of the two wires as well as an outer shield.

**ITP**

Industrial Twisted-Pair

The structure is similar to that of S/STP, but, in contrast to S/STP, it has only two pairs of conductors.

### 5.2.3 RS232/RS485 interface

Two serial interfaces are wired on the D-Sub socket: one with RS232 and one with RS485 physics. Both interfaces have the same potential and are electrically isolated from the CPU. The interfaces can be used simultaneously and work independently of each other.

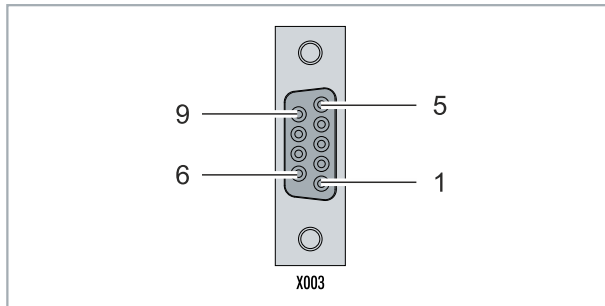


Fig. 1: X101 RS232/RS485 interface

Observe the PIN assignment of the D-Sub socket when assembling cables for wiring. The ZB3180 connector with two cable outlets can be used for wiring (see: D-sub connector ZB3180).

Table 3: X101 RS232/RS485 interface, PIN assignment.

| PIN | Meaning      | Description | Signal          |
|-----|--------------|-------------|-----------------|
| 1   | <b>RS485</b> | (+)         | <b>A</b>        |
| 2   | RxD (RS232)  | Signal in   | Receive Data    |
| 3   | TxD (RS232)  | Signal out  | Transmit Data   |
| 4   | + 5 V        | +           | Vcc             |
| 5   | GND          | Ground      | Ground          |
| 6   | <b>RS485</b> | (-)         | <b>B</b>        |
| 7   | RTS (RS232)  | Signal out  | Request to Send |
| 8   | CTS (RS232)  | Signal in   | Clear to Send   |
| 9   | GND          | Ground      | Ground          |

#### Termination resistor

Usually, no termination resistors are required for low baud rates. A termination resistor can lead to an improved transmission level in cases where long lines, a high line resistance, a large number of RS485 devices and/or high baud rates are used. RS485 is implemented in different ways, and it is not necessarily clear whether a termination resistor improves or impairs the result.

Our recommendation is to use an active termination resistor (PIN4 - 390 Ohm, PIN1 - 220 Ohm, PIN6 - 390 Ohm, PIN5/9). PIN4 is assigned 5 V<sub>DC</sub> and PIN5/9 GND for the active termination resistor (RS485). PIN4 should only be used for the termination resistor. Do not operate any other electrical components on PIN4, otherwise the CX80xx may be destroyed.

## 5.3 Changing the battery

### ⚠ CAUTION

#### Battery as ignition source in potentially explosive atmospheres

Gases or dusts can be ignited by a spark discharge when the battery is inserted or removed.


Switch off the power supply and wait until the 1-second UPS has discharged. Ensure that there is no explosive atmosphere before you insert or remove the battery.

### NOTICE

#### An incorrectly inserted battery may explode!

Use exclusively the specified battery type. Make absolutely sure that positive and negative terminals of the battery are inserted correctly. (Plus pole on the left). Never open the battery or throw it into a fire. The battery cannot be recharged.

The battery of the CX80xx is required for the real-time clock (RTC) of the CX80xx. It ensures that the RTC continues to run in the power-off state so that the set time is available again on restarting.

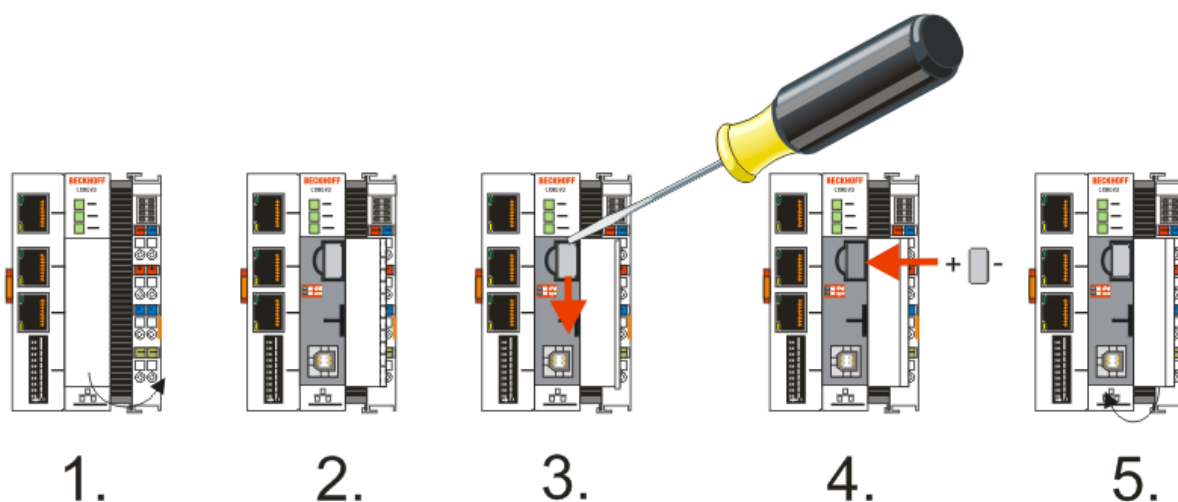

- Step 1: Open the flap
- Step 2/3: Take a small flat-blade screwdriver, insert it above the battery and prise the battery carefully out of the device
- Step 4: Insert the new battery. The plus pole must be on the left
- Step 5: Close the flap again

| Battery type          | Technical data  |
|-----------------------|-----------------|
| Duracell 303/357 SR44 | 1.5 V / 165 mAh |



#### Battery maintenance

The battery must be replaced every 5 years.

## 6 Parameterization and commissioning

### 6.1 DIP switch

#### ⚠ CAUTION

##### DIP switches as ignition source in potentially explosive atmospheres

Gases or dusts can be ignited by a spark discharge when DIP switches are used.

Switch off the power supply and wait until the 1-second UPS has discharged. Ensure that there is no explosive atmosphere before you use DIP switches.

#### DIP switch S101/S102

The DIP switch can be read internally from the PLC. The function F\_CX80XX\_ADDRESS is used for this purpose. The switch has no purpose for the serial interfaces.



2-pole DIP switch (under the flap between the battery and the SD card slot)

#### Requirements

| DIP switch (red) | Meaning                                                                                                                                                              |
|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1 off and 2 off  | normal mode, TwinCAT is started                                                                                                                                      |
| 1 on and 2 off   | The CX mode starts in Config Mode; the flash memory or, in the case of the CX80xx the SD card, is reachable via the USB interface (for example for an image update). |
| 1 off and 2 on   | Restore the registry                                                                                                                                                 |
| 1 on and 2 on    | No function so far                                                                                                                                                   |

## 6.2 Setting the IP adress

### 6.2.1 IP address

The CX8010, CX803x, CX805x and CX8080 have an Ethernet interface, X001.

#### X001

IP addressing via the operating system; default is DHCP (represented in the operating system as FEC1)

## EtherCAT interface

The EtherCAT interface is a further Ethernet interface that is not visible in the operating system for the IP addressing.

### 6.2.2 Setting the address via DHCP server

Port 1 (X001) is set to DHCP by default.

Port 2 (X101 and X102) is to be configured by DIP switch (see DIP switch)

If DHCP is switched on, the CX is automatically assigned an IP address by the DHCP server. The DHCP server must know the MAC ID of the Bus Terminal Controller for this. The IP address should be assigned statically by the DHCP server. A local IP address is used if no DHCP server is reachable.

The DNS name is formed from the type and the last 3 byte of the MAC ID. The MAC ID is given on the production label of the Bus Terminal Controller.

#### CX8090 example

- MAC ID: 00-01-05-01-02-03
- DNS name: CX-010203

### 6.2.3 Subnet mask

The subnet mask is subject to the control of the network administrator, and specifies the structure of the subnet.

Small networks without a router do not require a subnet mask. The same is true if you do not use registered IP numbers. A subnet mask can be used to subdivide the network with the aid of the mask instead of using a large number of network numbers.

The subnet mask is a 32-bit number:

- Ones in the mask indicate the subnet part of an address space.
- Zeros indicate that part of the address space which is available for the host IDs.

| Description | Binary representation               | Decimal representation |
|-------------|-------------------------------------|------------------------|
| IP address  | 10101100.00010000.00010001.11001000 | 172.16.17.200          |
| Subnet mask | 11111111.11111111.00010100.00000000 | 255.255.20.0           |
| Network ID  | 10101100.00010000.00010000.00000000 | 172.16.16.0            |
| Host ID     | 00000000.00000000.00000001.11001000 | 0.0.1.200              |

#### Standard subnet mask

| Address class | Standard subnet mask (decimal) | Standard subnet mask (hex) |
|---------------|--------------------------------|----------------------------|
| A             | 255.0.0.0                      | FF.00.00.00                |
| B             | 255.255.0.0                    | FF.FF.00.00                |
| C             | 255.255.255.0                  | FF.FF.FF.00                |

#### ● **i Assignment of subnets, host numbers and IP addresses**

Neither subnet 0 nor the subnet consisting only of ones may be used. Host number 0, and the host number consisting only of ones, must not be used. Under BootP or DHCP the subnet mask is transmitted also by the server.

## 6.3 Configuration

### 6.3.1 CX80xx - Operating system

The CX80xx comes with a Microsoft CE operating system, version 6.0. This operating system is adapted and optimized for the CX80xx. Not all CE6.0 components are available.

#### Safety

From image version 3.54b security was tightened. This applies to CERHOST and TELNET. Both services are now switched off in delivery state. To reactivate these services, you need a Micro SD card reader.

#### CERHOST

CERHOST is deactivated by current images on first start-up via the registry file *CeRemoteDisplay\_Disable.reg*, which is located in the folder *RegFiles*.

To reactivate CERHOST, delete the file *CeRemoteDisplay\_Disable.reg* from the folder *RegFiles* and also the folder *Documents and Settings*.

Then reinsert the Micro SD card in the CX and reboot. The CX creates a new *Document and Settings* directory and then reboots automatically.

The CX is then accessible again via CERHOST.

#### TELNET

TELNET is deactivated by current images on first start-up via the registry file *Telnet\_Disable.reg*, which is located in the folder *RegFiles*.

To reactivate TELNET, delete the file *Telnet\_Disable.reg* from the folder *RegFiles* and also the folder *Documents and Settings*.

Then reinsert the Micro SD card in the CX and reboot. The CX creates a new *Document and Settings* directory and then reboots automatically.

The CX is then accessible again via TELNET.

#### IMAGE

If you do not know what image is loaded on the CX80xx, you can determine it quite easily.

- Via the web diagnostics page of the CX. Here you can find the build number under the *TwinCAT* device.

Opening the web diagnostics page:

- IP address</config

or

- CX name/config

Example:

- 172.16.17.201/config

or

- CX-01551E/config

- Via a Micro SD card reader.

The Micro SD card contains a file with the name of the image.

Example CX8000\_CE600\_LF\_v354b\_TC211R3\_B2248.

TC211R3\_2248 indicates the TwinCAT build; in the example the build is 2248.

**Prerequisites**

| Feature / platform                                                                  | CX80x0 LF version 3.xx |
|-------------------------------------------------------------------------------------|------------------------|
| ATL                                                                                 | Xtd                    |
| MFC                                                                                 | X                      |
| XML DOM                                                                             | X                      |
| COM                                                                                 | X                      |
| COM Storage                                                                         | -                      |
| Winsock                                                                             | X                      |
| TCP/IP                                                                              | X                      |
| TCP/IPv6                                                                            | -                      |
| Firewall                                                                            | X                      |
| Network Utilities (IpConfig, Ping, Route)                                           | X                      |
| <b>UPnP</b>                                                                         |                        |
| Control Point                                                                       | -                      |
| Device Host                                                                         | X                      |
| <b>SOAP</b>                                                                         |                        |
| Client                                                                              | -                      |
| Server                                                                              | -                      |
| <b>DCOM</b>                                                                         | -                      |
| Object Exchange Protocol OBEX                                                       | -                      |
| Message Queuing MSMQ                                                                | -                      |
| <b>Server</b>                                                                       |                        |
| File Server (SMB/CIFS)                                                              | X                      |
| File Server                                                                         | X                      |
| Print-Server (SMB/CIFS)                                                             | -                      |
| RAS Server / PPTP Server                                                            | -                      |
| Simple Network Management Protocol (SNMP)                                           | X                      |
| Telnet Server                                                                       | X                      |
| HTTP / ASP / FTP / SNTTP -Server                                                    | X                      |
| Web Server (HTTPD) / Active Server Pages (ASP) Support / JScript 5.6 / VBScript 5.6 | X                      |
| Simple Network Time Protocol (SNTP)                                                 | X                      |
|                                                                                     |                        |
| HTML / DHTML, TLS, ISAPI extensions                                                 | X                      |
| Internet Explorer 6.0                                                               | -                      |
| Java Applets                                                                        | -                      |
| NET Compact Framework                                                               | v3.5                   |
| RDP Client (Remote Desktop protocol)                                                | -                      |
| CAB File Installer/Uninstaller                                                      | X                      |
| TwinCAT (Level PLC)                                                                 | X                      |
|                                                                                     |                        |
| USB support                                                                         | X                      |
| Printer, storage on Compact Flash, for example                                      | -                      |
| HID (Human interface devices)                                                       | -                      |
| Touch                                                                               | -                      |

## 6.3.2 Power supply terminal

### K-bus interface

It is possible to operate K-bus terminals on the CX80xx.

The CX80xx recognizes these terminals automatically on scanning, reads out the terminal types and automatically places them in the System Manager.

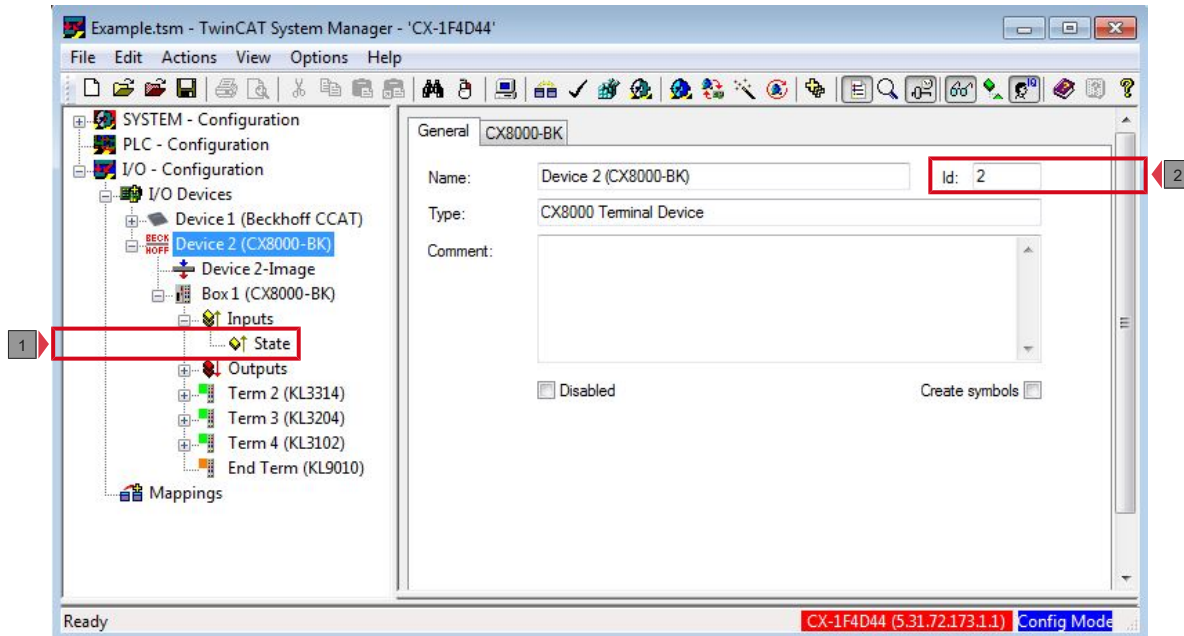


Fig. 2: K-Bus Interface

### K-bus state

The K-bus status is saved in the state byte (see fig. K-bus interface "1"). If the value is 0 the K-bus is operating synchronously and without errors. If the value should be  $\neq 0$  this can be an error, but it may also be *just* a notice that, for example, the K-bus requires longer than the employed task and is thus no longer synchronous to the task. The task time should be faster than 100 ms. We recommend a task time of less than 50 ms. The K-bus update time typically lies between one and five ms.

- Bit 0 = K-Bus Err
- Bit 1 = Terminal State Err
- Bit 2 = Process Data Length Err
- Bit 8 = No valid Inputs
- Bit 9 = K-Bus Input Update busy
- Bit 10 = K-Bus Output Update busy
- Bit 11 = Watchdog Err
- Bit 15 = Acyc. Function active (e.g. K-Bus Reset)


If there is a K-bus error, this can be reset via the IOF\_DeviceReset function block (in the TcIoFunctions.lib).

The NetID is that of the CX80xx and can thus be entered as an empty string, the Device ID (see fig. K-bus Interface "2") is to be taken from the System Manager.

### E-bus interface

The operation of E-bus terminals and EtherCAT devices is possible on the CX80xx.

The CX80xx recognizes these terminals automatically on scanning, reads out the terminal types and automatically places them in the System Manager.

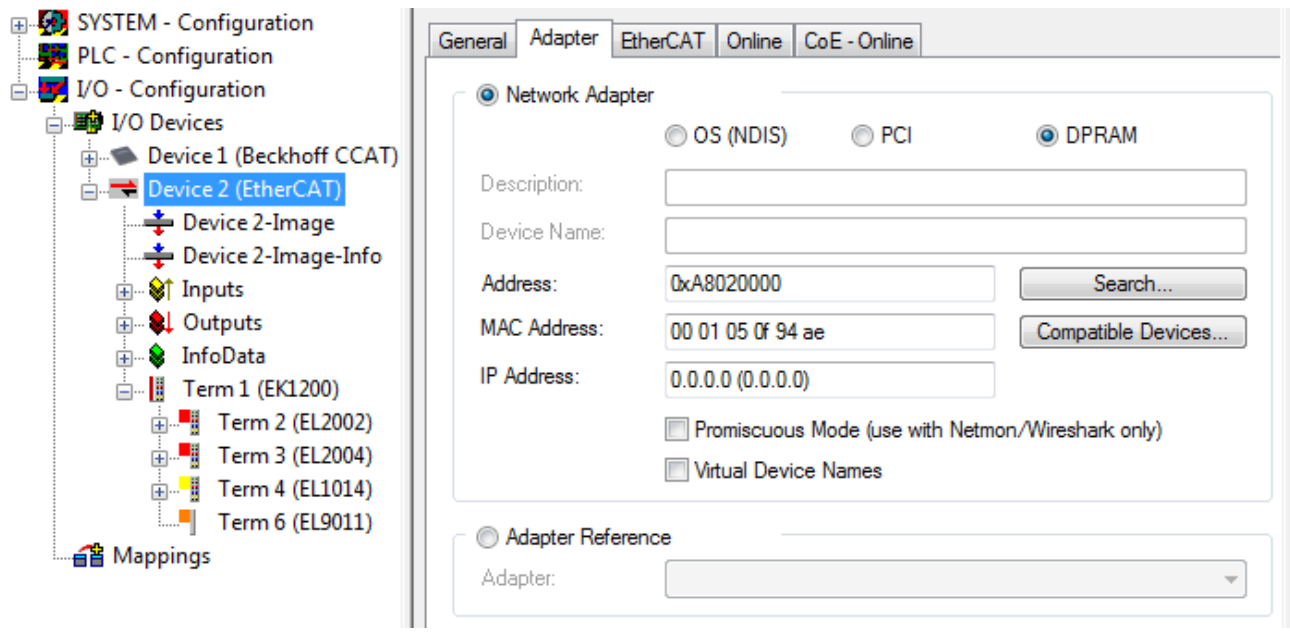


## **i** DC Distributed Clocks

The CX80xx series is not suitable for the use of EtherCAT slaves that use or need distributed clocks functionality.

### 6.3.3 RS232/485


To access the serial interface of the CX8080, you have to configure it in the TwinCAT System Manager. In the simplest case, the CX8080 is scanned, and it then adds the two serial interfaces automatically in your system.

Start your CX8080 in Config mode. The TC LED of the CX8080 must then turn blue. Now you can scan for new devices.

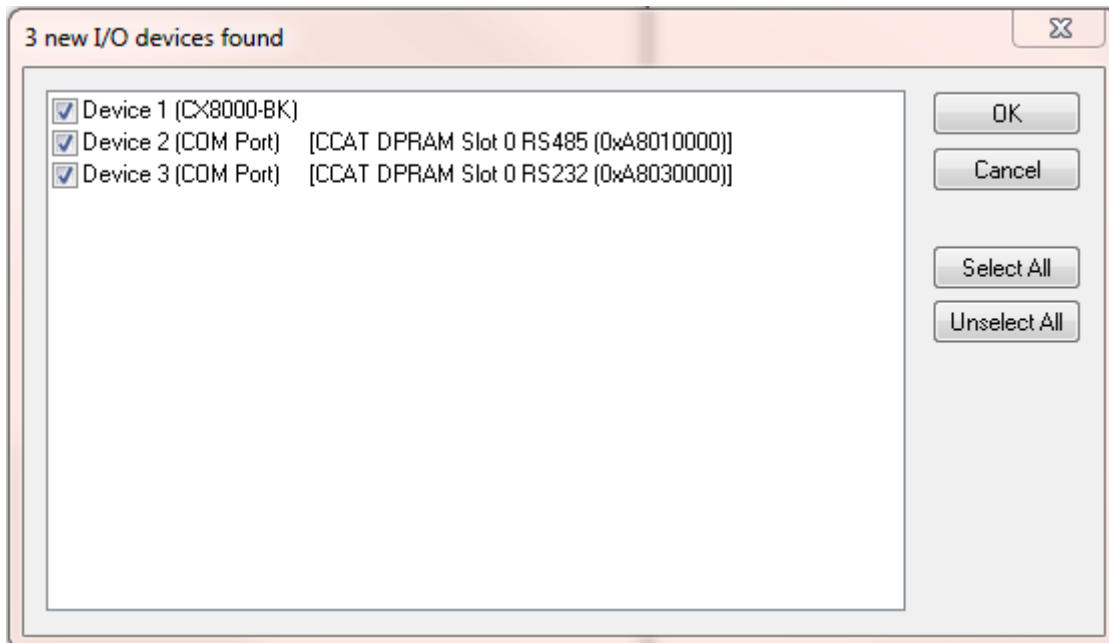


#### Scanning the CX8080

RS485 interface, here device 2.

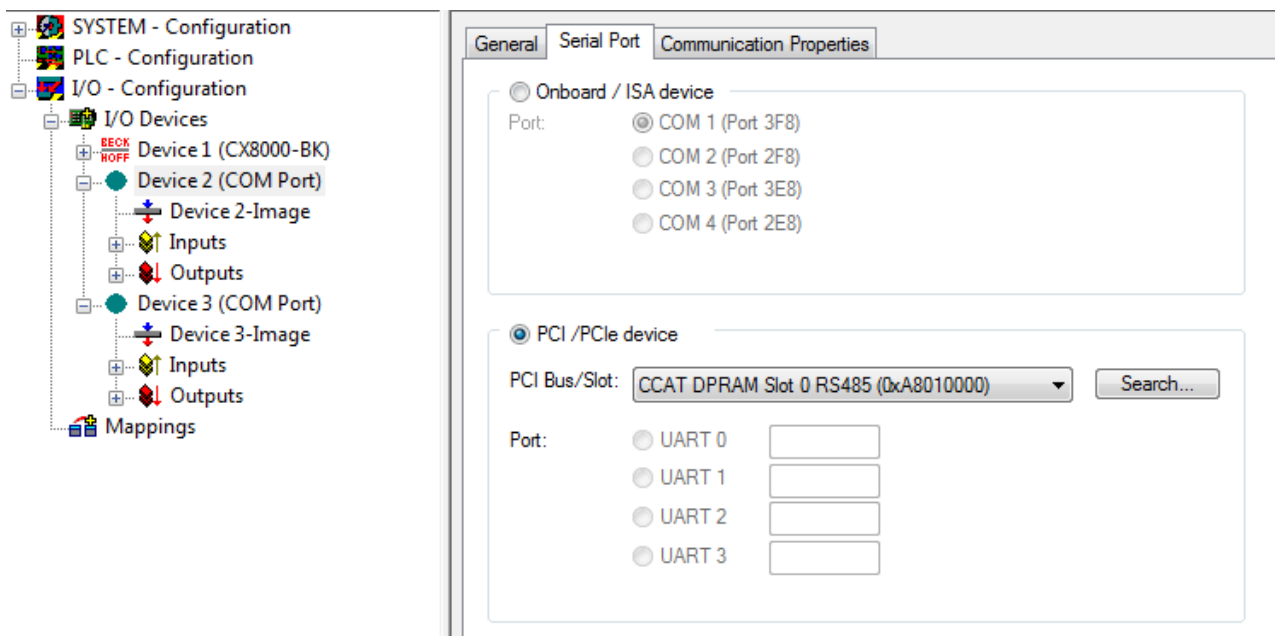

#### RS485

RS232 interface, here device 3.

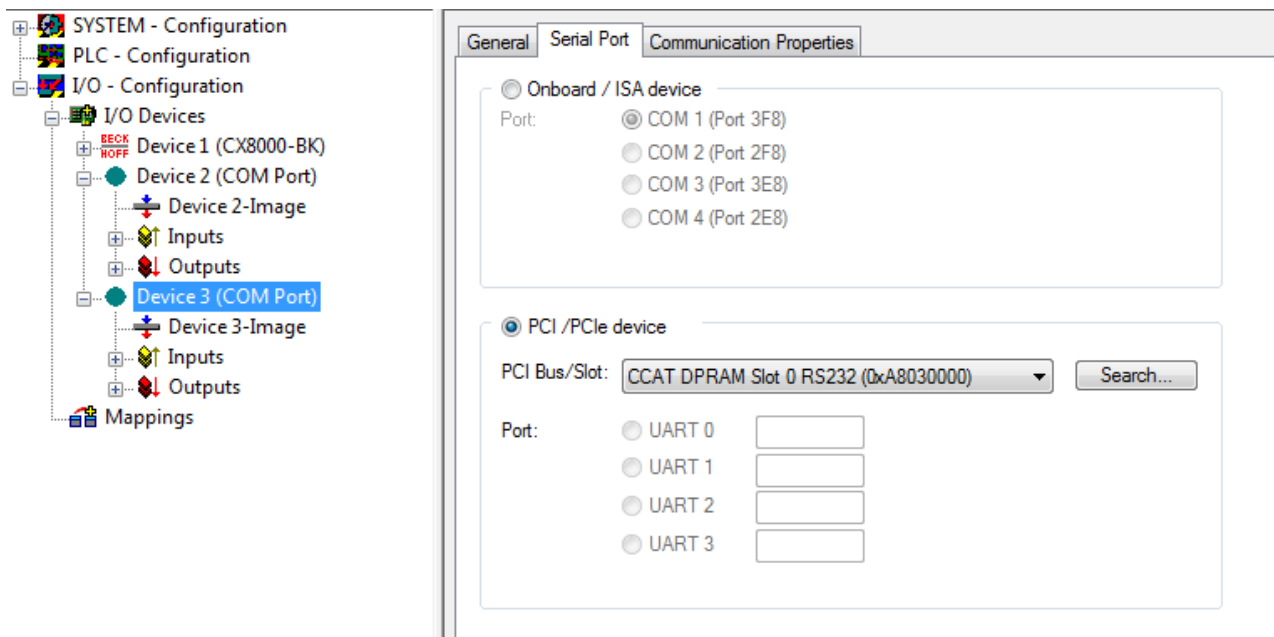

### RS232


Please use these files for offline configuration. The offline file contains two tsm files, one for the K-bus interface, and one for E-bus interface:

[https://infosys.beckhoff.com/content/1033/cx8080\\_hw/Resources/2495103243.zip](https://infosys.beckhoff.com/content/1033/cx8080_hw/Resources/2495103243.zip)

### Protocols

#### KS8000 protocol for operation of the Bus Coupler BK8100 or BK8000

Both interfaces can be used as BK8xx0 master. It is an open Beckhoff protocol, which should be used for the products BK8100 RS232 or BK8000 RS485. The protocol is already implemented, and you can address the couplers directly.

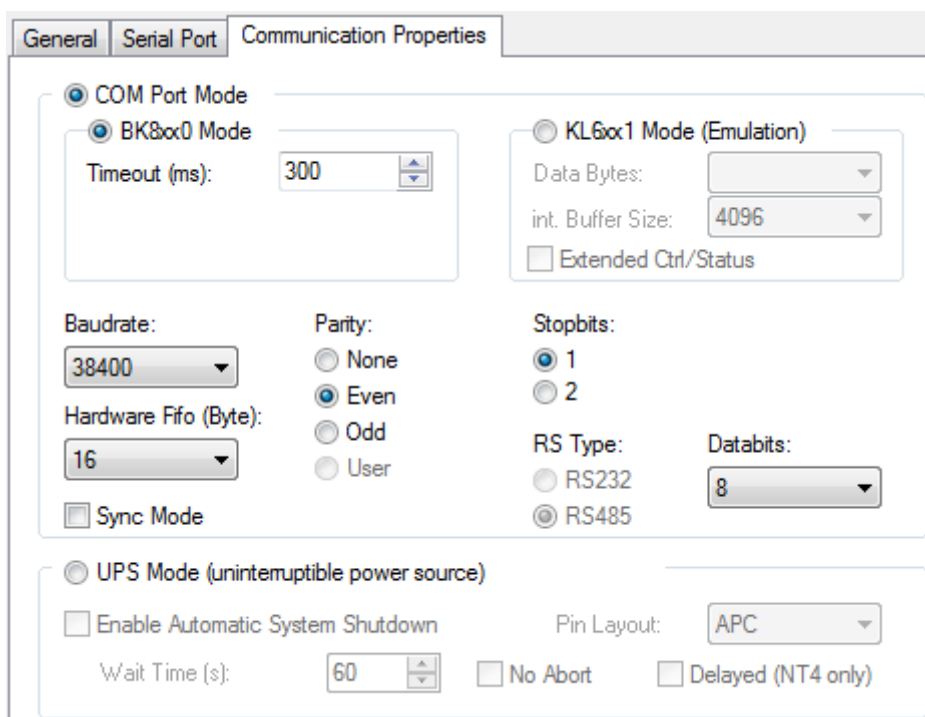

## Additional protocols

A further setting is the *KL6xx1 mode*. It should be used for all other protocols. In conjunction with the supplements ModbusRTU, IEC 60870 or other serial protocols, the interface can then support different serial protocols. Proprietary protocols or other open protocols can also be used (see Programming [► 45]).

The screenshot shows the 'Communication Properties' tab in the Beckhoff parameterization software. The 'COM Port Mode' is selected, with 'BK8xx0 Mode' and 'KL6xx1 Mode (Emulation)' also visible. The 'KL6xx1 Mode (Emulation)' is selected, showing settings for Data Bytes (64), int. Buffer Size (4096), and Extended Ctrl/Status. Other settings include Baudrate (38400), Parity (Even), Stopbits (1), Hardware Fifo (Byte) (16), RS Type (RS485), and Databits (8). The 'UPS Mode (uninterruptible power source)' is also visible with settings for Enable Automatic System Shutdown, Pin Layout (APC), Wait Time (s) (60), No Abort, and Delayed (NT4 only).

## 6.3.4 Web Services

### Upnp webpages

There is a Upnp webpage on the CX80xx for diagnostics.

User name: guest

Password: 1




CX-0F94AC

General

CPU

Memory

Nic

FEC1

TCCCATMP1

Software

Display Device

Time

User Management

Misc

SMB

RAS

TwinCAT

TwinCAT

PLC

DataStore

User

System

Customer Pages

Reboot



### General Information

|                      |                       |                                      |
|----------------------|-----------------------|--------------------------------------|
| Hostname             | CX-0F94AC             | <input type="button" value="Apply"/> |
| Hardware Version     | CX8090v2.2;2012-01-03 |                                      |
| OS and Image Version | CX8000 LF 3.50m       |                                      |
| Website Version      | 1.0.4.12              |                                      |


Enter the IP address or the device name.

### Example

<http://cx-0f94ac/config>


<http://172.16.17.55/config>

The diagnostic page was revised starting from image v354c.

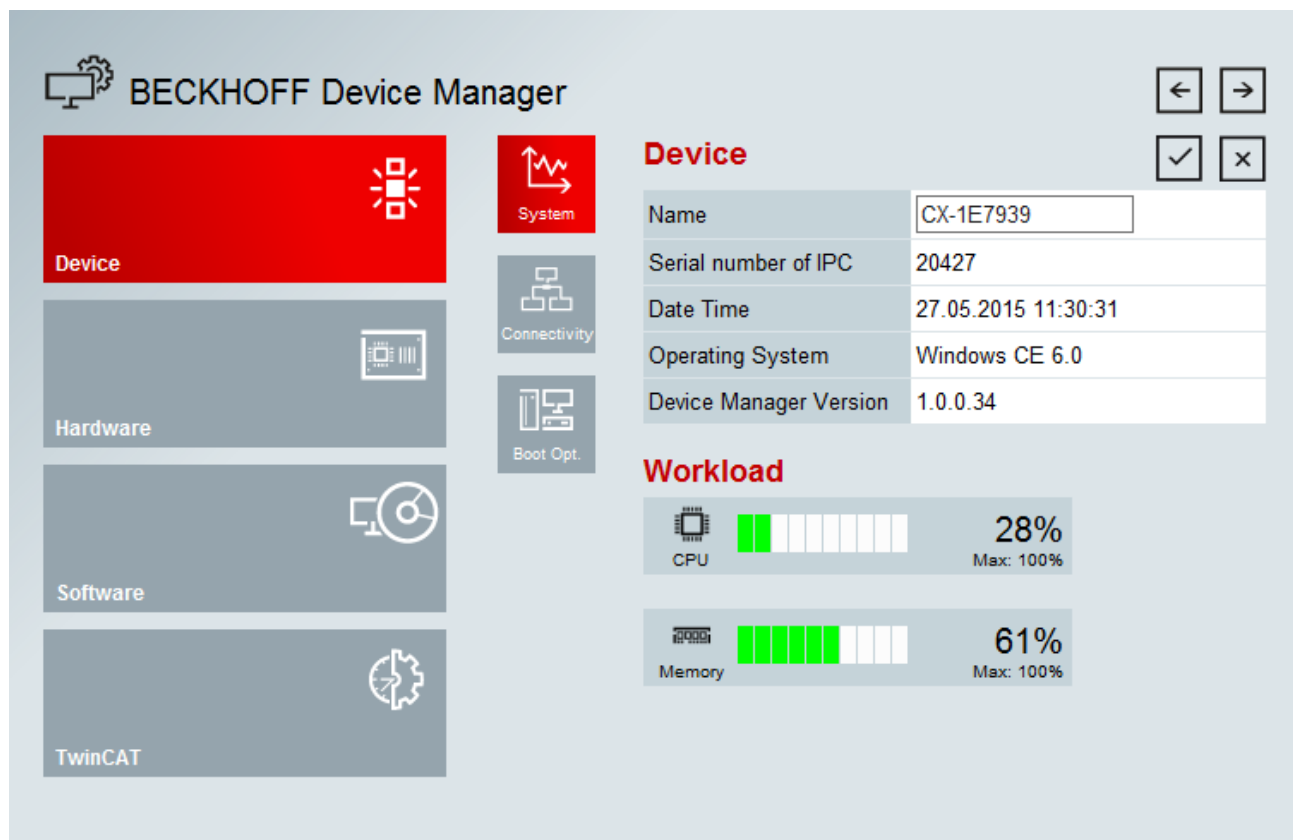

## Web visualization

There is a web visualization on the CX80xx. This can be prepared and activated with the help of the PLC Control in TwinCAT.

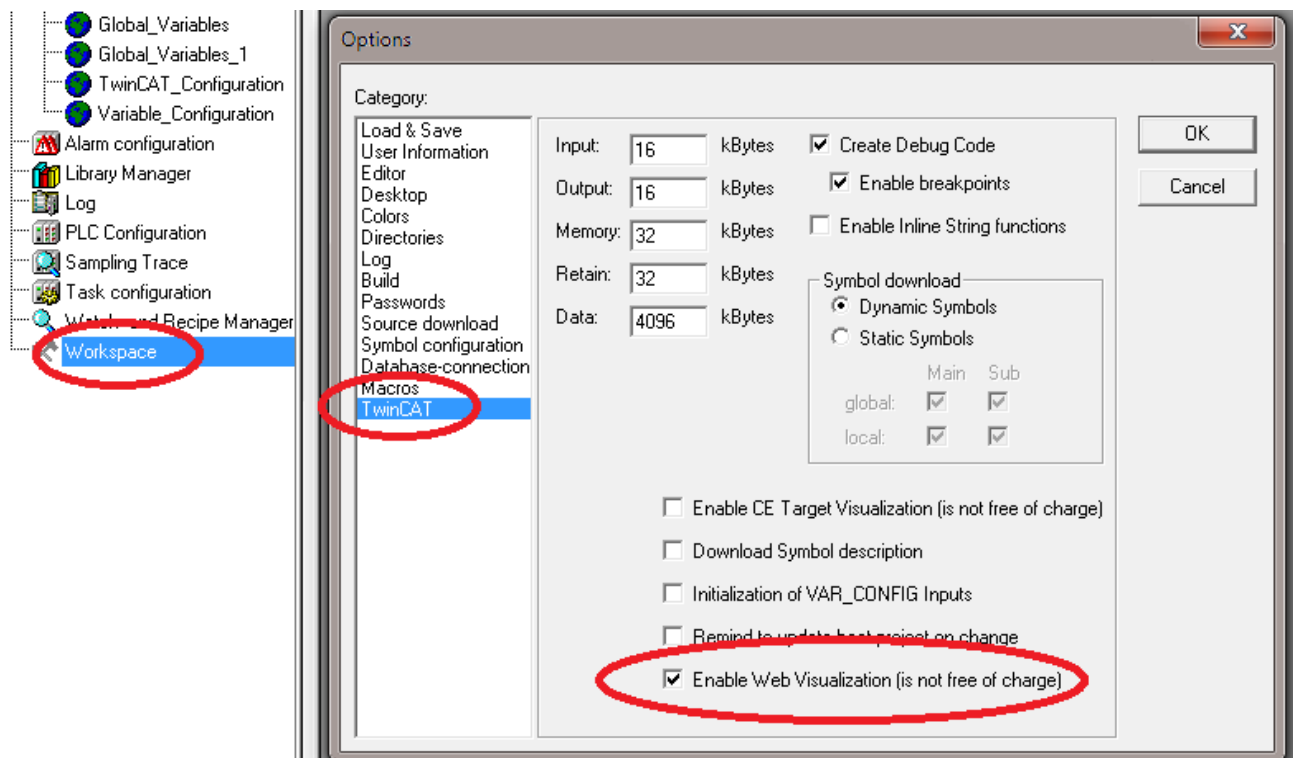


The call is made via the IP address or the device name in a web browser. Further information can be taken from the documentation on the web visualization (see TwinCAT Supplements PLC HMI Web).

## Example

<http://cx-0f94ac/TcWebVisu/>

<http://172.16.17.44/TcWebVisu/>


Ascertain before logging in (i.e. in the logged out condition) whether a ADS connection is established to the CX – "TwinCAT Running" in the bottom right-hand corner must be green. If that is not the case, please go onto Online/Selection of the target system again and call the CX once again.

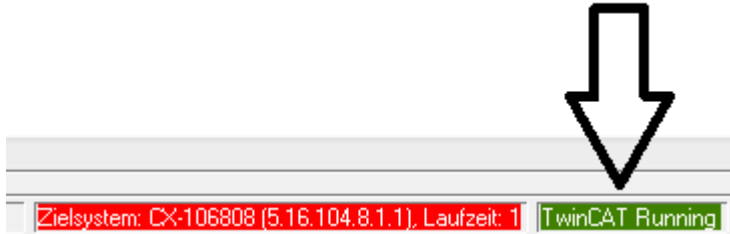

The following path must be specified for downloading the web data for the web user interface:

`\hard disk\twincat\boot\webvisu\`

If that is not the case, the PLC Control will copy the data into the wrong folder and the webpage will be displayed incorrectly or not at all.

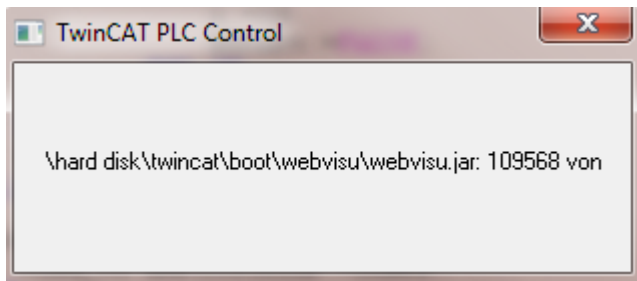

## Remote Display

This page describes the steps for remotely controlling a CE device with CE operating system from a further PC by 'Remote Display'.

### Software required on the PC:

- Windows NT, Windows 2000, Windows XP or Windows 7
- Microsoft Remote Display (CERHOST, available license-free from Microsoft)

### Establishing the connection

The "Remote Display" tool is started on the PC. The address of the CE device can now be entered under the menu option "File - > Connect"; this can be both the TCP-IP address or, if available, also the name of the CE device.

If the CE device is provided with password protection, then the password must also be entered accordingly. No password is set in the delivery condition.

After entering the target address, the user interface of the CE device is available for remote control on the PC.

Download  : [https://infosys.beckhoff.com/content/1033/cx8080\\_hw/Resources/1608562059.zip](https://infosys.beckhoff.com/content/1033/cx8080_hw/Resources/1608562059.zip)

## 6.3.5 Real Time Clock (RTC)

The RTC is read out via the FB\_LocalSystemTime function blocks and can be set with the NT\_SetLocalTime block (see TcUtilities.lib).

The RTC is supplied by the battery and can thus continue to run in the power-off state.

## 6.3.6 1-second UPS (Uninterruptible Power Supply)

### Technical concept

The 1-second UPS is an UltraCap capacitor, which, in the event of a voltage outage, continues to supply power to the processor for approx. 4 to 5 seconds, so that persistent data can be saved. Data saving generally takes less than 4 to 5 seconds. However, due to ageing of the components used, one should assume that the UPS can provide power for a maximum of 1 second. You can assume that data saving continues to work smoothly, even after many years. If you save data yourself, we recommend that this should take place within 1 second. Should it take longer, we would advise against it.

The 1-second UPS supplies neither the K-bus nor the E-bus with power. Please note that the data of these devices may already be invalid when the 1-second UPS is activated. Also, the fieldbus system (or Ethernet) may not work or not work properly once the 1-second UPS was activated.

Saving of the persistent data only takes place in conjunction with the function block FB\_S\_UPS\_CX80xx. This block must be called cyclically. We strongly recommend using the default values for the block.


### Saving and loading persistent data

The persistent data are stored on the SD card as a wdp file. When the PLC starts up, the wdp file is loaded from the SD card, saved there as a wd~-file (backup), and then deleted. Another current wdp file is not written until the system is shut down or the 1-second UPS is activated. If no wdp file is present when the CX starts up, the persistent data are invalid and are deleted (default setting).

The reason is that the 1-second UPS was activated before the TwinCAT PLC was started during startup of the CX. In this case no persistent data were saved, since the system was unable to ensure sufficient buffer time for saving the data.

### Loading a backup of the persistent data

To load the persistent data from the backup (wp~-file), it has to be enabled in the System Manager.

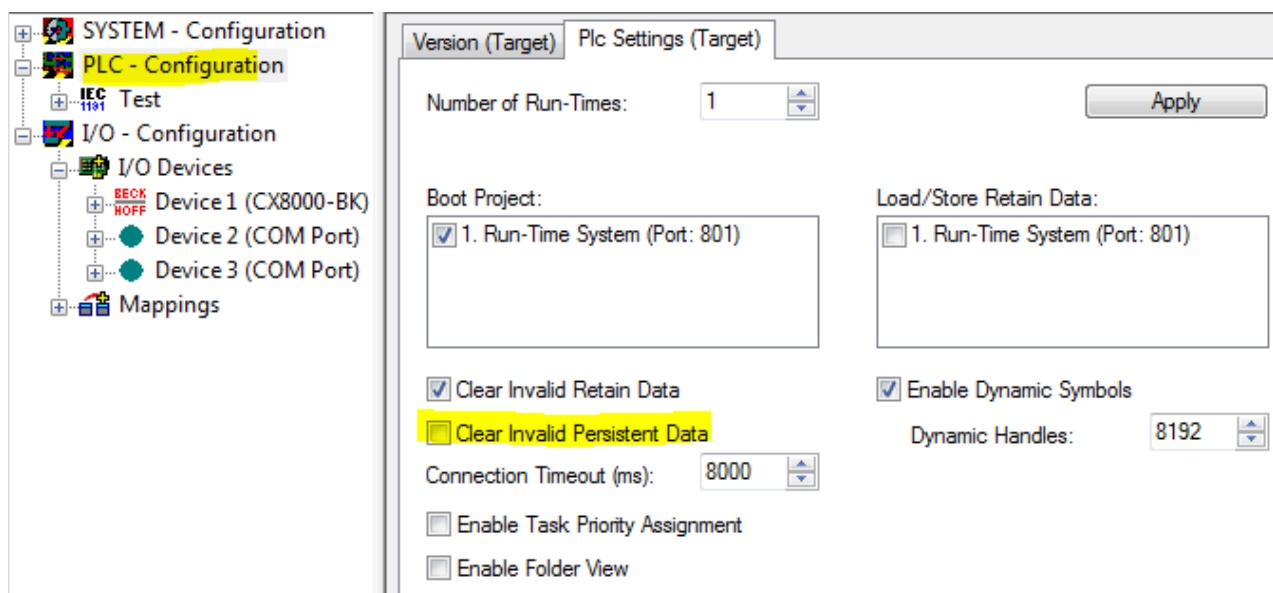

Or via the following registry entry:

```
[HKEY_LOCAL_MACHINE\SOFTWARE\Beckhoff\TwinCAT\Plc] "ClearInvalidPersistentData"= 0
```

The default factory setting is "1".

### Checking whether current persistent data (from wdp file) or saved persistent data from the backup (wd~-file) were loaded

In this example, the CX8090 indicates via the ERR LED whether the persistent data were loaded. The LED cannot be used for other CX8xxx models.

```

IF systeminfo.bootDataFlags.4 AND NOT
systeminfo.bootDataFlags.5 THEN

F_CX8090_LED_ERR(eLED_GREEN_ON);      (* persistent
data is OK *)

ELSIF systeminfo.bootDataFlags.4 AND systeminfo.bootDataFlags.5
THEN

F_CX8090_LED_ERR(eLED_RED_ON);
(* load backup persistent data *)

ELSE

    F_CX8090_LED_ERR(eLED_RED_FLASHING_200ms); (* no
persistent data *)

END_IF

```

### Purpose of the 1-second UPS

The 1-second UPS should only be used for managing the persistent data. Other applications are not supported and are not covered by our complaints procedure. Retain data cannot be used for the 1-second UPS!

## 6.3.7 CPU load

In the delivery condition the CPU load display is deactivated on all CX80xx devices (it is displayed with a constant 10%). The CPU load display is deactivated because it accounts for a considerable portion of the CPU load itself. The CPU load can be activated for brief diagnostic help; however, we recommend that you deactivate it again after the diagnostics.

HKEY\_LOCAL\_MACHINE/SOFTWARE/BECKHOFF/TWINCAT/RTIME/EnableRTIMEMeasurement 0  
deactivated, 1 activated

A TwinCAT restart of the CX80xx is necessary after making the setting.

### CPU load

The CPU load is calculated internally with 10 ms. The CPU load display may fluctuate very strongly if one or more tasks exceeding 10 ms are used.

## 7 Programming


### 7.1 Library for CX80xx

Download  : [https://infosys.beckhoff.com/content/1033/cx8080\\_hw/Resources/1608565003.zip](https://infosys.beckhoff.com/content/1033/cx8080_hw/Resources/1608565003.zip)

### 7.2 Seconds UPS

#### 7.2.1 Function blocks

##### FUNCTION\_BLOCK FB\_S\_UPS\_CX80xx

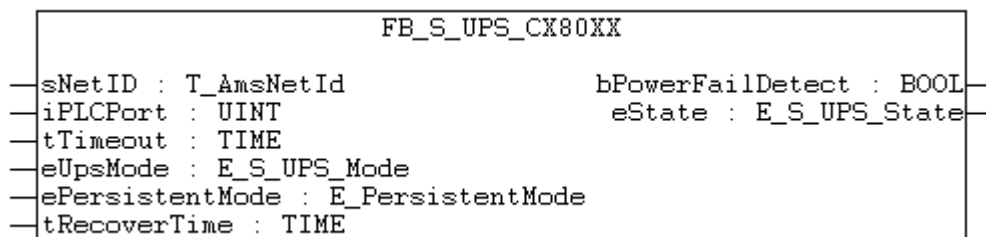

The FB\_S\_UPS function block can be used on the CX80xx with the seconds UPS in order to activate the seconds UPS from the PLC. This allows the persistent data to be saved and a quick shutdown to be performed in the event of a power failure. If possible the default values of the INPUTs of the FB\_S\_UPS should be retained.

#### NOTICE

##### Loss of data

The seconds UPS can be used only for a few seconds in the event of a power failure in order, for example, to save persistent data. The data must be saved in the fast persistent mode "SPDM\_2PASS", even though this can lead to real-time violations. Sufficient router memory must be configured for the storage of the persistent data!

The second UPS does not have sufficient capacity for bridging power failures. Saving can take place only on Micro SD cards.

A QuickShutdown is performed automatically in the eSUPS\_WrPersistData\_Shutdown mode (standard setting) after the storage of the persistent data.

In the eSUPS\_WrPersistData\_NoShutdown mode only the persistent data are saved, no QuickShutdown is performed.

In the eSUPS\_ImmediateShutdown mode a QuickShutdown is executed immediately without saving data.

In the eSUPS\_CheckPowerStatus mode only a check is performed as to whether a power failure has occurred. If this is the case, the module only switches back to the PowerOK state after the expiry of tRecoverTime (10s).

Independent of the mode and thus independent of the saving or the shutting down of the controller, the UPS switches the main board off after the capacitors have discharged, even if the voltage has returned in the meantime.

#### NOTICE

##### Caution when using files:

If other applications or the PLC keep other files open or write to them, this can lead to faulty files if the UPS switches off the controller.

**VAR\_INPUT**

```

VAR_INPUT
  sNetID      : T_AmsNetId := '';          (* '' = local netid *)
  iPLCPort    : UINT := AMSPORT_R0_PLC_RTS1; (* PLC Runtime System for writing persistent data *)
  iUPSPort    : UINT := 16#4A8;           (* Port for reading Power State of UPS, default 16#4A8 *)
  tTimeout    : TIME := DEFAULT_ADS_TIMEOUT; (* ADS Timeout *)
  eUpsMode    : E_S_UPS_Mode := eSUPS_WrPersistData_Shutdown; (* UPS mode (w/
  wo writing persistent data, w/wo shutdown) *)
  ePersistentMode : E_PersistentMode := SPDM_2PASS; (* mode for writing persistent data *)
  tRecoverTime : TIME := T#10s;           (* ON time to recover from short power failure in mode
  eSUPS_WrPersistData_NoShutdown/eSUPS_CheckPowerStatus *)
END_VAR

```

**E\_S\_UPS\_Mode**

**sNetID** : AmsNetID of the controller.

**iPLCPort** : Port number of the PLC runtime system (AMSPORT\_R0\_PLC\_RTS1 = 801, AMSPORT\_R0\_PLC\_RTS2 = 811, AMSPORT\_R0\_PLC\_RTS3 = 821, AMSPORT\_R0\_PLC\_RTS4 = 831).

**iUPSPort** : Port number via which the UPS status is read (standard value is 16#4A8).

**tTimeout** : Timeout for the execution of the QuickShutdown.

**eUpsMode** : The eUpsMode defines whether persistent data are to be written and whether a QuickShutdown is to be performed.

Standard value is eSUPS\_WrPersistData\_Shutdown, i.e. with writing of the persistent data and then QuickShutdown. See E\_S\_UPS\_Mode.

**ePersistentMode** : Mode for the writing of the persistent data. Standard value is SPDM\_2PASS.

SPDM\_2PASS, all persistent data are saved at once, which can lead to the cycle time being exceeded.

SPDM\_VAR\_BOOST, here, each persistent variable is written separately; if there is a large amount of persistent data this can accordingly take many cycles. This is not recommended as some data may be lost if the time of the seconds UPS is not sufficient.

**tRecoverTime** : Time after which the UPS reverts to the PowerOK status in the case of UPS modes without shutdown.

The tRecoverTime must be somewhat longer than the maximum holding time of the UPS, since the UPS switches off even when the voltage returns.

**VAR\_OUTPUT**

```

VAR_OUTPUT
  bPowerFailDetect : BOOL;          (* TRUE while powerfailure is detected *)
  eState           : E_S_UPS_State; (* current ups state *)
END_VAR

```

**E\_S\_UPS\_State**

**bPowerFailDetect** : True during the power failure; False if the supply voltage is present.

**eState** : Internal state of the function block, for values see E\_S\_UPS\_State.

**VAR\_GLOBAL**

```

VAR_GLOBAL
  eGlobalUpsState : E_S_UPS_State; (* current ups state *)
END_VAR

```

**E\_S\_UPS\_State**

**eGlobalUpsState** : Internal state of the function block as a global copy of the VAR\_OUTPUT **eState**; for values see E\_S\_UPS\_State.

**Prerequisites**

| Development environ-<br>ment                 | Target platform | Hardware    | PLC libraries to be<br>linked |
|----------------------------------------------|-----------------|-------------|-------------------------------|
| TwinCAT v2.11.0 build<br>2220 or higher (R3) | ARM             | Seconds UPS | TcSystemCX80xx.lib            |

## 7.2.2 Data types

### TYPE E\_S\_UPS\_Mode

eSUPS\_WrPersistData\_Shutdown: Schreiben der Persistenten Daten und dann QuickShutdown  
 eSUPS\_WrPersistData\_NoShutdown: Nur Schreiben der Persistenten Daten (kein QuickShutdown)  
 eSUPS\_ImmediateShutdown: Nur QuickShutdown (kein Schreiben der Persistenten Daten)  
 eSUPS\_CheckPowerStatus: Nur Status ermitteln (weder Schreiben der Persistenten Daten noch QuickShutdown)

#### Prerequisites

| Development environment                   | Target platform | Hardware    | PLC libraries to be linked |
|-------------------------------------------|-----------------|-------------|----------------------------|
| TwinCAT v2.11.0 build 2220 or higher (R3) | ARM             | Seconds UPS | TcSystemCX80xx.lib         |

### TYPE E\_S\_UPS\_State

eSUPS\_PowerOK:  
     in allen Modi: Versorgungsspannung ist OK

eSUPS\_PowerFailure:  
     in allen Modi: Versorgungsspannung fehlerhaft (steht nur einen Zyklus an)

eSUPS\_WritePersistentData:  
     im Modus eSUPS\_WrPersistData\_Shutdown: Schreiben der Persistenten Daten ist aktiv  
     im Modus eSUPS\_WrPersistData\_NoShutdown: Schreiben der Persistenten Daten ist aktiv

eSUPS\_QuickShutdown:  
     im Modus eSUPS\_WrPersistData\_Shutdown: QuickShutdown ist aktiv  
     im Modus eSUPS\_ImmediateShutdown: QuickShutdown ist aktiv

eSUPS\_WaitForRecover:  
     im Modus eSUPS\_WrPersistData\_NoShutdown: Warten auf Wiederkehr der Spannung  
     im Modus eSUPS\_CheckPowerStatus: Warten auf Wiederkehr der Spannung

eSUPS\_WaitForPowerOFF:  
     im Modus eSUPS\_WrPersistData\_Shutdown: Warten auf das Abschalten durch die USV  
     im Modus eSUPS\_ImmediateShutdown: Warten auf das Abschalten durch die USV


#### Prerequisites

| Development environment                   | Target platform | Hardware    | PLC libraries to be linked |
|-------------------------------------------|-----------------|-------------|----------------------------|
| TwinCAT v2.11.0 build 2220 or higher (R3) | ARM             | Seconds UPS | TcSystemCX80xx.lib         |


7.3 CX8080 LED

7.3.1 Function

FUNCTION F\_CX8090\_LED\_WD (WD=Watchdog)

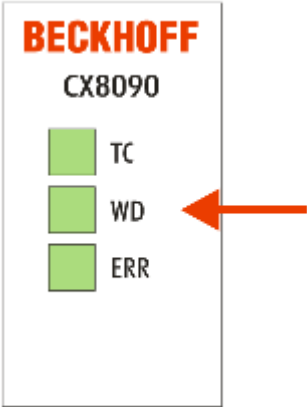

Since the CX8080, CX8090 and CX8091 supports different protocols, the two LEDs on the CX8080/CX809x are not used by the firmware. Hence, the user has the possibility to generate diagnostic messages himself, which must then also be documented for the end customer so that he can also interpret these messages. For example, you can use the LEDs to display whether the DHCP server has assigned an IP address to the CX8080/CX809x, or, if you are using the RT-Ethernet with bus couplers such as the BK9000, you can display whether all BK9000s are in data exchange. Possible colors are red and green.



The F\_CX8090\_LED\_WD function uses the WD LED on the CX8080/CX809x. Various colors and flash modes can be used here.

VAR\_INPUT

```
VAR_INPUT
  eMode      : E_CX8090_LED;
END_VAR
```

eMode [► 45] : way in which the LED lights up.

VAR\_OUTPUT


```
F_CX8090_LED_WD : INT;
```

F\_CX8090\_LED\_WD : -1, non-implemented flash code, 0 OK


Requirements

| Development environ-<br>ment                 | Target platform | Hardware                  | PLC libraries to be<br>linked |
|----------------------------------------------|-----------------|---------------------------|-------------------------------|
| TwinCAT v2.11.0 build<br>2220 or higher (R3) | ARM             | CX8080, CX8090,<br>CX8091 | TcSystemCX80xx.lib            |

FUNCTION F\_CX8090\_LED\_ERR

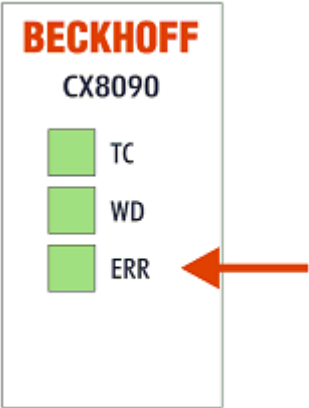

Since the CX8080, CX8090 and CX8091 supports different protocols, the two LEDs on the CX8080/CX809x are not used by the firmware. Hence, the user has the possibility to generate diagnostic messages himself, which must then also be documented for the end customer so that he can also interpret these messages. For example, you can use the LEDs to display whether the DHCP server has assigned an IP address to the CX8080/CX809x or, if you are using the RT-Ethernet with bus couplers such as the BK9000, you can display whether all BK9000s are in data exchange. Possible colors are red and green.



The F\_CX8090\_LED\_ERR function uses the ERR LED on the CX8080/CX809x. Various colors and flash modes can be used here.

VAR\_INPUT

```
VAR_INPUT
    eMode      : E_CX8090_LED;
END_VAR
```

eMode [► 45] : way in which the LED lights up.

VAR\_OUTPUT

```
F_CX8090_LED_ERR : INT;
```

F\_CX8090\_LED\_WD : -1, non-implemented flash code, 0 OK

Requirements

| Development environ-ment                  | Target platform | Hardware               | PLC libraries to be linked |
|-------------------------------------------|-----------------|------------------------|----------------------------|
| TwinCAT v2.11.0 build 2220 or higher (R3) | ARM             | CX8080, CX8090, CX8091 | TcSystemCX80xx.lib         |

## 7.3.2 Data types

### TYPE E\_CX8090\_LED

```


TYPE E_CX8090_LED : (
    eLED_GREEN_OFF,
    eLED_GREEN_ON,
    eLED_GREEN_FLASHING_Quick,
    eLED_GREEN_FLASHING_200ms,
    eLED_GREEN_FLASHING_500ms,
    eLED_GREEN_FLASHING_Pulse,
    eLED_RED_OFF:=20,
    eLED_RED_ON,
    eLED_RED_FLASHING_Quick,
    eLED_RED_FLASHING_200ms,
    eLED_RED_FLASHING_500ms,
    eLED_RED_FLASHING_Pulse,
    eLED_GREEN_RED_OFF:=100,
    eLED_GREEN_RED_FLASHING_200ms,
    eLED_GREEN_RED_FLASHING_500ms
);
END_TYPE

```

## 7.4 Diagnostics

### 7.4.1 FUNCTION F\_CX80xx\_ADDRESS

With this function the address selection switch or the DIP switch of the CX80xx device can be read out. Here, for example, you can activate different parts of the program depending on the address by reading the switch position.



#### VAR\_INPUT

```

VAR_INPUT
    iCX_Typ      : INT;
END_VAR

```

**iCX\_Typ** : The CX type used is entered here - just the number without the designation CX: for example, CX8031 is then entered as 8031.

#### VAR\_OUTPUT

```

F_CX80xx_ADDRESS : INT;

```

**F\_CX80xx\_ADDRESS** : -1, non-implemented CX, address of the switch

#### Prerequisites

| Development environment                   | Target platform | Hardware | PLC libraries to be linked |
|-------------------------------------------|-----------------|----------|----------------------------|
| TwinCAT v2.11.0 build 2220 or higher (R3) | ARM             | CX80xx   | TcSystemCX80xx.lib         |

## 7.5 RS232/RS485

### 7.5.1 Programming of the RS232/485 interface

In KL6xx1 mode, any serial protocols can be implemented. To this end, configure the interface as KL6xx1 mode in the System Manager.

This mode behaves like the serial interface terminals from Beckhoff. It only means that the programming and the interface is similar to a serial interface. The Beckhoff supplement blocks (such as ModbusRTU, COMLIB, ...) of the serial interface usually offer the 64-byte mode for the PC interface.

Alternatively, you can operate and program the interface yourself.

The data structure consists of a control and status word (2 bytes) and a data array. The control byte is written by the PLC program and acknowledges the sending of data with the TR bit. Toggling the bit (edge change) results in sending of the number of data (length of the data OL bits to be written) from the interface. The RA bit acknowledges that the receive data were read. This enables the interface to detect that it can copy new data into the data array. The status word indicates how many data are valid. The Reset bit (IR Control.2, positive edge) clears the buffers and resets the interface. The interface also acknowledges the command in the status word with a Reset bit (IA Status.2). Then set the Reset bit (IR Control.2) to False again.

Table 4: Control word

| Bit  | 15                                     | 14 | 13 | 12 | 11 | 10 | 09 | 08 | 07 | 06 | 05 | 04 | 03    | 02 | 01 | 00 |
|------|----------------------------------------|----|----|----|----|----|----|----|----|----|----|----|-------|----|----|----|
| Name | Length of data to be written (OL bits) |    |    |    |    |    |    |    |    |    |    |    | Reset | IR | RA | TR |

Legend

| Bit  | Name                    | Comment          |                                                                                                                                                                                                                                                                                                                                                    |
|------|-------------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| CW.3 | Reserved                | -                | -                                                                                                                                                                                                                                                                                                                                                  |
| CW.2 | IR<br>(InitRequest)     | 1 <sub>bin</sub> | The controller requests terminal for initialization. The send and receive functions are blocked, the FIFO indicators are reset, and the interface is again initialized with the value. The interface acknowledges completion of the initialization via bit <u>SW.2</u> (IA).                                                                       |
|      |                         | 0 <sub>bin</sub> | The controller once again requests the interface to prepare for serial data exchange.                                                                                                                                                                                                                                                              |
| CW.1 | RA<br>(ReceiveAccepted) | toggle           | The controller acknowledges receipt of data by changing the state of this bit. Only then new data can be transferred from the interface to the controller.                                                                                                                                                                                         |
| CW.0 | TR<br>(TransmitRequest) | toggle           | Via a change of state of this bit the controller notifies the interface that the DataOut bytes contain the number of bytes indicated via the OL bits. The interface acknowledges receipt of the data in the status byte via a change of state of word <u>SW.0</u> (TA). Only now new data can be transferred from the controller to the interface. |

Table 5: Status word

| Bit         | 15                                      | 14 | 13 | 12 | 11 | 10 | 09 | 08 | 07 | 06 | 05 | 04 | 03    | 02 | 01 | 00 |
|-------------|-----------------------------------------|----|----|----|----|----|----|----|----|----|----|----|-------|----|----|----|
| <b>Name</b> | Length of data in the buffer ((IL bits) |    |    |    |    |    |    |    |    |    |    |    | BUF_F | IA | RR | TA |

Legend

| Bit  | Name                     | Comment          |                                                                                                                                                                                                                                                                                                                                                           |
|------|--------------------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SW.3 | BUF_F (buffer full)      | 1 <sub>bin</sub> | The reception FIFO is full. All further incoming data will be lost!                                                                                                                                                                                                                                                                                       |
| SW.2 | IA<br>(InitAccepted bit) | 1 <sub>bin</sub> | Initialization was completed by the interface.                                                                                                                                                                                                                                                                                                            |
|      |                          | 0 <sub>bin</sub> | The interface is ready again for serial data exchange.                                                                                                                                                                                                                                                                                                    |
| SW.1 | RR<br>(ReceiveRequest)   | toggle           | Via a change of state of this bit the interface notifies the controller that the DataIn bytes contain the number of bytes indicated via the IL bits. The controller has to acknowledge receipt of the data in the control word via a change of state of bit <u>CW.1</u> (RA). Only then new data can be transferred from the interface to the controller. |
| SW.0 | TA<br>(TransmitAccepted) | toggle           | The interface acknowledges receipt of data by changing the state of this bit. Only now new data can be transferred from the controller to the interface.                                                                                                                                                                                                  |

A simple example based on the RS232 interface is used to explain the interface and the principle of operation. The example sends data via the RS232. The data are received via a bridge (PIN 2 to 3). [https://infosys.beckhoff.com/content/1033/cx8080\\_hw/Resources/2495112075.zip](https://infosys.beckhoff.com/content/1033/cx8080_hw/Resources/2495112075.zip) 

## 8 Ethernet

### 8.1 System introduction

#### 8.1.1 Ethernet

Ethernet was originally developed by DEC, Intel and XEROX (as the "DIX" standard) for passing data between office devices. The term nowadays generally refers to the *IEEE 802.3 CSMA/CD* specification, published in 1985. Because of the high acceptance around the world this technology is available everywhere and is very economical. This means that it is easy to make connections to existing networks.

There are now a number of quite different transmission media: coaxial cable (10Base5), optical fiber (10BaseF) or twisted pairs (10BaseT) with screen (STP) or without screen (UTP). A variety of topologies such as ring, line or star can be constructed with Ethernet.

Ethernet transmits Ethernet packets from a sender to one or more receivers. This transmission takes place without acknowledgement, and without the repetition of lost packets. To achieve reliable data communication, there are protocols, such as TCP/IP, that can run on top of Ethernet.

#### MAC-ID

The sender and receiver of Ethernet packets are addressed by means of the MAC-ID. The MAC-ID is a 6 byte identification code unique to every Ethernet device in the world. The MAC-ID consists of two parts. The first part (i.e. the first 3 bytes) is a manufacturer identifier. The identifier for Beckhoff is 00 01 05. The next 3 bytes are assigned by the manufacturer and implement a unique serial number. The MAC-ID can, for example, be used for the BootP protocol in order to set the TCP/IP number. This involves sending a telegram containing the information such as the name or the TCP/IP number to the corresponding node. You can read the MAC-ID with the KS2000 configuration software.

#### The Internet Protocol (IP)

The internet protocol (IP) forms the basis of this data communication. IP transports data packets from one device to another; the devices can be in the same network, or in different networks. IP here looks after the address management (finding and assigning MAC-IDs), segmentation and routing. Like the Ethernet protocol, IP does not guarantee that the data is transported - data packets can be lost, or their sequence can be changed.

TCP/IP was developed to provide standardized, reliable data exchange between any number of different networks. TCP/IP is thus substantially independent of the hardware or software being used. Although the term is often used as if it were a single concept, a number of protocols are layered together: e.g. IP, TCP, UDP, ARP and ICMP.

#### Transmission Control Protocol (TCP)

The Transmission Control Protocol (TCP) which runs on top of IP is a connection-oriented transport protocol. It includes error detection and error handling mechanisms. Lost telegrams are repeated.

#### User Datagram Protocol (UDP)

UDP is connectionless transport protocol. It provides no control mechanism when exchanging data between sender and receiver. This results in a higher processing speed than, for example, TCP. Checking whether or not the telegram has arrived must be carried out by the higher-level protocol.

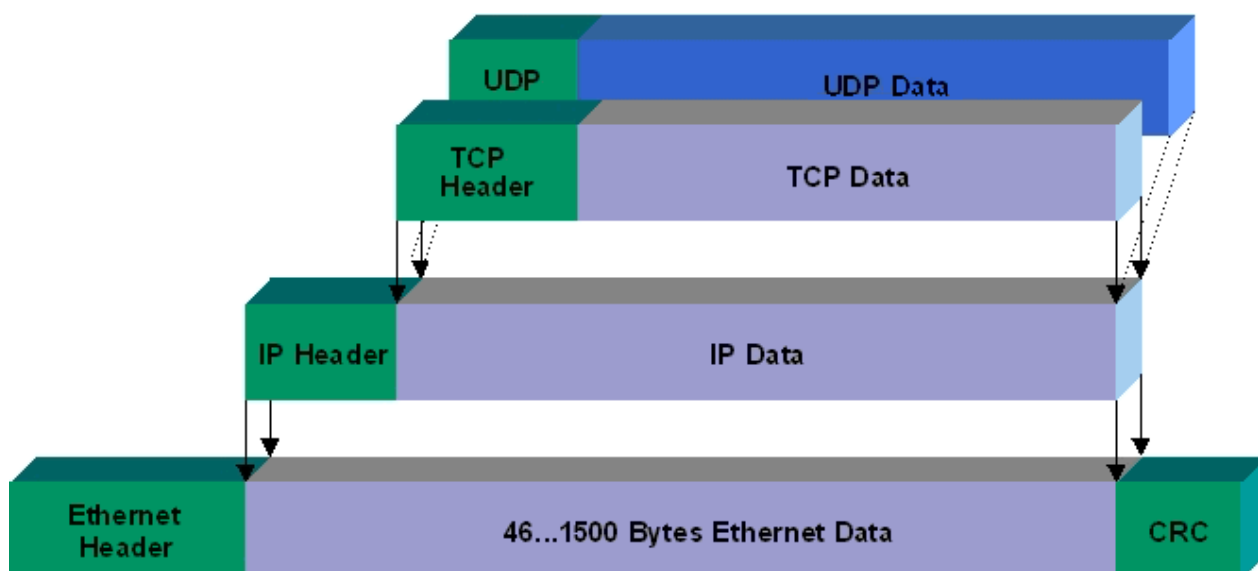



Fig. 3: Ethernet protocol

### Protocols running on top of TCP/IP and UDP/IP

The following protocols can run on top of TCP/IP or UDP:


- ADS
- ModbusTCP

Both of these protocols are implemented in parallel on the Bus Coupler, so that no configuration is needed to activate the protocols.

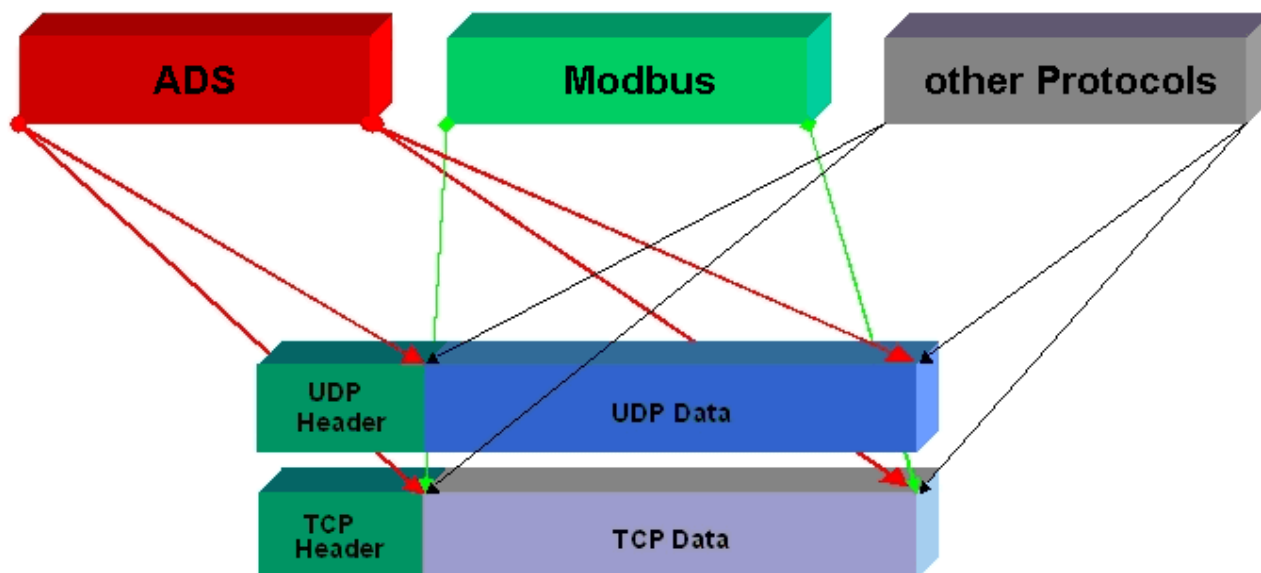

ADS can be used on top of either TCP or UDP, but ModbusTCP is always based on TCP/IP.

## 8.1.2 Topology example

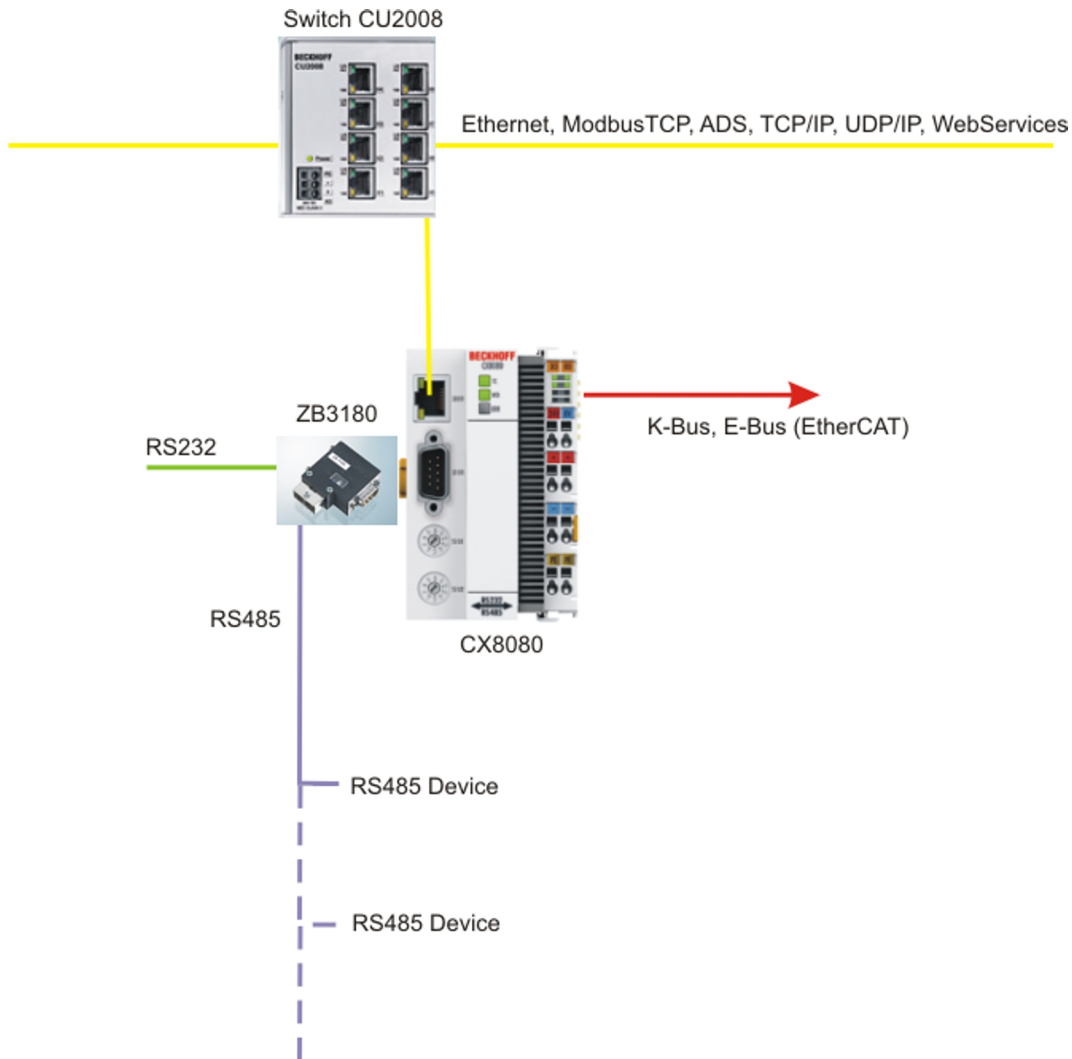

### Observe system load

Observe the system load of your CX8080 when using further Ethernet protocols such as ModbusTCP/UDP or WebServices. A high load can slow down Ethernet communication significantly.

## 8.2 ModbusTCP

### 8.2.1 ModbusTCP Server - Overview

On the CX80xx you can exchange data over a very widespread protocol with the aid of the ModbusTCP. Use the documentation *TwinCAT ModbusTCP server* for this. The server is already installed on the CX80xx. The X001 or X101/102 interfaces may be used.

German: <https://infosys.beckhoff.com/content/1031/tcmodbussrv/11379389195.html>

English: <https://infosys.beckhoff.com/content/1033/tcmodbussrv/11379389195.html>



#### **CX8091**

The Modbus/TCP server is not part of the image of the CX8091.

---



#### **Required libraries**

The corresponding libraries are located in the TwinCAT\Lib directory on the MicroSD card and can be copied to the programming system using an SD card reader.

---




#### **CX8010, CX803x, CX805x, CX8080, CX8093, CX8095**

The Modbus TCP can only be used with the X001 interface.

---

## 8.2.2 ModbusTCP Protocol

The Ethernet protocol is addressed by means of the MAC-ID. The user does not normally need to be concerned about this address. The IP number has a length of 4 bytes, and must be parameterized by the user on the Bus Coupler and in the application. In ModbusTCP, the TCP port is set to 502. The UNIT can be freely selected under ModbusTCP, and does not have to be configured by the user.

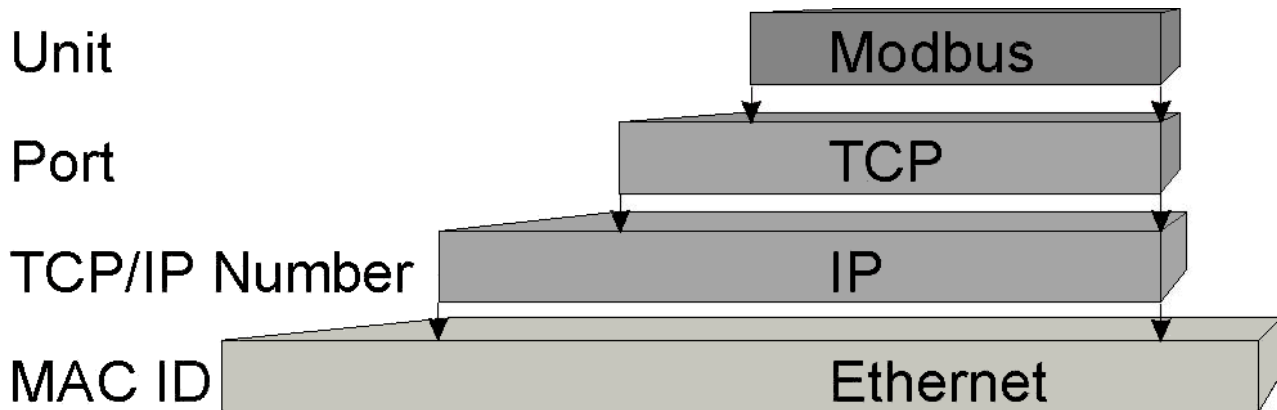

### TCP port number

The TCP port number for ModbusTCP has been standardized to 502.

### Modbus-Unit

The unit is returned by the slave.

### ModbusTCP Protocol

| Byte | Name                   | Description                                         |
|------|------------------------|-----------------------------------------------------|
| 0    | Transaction identifier | Is returned by the slave                            |
| 1    | Transaction identifier | Is returned by the slave                            |
| 2    | Protocol identifier    | always 0                                            |
| 3    | Protocol identifier    | always 0                                            |
| 4    | Length field           | 0 (if the message is less than 256 bytes in length) |
| 5    | Length field           | Number of following bytes                           |
| 6    | UNIT identifier        | returned by the slave                               |
| 7    | Modbus                 | Modbus protocol with the function follows           |

### 8.2.3 Mapping between Modbus and ADS

The standard mapping of the server is illustrated in the following tables for the first runtime system:

| Modbus ranges           | Modbus address  | ADS range                                                   |                        |
|-------------------------|-----------------|-------------------------------------------------------------|------------------------|
| Digital inputs          | 0x0000 - 0x7FFF | <b>Index group</b>                                          | <b>Index offset</b>    |
|                         |                 | 0xF021 - process image of the physical inputs (bit access)  | 0x0                    |
|                         | 0x8000 - 0x80FF | <b>Name of the variables in the PLC program</b>             | <b>Data type</b>       |
|                         |                 | .mb_Input_Coils                                             | ARRAY [0..255] OF BOOL |
| Digital outputs (coils) | 0x0000 - 0x7FFF | <b>Index group</b>                                          | <b>Index offset</b>    |
|                         |                 | 0xF031 - process image of the physical outputs (bit access) | 0x0                    |
|                         | 0x8000 - 0x80FF | <b>Name of the variables in the PLC program</b>             | <b>Data type</b>       |
|                         |                 | .mb_Output_Coils                                            | ARRAY [0..255] OF BOOL |
| Input registers         | 0x0000 - 0x7FFF | <b>Index group</b>                                          | <b>Index offset</b>    |
|                         |                 | 0xF020 - process image of the physical inputs               | 0x0                    |
|                         | 0x8000 - 0x80FF | <b>Name of the variables in the PLC program</b>             | <b>Data type</b>       |
|                         |                 | .mb_Input_Registers                                         | ARRAY [0..255] OF WORD |
| Output registers        | 0x0000 - 0x2FFF | <b>Index group</b>                                          | <b>Index offset</b>    |
|                         |                 | 0xF030 - process image of the physical outputs              | 0x0                    |
|                         | 0x3000 - 0x5FFF | 0x4020 - PLC memory area                                    | 0x0                    |
|                         | 0x6000 - 0x7FFF | 0x4040 - PLC data area                                      | 0x0                    |
|                         | 0x8000 - 0x80FF | <b>Name of the variables in the PLC program</b>             | <b>Data type</b>       |
|                         |                 | .mb_Output_Registers                                        | ARRAY [0..255] OF WORD |

The server maps this to the individual ADS ranges and enables access to the physical process image and the PLC flag ranges.

The configurator enables the adaptation of the setting.

#### Default XML

The standard configuration looks like this:

```
<Configuration>
  <!-- Modbus TCP port, default = 502-->
  <Port>502</Port>
  <!-- optional IP configuration for Modbus TCP server-->
  <IpAddr/>
  <Mapping>
    <InputCoils>
      <MappingInfo>
        <!-- AdsPort: TwinCAT2 PLC1 = 801, PLC2 = 811...-->
        <AdsPort>801</AdsPort>
        <StartAddress>0</StartAddress>
        <EndAddress>32767</EndAddress>
        <!-- IndexGroup 61473 = 0xF021 -> physical plc inputs %IX -->
        <IndexGroup>61473</IndexGroup>
        <!-- Bit offset-->
        <IndexOffset>0</IndexOffset>
      </MappingInfo>
      <MappingInfo>
        <AdsPort>801</AdsPort>
        <!-- Modbus input coils -->
        <StartAddress>32768</StartAddress>
        <EndAddress>33023</EndAddress>
        <VarName>.mb_Input_Coils</VarName>
      </MappingInfo>
    </InputCoils>
  </Mapping>
</Configuration>
```

```

    </MappingInfo>
</InputCoils>
<OutputCoils>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <EndAddress>32767</EndAddress>
    <!-- IndexGroup 61489 = 0xF031 -> physical plc outputs %QX -->
    <IndexGroup>61489</IndexGroup>
    <!-- Bit offset-->
    <IndexOffset>0</IndexOffset>
  </MappingInfo>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <!-- Modbus output coils-->
    <StartAddress>32768</StartAddress>
    <EndAddress>33023</EndAddress>
    <VarName>.mb_Output_Coils</VarName>
  </MappingInfo>
</OutputCoils>
<InputRegisters>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <StartAddress>0</StartAddress>
    <EndAddress>32767</EndAddress>
    <!-- IndexGroup 61472 = 0xF020 -> physical plc input register %I -->
    <IndexGroup>61472</IndexGroup>
    <!-- Byte offset-->
    <IndexOffset>0</IndexOffset>
  </MappingInfo>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <!-- Modbus input registers -->
    <StartAddress>32768</StartAddress>
    <EndAddress>33023</EndAddress>
    <VarName>.mb_Input_Registers</VarName>
  </MappingInfo>
</InputRegisters>
<OutputRegisters>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <StartAddress>0</StartAddress>
    <EndAddress>12287</EndAddress>
    <!-- IndexGroup 61488 = 0xF030 -> physical plc output register %Q -->
    <IndexGroup>61488</IndexGroup>
    <!-- Byte offset-->
    <IndexOffset>0</IndexOffset>
  </MappingInfo>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <StartAddress>12288</StartAddress>
    <EndAddress>24575</EndAddress>
    <!-- IndexGroup 16416 = 0x4020 -> plc memory area %M -->
    <IndexGroup>16416</IndexGroup>
    <!-- Byte offset-->
    <IndexOffset>0</IndexOffset>
  </MappingInfo>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <StartAddress>24576</StartAddress>
    <EndAddress>32767</EndAddress>
    <!-- IndexGroup 16448 = 0x4040 -> plc data area -->
    <IndexGroup>16448</IndexGroup>
    <!-- Byte offset-->
    <IndexOffset>0</IndexOffset>
  </MappingInfo>
  <MappingInfo>
    <AdsPort>801</AdsPort>
    <!-- Modbus output registers -->
    <StartAddress>32768</StartAddress>
    <EndAddress>33023</EndAddress>
    <VarName>.mb_Output_Registers</VarName>
  </MappingInfo>
</OutputRegisters>
</Mapping>
</Configuration>

```

## 8.3 TCP/IP

### Server overview

Via the CX80x0 you can also implement your own protocols with the help of the TCP/IP server. Use the documentation *TwinCAT TCP/IP Server* for this.

The TCP/IP server is already pre-installed on the CX80x0. Only the X001 or X101/102 interfaces may be used.

German: <https://infosys.beckhoff.com/content/1031/tcpipserver/11383740555.html>

English: <https://infosys.beckhoff.com/content/1033/tcpipserver/11383740555.html>

- 
- **CX8091**  
**i** The TCP/IP server is not part of the image of the CX8091.
- 


- **Required libraries**  
**i** The corresponding libraries are located in the TwinCAT\Lib directory on the MicroSD card and can be copied to the programming system using an SD card reader.
- 

- **CX8010, CX803x, CX805x, CX8080, CX8093, CX8095**  
**i** The TCP/IP server can only be used with the X001 interface.
-

## 8.4 ADS-Communication

### Communication

The ADS protocol (ADS: Automation Device Specification) is a transport layer within the TwinCAT system. It was developed for data exchange between the different software modules, for instance the communication between the NC and the PLC. This protocol enables communication with other tools from any point within the TwinCAT. If communication with other PCs or devices is required, the ADS protocol can use TCP/IP as a basis. Within a networked system it is thus possible to reach all data from any point.

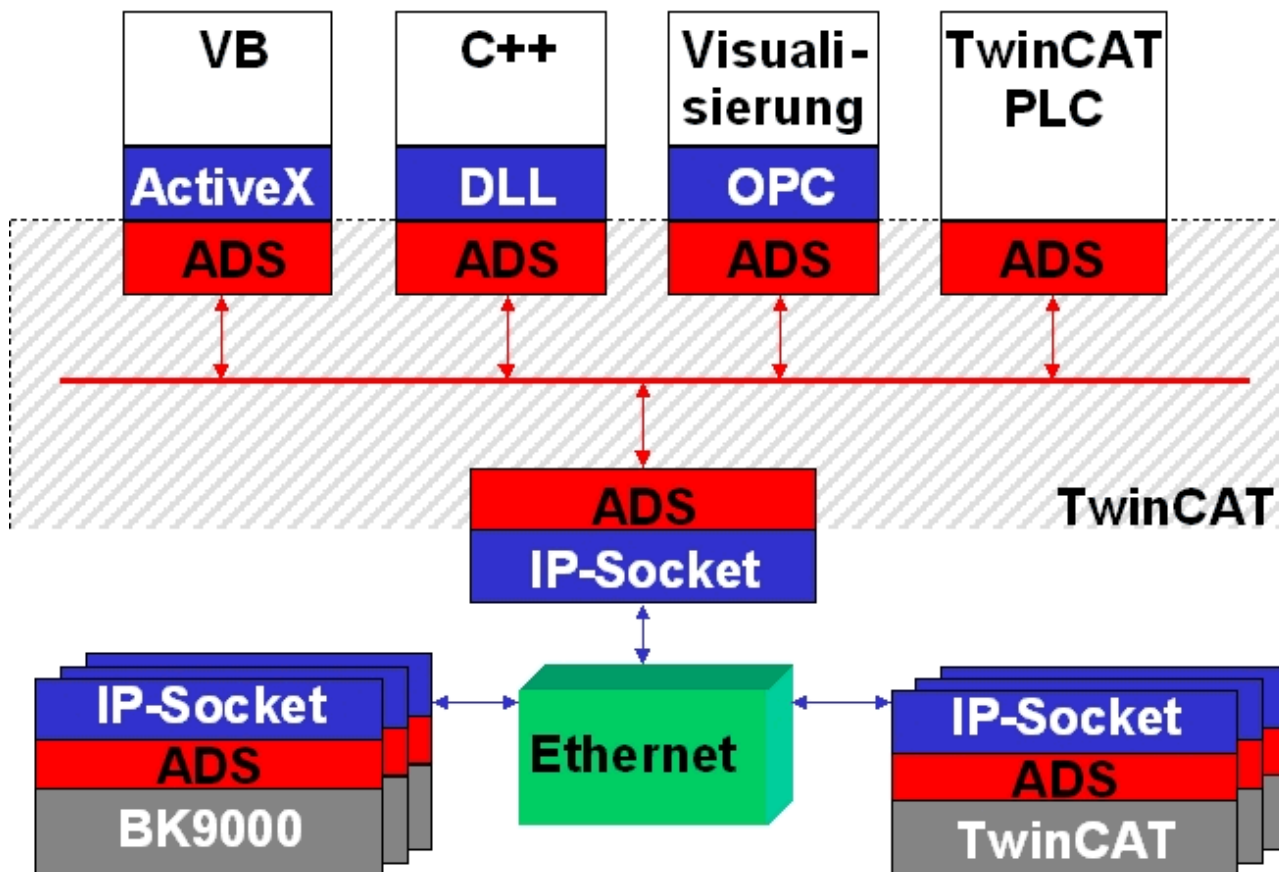

The ADS protocol runs on top of the TCP/IP or UDP/IP protocols. It allows the user within the Beckhoff system to use almost any connecting route to communicate with all the connected devices and to parameterize them. Outside the Beckhoff system a variety of methods are available to exchange data with other software tools.

### Software interfaces

#### ADS-OCX

The ADS-OCX is an Active-X component. It offers a standard interface to, for instance, Visual Basic, Delphi, etc.

#### ADS-DLL


You can link the ADS-DLL (DLL: Dynamic Link Library) into your C program.

#### OPC

The OPC interface is a standardized interface for communication used in automation engineering. Beckhoff offer an OPC server for this purpose.

### Protocol

The ADS functions provide a method for accessing the Bus Coupler information directly from the PC. ADS function blocks can be used in TwinCAT PLC Control for this. The function blocks are contained in the *PLCSystem.lib* library. It is also equally possible to call the ADS functions from AdsOCX, ADSDLL or OPC.

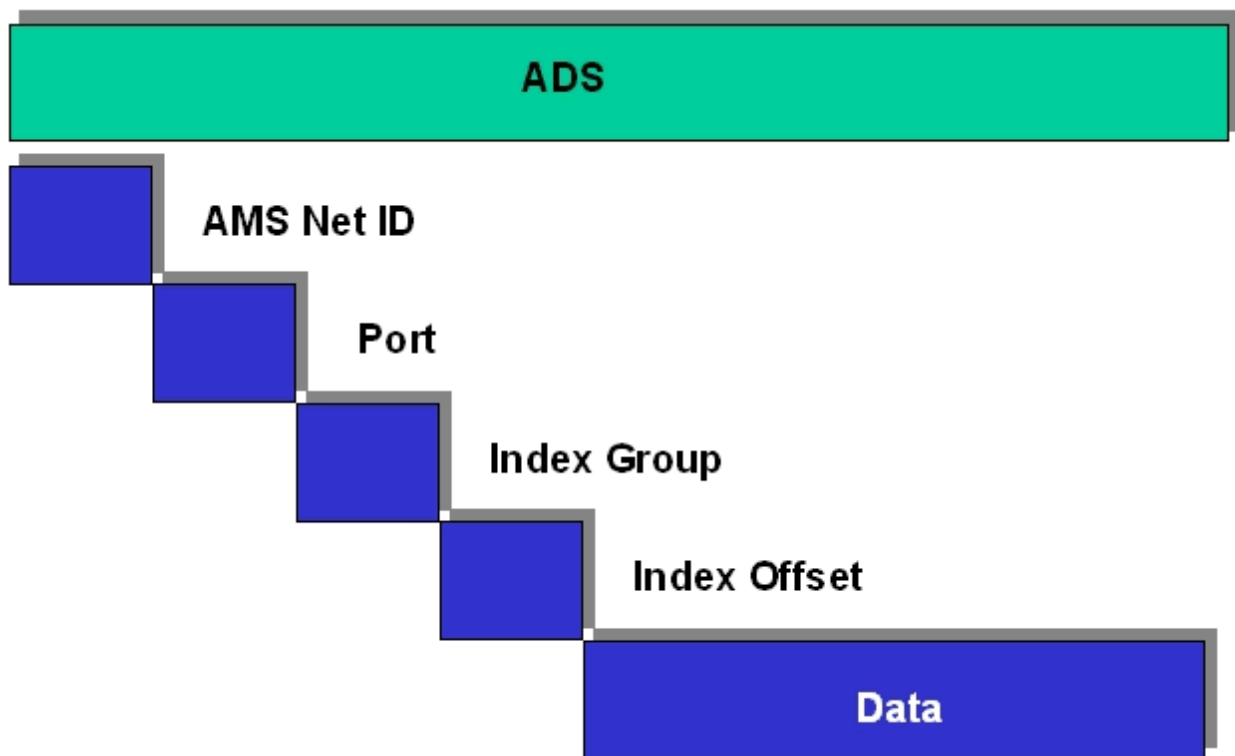**AMSNetID**

The AMSNetID provides a reference to the device that is to be addressed. This is taken from the MAC address of the first Ethernet port (X001) and is printed on the side of the CX80xx. For the AMSNetID the bytes 3 to 6 plus ".1.1" are typically used.

Example:

MAC address 00-01-05-01-02-03

AMSNetID 5.1.2.3.1.1

**Port number**

The port number distinguishes sub-elements in the connected device.

Port 801: local process data PLC runtime 1

**Index group**

The index group distinguishes different data within a port.

**Index offset**

Indicates the offset, the byte from which reading or writing is to start.

**Len**

Gives the length of the data, in bytes, that is to be read or written.

**TCP port number**

The TCP port number for the ADS protocol is 48898 or 0xBF02.

## 9 Serial interface


### 9.1 RS232/RS485 system overview

Currently the RS485 interface is limited. If you want to operate the RS485 interface outside the CX8080 specification, you should consult with Beckhoff.

| System data           | RS485 (CX8080)                                  |
|-----------------------|-------------------------------------------------|
| Number of I/O modules | 4                                               |
| Transmission medium   | screened copper cable, 2 x 0.25 mm <sup>2</sup> |
| Cable length          | 200 m                                           |
| Data transfer rate    | 300 baud...115 kbaud                            |
| Topology              | Line topology                                   |

# 10 Error handling and diagnosis

## 10.1 Diagnostic LEDs

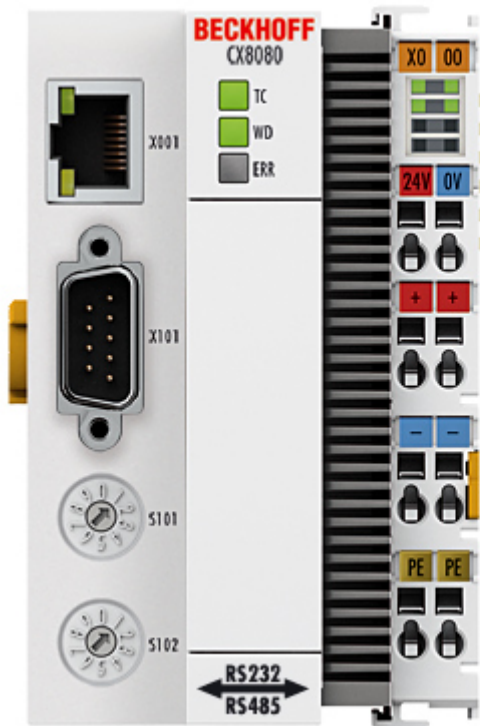

### Ethernet interface X001

| Interface X001 | Ethernet (CX8090) | Meaning      |
|----------------|-------------------|--------------|
| LED green      | on                | Link present |
| LED yellow     | flashing          | Activity     |

### LED coupler

| Labelling | Meaning                     | Color                 | Meaning                  |
|-----------|-----------------------------|-----------------------|--------------------------|
| TC        | Displays the TwinCAT mode   | red                   | TwinCAT in Stop          |
|           |                             | Green                 | TwinCAT in Running Mode  |
|           |                             | Blue                  | TwinCAT in Config Mode   |
| WD*       | no function                 | -                     | -                        |
| ERR*      | Error or Boot Diagnosis LED | red when switching on | Software is being loaded |
|           |                             | off                   | Everything OK            |

\*) The WD and ERR LED can be set and used by function block.

### LED power supply terminal



Operation with K-bus terminals

Operation with E-bus terminals

| Display LED                         | Description                   | Meaning                                                                                                         |
|-------------------------------------|-------------------------------|-----------------------------------------------------------------------------------------------------------------|
| 1 Us 24 V (top left, 1st row)       | CX80xx supply voltage         | connected to -24 V                                                                                              |
| 2 Up 24 V (top right, 1st row)      | Power contacts supply voltage | connected to -24 V                                                                                              |
| 3 L/A (left center, 2nd row)        | EtherCAT LED                  | flashing green: EtherCAT communication active<br>connected to E-bus / no data traffic<br>not connected to E-bus |
| 4 K-BUS RUN (right center, 2nd row) | K-bus LED RUN                 | Lights up green: K-bus running, everything OK                                                                   |
| 6 K-BUS ERR (bottom right, 3rd row) | K-bus LED ERR                 | Lights up red: K-bus error - see K-bus error code                                                               |

**K-bus error code**

| Error code                      | Error code argument | Description                                                 | Remedy                                                                                                                                                                                                                                                                                                       |
|---------------------------------|---------------------|-------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Persistent, continuous flashing |                     | EMC problems                                                | <ul style="list-style-type: none"> <li>• Check power supply for undervoltage or overvoltage peaks</li> <li>• Implement EMC measures</li> <li>• If a K-bus error is present, it can be localized by a restart of the coupler (by switching it off and then on again)</li> </ul>                               |
| 3 pulses                        | 0                   | K-bus command error                                         | <ul style="list-style-type: none"> <li>- No Bus Terminal inserted</li> <li>- One of the Bus Terminals is defective; halve the number of Bus Terminals attached and check whether the error is still present with the remaining Bus Terminals. Repeat until the defective Bus Terminal is located.</li> </ul> |
| 4 pulses                        | 0                   | K-Bus data error, break behind the Bus Coupler              | Check whether the n+1 Bus Terminal is correctly connected; replace if necessary.                                                                                                                                                                                                                             |
|                                 | n                   | Break behind Bus Terminal n                                 | Check whether the bus end terminal 9010 is connected.                                                                                                                                                                                                                                                        |
| 5 pulses                        | n                   | K-bus error in register communication with Bus Terminal n   | Exchange the nth bus terminal                                                                                                                                                                                                                                                                                |
| 6 pulses                        | 0                   | Error at initialization                                     | Exchange Bus Coupler                                                                                                                                                                                                                                                                                         |
|                                 | 1                   | Internal data error                                         | Perform a hardware reset on the Bus Coupler (switch off and on again)                                                                                                                                                                                                                                        |
|                                 | 8                   | Internal data error                                         | Perform a hardware reset on the Bus Coupler (switch off and on again)                                                                                                                                                                                                                                        |
| 7 pulses                        | 0                   | Process data lengths do not correspond to the configuration | Check the Bus Terminals for the configured Bus Terminals                                                                                                                                                                                                                                                     |
|                                 | 1..n                | K-bus reset failed                                          | Check the Bus Terminals                                                                                                                                                                                                                                                                                      |

# 11 Appendix

## 11.1 First steps


The following components are necessary for the first steps

- PC with TwinCAT 2.11 R3
- Ethernet cable
- Power supply (24 V<sub>DC</sub>), cabling material
- a KL2xxx or an EL2xxx, digital output terminal, end terminal


### ● Required TwinCAT version

**i** TwinCAT 2.11 R3 is required for the programming of the CX80xx series. Older TwinCAT versions and TwinCAT 3.x are not supported!


1. Connect K-bus or E-bus terminals to the controller.
2. Connect voltage to the CX80xx (see power supply [► 20]).
3. Connect Ethernet (CX80xx X001) to your network or a direct connection to your PC (make sure in the case of a peer-to-peer connection that the IP addressing in your PC is set to DHCP).
4. Wait a while, approx. 1 to 2 minutes; either the CX80xx will be assigned an address by the DHCP server (usually fast) or, if it does not find a DHCP server, it uses a local IP address.
5. Switch on TC on the PC in Config Mode (TwinCAT icon blue) and start the System Manager
6. In the System Manager, click on the PC symbol (Choose Target System) or press >F8<

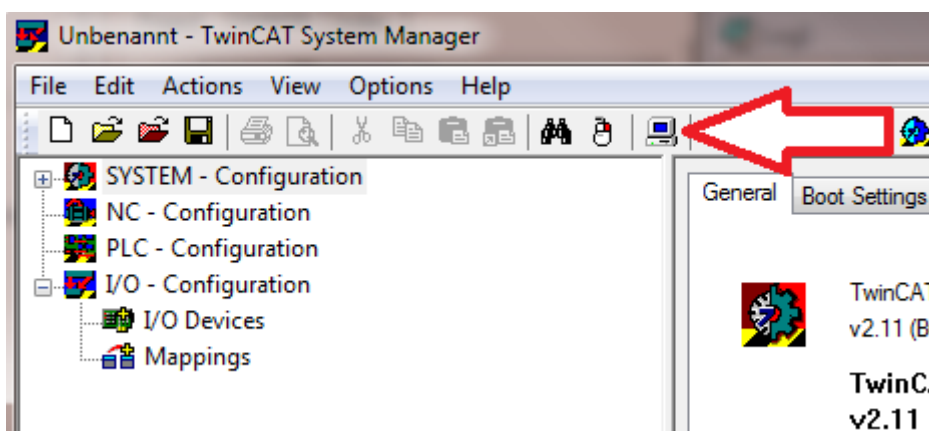

7. The following dialog box opens; click on Search (Ethernet).

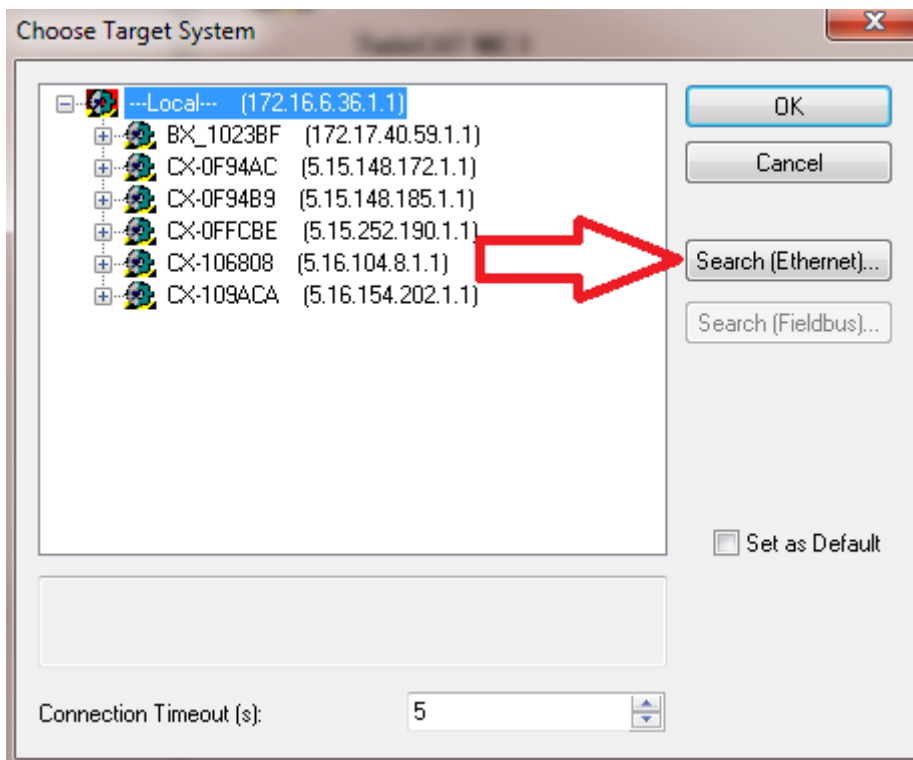


8. Select Option 1 if you have addressed via DHCP or Option 2 in case of DHCP or local IP address. Then click on "Broadcast search".

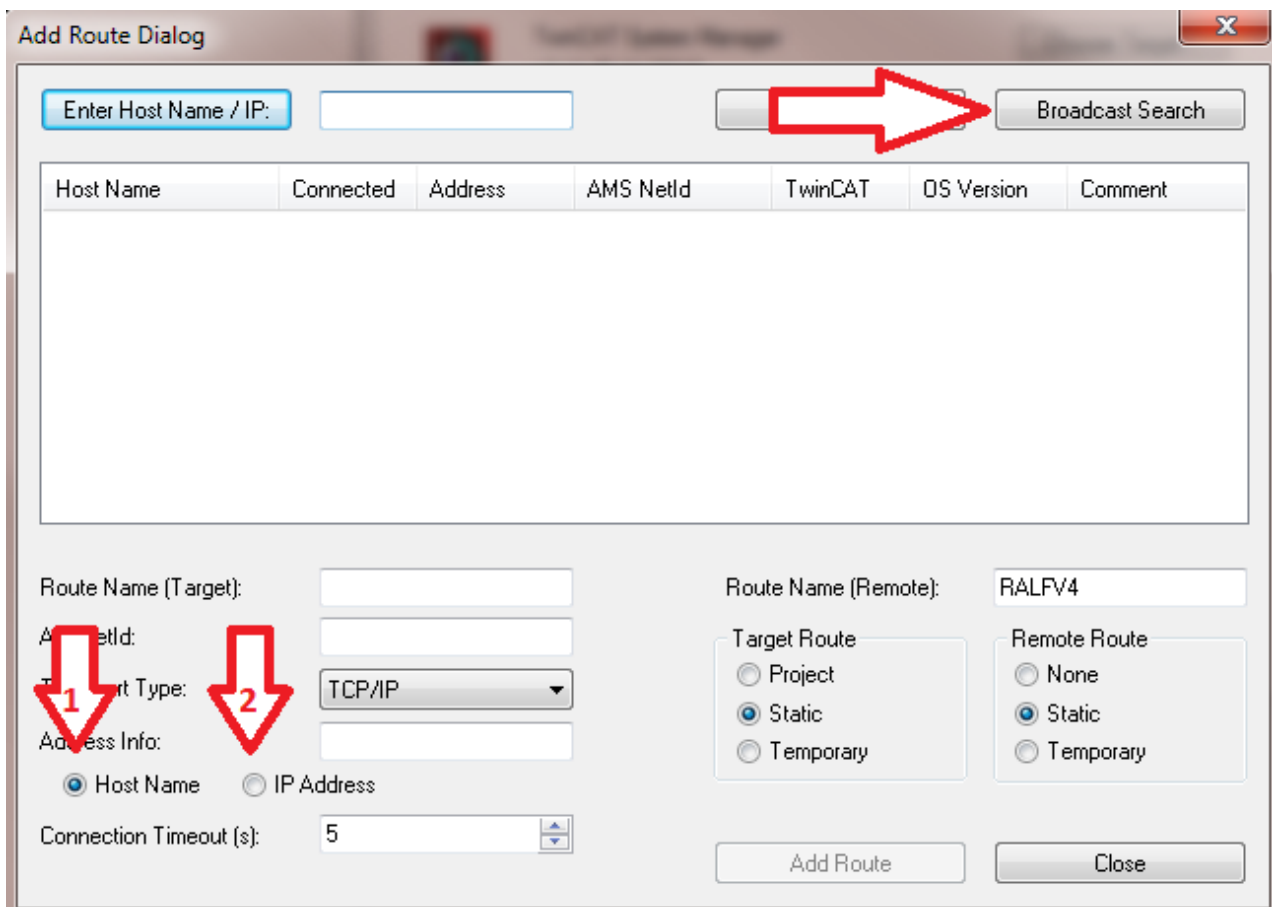

Your network is scanned for Beckhoff controllers. If none is found, this means that the DHCP of the controller is not yet completed or the network settings on your PC are incorrect. A network cable that has not been connected can naturally also be the cause, but this should not be the case if point 3 has been done.


9. The host name is composed by default of "CX" and the last 3 bytes of the MAC address. You can find the MAC address on the side of the CX80xx. The MAC address is always 6 bytes long and the first three bytes are the vendor ID, which is always 00 01 05 in the case of Beckhoff devices.

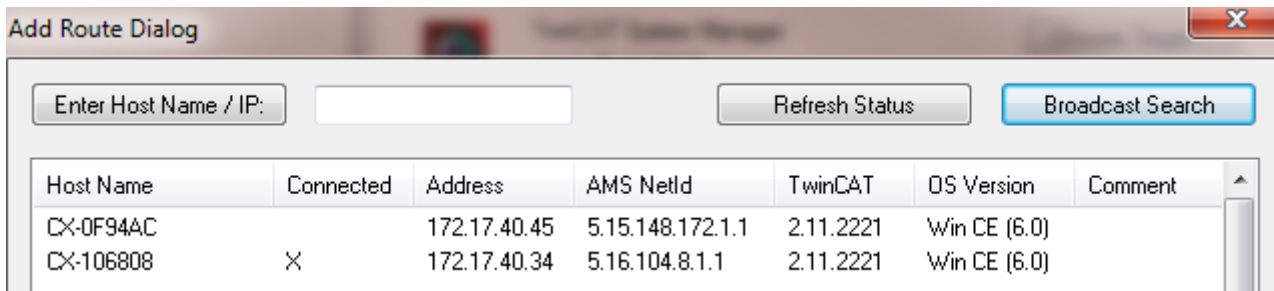

An "X" next to *Connected* means that the CX is already known in the system and can be used. To make it known, click in the list on the CX with which you want to connect and then click on "Add route". An input mask opens with "User name" and "Password". By default there is no password, simply confirm by clicking on OK. Afterwards the "X" should appear next to *connected*.

10. Next, the CX should appear in the list of the devices; select it and confirm by clicking on OK.


11. Check whether the connection is there. In the System Manager in the bottom right-hand corner. It must be blue or green and may **not** be yellow.



12. If the setting is green, switch the CX to Config Mode with "Shift F4" or click on the blue TC icon in the System Manager. The System Manager now asks you whether you really want to switch to Config Mode; confirm by clicking on OK.


13. The setting at the bottom right must now change to blue and the TC LED on the CX80xx must now also light up blue.

14. Now click on I/O Devices and then on Scan Devices...

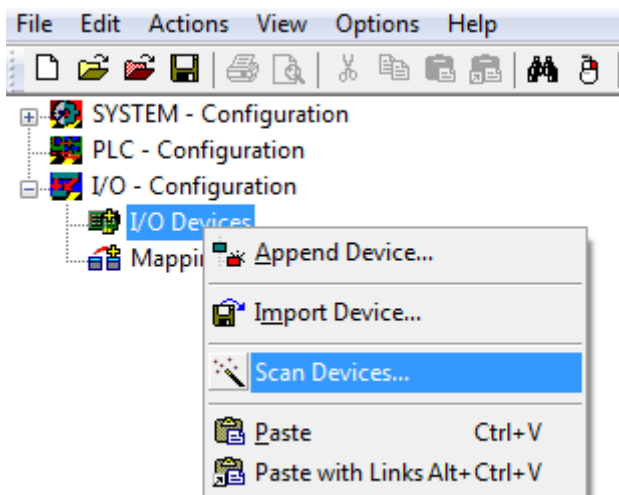

15. A message appears, informing you that not everything will be automatically detected.

16. The CCAT interface is usually found (CX8090) or the corresponding fieldbus interface (other CX80xx devices) and either a K-bus interface or an EtherCAT interface, depending now on which terminals you have connected to the CX. The CCAT interface must be present in the System Manager file and may not be deleted. If an error message should appear when scanning, check the revision level of your TwinCAT version and perform an update if necessary.

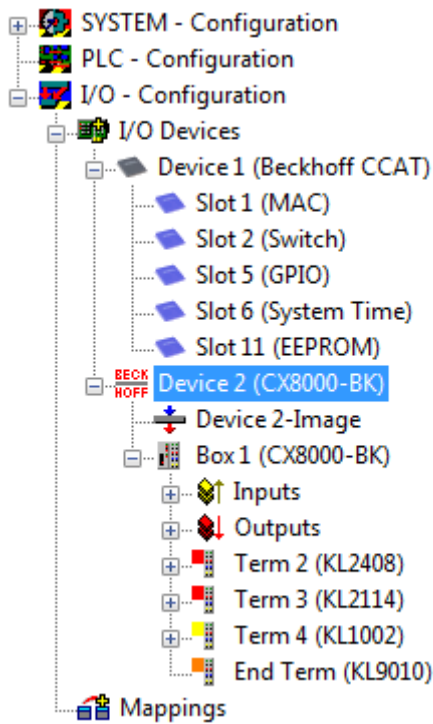

17. Now we come to the programming. To do this, open the PLC Control and select File -> New. The PLC Control asks you for the target system. Select CX (ARM). Afterwards it asks you for the function block; set the ST language (structured text). Now write a small program...

```


MAIN (PRG-ST)
0002 VAR
0003     fbTimer: TON;
0004     bToggle AT %Q*: BOOL;
0005 END_VAR
0006
0001 fbTimer(PT:=t#250ms, in:= NOT fbTimer.Q);
0002 IF fbTimer.Q THEN
0003     bToggle:=NOT bToggle;
0004 END_IF
0005
0006
0007

```

Translate the program. If it is error free (a warning must come, that it is OK) save the project under an arbitrary name, translate it again and save it once **again**.

18: Switch once again to the System Manager and add the program under PLC - Configuration. A FileName.typ file is sought.

19: Now open the project, then the task and then outputs, in which there must be a variable MAIN.bToggle. You can link this with the hardware. To do this, click on "Linked to...".

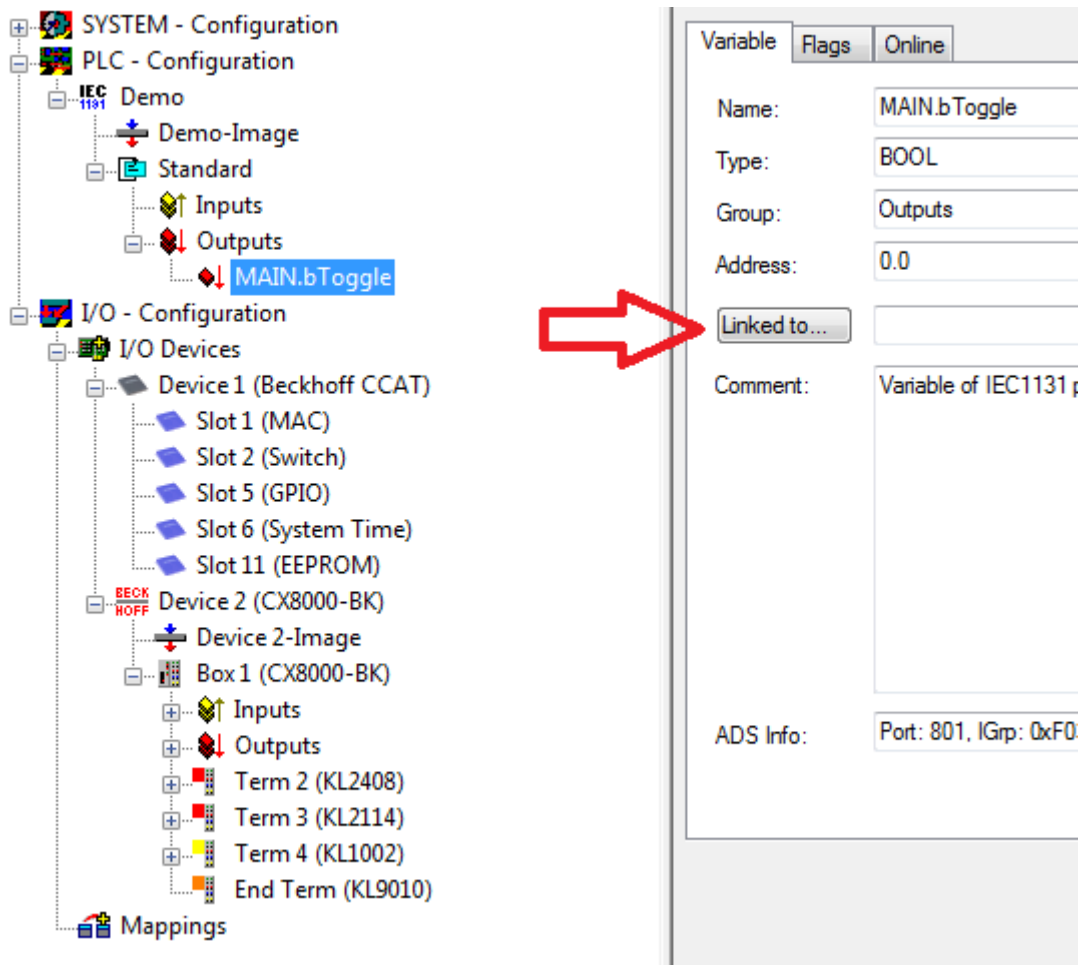

Select a digital output. Now you can download the configuration to the CX and switch the CX to Run Mode. To do this, click on the 'cube' or press Ctrl + Shift + F4. The TC LED on the CX must then light up green.

20. Switch back to PLC Control, go to "Online/Selection of the target system", select the correct CX, click on it and select runtime system 1. Now "Online/login" again (F11) transfer the PLC program, then "Online/Start" (F5). The LED on your terminal must now flash.

21. As a final step Online/Generate a boot project. This completes the project and your first program is stored on the CX.

Congratulations, the foundations have now been laid and are ready to be built on. We wish you every success!

## 11.2 Image Update

There are two different possibilities to update the image of the CX80xx.



### Prerequisites

- Please make sure before the update that your CX80xx supports the image that you want to load.
- When updating the image, please first update all existing files and only then copy the new image.

Always copy all files and directories in order to update a CX80xx.

|  |                                     |                  |                        |           |
|--|-------------------------------------|------------------|------------------------|-----------|
|  | Licenses                            | 30.07.2012 13:40 | Dateiordner            |           |
|  | RegFiles                            | 30.07.2012 13:40 | Dateiordner            |           |
|  | System                              | 30.07.2012 13:40 | Dateiordner            |           |
|  | TwinCAT                             | 30.07.2012 13:40 | Dateiordner            |           |
|  | UPnP                                | 30.07.2012 13:40 | Dateiordner            |           |
|  | www                                 | 30.07.2012 13:40 | Dateiordner            |           |
|  | CX8000_CE600_LF_v351b_TC211R3_B2226 | 24.11.2011 13:50 | Datei                  | 0 KB      |
|  | NK.bin                              | 30.07.2012 12:39 | VLC media file (.bi... | 13.477 KB |

### Update via USB

#### ⚠ CAUTION



#### USB port as ignition source in potentially explosive atmospheres

Gases or dusts can be ignited by a spark discharge when the USB port is used.

Switch off the power supply and wait until the 1-second UPS has discharged. Ensure that there is no explosive atmosphere before you use the USB port.

A USB cable is required for this!

- Switch off the CX80xx

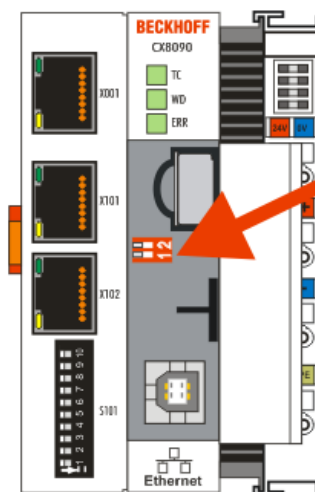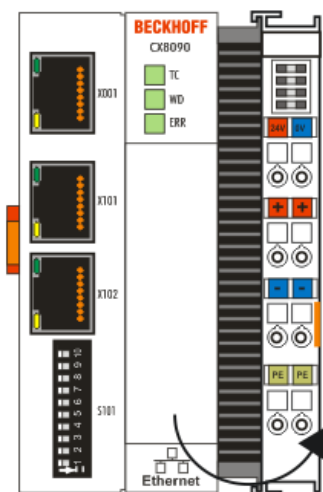

- Set red Dip switch (under the flap) DIP 1 to ON
- Switch on the CX
- Connect the PC with USB
- Delete all files (we recommend that you backup all files first), no formatting

- Wait until copying has finished, then remove the USB cable
- Switch DIP switch 1 to OFF
- Switch off the CX80xx
- Switch on the CX80xx; it may take a little longer the first time

**Update the MicroSD card**

A MicroSD card reader is required for this!

- Remove the MicroSD card from the switched-off CX device.
- Insert the MicroSD card into the reader
- Delete all files (we recommend that you backup all files first), no formatting
- Load the new image
- Wait until copying has finished, then remove the MicroSD card
- Insert the MicroSD card into the SD slot of the switched-off CX again
- Now switch on the CX again; it may take a little longer the first time

## 11.3 Certification

### 11.3.1 Ex


The CX8xxx Embedded PCs, which are certified for use in hazardous areas, have the following IDs:



II 3 G Ex ec IIC T4 Gc  
DEKRA 16ATEX0052 X  
Ta: 0 °C - 55 °C

#### Serial number

The name plate of the CX8xxx Embedded PCs shows a consecutive serial number, a hardware version and a date of manufacture:

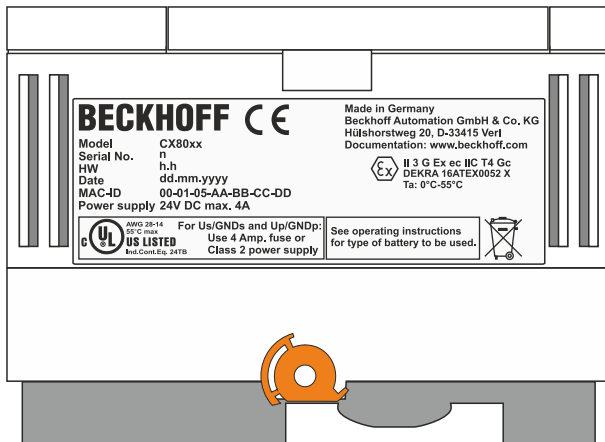

Key:

n: Serial number, consecutive number  
h: Hardware version, ascending number  
dd: Production day  
mm: Production month  
yyyy: Year of production

## 11.3.2 FCC

### FCC Approvals for the United States of America

#### FCC: Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.


### FCC Approval for Canada

#### FCC: Canadian Notice

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.

## 11.3.3 UL

The UL-certified CX8xxx Embedded PCs have the following IDs:

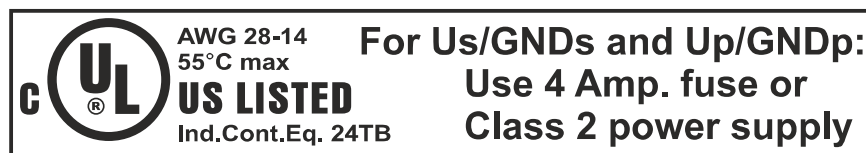

### Compliance with UL requirements:

Compliance with the following UL requirements is required, in order to guarantee the UL certification for the CX8xxx Embedded PC:

- The Embedded PCs must not be connected to unlimited voltage sources.
- Embedded PCs may only be supplied from a 24 V DV voltage source. The voltage source must be insulated and protected with a fuse of maximum 4 A (corresponding to UL248).
- Or the power supply must originate from a voltage source that corresponds to NEC class 2. An NEC class 2 voltage source must not be connected in series or parallel with another NEC class 2 voltage source.

## 11.4 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Download finder

Our [download finder](#) contains all the files that we offer you for downloading. You will find application reports, technical documentation, technical drawings, configuration files and much more.

The downloads are available in various formats.

### Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on our internet page: [www.beckhoff.com](http://www.beckhoff.com)

You will also find further documentation for Beckhoff components there.

### Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963-157  
e-mail: [support@beckhoff.com](mailto:support@beckhoff.com)

### Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963-460  
e-mail: [service@beckhoff.com](mailto:service@beckhoff.com)

### Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20  
33415 Verl  
Germany

Phone: +49 5246 963-0  
e-mail: [info@beckhoff.com](mailto:info@beckhoff.com)  
web: [www.beckhoff.com](http://www.beckhoff.com)

## **Trademark statements**

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered trademarks of and licensed by Beckhoff Automation GmbH.

## **Third-party trademark statements**

Apple and Safari are trademarks of Apple Inc., registered in the U.S. and other countries and regions.

Arm, Arm9 and Cortex are trademarks or registered trademarks of Arm Limited (or its subsidiaries or affiliates) in the US and/or elsewhere.

DeviceNet and EtherNet/IP are trademarks of ODVA, Inc.

Intel, the Intel logo, Intel Core, Xeon, Intel Atom, Celeron and Pentium are trademarks of Intel Corporation or its subsidiaries.

Microsoft, Microsoft Azure, Microsoft Edge, PowerShell, Visual Studio, Windows and Xbox are trademarks of the Microsoft group of companies.

More Information:  
**[www.beckhoff.com/CX8080](http://www.beckhoff.com/CX8080)**

Beckhoff Automation GmbH & Co. KG  
Hülshorstweg 20  
33415 Verl  
Germany  
Phone: +49 5246 9630  
[info@beckhoff.com](mailto:info@beckhoff.com)  
[www.beckhoff.com](http://www.beckhoff.com)

