

Installation- and Operating instructions for  
**Build-in Industrial PCs**  
**C3620, C3640 up to -0050**

Version: 2.3  
Date: 2018-02-16

**BECKHOFF**



# Table of contents

<b>1. General instructions</b>	<b>3</b>
Notes on the Documentation	3
Liability Conditions	3
Trademarks	3
Patent Pending	3
Copyright	3
State at Delivery	3
Delivery conditions	3
Description of safety symbols	4
Basic safety measures	5
Operator's obligation to exercise diligence	6
Operator requirements	6
<b>2. Product Description</b>	<b>7</b>
Appropriate Use	7
Structure of the C3620	7
Structure of the C3640	8
CD/DVD-Drive (optional)	8
Interfaces up to C3620/ C3640-0040	9
PS/2 connections	9
Parallel interface	9
Serial interfaces	9
VGA connection	9
USB interfaces	9
Network connection	9
Sound-On-Board	9
Additional plug-in cards (optional)	9
Interfaces C3620/ C3640-0050	10
PS/2 connections	10
Serial interfaces	10
USB interfaces	10
Network connection	10
Sound-On-Board	10
DVI-I (Digital Visual Interface)	10
DVI-D (Digital Visual Interface)	10
DisplayPort	10
Additional plug-in cards (optional)	10
<b>3. Installation Instructions</b>	<b>11</b>
Transport and Unpacking	11
Transport	11
Unpacking	11
Installation of the PC in the control cabinet	12
Earthing measures	12
Power Supply Connection	13
Power Supply Configuration	13
Pin assignment and cable requirements	14
Fitting the Power Supply Cable	15
Connecting devices	16
Connecting cables	16
Check voltage rating and connect.	16
<b>4. Operating Instructions</b>	<b>17</b>
Switching the Industrial PC on and off	17
First switching on and driver installation	17
Maintenance	18
Cleaning the Industrial PC	18
Replacing the battery on the motherboard	18
Servicing	18

---

Shutting down	18
Disposal	18
<b>5. Troubleshooting</b>	<b>19</b>
Fault correction	19
Service and Support	20
Beckhoff's branch offices and representatives	20
Beckhoff headquarters	20
Beckhoff Support	20
Beckhoff Service	20
<b>6. Assembly dimensions</b>	<b>21</b>
Industrial PC C3620	21
Industrial PC C3640	22
Mounting Opening	23
<b>7. Appendix</b>	<b>24</b>
Technical data	24
Approvals	24
FCC: Federal Communications Commission   Radio Frequency Interference	24
Statement	24
FCC: Canadian Notice	24

# General instructions

## Notes on the Documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components. The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

## Liability Conditions

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation. All pictures shown in the documentation are exemplary. Illustrated configurations can differ from standard.

## Trademarks

Beckhoff<sup>®</sup>, TwinCAT<sup>®</sup>, EtherCAT<sup>®</sup>, Safety over EtherCAT<sup>®</sup>, TwinSAFE<sup>®</sup> and XFC<sup>®</sup> are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

## Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents:

EP1590927, EP1789857, DE102004044764, DE102007017835 with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents:

EP0851348, US6167425 with corresponding applications or registrations in various other countries.

## Copyright

© Beckhoff Automation GmbH & Co.KG.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

## State at Delivery

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co.KG.

## Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co.KG apply.

## Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.



***Danger***

This symbol is intended to highlight risks for the life or health of personnel.



***Warning***

This symbol is intended to highlight risks for equipment, materials or the environment.



***Note***

This symbol indicates information that contributes to better understanding.

## Basic safety measures

Only switch the PC off after closing the software

**Before the Industrial PC is switched off, software that is running must be properly closed.**

Otherwise it is possible that data on the hard disk is lost. Please read the section [Switching the Industrial PC on and off](#).



**Warning**

**Switch off all parts of the equipment, then uncouple the fieldbus!**

Before opening the housing of the PC, and whenever the PC is being used for purposes other than plant control, such as during functional tests following repair, all parts of the equipment must first be switched off, after which the Industrial PC can be uncoupled from the plant.

Pulling out the fieldbus connection plug uncouples the PC (optional).

Items of equipment that have been switched off must be secured against being switched on again.



**Danger**

Displays used for the PCs LC-display are operated with a voltage of up to 1000 V, depending on type. For that reason:

**The supply voltage must be disconnected before the housing of the Control Panel is opened.**

The Industrial PC's power supply unit must be supplied with 100 V<sub>AC</sub> - 240 V<sub>AC</sub> or 24V<sub>DC</sub> (optional).



**Danger**

**Do not open the power supply unit while voltage is applied!**

The supply voltage must be switched off before the power supply unit housing is opened.

**Do not exchange any parts when under power!**

When components are being fitted or removed, the supply voltage must be switched off.

Fitting work on the Industrial PC can result in damage:

- If metal objects such as screws or tools fall onto operating circuit boards.
- If connecting cables internal to the PC are removed or inserted during operation.
- If plug-in cards are removed or inserted when the PC is switched on.

## Operator's obligation to exercise diligence

The operator must ensure that

- the Industrial PC is only used for its intended use (see also chapter [Product Description](#)).
- the Industrial PC is in a sound condition and in working order during operation.
- the operation manual is in good condition and complete, and always available for reference at the location of the Industrial PC.
- the Industrial PC is operated, maintained and repaired only by sufficiently qualified and authorized personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating manual and in particular the safety notes contained herein.
- none of the safety and warning notes attached to the Industrial PC are removed, and that all notes remain legible.

*National regulations depending on the machine type*

Depending on the type of machine and plant in which the Industrial PC is being used, there will be national regulations for the control of such machines and plant that the operator must observe. These regulations cover, amongst other things, the intervals between inspections of the controller.

The operator must initiate such inspections in good time.



**Warning**

### **Only trained persons may open the Industrial PC housing!**

The operator is responsible for ensuring that only trained electrical staff opens the housing of the Industrial PC.

*Procedure in the event of a fault*

In the event of a fault in the Industrial PC, appropriate measures can be determined with the aid of the list in the [Fault correction](#) section.

## Operator requirements

*Read the operating instructions*

Every user of the Industrial PC must have read these operating instructions.

*Software knowledge*

Every user must be familiar with any of the functions of the software installed on the PC that he can reach.


# Product Description

## Appropriate Use

The C3620 and C3640 Industrial PCs are designed for mounting in control cabinets in machine and plant engineering applications.

## Structure of the C3620

*View of the open PC C3620*

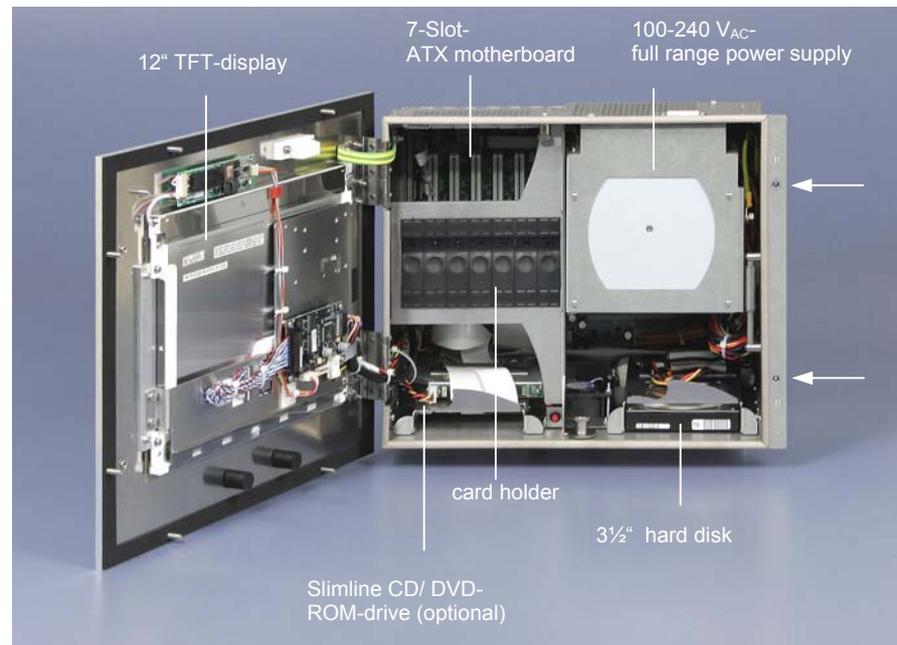

*Opening the housing*


After loosening the two screws (see arrows) the front of the PC with TFT-display can be opened, thus providing access to the drive (optional), 3 1/2" hard disk, processor, memory and plug-in cards.

An ATX motherboard with seven slots for plug-in cards is located behind the removable card holder and the swivel-mounted power supply unit.

The connections of the Industrial PC to the outside are located on top of the housing.

## Structure of the C3640

*View of the open PC C3640*

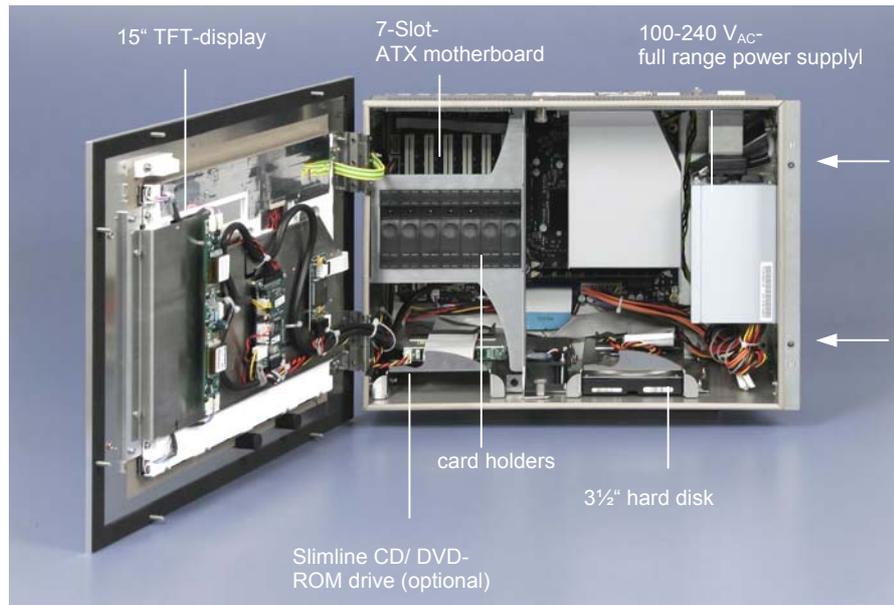

*Opening the housing*

After loosening the two screws (see arrows) the front of the PC with TFT-display can be opened, thus providing access to the drive (optional), 3½" hard disk, processor, memory and plug-in cards.

An ATX motherboard with seven slots for plug-in cards is located behind the removable card holder and the swivel-mounted power supply unit.

The connections of the Industrial PC to the outside are located on top of the housing.

## CD/DVD-Drive (optional)


*Configuration with CD/DVD-drive (optional)*



Optional the Industrial PC is fitted with a CD/ DVD-drive. The drive is located at the rear side of the PC.

## Interfaces up to C3620/ C3640-0040

ATX motherboard  
interfaces

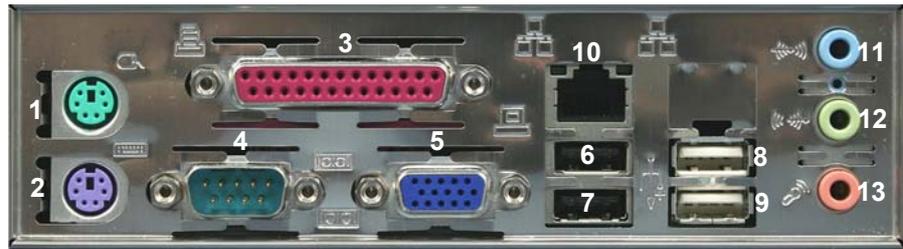

### PS/2 connections

PS/2

The upper PS/2 connector (1) allows a PS/2 mouse to be used, while a PC keyboard can be connected to the lower PS/2 connector (2).

### Parallel interface

Printer  
LPT1

The parallel interface (3) corresponds to the Centronics standard, and is addressed by the software as LPT1.

### Serial interfaces

RS 232  
COM1 – COM2

The basic version of the Industrial PC has two serial interfaces, COM1 (4) and COM2, using the type RS 232, which are each brought to a 9 pin SUB-D plug connector.

The interface COM2 is located in the upper part of the first slot right beside the ATX-slot.



COM2

### VGA connection

VGA

A 15-pin SUB-D socket connector (5) allows a VGA monitor to be connected.

### USB interfaces

USB1 – USB4

The four USB interfaces (6 - 9) are used to connect peripheral devices with USB connections. USB2.0 standard is supported.

### Network connection

Network

The RJ-45 connector (10) allows the PC to be connected to a Local Area Network (LAN).

### Sound-On-Board

Sound

The Industrial PC has a on-board-interface with the following connectors: Line In jack (11), Line Out jack (12) and Microphone jack (13).

### Additional plug-in cards (optional)

Type plate

There is a type plate on the top of the Industrial PC which provides information about the hardware configuration of the Industrial PC at the time it was supplied.

## Interfaces C3620/ C3640-0050

### ATX motherboard interfaces



### PS/2 connections

#### PS/2

The upper PS/2 connector (**X104**) allows a PS/2 mouse to be used, while a PC keyboard can be connected to the lower PS/2 connector (**X103**).

### Serial interfaces

#### RS 232 COM1 – COM2

The basic version of the Industrial PC has two serial interfaces, COM1 (**X105**) and COM2, using the type RS 232, which are each brought to a 9 pin SUB-D plug connector.

The interface COM2 is located in the upper part of the first slot right beside the ATX-slot.



COM2

### USB interfaces

#### USB1 – USB4

The four USB interfaces (**X108 – X111**) are used to connect peripheral devices with USB 2.0 connections.

### Network connection

#### LAN1

The RJ-45 connector (**X112**) allows the PC to be connected to a 10/100/1000BASE-T Local Area Network (LAN).

#### LAN2

The RJ-45 connector (**X113**) allows the PC to be connected to a 10/100/1000BASE-T Local Area Network (LAN).

### Sound-On-Board

#### Sound

The Industrial PC has a on-board-interface with the following connectors: Line In (**X116**), Line Out (**X115**) and Microphone jack (**X114**).

### DVI-I (Digital Visual Interface)

#### DVI-I out

The DVI connection (**X117**) is used for transferring the video signal. DVI-I standard is supported.

### DVI-D (Digital Visual Interface)

#### DVI-D out

The DVI connection (**X118**) is used for transferring the video signal. DVI-D standard is supported.

### DisplayPort

#### DisplayPort

The DisplayPort (**X119**) is used for transferring the video signal.

### Additional plug-in cards (optional)

#### Type plate

There is a type plate on the top of the Industrial PC which provides information about the hardware configuration of the Industrial PC at the time it was supplied.

# Installation Instructions

Please also refer to chapter [General instructions](#).

## Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

### Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, your Industrial PC should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



**Warning**

Danger of damage to the unit!

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

### Unpacking

Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

## Installation of the PC in the control cabinet

The C3620 and C3640 Industrial PCs are designed for rack mounting in machine and plant engineering applications.

The ambient conditions specified for operation must be observed (see the section [Technical data](#)).

### Preparation of the control cabinet wall

The control cabinet wall must be prepared with the required mounting opening for the computer unit and the eight holes for the set screws according to the PC's dimensions (see chapter [Assembly dimensions](#)).



#### Note

**When the unit is installed in an enclosure, adequate space for ventilation and for opening the PC must be provided.**

Please note the following points during installation of the PC:

- Position the PC in such a way that reflections on the screen are avoided as far as possible.
- Use the position of the screen as a guide for the correct installation height; it should be optimally visible for the user at all times.
- The PC should not be exposed to direct sunlight.
- When the unit is in its mounting position, the ventilation openings must not be obstructed.



#### Warning

**Extreme environmental conditions should be avoided as far as possible. Protect the rear of your PC from dust, humidity and heat.**

**The clearance above and below the housing must be at least 100 mm in order to ensure adequate ventilation of the PC.**

**The ventilation slots of the PC must not be covered.**

### Installation in a control cabinet wall

Proceed as follows:

1. Insert the PC at the intended control cabinet wall position and protect it from falling out, prior to final mounting.
2. Using 8 M4 nuts, fix the PC to the control cabinet wall by screwing the nuts from the rear onto the set screws of the PC housing.

### Earthing measures

Earthing connections dissipate interference from external power supply cables, signal cables or cables to peripheral equipment.

Establish a low-impedance connection from the earthing point on the PC housing to the central earthing point on the control cabinet wall, in which the computer is being installed. The earthing connection of the Industrial PC is located beside the power supply connector.




### Earthing measures

## Power Supply Connection

The 5-pin CAGE CLAMP plug connector and mounting flange illustrated is located on the PC housing in order to connect the power supply.

*Socket at the PC housing*

Connection socket when fitted with 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit (standard)

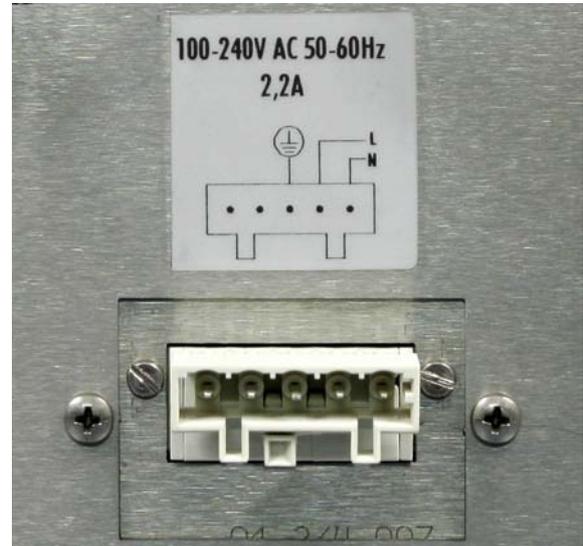

Technical data	Connecting socket
Number of contacts	5
Contact spacing	5 mm
Minimum conductor cross-section	1.5 mm <sup>2</sup>
Minimum conductor cross-section (AWG)	16
Rated voltage (EN)	250 V
Rated voltage (CSA)	300 V
Current EN [A]	12 A
Current CSA [A]	15 A
Length of stripped conductor	8 to 9 mm

## Power Supply Configuration

*Supplied mains power unit*

The Industrial PCs is either fitted with a 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit (standard) or with a 24 V<sub>DC</sub> power supply unit (with the option of an uninterruptible power supply, UPS).

*Current carrying capacity of the 100-240 V power supply unit*

Output voltages from the 100-240 V power supply unit	Current loading maximum
+3,3 V	16 A
+5 V stand by	2 A
+5 V	25 A
-5 V	0.3 A
+12 V	13 A
-12 V	0.8 A

*Current carrying capacity of the 24 V power supply unit*


Output voltages from the 24 V power supply unit	Current loading maximum
+5 V	25 A
-5 V	1 A
+12 V	10 A
-12 V	1.5 A

*Coding pieces*




*Differently coded plug connectors*

The connectors are coded differently at the factory, using snap-on coding pieces, according to the power supply unit that has been fitted.

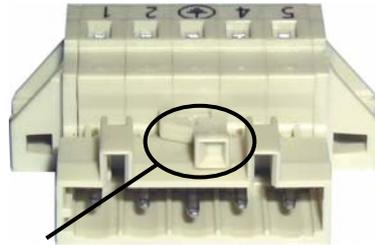

*Coding for the 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit*

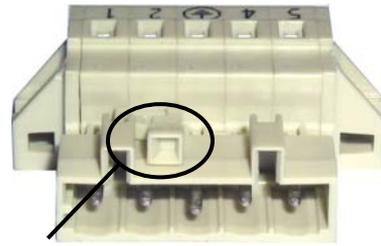

*Coding for the 24 V<sub>DC</sub> power supply unit*


**Pin assignment and cable requirements**

*Pin assignment*

There is an adhesive label with the pin assignments on the top of the female plug connector. **The minimum permitted conductive cross-section is 1.5 mm<sup>2</sup>, fused for 10 A (AWG 16).**

**Industrial PCs with 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit**


*Pin assignment for the 100-240 V, 50-60 Hz power supply unit*

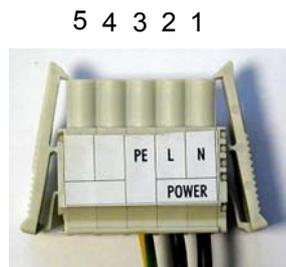

Pin	Function
1	N
2	L
3	⊕
4	not used
5	not used

**Industrial PCs with 24 V<sub>DC</sub> power supply unit**

*Pin assignment for the 24 V<sub>DC</sub> power supply unit*

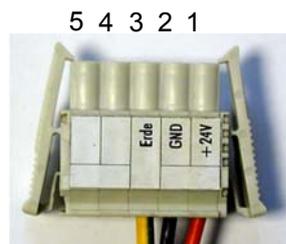

Pin	Function
1	+
2	-
3	⊕
4	not used
5	not used


### Fitting the Power Supply Cable

A 5-pin female plug connector with CAGE CLAMP connection and insertion catches is supplied along with a snap-on strain relief housing in order to assemble the PC power supply cable.

*Materials for assembly of the connector*



*Female plug connector*

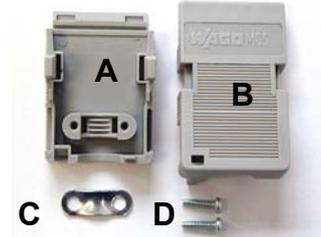

*Strain relief housing*

*Female plug connector is correspondingly coded*

This female plug connector is also coded at the factory, according to the type of power supply fitted, so that the plug, when assembled, will fit the Industrial PC's connecting socket.

Technical data	Female plug connector
Number of contacts	5
Contact spacing	5 mm
Minimum conductor cross-section	1.5 mm <sup>2</sup>
Minimum conductor cross-section (AWG)	16
Rated voltage (EN)	250 V
Rated voltage (CSA)	300 V
Current (EN)	16 A
Current (CSA)	15 A
Length of stripped conductor	8 to 9 mm

*Fitting the connector to the cable*

The plug is fitted to the cable as follows:

1. Strip insulation from the cable ends. Follow the technical data for the female plug connector in the above table!
2. Push the conductors into their mountings, simply by pushing them in as indicated on the pin assignment label.
3. Push the lower part (part **A**) of the strain relief housing (see photograph on page 15) onto the top of the female plug connector until it snaps into place.
4. Relieve the strain on the supply cable by fixing it in place with the cable clamp (part **C**) and fixing screws (part **D**) (see photograph below).

*Applying the strain relief*



Fix the upper part (part **B**) of the strain relief housing by snapping it onto the lower part.

## Connecting devices



### Warning

The power supply plug must be withdrawn!

Please read the documentation for the external devices prior to connecting them.

During thunderstorms, plug connector must neither be inserted nor removed.

When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!

## Connecting cables

The connections are located at the side of the Industrial PC and at the rear (power supply connection), and are documented in the section [Product Description](#).

When connecting the cables to the Industrial PC, proceed according to the following sequence:

- Switch off all the devices that are to be connected.
- Disconnect all the devices that are to be connected from the power supply.
- Connect all the cables between the Industrial PC and to the devices that are to be connected.
- Connect all data transfer cables (if present) to the appropriate plug-in receptacles of the data/telecommunication networks.
- Reconnect all devices to the power supply.

## Check voltage rating and connect.

### With compact 100-240 V<sub>AC</sub> 50/60 Hz power supply:

1. Check that the mains voltage is correct.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Power Supply Cable](#)) into the Industrial PC's power supply socket. Then connect it to a power socket with a grounded earth connection.

### When fitted with the (optional) 24 V<sub>DC</sub> power supply unit:

1. Check that the external power supply is providing the correct voltage.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Power Supply Cable](#)) into the Industrial PC's power supply socket. Then connect it to your external 24 V power supply.



### Warning

If a 24 V UPS is installed, the correct type of rechargeable battery must be used.

# Operating Instructions

## Switching the Industrial PC on and off

### *Switch on*

The Industrial PC does not have its own mains switch. The Industrial PC will start when the equipment is switched on, or when it is connected to the power supply.

### *Shutting down and switching off*

When the plant is switched off, or when it is disconnected from its power supply, the Industrial PC will be switched off.

Control software such as is typically used on Industrial PCs permits various users to be given different rights. A user who may not close software may also not switch the Industrial PC off, since data can be lost from the hard disk by switching off while software is running.



**Warning**

### **First shut down, then switch off the PC!**

If the Industrial PC is switched off as the software is writing a file to the hard disk, the file will be destroyed. Control software typically writes something to the hard disk every few seconds, so that the probability of causing damage by switching off while the software is running is very high.



**Warning**

When you have shut down the Industrial PC, you have to switch off power supply for at least 10 seconds before rebooting the system. After resetting power supply the PC will start booting automatically.

### **First switching on and driver installation**

When you switch on the Industrial PC for the first time, the pre-installed operating system (optional) will be started. In this case, all the required drivers for any additional, optional hardware components ordered with the PC will already have been installed.

If the PC was ordered without operating system, you have to install the operating system and the driver software for any auxiliary hardware yourself. Please follow the instructions in the documentation for the operating system and the additional devices.

## Maintenance

Please also refer to chapter [General instructions](#).

### Cleaning the Industrial PC



**Danger**

Switch off the Industrial PC and all connected devices, and disconnect the Industrial PC from the power supply.

The Industrial PC can be cleaned with a soft, damp cloth. Do not use any aggressive cleaning materials, thinners, scouring material or hard objects that could cause scratches.

### Replacing the battery on the motherboard

A used battery on the motherboard has to be replaced according to the rules of the board manufacturer.



**Danger**

#### Danger of Explosion!

Replace battery only with the identical type or an alternative type recommended by the manufacturer. Notice correct polarity!



**Danger**

#### Handling of Lithium Batteries

Lithium Batteries should not be recharged, exposed to fire, opened and they should be protected against sunlight and moisture.

The used battery must be disposed of in accordance with national electronics scrap regulations.

### Servicing

The Industrial PC requires no maintenance.

## Shutting down

### Disposal

*Dismantling the Industrial PC*

The device must be fully dismantled in order to dispose of it. The housing can be sent for metal recycling.

*Observe national electronics scrap regulations*

Electronic parts such as disk drives and circuit boards must be disposed of in accordance with national electronics scrap regulations.

# Troubleshooting

Please also refer to chapter [General instructions](#).



Note

**Pixel errors in the TFT display are production-caused and represent no complaint-reason!**

## Fault correction

Fault	Cause	Procedure
Nothing happens after the Industrial PC has been switched on	No power supply to the Industrial PC	Check power supply cable
	Other cause	Call Beckhoff Service
The Industrial PC does not boot fully	CD in drive (optional).	Remove CD and press any key
	Setup settings are incorrect	Check the setup settings
	Other cause	Call Beckhoff Service
Computer boots, software starts, but control does not operate correctly	Cause of the fault is either in the software or in parts of the plant outside the Industrial PC	Call the manufacturer of the machine or the software
Error during CD access	Faulty CD	Check the disk in another disk drive
	Faulty disk drive	Call Beckhoff Service
The Industrial PC functions only partially or only part of the time, e.g. no or dark picture, but disk drive responds when switching on	Defective components in the Industrial PC	Call Beckhoff Service

## Service and Support

Beckhoff and their partners around the world offer comprehensive service and support, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further [documentation](#) for Beckhoff components there.

### Beckhoff headquarters

Beckhoff Automation GmbH & Co. KG  
Huelshorstweg 20  
D-33415 Verl  
Germany

Phone: +49(0)5246/963-0  
Fax: +49(0)5246/963-198  
e-mail: [info@beckhoff.com](mailto:info@beckhoff.com)

### Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- world-wide support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49(0)5246/963-157  
Fax: +49(0)5246/963-9157  
e-mail: [support@beckhoff.com](mailto:support@beckhoff.com)

### Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460  
Fax: +49(0)5246/963-479  
e-mail: [service@beckhoff.com](mailto:service@beckhoff.com)

*Quote the project number*

If servicing is required, please quote the **project number** of your Industrial PC.

# Assembly dimensions


## Industrial PC C3620




**Warning**

The assembly of the unit must take place with the orientation diagrammed here.


*All dimensions in mm.*

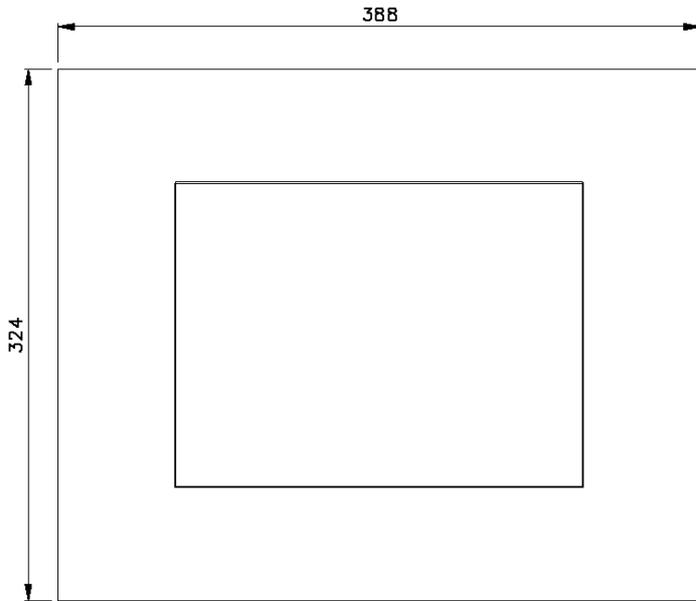

front view

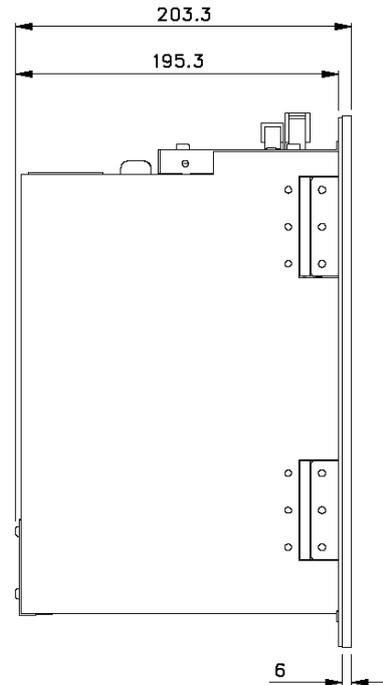

left view

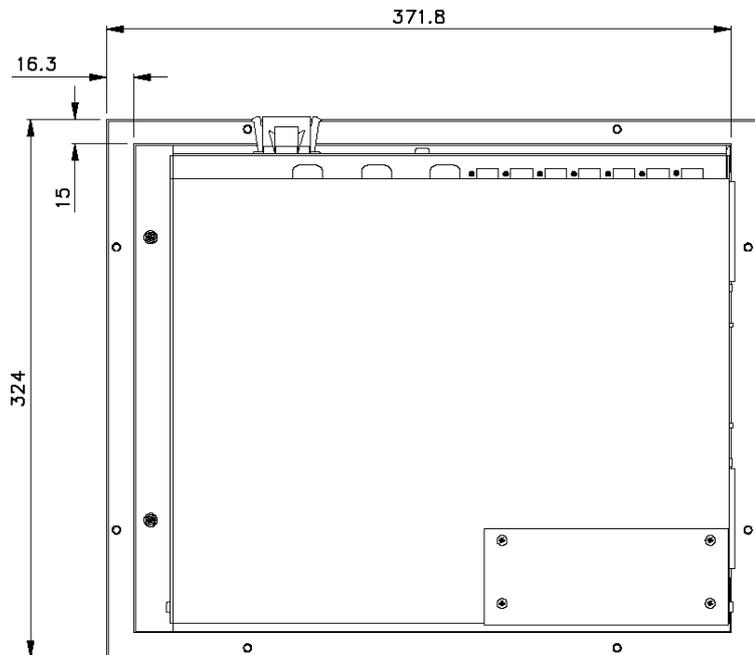

rear view


## Industrial PC C3640




**Warning**

The assembly of the unit must take place with the orientation diagrammed here.


*All dimensions in mm.*

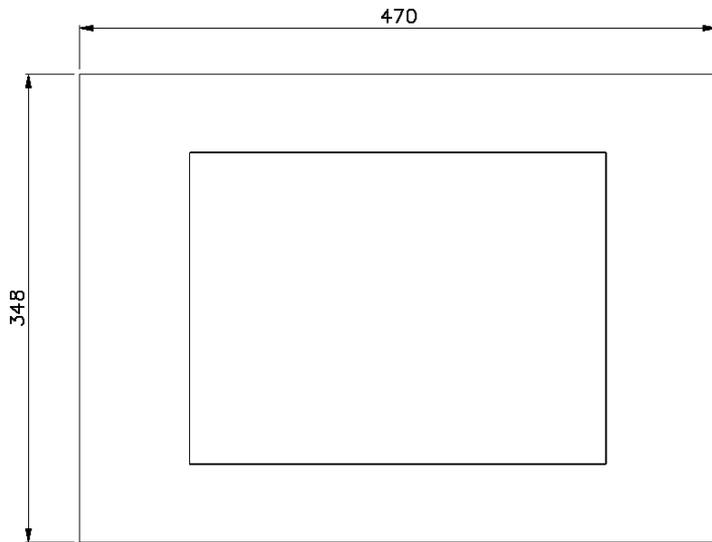

front view

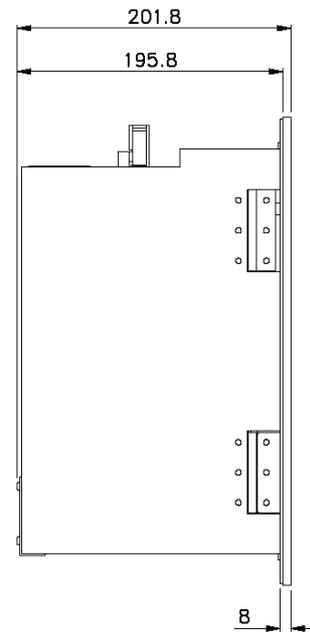

left view

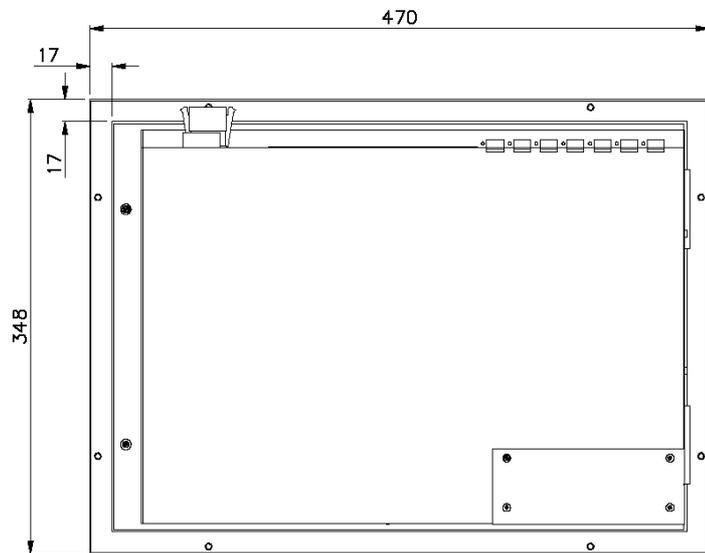


rear view


## Mounting Opening

A mounting opening according to the following diagram is required:

Mounting opening for  
C3620

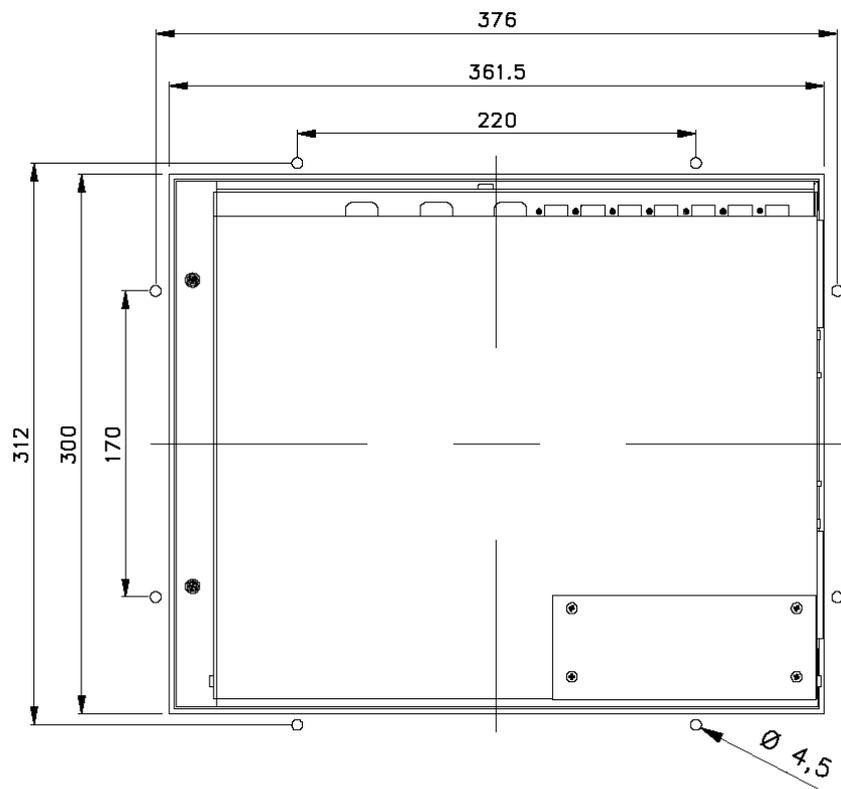

Mounting opening for  
C3640

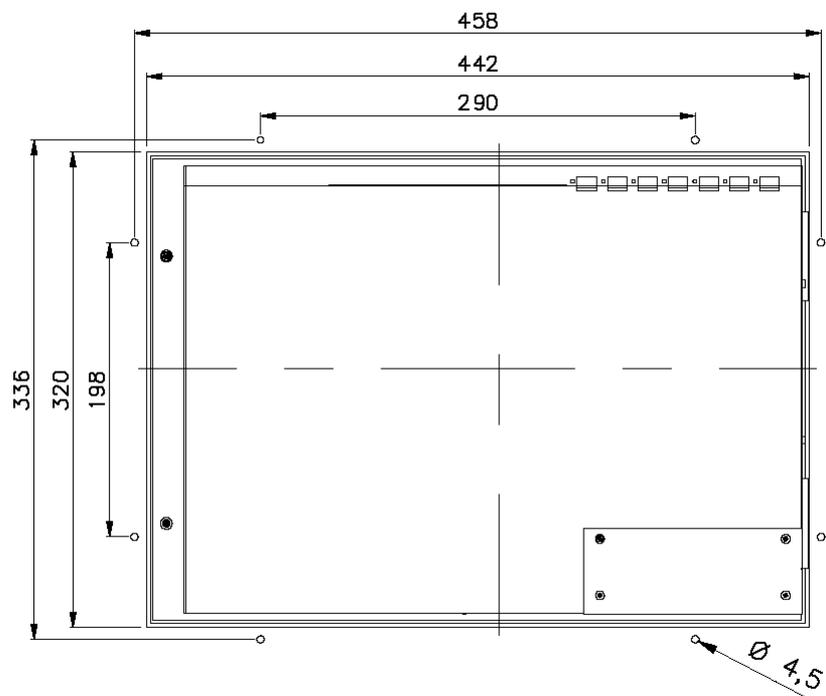

# Appendix

## Technical data

<i>Dimensions</i>	<b>C3620</b>	<b>Dimensions (W x H x D):</b>	388 x 324 x 201 mm
		<b>Weight:</b>	11.5 kg (basic configuration)
	<b>C3640</b>	<b>Dimensions (W x H x D):</b>	470 x 348 x 199 mm
		<b>Weight:</b>	14.1 kg (basic configuration)
<i>Color</i>	<b>C3620</b>	<b>Size, Resolution:</b>	12", 800 x 600 dpi
<i>Display</i>	<b>C3640</b>	<b>Size, Resolution:</b>	15", 1024 x 768 dpi
<i>Do not use the PC in areas of explosive hazard</i>		<b>The Industrial PC may not be used in areas of explosive hazard.</b>	
<b>The following conditions must be observed during operation:</b>			
<i>Environmental conditions</i>		<b>Ambient temperature:</b>	0 to 55°C
		<b>Atmospheric humidity:</b>	Maximum 95%, non-condensing
<i>Shock resistance</i>		<b>Sinusoidal vibration:</b>	
		<b>(EN 60068-2-6)</b>	10 to 58 Hz: 0.035 mm 58 to 500 Hz: 0.5 G (~ 5 m/s <sup>2</sup> )
		<b>During reading of CD-ROM:</b>	10 to 58 Hz: 0.019 mm 58 to 500 Hz: 0.25 G (~ 2.5 m/s <sup>2</sup> )
		<b>Impact:</b>	
		<b>(EN 60068-2-27)</b>	5 G (~ 50 m/s <sup>2</sup> ), duration: 30 ms
		<b>During reading of CD-ROM:</b>	5 G (~ 50 m/s <sup>2</sup> ), duration: 11 ms
<i>Protection class</i>		<b>Protection class:</b>	Front side IP65, rear side IP20
<i>Power supply with 100-240 V<sub>AC</sub> power supply unit or 24 V<sub>DC</sub> power supply unit (optional)</i>		<b>Supply voltage:</b>	100-240 V <sub>AC</sub> 50-60 Hz Optional: 24 V <sub>DC</sub> (22 – 30 V <sub>DC</sub> )
		<b>Power consumption:</b>	<b>C3620-0020:</b> ca. 89 W <b>C3620-0030:</b> ca. 114 W <b>C3640-0020:</b> ca. 98 W <b>C3640-0030:</b> ca. 123 W
			(for the basic version)
		If operated with UPS:	additional 30 W (while charging)
<i>Electromagnetic Compatibility (EMC)</i>		<b>Interference resistance:</b>	according to EN 61000-6-2
		<b>Emitted resistance:</b>	according to EN 61000-6-4
<i>Transport and storage</i>		The same values for atmospheric humidity and shock resistance are to be observed during transport and storage as in operation. The shock resistance during transport can be improved by means of suitably packing the Industrial PC. The ambient temperature during storage and transport must be between -20°C and +65°C.	



**Note**

**Pixel errors in the TFT display are production-caused and represent no complaint-reason!**

## Approvals

### FCC: Federal Communications Commission Radio Frequency Interference Statement

#### FCC Approval for USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### FCC: Canadian Notice

#### FCC Approval for Canada

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.