



Installation and Operating instructions for

# Built-in Panel PC CP65xx from -0080

Version: 3.0  
Date: 2020-04-23

**BECKHOFF**



# Table of contents

<b>1. Foreword</b>	<b>3</b>
Notes on the Documentation	3
Liability Conditions	3
Trademarks	3
Patent Pending	3
Copyright	3
State at Delivery	3
Delivery conditions	3
Description of safety symbols	4
Basic safety measures	5
Operator's obligation to exercise diligence	6
Operator requirements	6
<b>2. Product Description</b>	<b>7</b>
Appropriate Use	7
Structure	7
Interfaces from CP65xx-0080	9
PS/2 connections	9
USB interfaces	9
Network connection	9
DVI-D (Digital Visual Interface)	9
Serial interface	9
DisplayPort	9
Sound-On-Board	9
Further Interfaces	10
Further USB interfaces	10
Additional plug-in cards (optional)	10
<b>3. Installation Instructions</b>	<b>11</b>
Transport and Unpacking	11
Transport	11
Unpacking	11
Installation of the PC in the control cabinet	12
Earthing measures	12
Power Supply Connection	13
Pin assignment of the connector	13
Pin assignment and cable requirements	14
Fitting the Power Supply Cable	15
Connecting Power Supply	16
Wiring diagram	17
Connecting devices	18
Connecting cables	18
Check voltage rating and connect.	18
<b>4. Operating Instructions</b>	<b>19</b>
Switching the Industrial PC on and off	19
First switching on and driver installation	19
Operation	19
Keyboard codes	20
Servicing and maintenance	22
Cleaning the Industrial PC	22
Replacing the battery on the motherboard	22
Servicing	22
Emergency procedures	22
Shutting down	22
Disposal	22
<b>5. Troubleshooting</b>	<b>23</b>
Fault correction	23

---

<b>Beckhoff Support and Service</b>	<b>24</b>
Beckhoff branches and partner companies	24
Beckhoff company headquarters	24
Beckhoff Support	24
Beckhoff Service	24
<b>6. Assembly dimensions</b>	<b>25</b>
<b>7. Appendix</b>	<b>26</b>
Technical data	26
Approvals	26
FCC: Federal Communications Commission   Radio Frequency Interference	
Statement	26
FCC: Canadian Notice	26

# Foreword

## Notes on the Documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

## Liability Conditions

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

All pictures shown in the documentation are exemplary. Illustrated configurations can differ from standard.

## Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, Safety over EtherCAT®, TwinSAFE® and XFC® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

## Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents:

EP1590927, EP1789857, DE102004044764, DE102007017835

with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents:

EP0851348, US6167425 with corresponding applications or registrations in various other countries.

## Copyright

© Beckhoff Automation GmbH & Co.KG.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

## State at Delivery

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co.KG.

## Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co.KG apply.

## Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.



***Danger***

This symbol is intended to highlight risks for the life or health of personnel.



***Warning***

This symbol is intended to highlight risks for equipment, materials or the environment.



***Note***

This symbol indicates information that contributes to better understanding.

## Basic safety measures

*Only switch the PC off after closing the software*

**Before the Industrial PC is switched off, software that is running must be properly closed.**

Otherwise it is possible that data on the hard disk is lost. Please read the section on [Switching the Industrial PC on and off](#).



**Warning**

**Switch off all parts of the equipment, then uncouple the fieldbus!**

Before opening the housing of the PC, and whenever the PC is being used for purposes other than plant control, such as during functional tests following repair, all parts of the equipment must first be switched off, after which the Industrial PC can be uncoupled from the plant.

Pulling out the fieldbus connection plug uncouples the PC (optional).

Items of equipment that have been switched off must be secured against being switched on again.

The Industrial PC's power supply unit must be supplied with 100-240 V<sub>AC</sub> or 24 V<sub>DC</sub> (optional).



**Danger**

**Do not exchange any parts when under power!**

When components are being fitted or removed, the supply voltage must be switched off.

Fitting work on the Industrial PC can result in damage:

- If metal objects such as screws or tools fall onto operating circuit boards.
- If connecting cables internal to the PC are removed or inserted during operation.
- If plug-in cards are removed or inserted when the PC is switched on.

## Operator's obligation to exercise diligence

The operator must ensure that

- the Industrial PC is only used for its intended use (see also chapter [Product Description](#)).
- the Industrial PC is in a sound condition and in working order during operation.
- the operation manual is in good condition and complete, and always available for reference at the location of the Industrial PC.
- the Industrial PC is operated, maintained and repaired only by sufficiently qualified and authorised personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating manual and in particular the safety notes contained herein.
- none of the safety and warning notes attached to the Industrial PC are removed, and that all notes remain legible.

*National regulations depending on the machine type*

Depending on the type of machine and plant in which the Industrial PC is being used, there will be national regulations for the control of such machines and plant that the operator must observe. These regulations cover, amongst other things, the intervals between inspections of the controller.

The operator must initiate such inspections in good time.



**Warning**

### **Only trained persons may open the Industrial PC housing!**

The operator is responsible for ensuring that only trained electrical staff opens the housing of the Industrial PC.

*Procedure in the event of a fault*

In the event of a fault in the Industrial PC, appropriate measures can be determined with the aid of the list in the [Fault correction](#) section.

## Operator requirements

*Read the operating instructions*

Every user of the Industrial PC must have read these operating instructions.

*Software knowledge*

Every user must be familiar with any of the functions of the software installed on the PC that he can reach.



# Product Description

## Appropriate Use

The CP65xx add-on Industrial PC is designed to be used in association with the built-in Control Panel and fitted into control cabinets in machine and plant engineering applications.

## Structure

Rear view of the CP65xx



Opening the housing


In order to open the PC housing, first remove the fastening screw (see photo above) using a cross-head screwdriver. The cover of the housing can then be removed.

Fold-out inner chassis



Unfasten the two securing levers (1) that hold the fold-out inner chassis (2).

*Folding out the inner chassis*

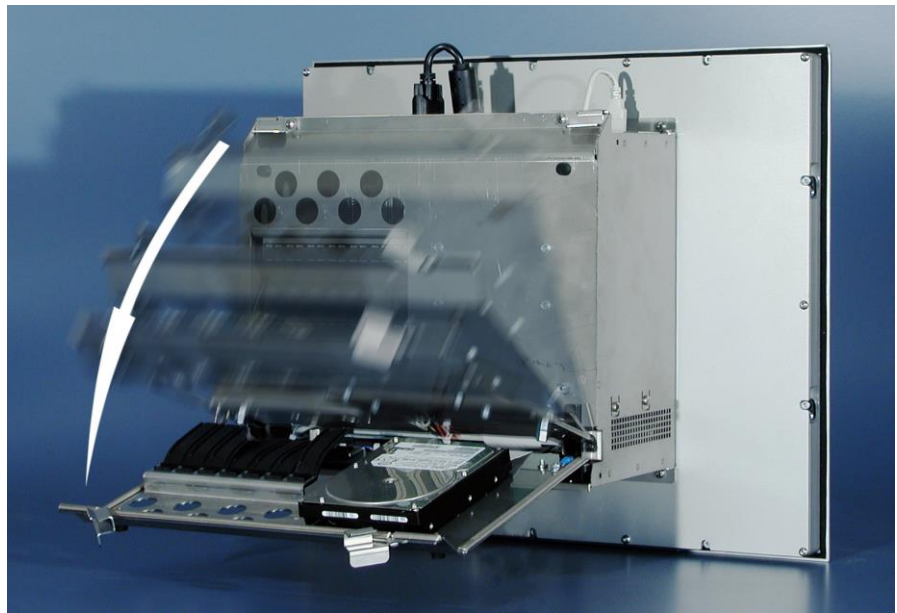

The chassis can now simply be folded out backwards, thus providing access to the hard drive, processor, memory and plug-in cards.

*View of the open PC*



When the inner chassis (1) has been folded out of the way with the hard drive (2), a 7-slot ATX motherboard (3) is found. The connections are accessible from outside (4).

## Interfaces from CP65xx-0080

ATX motherboard  
interfaces



### PS/2 connections

PS/2

The upper PS/2 connector (**X104**) allows a PS/2 mouse to be used, while a PC keyboard can be connected to the lower PS/2 connector (**X103**).

### USB interfaces

USB1 – USB4

The four USB interfaces (**X108 – X111**) are used to connect peripheral devices with USB connections:

- Devices with Intel® 4<sup>th</sup> generation processors (CP65xx-0080) are equipped with 2 USB2.0 (**X110**, **X111**) and 2 USB3.0 (**X108**, **X109**) interfaces.
- Devices from Intel® 6<sup>th</sup> and 7<sup>th</sup> generation processors (CP65xx-0090) are equipped with 4 USB3.0 interfaces.

### Network connection

LAN1, LAN2

The RJ-45 connectors (**X112**, **X113**) allow the PC to be connected to a 10/100/1000BASE-T Local Area Network (LAN).

### DVI-D (Digital Visual Interface)

DVI out

The DVI connectors (**X114**, **X115**) are used for transferring the video signal. DVI-D standard is supported.

### Serial interface

RS 232  
COM1

The basic version of the Industrial PC has one serial interface COM1 (**X116**), using the type RS 232. The interface is brought to a 9 pin SUB-D plug connector.

### DisplayPort

DisplayPort

The DisplayPort (**X117**) is used for transferring the video signal.

### Sound-On-Board

Sound

The Industrial PC has an on-board-interface with the following connectors: Line In (**X122**), Line Out (**X121**) and Microphone jack (**X120**).

## Further Interfaces

### Further USB interfaces

#### *Further USB-Interfaces*

The USB interfaces (14) and (15) are used to connect further USB peripheral devices. USB1.1 standard with a maximum data rate of 1.5 or 12 Mbps is supported.



### Additional plug-in cards (optional)

#### *Type plate*

There is a type plate on the top of the Industrial PC which provides information about the hardware configuration of the Industrial PC at the time it was supplied.

# Installation Instructions

Please also refer to chapter [Product Description](#).

## Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

### Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, your Industrial PC should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



**Warning**

Danger of damage to the unit!

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

### Unpacking

Proceed as follows to unpack the unit:

1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

## Installation of the PC in the control cabinet

The Built-in Panel PC CP65xx is designed for mounting in control cabinets in machine and plant engineering applications.

The ambient conditions specified for operation must be observed (see the section on [Technical data](#)).

*Preparation of the control cabinet*

The control cabinet wall must be prepared with the required mounting opening for the computer unit according to the PC's dimensions.



**Note**

**When the unit is installed in an enclosure, adequate space for ventilation and for opening the PC must be provided.**

**The clearance above and below the housing must be at least 100 mm in order to ensure adequate ventilation of the PC.**

Please note the following points during installation of the PC:

- Position the PC in such a way that reflections on the screen are avoided as far as possible.
- Use the position of the screen as a guide for the correct installation height; it should be optimally visible for the user at all times.
- The PC should not be exposed to direct sunlight.
- When the unit is in its mounting position, the ventilation openings must not be obstructed.



**Warning**

**Extreme environmental conditions should be avoided as far as possible. Protect the rear of your PC from dust, humidity and heat.**

**The ventilation slots of the PC must not be covered.**

*Installation in a control cabinet wall*

Proceed as follows:

1. Insert the PC at the intended control cabinet wall position and protect it from falling out, prior to final mounting.
2. Release the clamping levers with a No. 3 Allen key, turn the clamping levers to the side through 90° and retighten the screws.

### Earthing measures

Earthing connections dissipate interference from external power supply cables, signal cables or cables to peripheral equipment.

Establish a low-impedance connection from the earthing point on the PC housing to the central earthing point on the control cabinet wall, in which the computer is being installed.



*Earthing measures*



## Power Supply Connection

*Supplied mains power unit* The Industrial PC is fitted with a

- 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit (standard) or
- with a 24 V<sub>DC</sub> power supply unit (Optional an uninterruptible power supply (UPS) can be realized using the battery pack C9900-U330).




**Danger of Explosion if using other battery packs!**

### Pin assignment of the connector

The 5-pin CAGE CLAMP plug connector and mounting flange illustrated is located on the PC housing in order to connect the power supply.

*Socket at the PC housing*

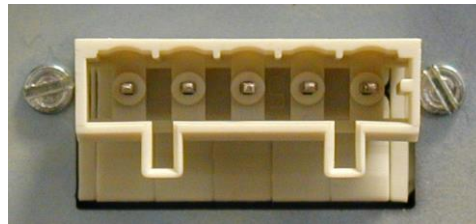

Technical data	Connecting socket
Number of contacts	5
Contact spacing	5 mm
Minimum conductor cross-section	1.5 mm <sup>2</sup>
Minimum conductor cross-section (AWG)	16
Rated voltage (EN)	250 V
Rated voltage (CSA)	300 V
Current EN [A]	12 A
Current CSA [A]	15 A
Length of stripped conductor	8 to 9 mm

*Current carrying capacity of the 100-240 V power supply unit*

Output voltages from the 100-240 V power supply unit	Current loading maximum
+3,3 V	14 A
+5 V stand by	1,5 A
+5 V	16 A
-5 V	0,2 A
+12 V	9 A
-12 V	0,7 A

*Current carrying capacity of the 24 V power supply unit*


Output voltages from the 24 V power supply unit	Current loading maximum
+5 V	25 A
-5 V	1 A
+12 V	10 A
-12 V	1,5 A

*Coding pieces*




The connectors are coded differently at the factory, using snap-on coding pieces, according to the power supply unit that has been fitted.

*Differently coded plug connectors*

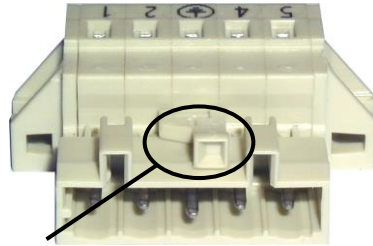

*Coding for the 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit*

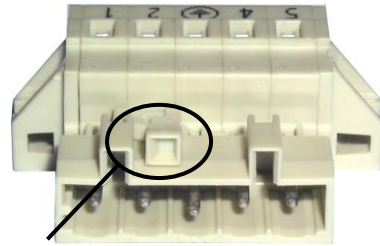

*Coding for the 24 V<sub>DC</sub> power supply unit*


**Pin assignment and cable requirements**

*Pin assignment*

There is an adhesive label with the pin assignments on the top of the female plug connector. **The minimum permitted conductive cross-section is 1.5 mm<sup>2</sup>, fused for 10 A (AWG 16).**

**Industrial PCs with 100-240 V<sub>AC</sub>, 50-60 Hz power supply unit**


*Pin assignment for the 100-240 V, 50-60 Hz power supply unit*

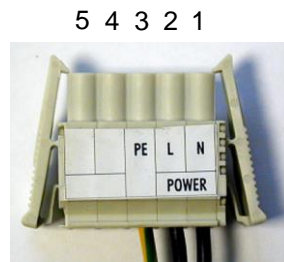

Pin	Function
1	N
2	L
3	⊕
4	Not used
5	Not used

**Industrial PCs with 24 V<sub>DC</sub> power supply unit**

*Pin assignment for the 24 V<sub>DC</sub> power supply unit*

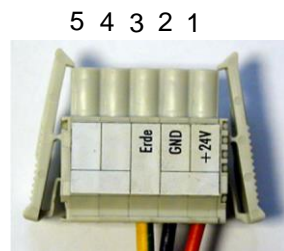

Pin	Function
1	+
2	-
3	⊕
4	Not used
5	Not used

*Pin assignment for connecting the power switch*



**1 2 3**

Pin	Funktion
1	Power-Status
2	PC_ON
3	24 V <sub>DC</sub> Versorgungsspannung + Pol



### Fitting the Power Supply Cable

A 5-pin female plug connector with CAGE CLAMP connection and insertion catches is supplied along with a snap-on strain relief housing in order to assemble the PC power supply cable.

*Female plug connector is correspondingly coded*

This female plug connector is also coded at the factory, according to the type of power supply fitted, so that the plug, when assembled, will fit the Industrial PC's connecting socket.

Technical data	Female plug connector
Number of contacts	5
Contact spacing	5 mm
Minimum conductor cross-section	1.5 mm <sup>2</sup>
Minimum conductor cross-section (AWG)	16
Rated voltage (EN)	250 V
Rated voltage (CSA)	300 V
Current (EN)	16 A
Current (CSA)	15 A
Length of stripped conductor	8 to 9 mm

*Materials for assembly of the connector*



*Female plug connector*



*Strain relief housing*

*Fitting the connector to the cable*

The plug is fitted to the cable as follows:

1. Strip insulation from the cable ends. Follow the technical data for the female plug connector in the above table!
2. Push the conductors into their mountings, simply by pushing them in as indicated on the pin assignment label.
3. Push the lower part (part **A**) of the strain relief housing (see photograph on page 15) onto the top of the female plug connector until it snaps into place.
4. Relieve the strain on the supply cable by fixing it in place with the cable clamp (part **C**) and fixing screws (part **D**) (see photograph below).

*Applying the strain relief*



5. Fix the upper part (part **B**) of the strain relief housing by snapping it onto the lower part.

## Connecting Power Supply

The external wiring consists of the connection of the power supply, the battery pack (optional) and the connection of customized components for shutting down the PC.

### Cable Cross Sections

*Cable-cross-section for connection of power supply*

For the connection of the power supply, wiring with a cable-cross-section of 1.5 mm<sup>2</sup> must be used.

With bigger distances between voltage source and PC, you take the voltage drop as a function of the cable-cross-section as well as voltage fluctuations of your distribution voltage into account, so that is secured that the voltage doesn't fall under 22 V at the power supply.

**The power supply must be protected with maximum 16 A.**



**Warning**

### Configuration for shutting down the PC

The connections for shutting down the Industrial PCs are established via the **PC\_ON** input and the **Power Status** output.

### PC\_ON and Power Status functions

*PC\_ON and power status*

- If the **PC\_ON** input is connected to 24 V via a switch, the PC shuts down according to the rules. The **PC\_ON** signal is inverted, i.e. the PC shuts down if the 24 V connection is live.
- If the **PC\_ON** input is *NOT* connected by the user, the PC can be booted in the familiar way by connecting the supply voltage and shut down via the battery by switching off the supply voltage.



**Warning**

**This procedure significantly reduces the service life of the rechargeable battery and should therefore not be used.**

- Once the PC has shut down, the **Power Status** output is switched from 24 V to 0 V. Via this output a signal lamp can be connected or a contactor for de-energizing the whole system. The maximum load for the **Power Status** output is 0.5 A and a suitable fuse should be provided.

### UPS Output

*UPS output*

In order to maintain a screen display for the PC in the event of a power failure, the power supply unit is equipped with a **UPS output** for connecting a Control Panel. The maximum load for the output is 1.4 A (max. 2.5 A from 2016 and later).

### UPS output function


*UPS output function*

- The 24 V DC connection at the UPS output is live even after a power failure. The maximum load is 1.4 A (max. 2.5 A from 2016 and later).
- Once the PC has been de-energized via the UPS software, the **UPS output** is switched to 0 V. Any connected panel is thus switched off, and total discharge of the rechargeable battery is prevented.

**Wiring diagram**

Wiring according to the wiring diagram (the circuit of PC\_ON and Power-Status is symbolical):

*Wiring diagram external switch and power supply*

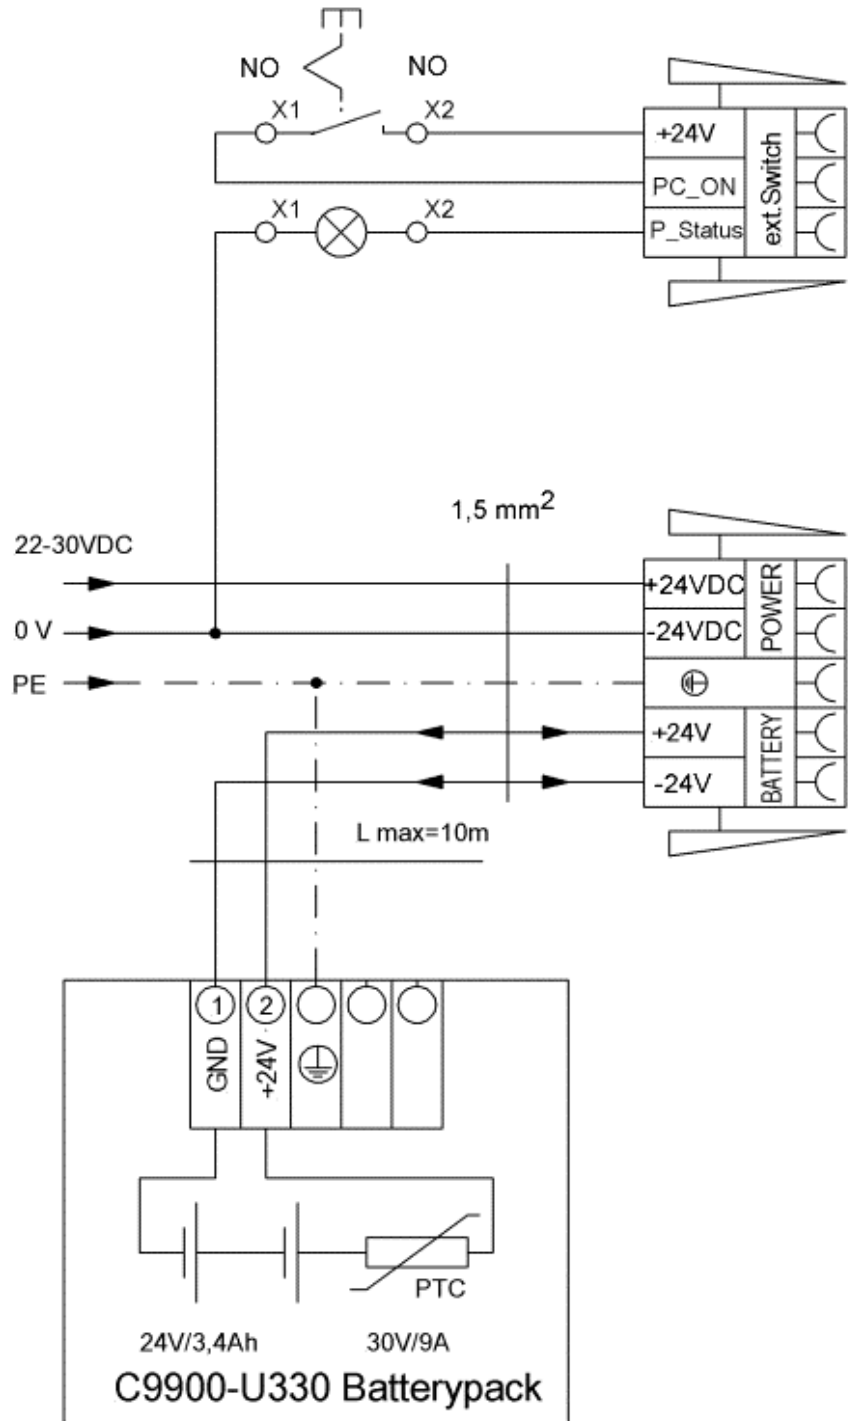

Connection of the Battery Pack and UPS Output only in combination with integrated UPS (order option).

## Connecting devices



### Warning

The power supply plug must be withdrawn!

Please read the documentation for the external devices prior to connecting them.

During thunderstorms, plug connector must neither be inserted nor removed.

When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!

## Connecting cables

The connections are located at the side of the Industrial PC and at the rear (power supply connection), and are documented in the section [Product Description](#).

When connecting the cables to the Industrial PC, proceed according to the following sequence:

- Switch off all the devices that are to be connected.
- Disconnect all the devices that are to be connected from the power supply.
- Connect all the cables between the Industrial PC and to the devices that are to be connected.
- Connect all data transfer cables (if present) to the appropriate plug-in receptacles of the data/telecommunication networks.
- Reconnect all devices to the power supply.

## Check voltage rating and connect.

### With compact 100-240 V<sub>AC</sub> 50/60 Hz power supply:

1. Check that the mains voltage is correct.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Power Supply Cable](#)) into the Industrial PC's power supply socket. Then connect it to a power socket with a grounded earth connection.

### When fitted with the (optional) 24 V<sub>DC</sub> power supply unit:

1. Check that the external power supply is providing the correct voltage.
2. Insert the power supply cable that you have assembled (see the section on [Fitting the Power Supply Cable](#)) into the Industrial PC's power supply socket. Then connect it to your external 24 V power supply.



### Warning

If a 24 V UPS is installed, the correct type of rechargeable battery must be used.

# Operating Instructions

Please also refer to chapter [Product Description](#).

## Switching the Industrial PC on and off

### Switch on

The Industrial PC does not have its own mains switch. The Industrial PC will start when the equipment is switched on, or when it is connected to the power supply.

### Shutting down and switching off

When the plant is switched off, or when it is disconnected from its power supply, the Industrial PC will be switched off.

Control software such as is typically used on Industrial PCs permits various users to be given different rights. A user who may not close software may also not switch the Industrial PC off, since data can be lost from the hard disk by switching off while software is running.



**Warning**

### First shut down, then switch off the PC!

If the Industrial PC is switched off as the software is writing a file to the hard disk, the file will be destroyed. Control software typically writes something to the hard disk every few seconds, so that the probability of causing damage by switching off while the software is running is very high.



**Warning**

When you have shut down the Industrial PC, you have to switch off power supply for at least 10 seconds before rebooting the system. After resetting power supply the PC will start booting automatically.

## First switching on and driver installation

When you switch on the Industrial PC for the first time, the pre-installed operating system (optional) will be started. In this case, all the required drivers for any additional, optional hardware components ordered with the PC will already have been installed.

If the PC was ordered without operating system, you have to install the operating system and the driver software for any auxiliary hardware yourself. Please follow the instructions in the documentation for the operating system and the additional devices.

## Operation

### Operation

The Panel PC's membrane keypad may only be actuated by fingertips.



**Note**

Attempts to actuate it with other objects can easily result in the destruction of the device. Neither may the membrane keypad be operated with a touch screen pen.

The touch screen may only be actuated by finger tips or with the touch screen pen. The operator may wear gloves but there must be no hard particles such as metal shavings, glass splinters embedded in the glove.

## Keyboard codes

Type-dependent number of keys

Depending on the precise type, the Control Panel can have fewer keys than those described here.

### Operation



The cursor is the blinking character that marks the point at which the next character entered will be displayed. The cursor is also known as the insertion point. The cursor keys each move the cursor one place in the associated direction.



The Home key moves the cursor to the beginning of the line, while the End key moves it to the end of the line.



The *Pg Up* key scrolls one page back, the *Pg Dn* key scrolls one page forward.



The Tab key takes the cursor to the next input field, while Shift and Tab moves to the previous input field.



The mouse cursor can be moved over the screen with the aid of the touch screen or of the touch pad (optional). The keys correspond to the left and right hand keys of a Microsoft mouse.



The *Del* key deletes the character to the right of the cursor.



The *Ins* key causes characters to the right of the cursor to be overwritten. The overwrite mode is cancelled by pressing the key again.



*Print-Screen* prints a hard copy of a text screen on the printer.



The Pause key stops the computer until another key is pressed (only under MS-DOS).



Your input is confirmed with the Enter key.



Backspace deletes the character to the left of the cursor.



If the Shift key is pressed at the same time as another key, then instead of the numbers you obtain the character printed above the number, and you obtain upper case letters instead of lower case letters.



Pressing the *Caps Lock* key once activates and locks the *Shift* key. Pressing the *Shift* key cancels this function.



Rather like the effect of the *Shift* key, *Ctrl* and *Alt* also change the meaning of another key that is pressed at the same time.



This key brings up the Start menu of the operating system in use (Windows 95, 98, ME, NT, 2000, XP).



Pressing this key opens the property sheet of the active (or marked) object.



The *Esc* key has the effect of closing dialog windows and of interrupting some of the computer's working operations.



All other keys bring the character printed on them onto the display at the position of the cursor.



The meaning of the function keys, *F1* to *F10*, is determined by the software and is displayed at the bottom edge of the display.



The function of the special keys above the display is also determined by the software. The function is displayed at the top edge of the display. The special keys each have an orange LED controlled by the software.

## Servicing and maintenance

Please also refer to chapter [Product Description](#).

### Cleaning the Industrial PC



**Danger**

Switch off the Industrial PC and all connected devices, and disconnect the Industrial PC from the power supply.

The Industrial PC and the front of the Panel can be cleaned with a soft, damp cloth. Do not use any aggressive cleaning materials, thinners, scouring material or hard objects that could cause scratches.

### Replacing the battery on the motherboard

A used battery on the motherboard has to be replaced.



**Danger**

#### Danger of Explosion!

Replace battery only with the identical type or an alternative type recommended by the manufacturer. Notice correct polarity!



**Danger**

#### Handling of Lithium Batteries

Lithium Batteries should not be recharged, exposed to fire, opened and they should be protected against sunlight and moisture.

The used battery must be disposed of in accordance with national electronics scrap regulations.

### Servicing

The Industrial PC requires no maintenance.

## Emergency procedures

In case of fire, the Industrial PC should be extinguished with powder or nitrogen.

## Shutting down

### Disposal

The device must be fully dismantled in order to dispose of it. The housing can be sent for metal recycling.

Electronic parts such as disk drives and circuit boards must be disposed of in accordance with national electronics scrap regulations.

*Dismantling the Industrial PC*

*Observe national electronics scrap regulations*



# Troubleshooting

Please also refer to chapter [Product Description](#).



Note

**Pixel errors in the TFT display are production-caused and represent no complaint-reason!**

## Fault correction

Fault	Cause	Procedure
Nothing happens after the Industrial PC has been switched on	No power supply to the Industrial PC	Check power supply cable
	Other cause	Call Beckhoff Service
The Industrial PC does not boot fully	Floppy disk or CD in drive	Remove floppy disk or CD and press any key
	Setup settings are incorrect	Check the setup settings
	Other cause	Call Beckhoff Service
Computer boots, software starts, but control does not operate correctly	Cause of the fault is either in the software or in parts of the plant outside the Industrial PC	Call the manufacturer of the machine or the software
Error during floppy disk or CD access	Faulty floppy disk or CD	Check the disk in another disk drive
	Faulty disk drive	Call Beckhoff Service
The Industrial PC functions only partially or only part of the time, e.g. no or dark picture, but disk drive responds when switching on	Defective components in the Industrial PC	Call Beckhoff Service

## Beckhoff Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, guaranteeing fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Beckhoff branches and partner companies

Please contact your Beckhoff branch office or partner company for [local support and service](#) on Beckhoff products!

The contact addresses for your country can be found in the list of Beckhoff branches and partner companies: [www.beckhoff.com](http://www.beckhoff.com)

You will also find further [documentation](#) for Beckhoff components there.

### Beckhoff company headquarters

Beckhoff Automation GmbH & Co.KG  
Huelshorstweg 20  
33415 Verl  
Germany

Phone: +49(0)5246/963-0  
Fax: +49(0)5246/963-198  
e-mail: [info@beckhoff.com](mailto:info@beckhoff.com)  
Web: <http://www.beckhoff.de/>

### Beckhoff Support

Beckhoff offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with wide-ranging services:

- worldwide support
- design, programming and commissioning of complex automation systems
- training program for Beckhoff system components

Hotline: +49(0)5246/963-157  
Fax: +49(0)5246/963-9157  
e-mail: [support@beckhoff.com](mailto:support@beckhoff.com)

### Beckhoff Service

The Beckhoff service center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460  
Fax: +49(0)5246/963-479  
e-mail: [mailto:service@beckhoff.com](mailto:mailto:service@beckhoff.com)

*Quote the project number*

If servicing is required, please quote the **project number** of your product.

# Assembly dimensions




**Warning**

The assembly of the unit must take place with the orientation diagrammed here.

All dimensions are in mm.

Built-in Panel PC  
CP65xx

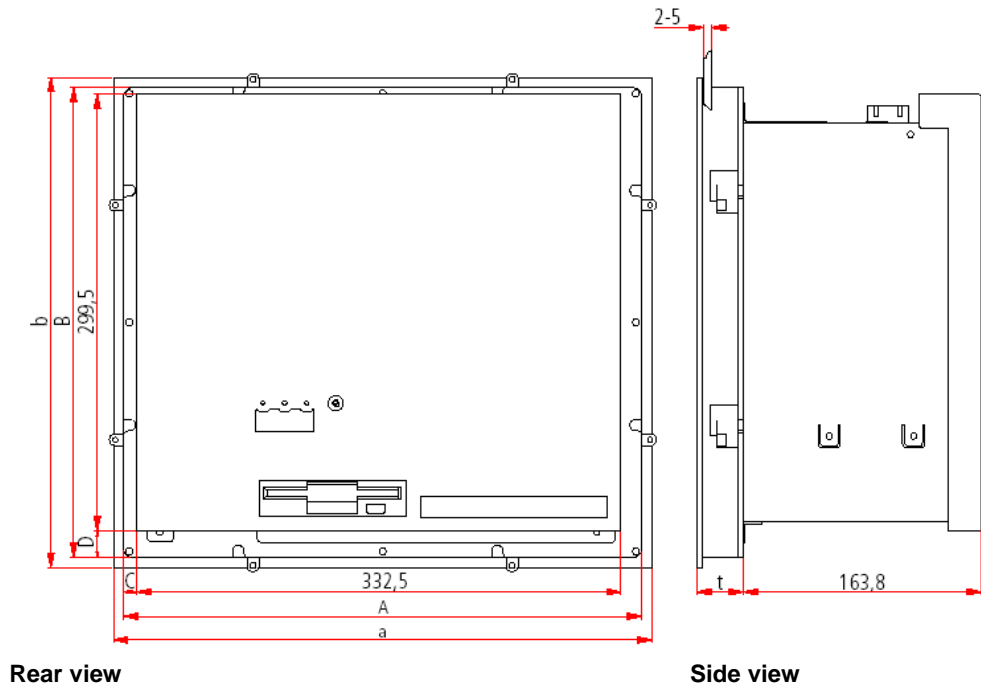

Display only		a	b	t	A	B	C	D
CP6500	10"-Display	370	336	32	356	322	9.2	18
CP6501	12"-Display	372.2	342.2	32	358.2	328.2	7.5	17.3
CP6502	15"-Display	430.4	403	32	416.4	389	6.5	17.3
CP6503	19"-Display	508.4	463	43	494.4	449	8.6	18
With function keys		A	B	t	A	B	C	D
CP6510	10"-Display	370	336	32	356	322	9.2	18
CP6511	12"-Display	372.2	342.2	32	358.2	328.2	7.5	17.3
CP6512	15"-Display	430.4	403	32	416.4	389	6.5	17.3
CP6513	19"-Display	508.4	463	43	494.4	449	8.6	18
Numeric keypad		A	B	t	A	B	C	D
CP6520	10"-Display	414	336	32	400	322	7	18.9
CP6521-0000/1	12"-Display	414	336	32	400	322	7	18.9
CP6521-0002	12"-Display	444.2	336	32	430.2	322	41.2	18.1
CP6522	15"-Display	519.4	378.2	32	505.4	364.2	6.5	15.8
CP6523	19"-Display	567.4	434	43	553.4	420	13.6	18
Alphanumeric keypad		A	B	t	A	B	C	D
CP6530	10"-Display	410.4	378.2	32	396.4	364.2	7.5	57.3
CP6531-0000/1	12"-Display	410.4	378.2	32	396.4	364.2	7.5	57.3
CP6531-0002	12"-Display	430.4	378.2	32	416.4	364.2	7.5	17
CP6532	15"-Display	489.4	418.2	32	475.4	404.2	31.3	61
CP6533	19"-Display	508.4	543	43	494.4	529	39	98

# Appendix

## Technical data

<i>Dimensions</i>	<b>Dimensions (W x H x D):</b> 333 x 308 x 165 mm (without Control Panel)
	<b>Weight:</b> 10.1 kg (basic version, without Control Panel)
<i>Do not use the PC in areas of explosive hazard</i>	<b>The Industrial PC may not be used in areas of explosive hazard.</b>
<i>Environmental conditions</i>	<b>The following conditions must be observed during operation:</b>
	<b>Ambient temperature:</b> 0 to 55°C
	<b>Atmospheric humidity:</b> Maximum 95%, non-condensing
<i>Shock resistance</i>	<b>Sinusoidal vibration:</b>
	<b>(EN 60068-2-6)</b>
	10 to 58 Hz: 0.035 mm
	58 to 500 Hz: 0.5 G (~ 5 m/s <sup>2</sup> )
	<b>During reading of CD-ROM:</b>
	10 to 58 Hz: 0.019 mm
	58 to 500 Hz: 0.25 G (~ 2.5 m/s <sup>2</sup> )
	<b>Impact:</b>
	<b>(EN 60068-2-27)</b>
	5 G (~ 50 m/s <sup>2</sup> ), duration: 30 ms
	<b>During reading of CD-ROM:</b> 5 G (~ 50 m/s <sup>2</sup> ), duration: 11 ms
<i>Protection class</i>	<b>Front side:</b> IP65
	<b>Rear side:</b> IP20
<i>Power supply</i>	<b>Supply voltage:</b> 24 V <sub>DC</sub> power supply: 24 V <sub>DC</sub> (22 – 30 V <sub>DC</sub> )
	100-240 V <sub>AC</sub> power supply: 100-240 V <sub>AC</sub> , 50-60 Hz
	<b>Power consumption:</b>
	approx. 77 W with 10" display
	approx. 79 W with 12" display
	approx. 90 W with 15" display
	approx. 97 W with 19" display
	If operated with UPS: additional 30 W (while charging)
	additional 44 W (UPS-output max.)
<i>Electromagnetic Compatibility (EMC)</i>	<b>Interference resistance:</b> according to EN 61000-6-2
	<b>Emitted resistance:</b> according to EN 61000-6-4
<i>Transport and storage</i>	The same values for atmospheric humidity and shock resistance are to be observed during transport and storage as in operation. The shock resistance during transport can be improved by means of suitably packing the Industrial PC. The ambient temperature during storage and transport must be between -20°C and +65°C.



**Note**

**Pixel errors in the TFT display are production-caused and represent no complaint-reason!**

## Approvals

### FCC: Federal Communications Commission Radio Frequency Interference Statement

*FCC Approval for USA*

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

### FCC: Canadian Notice

*FCC Approval for Canada*

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.