


Documentation | EN

## KL3403/KS3403

3-Phase Power Measurement Terminals

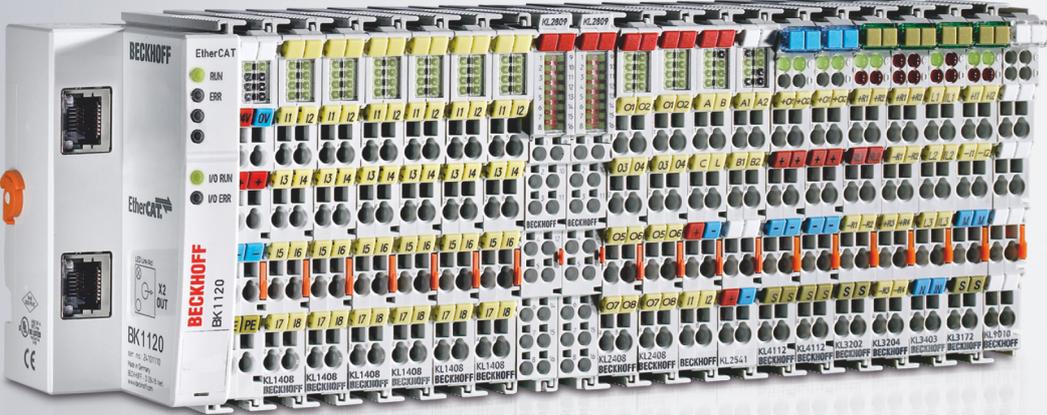



# Table of contents

<b>1 Foreword</b> .....	<b>5</b>
1.1 Notes on the documentation .....	5
1.2 Safety instructions .....	6
1.3 Documentation issue status .....	7
<b>2 Product overview</b> .....	<b>9</b>
2.1 Introduction .....	9
2.2 LED display .....	10
2.3 Technical data .....	11
2.4 Basic function principles.....	12
2.4.1 Measuring principle .....	12
2.4.2 Power measurement .....	13
2.4.3 Peak current measurement.....	16
2.4.4 Frequency measurement .....	16
2.5 Current transformer .....	17
2.5.1 Current transformers from Beckhoff.....	18
<b>3 Mounting and wiring</b> .....	<b>19</b>
3.1 Instructions for ESD protection .....	19
3.2 Installation on mounting rails.....	20
3.3 Disposal .....	22
3.4 Connection .....	23
3.4.1 Connection system.....	23
3.4.2 Wiring .....	25
3.4.3 Contact assignment .....	27
3.5 Application examples .....	28
3.5.1 Application examples for alternating current .....	29
3.5.2 Application example for DC.....	31
3.5.3 Application example with frequency converter.....	33
3.5.4 Application example for KL3403-0014 .....	34
<b>4 KS2000 Configuration Software</b> .....	<b>36</b>
4.1 KS2000 - Introduction .....	36
4.2 Parameterization with KS2000 .....	37
4.3 Settings .....	39
<b>5 Programming</b> .....	<b>42</b>
5.1 Datenstrukturen.....	42
5.1.1 Process image .....	42
5.1.2 Control and status bytes .....	43
5.1.3 Register overview.....	46
5.1.4 Register description .....	46
5.2 Examples of Register Communication .....	50
5.2.1 Example 1: Reading the firmware version from register 9 .....	50
5.2.2 Example 2: Writing to an user register .....	51
5.3 Reading the process data .....	53
5.4 Sample program for register communication via EtherCAT on KL3314 exemplary.....	55

<b>6 Appendix</b> .....	<b>58</b>
6.1 Error correction .....	58
6.2 Measuring error due to input overload .....	59
6.3 Measuring error for DC voltage measurement.....	62
6.4 Additional frequency-dependent measuring error .....	62
6.5 Beckhoff Identification Code (BIC) .....	63
6.6 Support and Service.....	65

# 1 Foreword

## 1.1 Notes on the documentation

### Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

The qualified personnel is obliged to always use the currently valid documentation.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

### Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

### Trademarks

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

### Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

### Third-party brands

Trademarks of third parties may be used in this documentation. You can find the trademark notices here:

<https://www.beckhoff.com/trademarks>

## 1.2 Safety instructions

### Safety regulations

Please note the following safety instructions and explanations!  
Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

### Exclusion of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

### Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

### Signal words

The signal words used in the documentation are classified below. In order to prevent injury and damage to persons and property, read and follow the safety and warning notices.

### Personal injury warnings

**⚠ DANGER**

Hazard with high risk of death or serious injury.

**⚠ WARNING**

Hazard with medium risk of death or serious injury.

**⚠ CAUTION**

There is a low-risk hazard that could result in medium or minor injury.

### Warning of damage to property or environment

**NOTICE**

The environment, equipment, or data may be damaged.

### Information on handling the product



This information includes, for example:  
recommendations for action, assistance or further information on the product.

## 1.3 Documentation issue status

Version	Comment
3.3.0	<ul style="list-style-type: none"> <li>• Chapter <i>Technical data</i> updated</li> <li>• Chapter <i>Basic function principles</i> updated</li> <li>• Chapter <i>Installation on mounting rails</i> updated</li> </ul>
3.2.0	<ul style="list-style-type: none"> <li>• Chapter <i>Technical data</i> updated</li> <li>• Chapter <i>Current transformers from Beckhoff</i> added</li> <li>• Chapter <i>Disposal</i> added</li> <li>• Chapter <i>Beckhoff Identification Code (BIC)</i> updated</li> <li>• Document structure updated</li> <li>• New title page</li> </ul>
3.1.0	<ul style="list-style-type: none"> <li>• KL3403-0333 added</li> <li>• KL3403-0021 deleted</li> <li>• Technical data updated</li> <li>• Chapter <i>Instructions for ESD protection</i> added</li> <li>• Example program added to chapter "KS2000 Configuration software"</li> <li>• Design of the safety instructions adapted to IEC 82079-1</li> </ul>
3.0.0	<ul style="list-style-type: none"> <li>• Migration</li> </ul>
2.1.0	<ul style="list-style-type: none"> <li>• Register description updated</li> <li>• Chapter <i>KS2000 settings</i> updated</li> <li>• Chapter <i>Control and status byte</i> updated</li> <li>• Technical data updated</li> </ul>
2.0.1	<ul style="list-style-type: none"> <li>• Firmware versions updated</li> <li>• Numerical values for KL3403-0022 corrected</li> </ul>
2.0.0	<ul style="list-style-type: none"> <li>• Permitted ambient temperature range for KL3403-0000 and KL3403-0010 extended</li> <li>• Technical data updated</li> <li>• Chapter <i>Basic function principles</i> expanded</li> </ul>
1.9.0	<ul style="list-style-type: none"> <li>• UL notes updated</li> <li>• Technical data updated</li> </ul>
1.8.0	<ul style="list-style-type: none"> <li>• UL notes added</li> <li>• Technical data updated</li> </ul>
1.7.0	<ul style="list-style-type: none"> <li>• Application example with frequency converter updated</li> <li>• Technical data updated</li> </ul>
1.6.0	<ul style="list-style-type: none"> <li>• Description of KL3403-0014 added</li> <li>• Mounting description expanded</li> </ul>
1.5.0	<ul style="list-style-type: none"> <li>• Description of KL3403-0021, KL3403-0022, KL3403-0025 and KL3403-0026 added</li> <li>• Description of the flexible process image added</li> <li>• Energy meter can be inverted (for generator mode)</li> <li>• Min. values of current, voltage and power</li> <li>• Automatic deletion of the minimum and maximum values</li> </ul>
1.4.1	<ul style="list-style-type: none"> <li>• Feature register extended</li> </ul>
1.4	<ul style="list-style-type: none"> <li>• KL3403-0020 (20 mA) added</li> <li>• Chapter <i>Measuring error due to input overload</i> added</li> <li>• Chapter <i>Measuring error with DC voltage measurement</i> added</li> </ul>
1.3	<ul style="list-style-type: none"> <li>• Information on current, power and energy measurement resolution for KL3403-0010 terminal version corrected.</li> </ul>
1.2	<ul style="list-style-type: none"> <li>• Description of control and status bytes extended: Process data index for frequency measurement amended</li> <li>• Description of the KL3403 parameterization with the KS2000 software updated</li> <li>• Channel numbering in the descriptions adapted to the display in TwinCAT and KS2000</li> <li>• Default value for measuring cycle time corrected to 50 ms</li> <li>• Application example with frequency converter added</li> </ul>
1.1	<ul style="list-style-type: none"> <li>• Technical data updated</li> <li>• Description of KL3403-0010 (5A version) added</li> <li>• DC application example added</li> </ul>

Version	Comment
1.0	<ul style="list-style-type: none"> <li>• Description of KL3403 parameterization via KS2000 software added</li> <li>• Register description amended <ul style="list-style-type: none"> <li>- Commands amended</li> <li>- Feature register description added</li> <li>- Description of the undervoltage threshold register added</li> </ul> </li> <li>• Examples for register communication added</li> <li>• Description of control and status bytes extended: <ul style="list-style-type: none"> <li>- Further process data indices amended</li> </ul> </li> <li>• Technical data updated</li> </ul>
0.4	<ul style="list-style-type: none"> <li>• Technical data added</li> <li>• Application examples revised</li> <li>• Description of control and status bytes extended:</li> <li>• English version available</li> </ul>
0.3	<ul style="list-style-type: none"> <li>• Notes on measuring interval revised</li> </ul>
0.2	<ul style="list-style-type: none"> <li>• Further application example added</li> <li>• Description of the connections added</li> <li>• Register description amended</li> </ul>
0.1	<ul style="list-style-type: none"> <li>• First preliminary version</li> </ul>

### Firmware (FF) and hardware versions (HH)

Documentation, Version	KL3403-0000		KL3403-0010		KL3403-0014		KL3403-0020		KL3403-0022		KL3403-0025, KL3403-0026		KL3403-0333	
	FF	HH	FF	HH	FF	HH								
3.3.0	3L	19	3L	19	4K	19	4K	19	4K	19	3L	19	4K	19
3.2.0	3L	18	3L	18	4K	18	4K	17	4K	18	3L	18	4K	17
3.1.0	3L	17	3L	17	4K	17	4K	17	4K	17	3L	17	4K	17
3.0.0	3L	17	3L	17	4K	17	4K	17	4K	17	3L	17	-	-
2.1.0	3L	15	3L	15	4K	16	4K	15	4K	16	3L	15		
2.0.1	3L	15	3L	15	4K	15	4K	15	4K	15	3L	15		
2.0.0	3K	15	3K	15	4J	15	4J	15	4J	15	3K	15		
1.9.0	3K	15	3K	15	4J	15	4J	15	4J	15	3K	15		
1.8.0	3K	15	3K	15	4J	15	4J	15	4J	15	3K	15		
1.7.0	3J	15	3J	14	4i	15	4i	15	4i	15	3J	15		
1.6.0	3H	10	3H	10	3H	10	4G	10	3H	10	3H	10		
1.5.0	3G	10	3G	10	-	-	4F	10	4F	10	3G	10		
1.4.1	3F	10	3F	10			4E	10	-	-	-	-		
1.4	3E	10	3E	10			4D	10						
1.3	3E	10	3E	04			-	-						
1.2	3D	09	3D	03										
1.1	3B	06	3B	00										
1.0	2E	03	-	-										

The firmware and hardware versions (delivery state) can be taken from the serial number printed on the side of the terminal.

The current firmware version is also displayed by the [KS2000 \[► 39\]](#) configuration software.

### Syntax of the serial number

Structure of the serial number: WW YY FF HH

WW - week of production (calendar week)

YY - year

FF - firmware version

HH - hardware version

Example with serial number 35 04 2E 03:

35 - week of production 35

04 - year of production 2004

2E - firmware version 2E

03 - hardware version 03

## 2 Product overview

### 2.1 Introduction

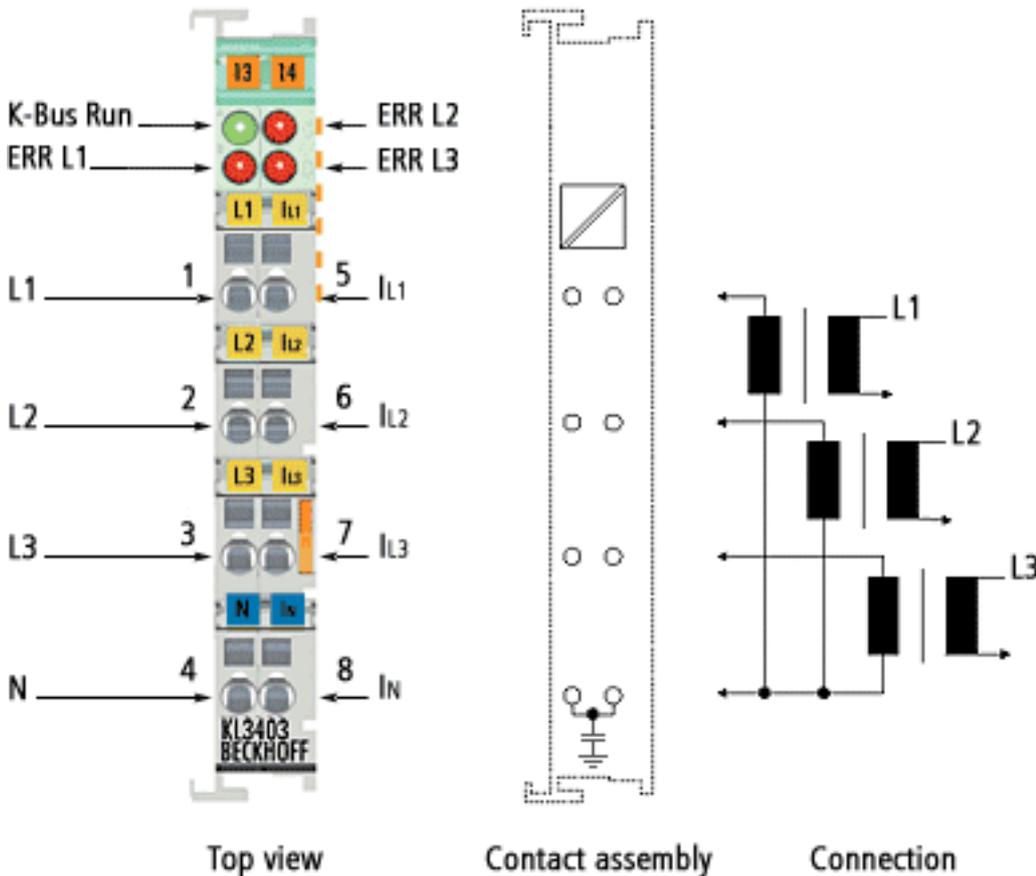


Fig. 1: KL3403

The 3-phase Power Measurement Terminal KL3403 enables the measurement of the electrical data of a three-phase supply network:

- The voltage is measured via the connection of the network at the terminal points L1, L2, L3 and N.
- The current of the three phases is fed in via current transformers [► 17] at the terminal points  $I_{L1}$ ,  $I_{L2}$ ,  $I_{L3}$  and  $I_N$ .

Non-sinusoidal voltage and current curves can also be read in with a practical accuracy of 1 % to 5 %, depending on the shape of the curve. The limit frequency of the calculations amount to 2 kHz. As the time interval for calculating the values can be adjusted, optimization is possible under a very wide range of circumstances.

Pre-processing of the KL3403 provides rms values in the process image, without requiring high computing power on the controller. From the effective values for voltage (U) and current (I), the KL3403 calculates the active power (P), the energy consumption (W) and the power factor (cos φ) for each phase. From these values the apparent power (S) and the phase shift angle (j), for example, can easily be derived.

The KL3403 thus enables a comprehensive network analysis to be carried out via the fieldbus. Based on the values for voltage, current, active power, apparent power and loading condition, the plant operator can optimize the supply of a drive or a machine and protect the plant from damage and downtime.

## Versions

Several variants of the KL3403 are available.

Name	Comment	Nominal value
KL3403-0000 KS3403-0000	Standard version	1 A
KL3403-0026	Like KL3403-0000, but without EMC leakage capacitor between terminal points 4/8 [► 27] and the grounding contact for the mounting rail.	1 A
KL3403-0010 KS3403-0010	Power measurement terminal with higher-capacity current circuits.	5 A
KL3403-0014	Power measurement terminal with 3 additional voltage circuits instead of the current circuits. For connecting external shunts.	60 mV
KL3403-0020	Power measurement terminal with more sensitive current circuits.	20 mA
KL3403-0022	Power measurement terminal with 6 current circuits, otherwise like KL3403-0020.	20 mA
KL3403-0025	Power measurement terminal with more sensitive current circuits.	250 mA
KL3403-0333	Power measurement terminal designed for usage with 333 mV transformers.	max. 333 mV (AC), via current transformer xA / 333 mV

Further details can be found in chapter [Technical data \[► 11\]](#).

## 2.2 LED display

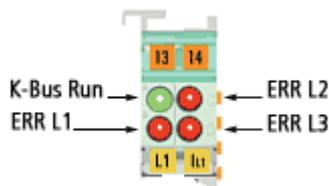


Fig. 2: LEDs

LED	No.	Display	
K-Bus run (green)	A	K-Bus data transfer	
ERR L1 (red)	B	Voltage between L1 and N less than 10 V (default*)	*) For each channel the undervoltage threshold value can be modified with its register <a href="#">R36 [► 49]</a> .
ERR L2 (red)	C	Voltage between L2 and N less than 10 V (default*)	
ERR L3 (red)	D	Voltage between L3 and N less than 10 V (default*)	

For pin assignment see [Connecting the KL3403 \[► 27\]](#).

## 2.3 Technical data

Technical data		KL3403-... / KS3403-...							
		0000	0010	0014	0020	0022	0025	0026	0333
Measured values		U, I	U, I	U <sup>1)</sup>	U, I	I <sup>2)</sup>	U, I	U, I	U, I
Calculated parameters		Active power, energy, power factor (cos $\phi$ )							
Measuring voltage		max. 500 V <sub>AC</sub> 3~				-	max. 500 V <sub>AC</sub> 3~		
Measuring voltage according to UL specifications (see UL compliance)		max. 300 V <sub>AC</sub> 3~				-	max. 300 V <sub>AC</sub> 3~		
Measuring current (continuous operation)	direct (max.)	1 A	5 A	60 mV <sup>1)</sup>	20 mA	20 mA	250 mA	1 A	333 mV (AC)
	via current transformers with transformation ratio R (max.)	R x 1 A	R x 5 A	-	R x 20 mA	R x 20 mA	R x 250 mA	R x 1 A	R x 333 mV
Voltage circuit input resistance (typical)		500 k $\Omega$	500 k $\Omega$	500 k $\Omega$	500 k $\Omega$	10 $\Omega$ <sup>2)</sup>	500 k $\Omega$	500 k $\Omega$	500 k $\Omega$
Current circuit input resistance (typical)		33 m $\Omega$	6.8 m $\Omega$	app. 10 k $\Omega$ <sup>1)</sup>	10 $\Omega$	10 $\Omega$	100 m $\Omega$	33 m $\Omega$	40 k $\Omega$
Resolution		16 bit (internal 21 bit)							
Frequency range <sup>4)</sup>		10 Hz to 500 Hz							
		0 Hz to 500 Hz (with deactivated DC filter <a href="#">▶ 39</a> ) and with current transformers <a href="#">▶ 17</a> , which support this frequency range)							
Limit frequency		app. 2 kHz							
Signal type		any (taking into account the frequency range and the limit frequency)							
Measuring accuracy for sinusoidal current/voltage (total measuring range, based on the full scale value)	Voltage	0.5%	0.5%	0.5%	0.5%	-	0.5%		
	Current	0.5% 3.0% <sup>3)</sup>	1.0% 3.0% <sup>3)</sup>	-	0.5%	0.5%	0.5%		
	Power (calculated)	1.0% 4.0% <sup>3)</sup>	1.5% 4.0% <sup>3)</sup>	-	1.0%	-	1.0%		
Measuring procedure		True RMS with 64000 samples / s							
Measuring cycle time		freely configurable (50 ms per measured value pre-set)							
Dielectric strength		1500 V (terminal/K-Bus)							
Bit width in the input process image		72 bits inputs (3 x 8 bits status, 3 x 16 bits data)							
Bit width in the output process image		72 bits outputs (3 x 8 bits control, 3 x 16 bits data)							
Power supply for the electronics		via the K-bus							
Current consumption from K-bus		typically 115 mA							
Pluggable wiring		at all KSxxxx series terminals							
Permissible ambient temperature range during operation		-25°C ... + 60°C			0°C ... + 55°C				
Permissible ambient temperature range during storage		-40°C ... + 85°C			-25°C ... + 85°C				
Permissible relative air humidity		95%, no condensation							
Vibration / shock resistance		conforms to EN 60068-2-6 / EN 60068-2-27							
EMC immunity / emission		conforms to EN 61000-6-2 / EN 61000-6-4							
Weight		app. 75 g							
Dimensions (W x H x D)		app. 15 mm x 100 mm x 70 mm (width aligned: 12 mm)							
Mounting <a href="#">▶ 20</a>		on 35 mm mounting rail conforms to EN 60715							
Installation position		variable							
Protection class		IP20							
Approvals / markings*		CE, UKCA, cULus, EAC		CE, UKCA, EAC	CE, UKCA, cULus, EAC		CE, UKCA, EAC		

\*) Real applicable approvals/markings see type plate on the side (product marking).

<sup>1)</sup> for KL3403-0014: three additional voltage circuits instead of the current circuits: 60 mV for connection of external shunts

<sup>2)</sup> for KL3403-22: three additional current circuits instead of the voltage circuits: also 20 mA

<sup>3)</sup> the measuring accuracy is reduced, if the extended temperature range is used (-25°C ... + 60°C)

<sup>4)</sup> see also chapter [Additional frequency-dependent measuring error ▶ 62](#)

## 2.4 Basic function principles

### 2.4.1 Measuring principle

The KL3403 works with 6 analog/digital converters for recording the current and voltage values of all 3 phases. The values are sampled with a time grid of approximately 16  $\mu\text{s}$ .

Recording and processing is synchronous and identical for the 3 phases. The signal processing for one phase is described below. This description applies correspondingly for all 3 phases. The total power and the total energy consumption represent the sum of the 3 phases, the mean current represents the average.

#### Voltage $u$ and current $i$ curves

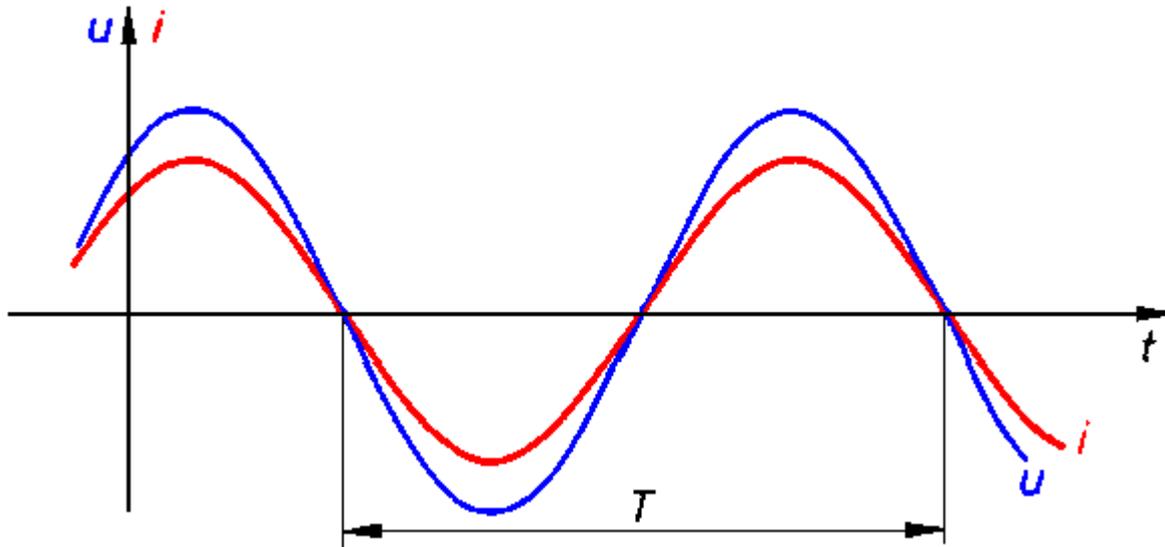


Fig. 3: Voltage  $u$  and current  $i$  curves

#### RMS value calculation

The rms value for voltage and current is calculated over a measuring interval, in this case the period  $T$ . The following equations are used:

$$U = \sqrt{\frac{1}{n} \sum_{1}^n u_{(t)}^2} \quad I = \sqrt{\frac{1}{n} \sum_{1}^n i_{(t)}^2}$$

$u_{(t)}$ : instantaneous voltage value

$i_{(t)}$ : instantaneous current value

$n$ : number of measured values

For a measurement in a 50 Hz mains system (period  $T = 20$  ms), 1280 measured values are considered within a calculation.

#### Measuring interval

The choice of the right measuring interval is important for the quality of the measurement. The measuring interval must be at least  $\frac{1}{4} T$ ,  $\frac{1}{2} T$ ,  $T$  and multiples of  $\frac{1}{2} T$  are sensible values. If a random interval is used that does not correspond to a multiple of  $\frac{1}{2} T$  and is significantly less than  $5 T$ , the measured value will fluctuate significantly.

The default setting for the measuring interval is 50 ms, corresponding to  $2.5 T$  in a 50 Hz mains system and  $3 T$  in a 60 Hz mains system. Experience shows that this is a good compromise between measuring speed and stability. Deviations from this value are only advisable in the event of particular measurement requirements (e.g. high measuring speed, low signal frequencies or special current curves).

## 2.4.2 Power measurement

### Active power measurement

The KL3403 measures the active power P according to the following equation

$$P = \frac{1}{n} \sum_{k=1}^n u_{(t)} \cdot i_{(t)}$$

P: Active power

n: number of samples (64000 samples / s)

$u_{(t)}$ : Instantaneous voltage value

$i_{(t)}$ : instantaneous current value

### Power $s_{(t)}$ curve

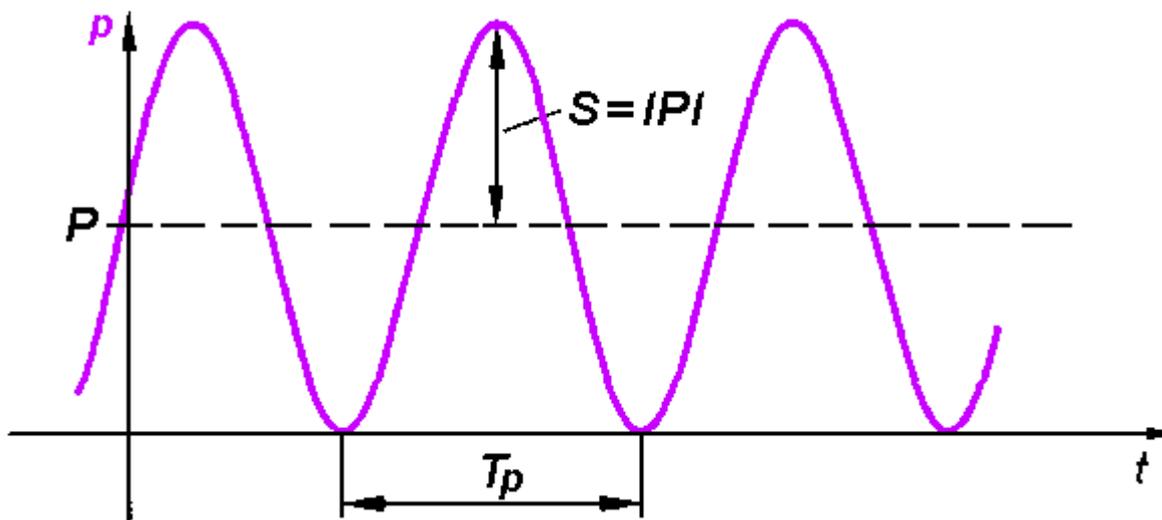


Fig. 4: Power  $s_{(t)}$  curve

In the first step, the power  $s_{(t)}$  is calculated at each sampling instant:

$$s_{(t)} = u_{(t)} \cdot i_{(t)}$$

The mean value over the measuring interval is calculated. Here too, the correct choice of the intervals is important, as described in section RMS value measurement (the interval can only be changed simultaneously for U, I and P).

The power frequency is twice that of the corresponding voltages and currents.


### Apparent power measurement

In real networks, not all consumers are purely ohmic. Phase shifts occur between current and voltage. This does not affect the methodology for determining the rms values of voltage and current as described above.

The situation for the active power is different: Here, the product of effective voltage and effective current is the apparent power.

$$S = U \cdot I$$

The active power is smaller than the apparent power.

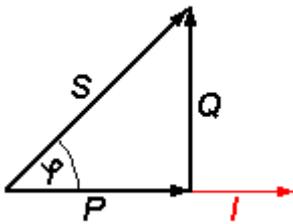

S: Apparent power  
 P: Active power  
 Q: Reactive power  
 $\varphi$ : Phase shift angle

$u_{(t)}$ ,  $i_{(t)}$ ,  $p_{(t)}$  curves with phase shift angle  $\varphi$

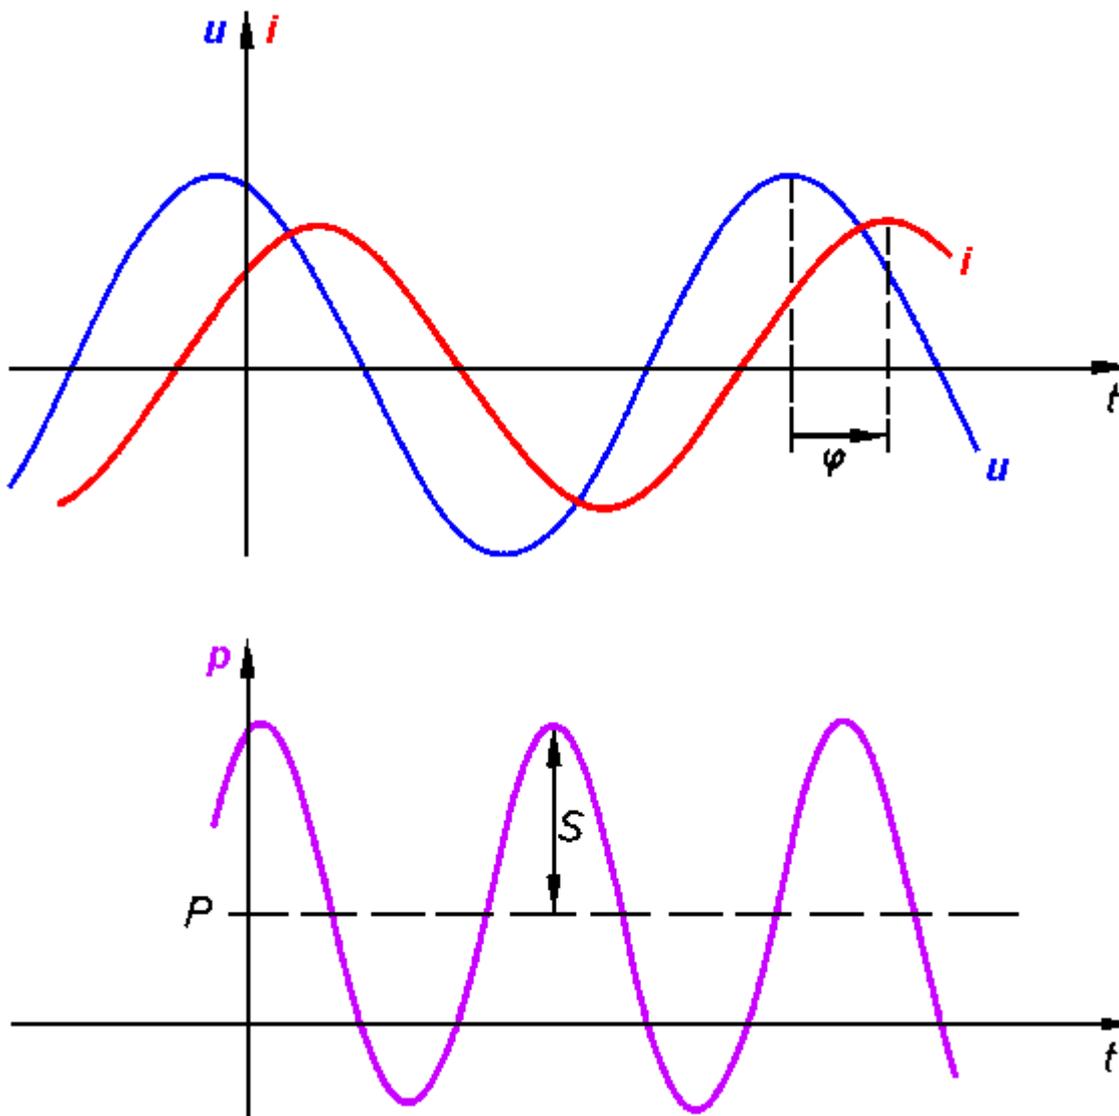


Fig. 5:  $u_{(t)}$ ,  $i_{(t)}$ ,  $p_{(t)}$  curves with phase shift angle  $\varphi$

In this context, further parameters of the mains system and its consumers are significant:

- apparent power  $S$
- reactive power  $Q$
- power factor  $\cos \varphi$

The KL3403 determines the following values:

- active power  $P$
- effective voltage  $U$
- effective current  $I$

From these values, the required parameters can be calculated:

- apparent power:

$$S = U \cdot I$$

- reactive power:

$$Q = \sqrt{S^2 - P^2}$$

- Power factor:

$$\cos \varphi = \frac{P}{S}$$

## Sign for power measurement

The sign of the active power  $P$  and of the power factor  $\cos \varphi$  provide about information the direction of the energy flow. A positive sign indicates the motor mode, a negative sign indicates generator mode.

In addition, the sign of the reactive power  $Q$  indicates the direction of the phase shift between current and voltage. The diagram *Four-quadrant representation of active/reactive power in motor and generator mode* illustrates this. In motor mode (quadrant I & IV) a positive reactive power indicates an inductive load, a negative reactive power indicates a capacitive load. In generator mode (quadrant II & III), an inductive acting generator is indicated by a positive reactive power, a capacitive acting generator by a negative reactive power.

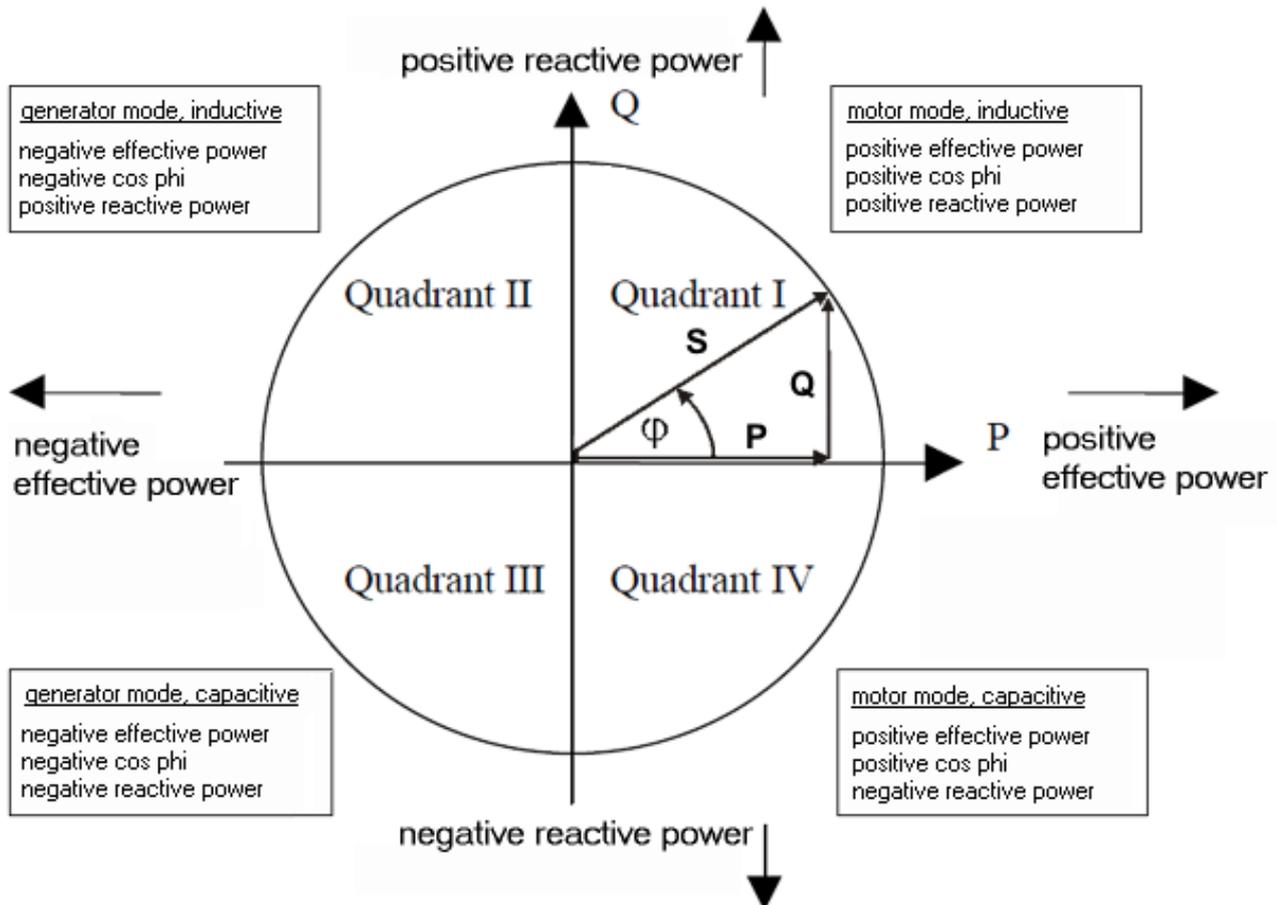


Fig. 6: Four-quadrant representation of active/reactive power in motor and generator mode

### 2.4.3 Peak current measurement

A distinction has to be made between the peak instantaneous value and the peak rms value. The peak rms value always refers to the peak value within the specified measuring interval.

### 2.4.4 Frequency measurement

The KL3403 can measure the frequency of the input signals at the voltage circuits (L1, L2, L3). The measurement takes 5 seconds (measuring interval).

Above 100 Hz, additional deviations are to be expected in frequency measurement. However, these have no influence on the other measured values of the terminal.

## 2.5 Current transformer

In principle, the choice of current transformer for the KL3403 is not critical. The internal resistance within the current circuit of the KL3403 is so small that it is negligible for the calculation of the total resistances of the current loop. The transformers should be able to produce a secondary rated current of 1 A. The primary rated current  $I_{pn}$  can be selected arbitrarily. The common permissible overload of  $1.2 \times I_{pn}$  is no problem for the KL3403, but may lead to small measuring inaccuracies.

### Accuracy

Please note that the overall accuracy of the set-up consisting of KL3403 and current transformers to a large degree depends on the accuracy class of the transformers.

#### **i** Approval and certification

A set-up with a class 0.5 current transformer cannot be approved or authenticated. The KL3403 is not an approved billing meter according to the electricity meter standard (DIN 43 856).

### Current types

The KL3403 can measure any current type up to a limiting proportion of 2 kHz. Since such currents are frequently created by inverters and may contain frequencies of less than 50 Hz or even a DC component, electronic transformers should be used for such applications. The KL3403 is also available as a special version with an interface for  $\pm 20$  mA.

### Overcurrent limiting factor FS

The overcurrent limiting factor FS of a current transformer indicates at what multiple of its primary rated current the current transformer changes to saturation mode, in order to protect the connected measuring instruments.

#### NOTICE

##### Please note the rated current!

The KL3403 must not be subjected to more than 5 A for a prolonged period of time! For systems in which the over-current limiting factors of the transformers allow secondary currents of more than 5 A, additional intermediate transformers with a ratio of 5A/1A or 1A/5A should be used!

### Protection against dangerous touch voltages

During appropriate operation of the KL3403 with associated current transformers, no dangerous voltages occur. The secondary voltage is in the range of a few Volts. However, the following faults may lead to excessive voltages:

- Open current circuit of one or several transformers
- Neutral conductor cut on the voltage measurement side of the KL3403
- General insulation fault

#### ⚠ WARNING

##### Ensure accidental-contact protection!

The complete wiring of the KL3403 must be protected against accidental contact and equipped with associated warnings! The insulation should be designed for the maximum conductor voltage of the system to be measured!

The KL3403 allows a maximum voltage of 500 V for normal operating conditions. The conductor voltage on the current side must not exceed 500 V! For higher voltages, an intermediate transformer stage should be used!

On the voltage measurement side, a KL3403 is equipped with a protection impedance of 500 k $\Omega$ . If the neutral conductor is not connected and only one connection on the side of the voltage measurement is live, the resulting voltage against earth in a 3-phase system with a phase-to-phase voltage of 400 V<sub>AC</sub> is 230 V<sub>AC</sub>. This should also be measured on the side of the current measurement using a multimeter with an internal resistance of 10 M $\Omega$ , which does not represent an insulation fault.

### Additional measuring instruments in the current circuit

Please note that the addition of additional measuring instruments (e.g. ammeters) in the current circuit can lead to a significant increase in the total apparent power.

Furthermore, connection  $I_N$  of the KL3403 must represent a star point for the three secondary windings. Additional measuring instruments therefore have to be potential-free and must be wired accordingly.

## 2.5.1 Current transformers from Beckhoff

With the seamless completion of the power measurement chain from the sensor to the cloud Beckhoff enables a much simpler energy management system and at the same time optimizes the availability of machines and systems. Constant power measurement across the board allows comprehensive inline analyses to be carried out, which record any deviation and enable quick intervention.



Fig. 7: SCT current transformers - Starting point of the Beckhoff measurement chain

All current transformers available from Beckhoff can be found on the internet at <https://www.beckhoff.com/sct>

The SCT current transformers allow reliable power sensor technology to be implemented directly in the field as an integral part of the PC-based control system. Users can choose between two concepts, which are highly scalable thanks to various designs and performance classes and are thus suitable for any application. The SCT series portfolio is extremely diversified, ranging from the low-cost 3-phase transformer sets for properties and standard industrial transformers for mechanical engineering, through to solutions for test benches with particularly high requirements for accuracy.

The choice of the right product category depends on the type of usage: Whilst the data acquisition can be implemented cost-efficiently and with high measurement accuracy using the ring-type current transformers, particularly in new systems, the split-core current transformers are suitable as an uncomplicated retrofit solution due to the simplicity of their attachment.

- as ring-type or split-core current transformers
- for new systems and for retrofits
- various designs and performance classes
- wide application range from properties to test benches

## 3 Mounting and wiring

### 3.1 Instructions for ESD protection

#### NOTICE

##### **Destruction of the devices by electrostatic discharge possible!**

The devices contain components at risk from electrostatic discharge caused by improper handling.

- Please ensure you are electrostatically discharged and avoid touching the spring contacts (see fig.) of the device directly.
- Avoid contact with highly insulating materials (synthetic fibers, plastic film etc.).
- Surroundings (working place, packaging and personnel) should be grounded probably, when handling with the devices.
- Each assembly must be terminated at the right hand end with a KL9010 bus end terminal, to ensure the protection class and ESD protection.



Fig. 8: Spring contacts of the Beckhoff I/O components

## 3.2 Installation on mounting rails

### ⚠ WARNING

#### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

The Bus Terminal system and is designed for mounting in a control cabinet or terminal box.

#### Assembly

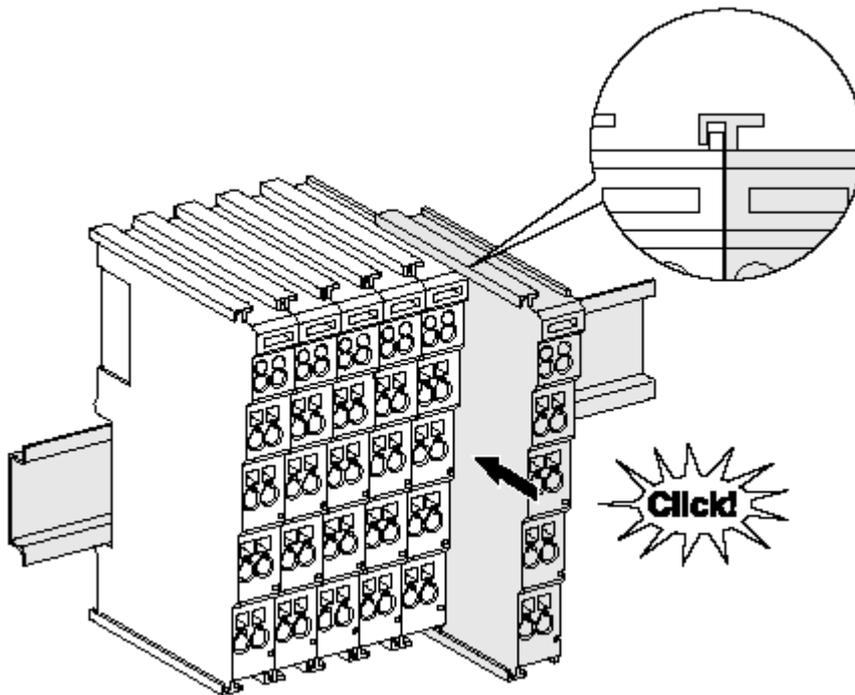


Fig. 9: Attaching on mounting rail

The bus coupler and bus terminals are attached to commercially available 35 mm mounting rails (DIN rails according to EN 60715) by applying slight pressure:

1. First attach the fieldbus coupler to the mounting rail.
2. The bus terminals are now attached on the right-hand side of the fieldbus coupler. Join the components with tongue and groove and push the terminals against the mounting rail, until the lock clicks onto the mounting rail.

If the terminals are clipped onto the mounting rail first and then pushed together without tongue and groove, the connection will not be operational! When correctly assembled, no significant gap should be visible between the housings.

#### **i** Fixing of mounting rails

The locking mechanism of the terminals and couplers extends to the profile of the mounting rail. At the installation, the locking mechanism of the components must not come into conflict with the fixing bolts of the mounting rail. To mount the mounting rails with a height of 7.5 mm under the terminals and couplers, you should use flat mounting connections (e.g. countersunk screws or blind rivets).

### NOTICE

#### Ground the mounting rail!

Ensure that the mounting rail is sufficiently grounded.

**Connections within a bus terminal block**

The electric connections between the Bus Coupler and the Bus Terminals are automatically realized by joining the components:

- The six spring contacts of the E-Bus/K-Bus deal with the transfer of the data and the supply of the Bus Terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminals points on the Bus Coupler (up to 24 V) or for higher voltages via power feed terminals.

**i Power Contacts**

During the design of a bus terminal block, the pin assignment of the individual Bus Terminals must be taken account of, since some types (e.g. analog Bus Terminals or digital 4-channel Bus Terminals) do not or not fully loop through the power contacts. Power Feed Terminals (EL91xx, EL92xx or KL91xx, KL92xx) interrupt the power contacts and thus represent the start of a new supply rail.

**Power contact  $\perp$**

The power contact labeled  $\perp$  (earthing connection according to IEC 60417-5017, British English: earth, American English: ground) can be used as grounding. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

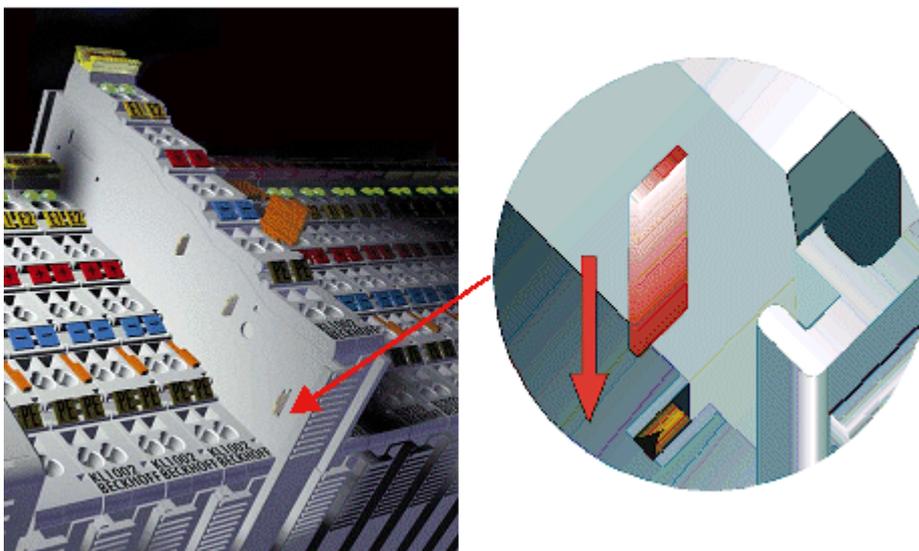


Fig. 10: Power contact on left side

**⚠ WARNING**

**Risk of electric shock!**

The power contact labeled  $\perp$  must not be used for other potentials!

**NOTICE**

**Possible damage of the device**

Note that, for reasons of electromagnetic compatibility, the earthing contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage on the terminal (e.g. disruptive discharge to the earthing line during insulation testing of a consumer with a nominal voltage of 230 V). For insulation testing, disconnect the earthing supply line at the Bus Coupler or the Power Feed Terminal! In order to decouple further feed points for testing, these Power Feed Terminals can be released and pulled at least 10 mm from the group of terminals.


**Disassembly**

Fig. 11: Disassembling of terminal

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

1. Pull the terminal by its orange-colored lugs approximately 1 cm away from the mounting rail. In doing so for this terminal the mounting rail lock is released automatically and you can pull the terminal out of the bus terminal block easily without excessive force.
2. Grasp the released terminal with thumb and index finger simultaneous at the upper and lower grooved housing surfaces and pull the terminal out of the bus terminal block.

### 3.3 Disposal

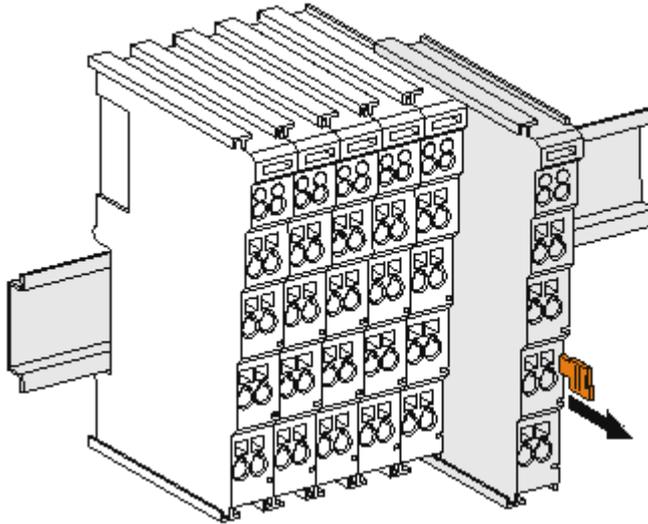

Products marked with a crossed-out wheeled bin shall not be discarded with the normal waste stream. The device is considered as waste electrical and electronic equipment. The national regulations for the disposal of waste electrical and electronic equipment must be observed.

## 3.4 Connection

### 3.4.1 Connection system

#### ⚠ WARNING

##### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

#### Overview

The bus terminal system offers different connection options for optimum adaptation to the respective application:

- The terminals of ELxxxx and KLxxxx series with standard wiring include electronics and connection level in a single enclosure.
- The terminals of ESxxxx and KSxxxx series feature a pluggable connection level and enable steady wiring while replacing.
- The High Density Terminals (HD Terminals) include electronics and connection level in a single enclosure and have advanced packaging density.

#### Standard wiring (ELxxxx / KLxxxx)



Fig. 12: Standard wiring

The terminals of the ELxxxx and KLxxxx series integrate screwless spring-cage technology for quick and easy wiring.

#### Pluggable wiring (ESxxxx / KSxxxx)



Fig. 13: Pluggable wiring

The terminals of ESxxxx and KSxxxx series feature a pluggable connection level. The assembly and wiring procedure is the same as for the ELxxxx and KLxxxx series. The pluggable connection level enables the complete wiring to be removed as a plug connector from the top of the housing for servicing. The lower section can be removed from the terminal block by pulling the unlocking tab. Insert the new component and plug in the connector with the wiring. This reduces the installation time and eliminates the risk of wires being mixed up.

The familiar dimensions of the terminal only had to be changed slightly. The new connector adds about 3 mm. The maximum height of the terminal remains unchanged.

A tab for strain relief of the cable simplifies assembly in many applications and prevents tangling of individual connection wires when the connector is removed.

Conductor cross sections between 0.08 mm<sup>2</sup> and 2.5 mm<sup>2</sup> can continue to be used with the proven spring force technology.

The overview and nomenclature of the product names for ESxxxx and KSxxxx series has been retained as known from ELxxxx and KLxxxx series.

### High Density Terminals (HD Terminals)



Fig. 14: High Density Terminals

The terminals from these series with 16/32 terminal points are distinguished by a particularly compact design, as the packaging density is twice as large as that of the standard 12 mm bus terminals. Massive conductors and conductors with a wire end sleeve can be inserted directly into the spring loaded terminal point without tools.

---

#### ● **Wiring HD Terminals**

**i** The High Density Terminals of the ELx8xx and KLx8xx series doesn't support pluggable wiring.

---

### Ultrasonically compacted (ultrasonically welded) strands

---

#### ● **Ultrasonically compacted (ultrasonically welded) strands**

**i** Ultrasonically compacted (ultrasonically welded) strands can also be connected to the standard and high-density terminals. In this case, please note the tables concerning the wire-size width [[▶ 26](#)]!

---

### 3.4.2 Wiring

**⚠ WARNING**

**Risk of electric shock and damage of device!**

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

**Terminals for standard wiring ELxxxx/KLxxxx and for pluggable wiring ESxxxx/KSxxxx**

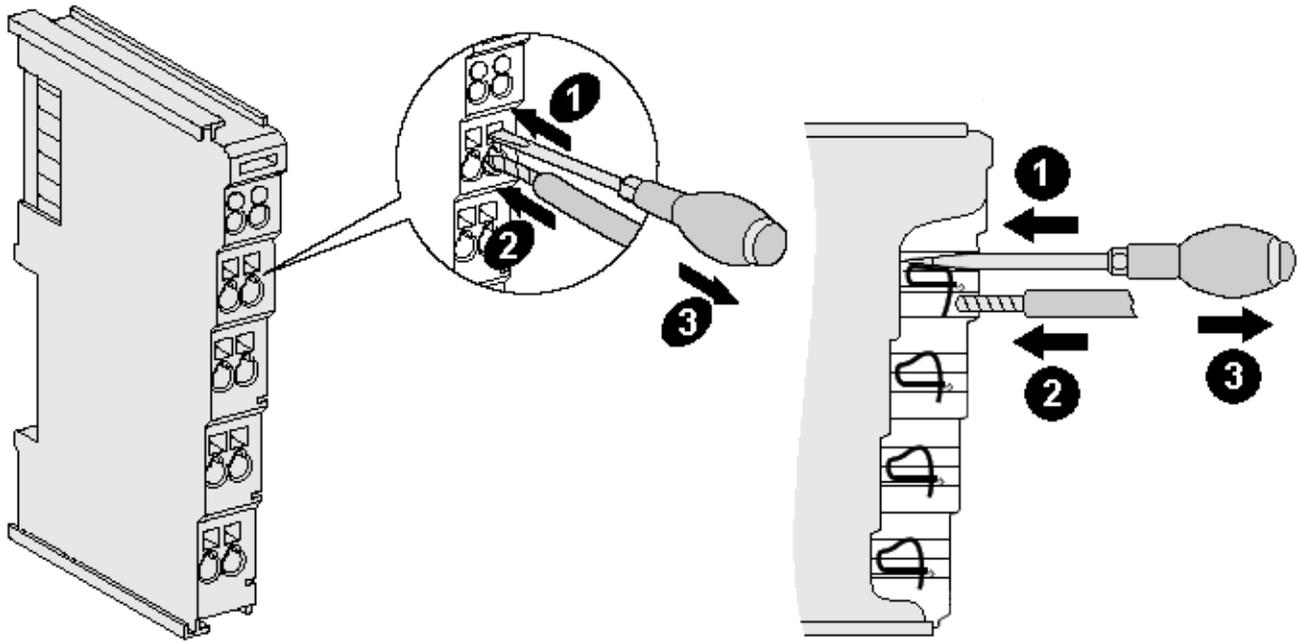


Fig. 15: Connecting a cable on a terminal point

Up to eight terminal points enable the connection of solid or finely stranded cables to the bus terminal. The terminal points are implemented in spring force technology. Connect the cables as follows (see fig. "Connecting a cable on a terminal point"):

1. Open a terminal point by pushing a screwdriver straight against the stop into the square opening above the terminal point. Do not turn the screwdriver or move it alternately (don't toggle).
2. The wire can now be inserted into the round terminal opening without any force.
3. When the screwdriver is removed, the terminal point closes automatically and holds the wire securely and permanently in place

See the following table for the suitable wire size width:

Terminal housing	ELxxxx, KLxxxx	ESxxxx, KSxxxx
Wire size width (single core wires)	0.08 ... 2.5 mm <sup>2</sup>	0.08 ... 2.5 mm <sup>2</sup>
Wire size width (fine-wire conductors)	0.08 ... 2.5 mm <sup>2</sup>	0.08 ... 2.5 mm <sup>2</sup>
Wire size width (conductors with a wire end sleeve)	0.14 ... 1.5 mm <sup>2</sup>	0.14 ... 1.5 mm <sup>2</sup>
Wire stripping length	8 ... 9 mm	9 ... 10 mm

**High Density Terminals ([HD Terminals](#) [[▶ 24](#)]) with 16/32 terminal points**

The conductors of the HD Terminals are connected without tools for single-wire conductors using the direct plug-in technique, i.e. after stripping the wire is simply plugged into the terminal point. The cables are released, as usual, using the contact release with the aid of a screwdriver. See the following table for the suitable wire size width.

<b>Terminal housing</b>	<b>High Density Housing</b>
<b>Wire size width (single core wires)</b>	0.08 ... 1.5 mm <sup>2</sup>
<b>Wire size width (fine-wire conductors)</b>	0.25 ... 1.5 mm <sup>2</sup>
<b>Wire size width (conductors with a wire end sleeve)</b>	0.14 ... 0.75 mm <sup>2</sup>
<b>Wire size width (ultrasonically compacted [ultrasonically welded] strands)</b>	only 1.5 mm <sup>2</sup> (see <a href="#">notice</a> [ <a href="#">▶ 24</a> ])
<b>Wire stripping length</b>	8 ... 9 mm

### 3.4.3 Contact assignment

**⚠ WARNING**

**Risk of electric shock and damage of device!**

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

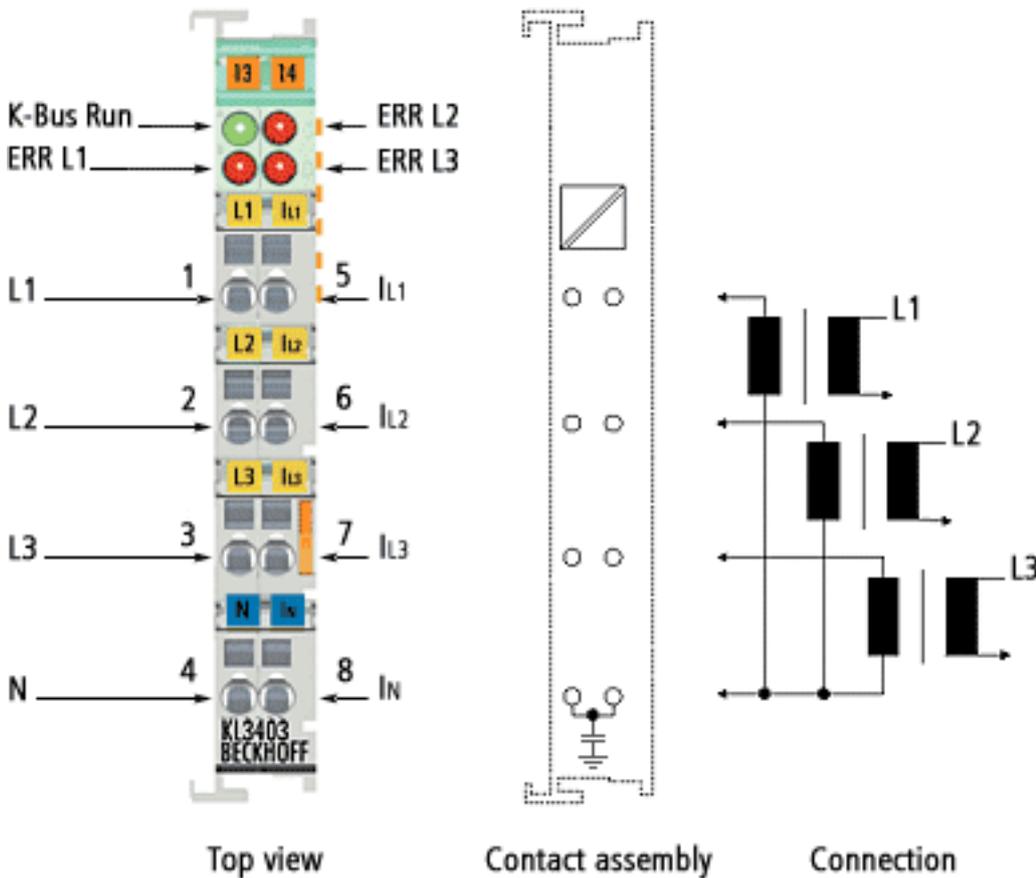


Fig. 16: Contact assignment

Terminal point	No.:	Connection for	Comment
L1	1	Phase L1	Connections for the voltage measurement. (See <a href="#">note [ 27 ]</a> under <i>Make sure terminal point N is zeroed or grounded!</i> )
L2	2	Phase L2	
L3	3	Phase L3	
N	4	Neutral conductor N (internally connected to terminal point I <sub>N</sub> , capacitively connected to the grounding contact for the mounting rail)	Connections for the current transformers. (See <a href="#">note [ 28 ]</a> under <i>Operate the current transformer as intended!</i> )
I <sub>L1</sub>	5	Current transformer at L1	
I <sub>L2</sub>	6	Current transformer at L2	
I <sub>L3</sub>	7	Current transformer at L3	
I <sub>N</sub>	8	Star point of the current transformers (internally connected to terminal point N, capacitively connected to the grounding contact for the mounting rail)	

\*) The KL3403-0026 has no capacitive connection to the grounding contact of the mounting rail!

**⚠ CAUTION**

**Make sure terminal point N is zeroed or earthed!**

If you do not connect the terminal point N with the neutral conductor of your mains supply (e.g. if the KL3403 is used purely for [current measurements \[ 31 \]](#)), terminal point N should be earthed, in order to avoid dangerous overvoltages in the event of a current transformer fault!

**⚠ CAUTION****Operate the current transformer as intended!**

Please note that many manufacturers do not permit their current transformers to be operated in no-load mode! Connect the KL3403 to the secondary windings of the current transformers before using the current transformer!

**UL compliance**

Follow the instructions indicated below, in order to comply with the specifications of Underwriters Laboratories.

**⚠ CAUTION****Intended use**

The terminals are exclusively intended for application with the UL-listed I/O systems of the series BKxxxx, BCxxxx, BXxxxx, LCxxxx, CXxxxx, KLxxxx, KSxxxx or KMxxxx from Beckhoff.

**⚠ CAUTION****cULus verification**

For the cULus verification, the Beckhoff I/O system only examined for risk of fire or electric shock (in accordance with UL508 and CSA C22.2 No. 142).

**⚠ CAUTION****Phase voltage according to UL specifications 300 V max.**

The maximum phase voltage of 500 V described in the technical data should be limited to 300 V for applications requiring UL approval.

**⚠ CAUTION****Current transformer**

Current measurement inputs with the IDs IL1, IL2, IL3, N may only be connected to isolating current transformers, which limit the available current to max. 5 A, 20 V.

**⚠ CAUTION****No extended temperature range**

The limited temperature range applies, if the KL3403-0000 / KS3403-0000 are used according to UL conditions (see [Technical data](#) [[▶ 11](#)]).

## 3.5 Application examples

### Overview

- Application example for [alternating current](#) [[▶ 29](#)]
- Application example for [DC](#) [[▶ 31](#)]
- Application example with [frequency converter](#) [[▶ 33](#)]
- Application example for [KL3403-0014](#) [[▶ 34](#)] (without internal shunts for current measurement)

### 3.5.1 Application examples for alternating current

**⚠ WARNING**

**Risk of electric shock and damage of device!**  
 Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

**⚠ CAUTION**

**Operate the current transformer as intended!**  
 Please note that many manufacturers do not permit their current transformers to be operated in no-load mode! Connect the KL3403 to the secondary windings of the current transformers before using the current transformer!

**Power measurement at a machine**

- The voltage is measured via connections L1, L2, L3 and N.
- The current is measured via three current transformers [▶ 17] and the connections  $I_{L1}$ ,  $I_{L2}$ ,  $I_{L3}$  and  $I_N$  (star point of the current transformers).

**NOTICE**

**Do not confuse current and voltage circuit!**  
 Avoid confusing the current and voltage circuit during connection, since the direct connection of mains voltage to the terminal points for the current transformers (typical input resistance 33 mΩ) would destroy the power measurement terminal!

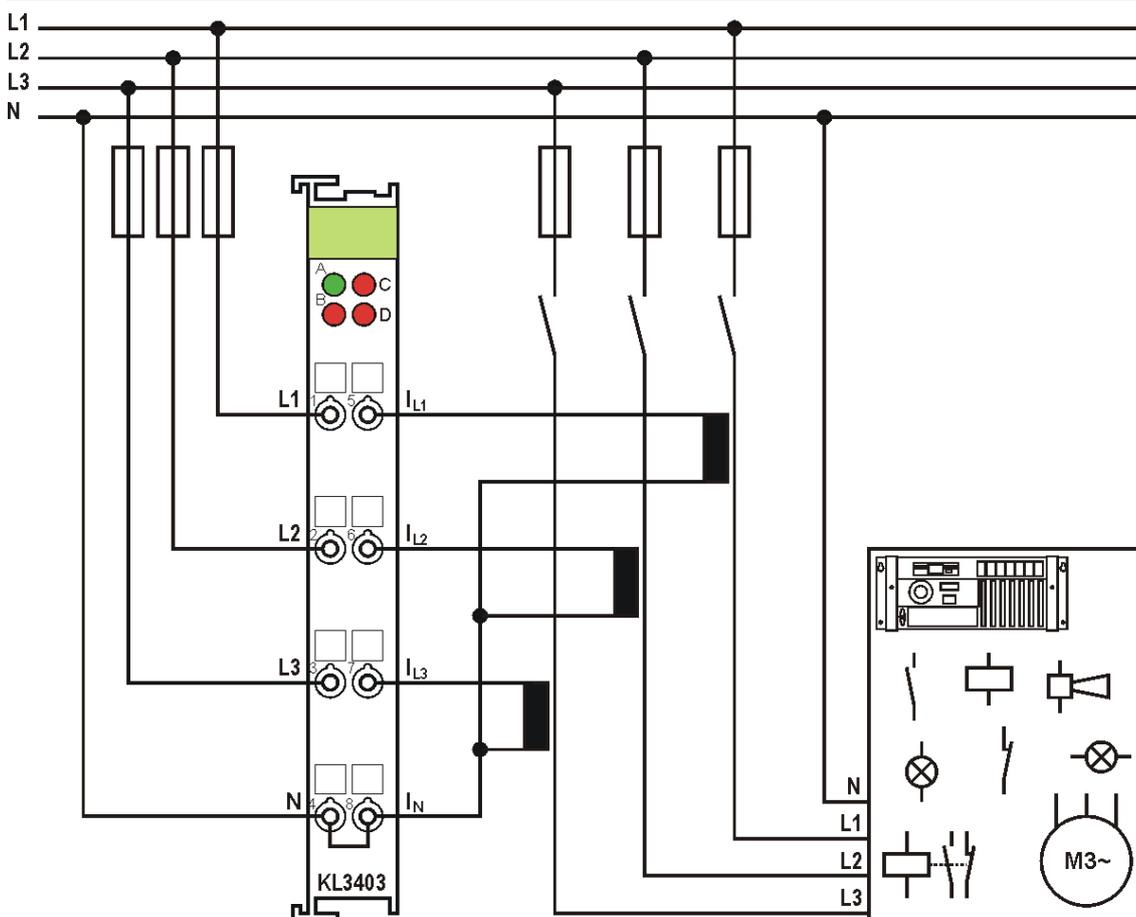


Fig. 17: Application example - power measurement at a machine

**i Polarity of the current transformers**

If negative power values are measured on a circuit, please check whether the associated current transformer circuit is connected correctly.

**Current measurement on a motor**

**⚠ CAUTION**

**Make sure terminal point N is zeroed or grounded!**

If you do not connect the terminal point N with the neutral conductor of your mains supply (e.g. if the KL3403 is used purely for current measurements), terminal point N should be earthed, in order to avoid dangerous overvoltages in the event of a current transformer fault!

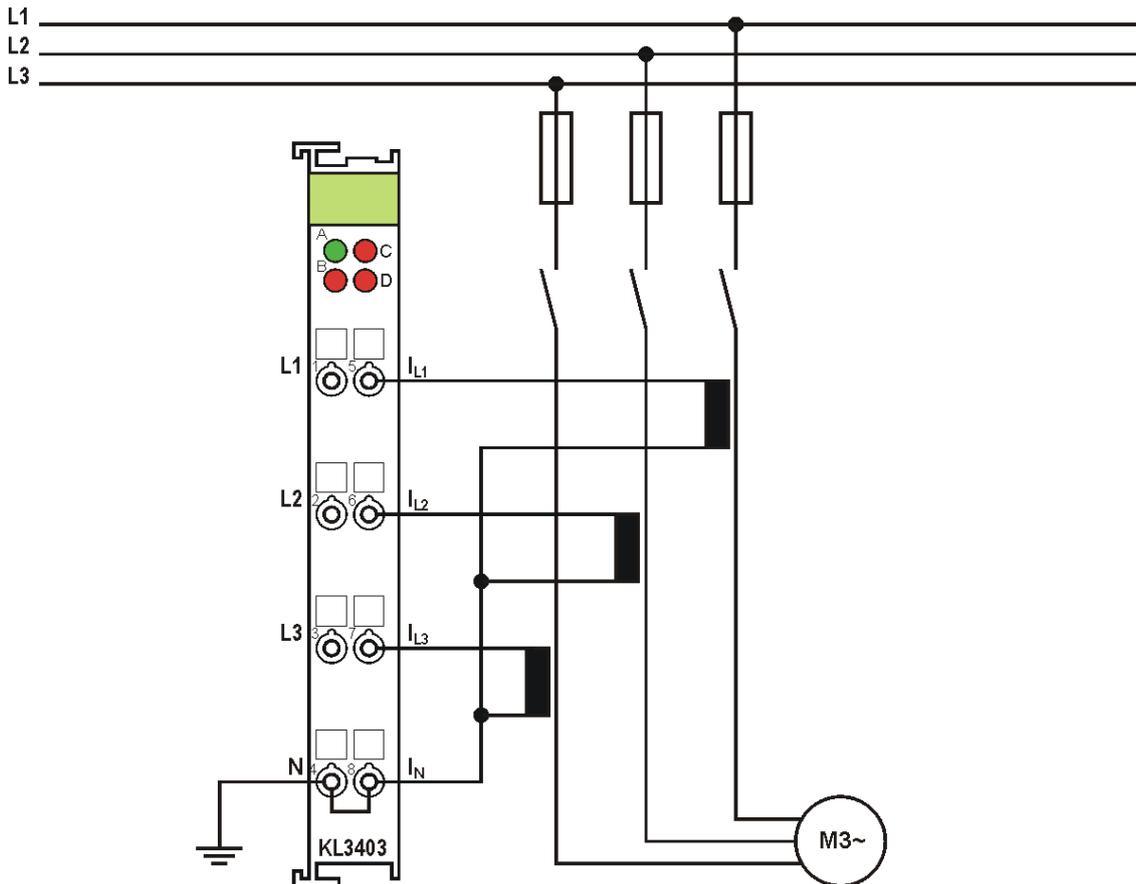


Fig. 18: Application example - current measurement at a motor

### 3.5.2 Application example for DC

#### WARNING

##### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

#### Switch off the DC filter for DC measurements

Switch off the DC filters for the KL3403 (using the configuration software [KS2000 \[▶ 39\]](#) or the register communication (register [R32.4 \[▶ 48\]](#))) for measuring direct voltage and DC.

#### Power measurement at a fieldbus station

The example illustrates power measurement at three circuits of the fieldbus station. The terminal measures the:

- Power consumption of the Bus Coupler and K-Bus supply
- Power consumption of the power contacts
- Power consumption of the AS-i power supply terminal (KL9528)

#### NOTICE

##### Note rated current!

In the example, the special type [KL3403-0010 \[▶ 11\]](#) is used with an extended current measuring range (5 A max.). The standard KL3403 type is not suitable for this application example because the current measuring range is too small (1A)!

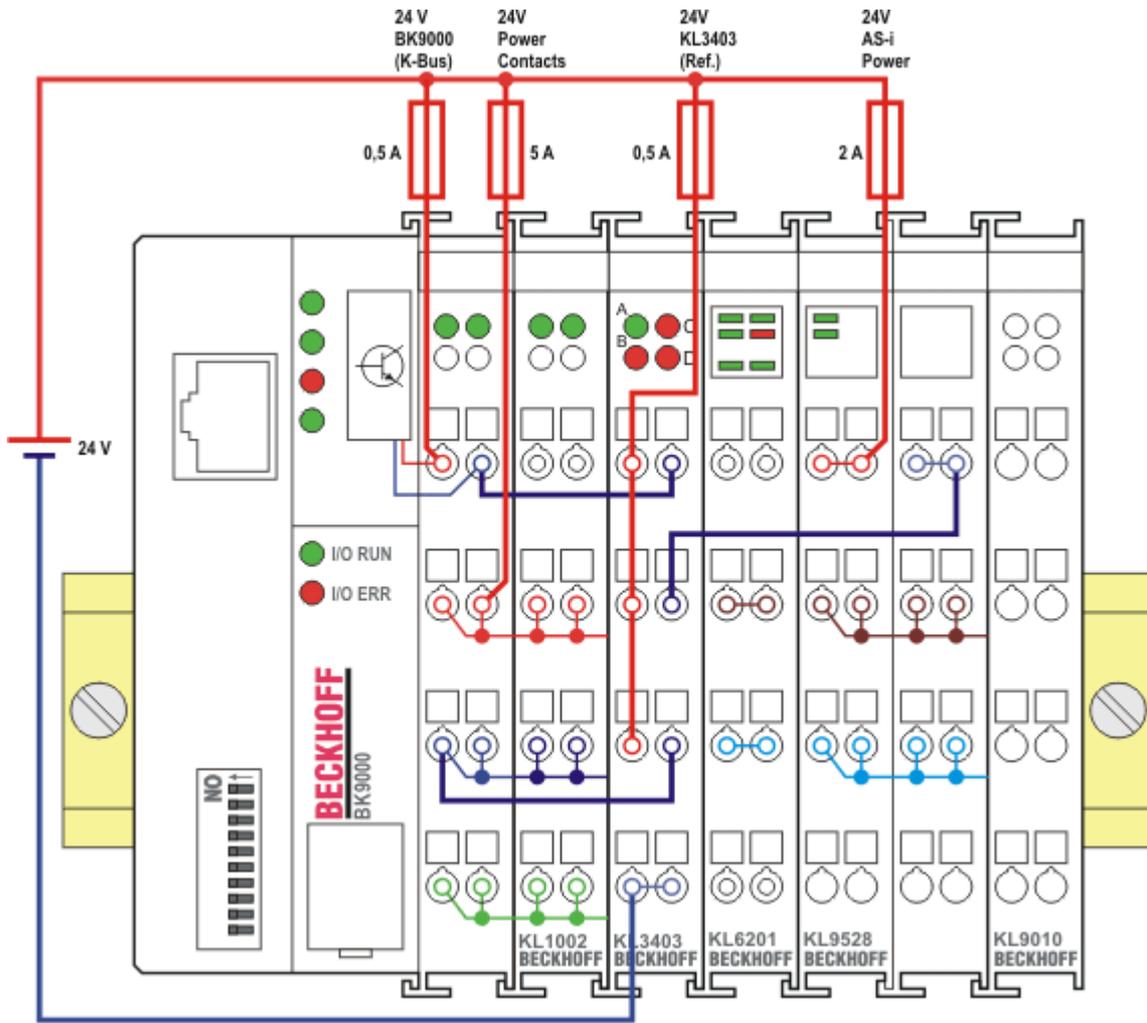


Fig. 19: Application example - power measurement at a fieldbus station

### 3.5.3 Application example with frequency converter

**⚠ WARNING**

**Risk of electric shock and damage of device!**

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

The example illustrates power measurement at several three-phase motors that are controlled by a frequency converter (AC converter), e.g. at a conveyor system. Each motor is monitored by a KL3403.

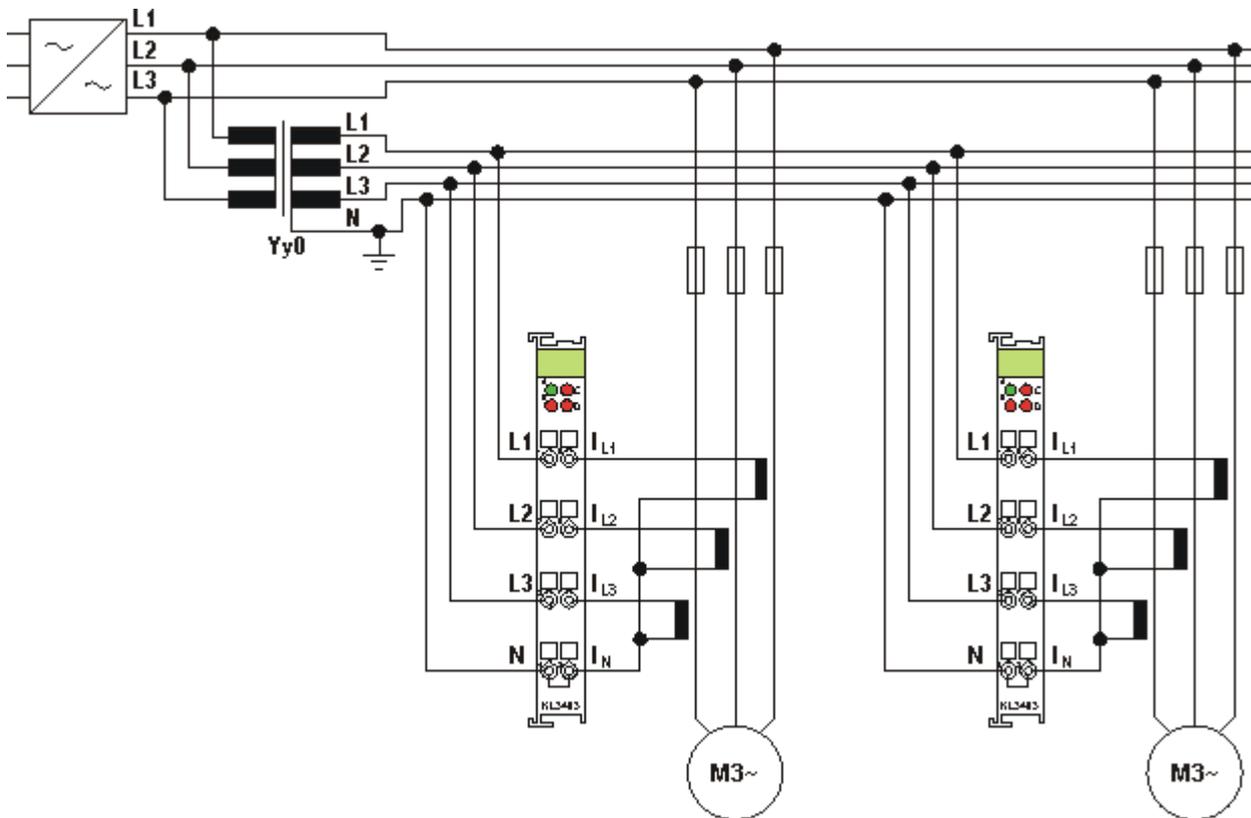


Fig. 20: Application example with frequency converter

The electrical isolation of the three-phase-transformer (Yy0) operated by the voltage circuit of the power measurement terminals enables measurement after the frequency converter.

**● Measuring error in the lower frequency range**

**i** If the power measurement takes place after the frequency converter, a larger measuring error is possible in the lower frequency range, particularly for voltage measurement. This error also affects the power calculation.

The three-phase transformer should have a ratio of 1:1. It must not cause a phase shift of the signal! Since high-frequency components only have little influence on the motors, any distortions caused by the three-phase transformer have little effect on the practical measurement during the transfer of the harmonics created by the frequency converter.

The power distribution is mapped very well by using a dedicated power measurement terminal for each motor. Excessive current consumption of an individual motor can be detected in good time.

It is not possible to use this method for measuring direct voltage/DC (e.g. holding currents of synchronous motors)! Practical results can be obtained for voltages/currents with a frequency above 5 Hz, depending on the three-phase transformer and current transformers used.

**⚠ CAUTION**

**The terminal points N must be grounded!**  
 Due to the electrical isolation through the three-phase transformer, the terminal points N of the power measurement terminals have to be grounded, in order to avoid dangerous overvoltages in the event of a fault in a current transformer!

### 3.5.4 Application example for KL3403-0014

**⚠ WARNING**

**Risk of injury through electric shock and damage to the device!**  
 Bring the Bus Terminals system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!

The KL3403-0014 has no internal shunts for current measurement. It allows the use of external shunts. Instead of the three current circuits, the additional voltage circuits UI1, UI2 and UI3 are available for this purpose.

**Connection**

Cables are used to connect the voltage drop at the external shunts to terminal points UI1, UI2 and UI3 of the KL3403-0014.

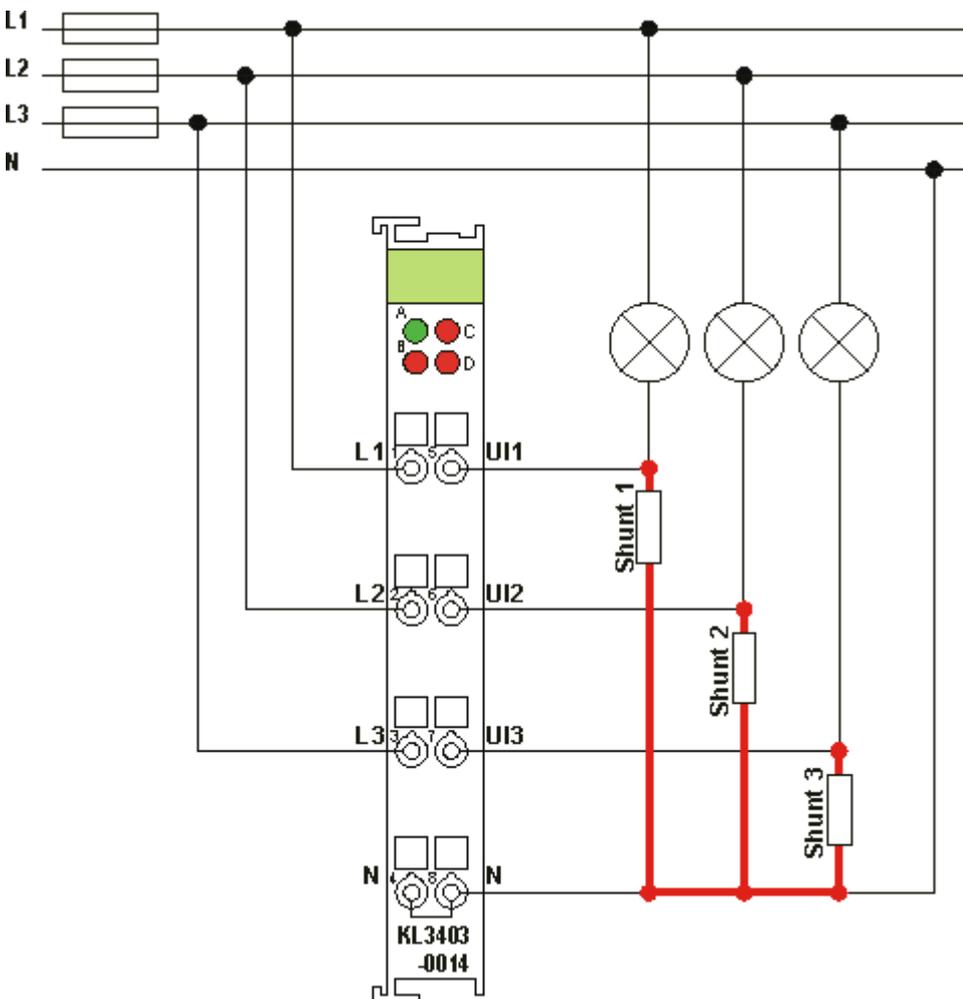


Fig. 21: Application example for KL3403-0014

The example shows a power measurement for three incandescent lamps. Three external shunts are used for the current measurement.

### ● Voltage drop on the cables between the shunts

**i** Note that the voltage drop on the cables between the shunts (shown in red in the diagram) distorts the measurement. It is therefore imperative that short cables with large cross-sections and as low-resistance as possible are used for these connections, in order to keep the measuring error to a minimum. Otherwise the measuring errors could be significant, since the voltage drop on this cables can be comparatively high and could result in a large error in the power calculation.

### Dimensioning of the shunts

A voltage drop of 60 mV / x A is typically indicated for the shunts.

### Examples

<b>Nominal value of the shunt</b>	60 mV / 1 A	60 mV / 25 A	60 mV / 100 A
<b>Sample current</b>	1 A	25 A	100 A
<b>Current output value of the terminal</b>	25000 <sub>dec</sub> (0x61A8)	25000 <sub>dec</sub> (0x61A8)	25000 <sub>dec</sub> (0x61A8)

## 4 KS2000 Configuration Software

### 4.1 KS2000 - Introduction

The KS2000 configuration software permits configuration, commissioning and parameterization of bus couplers, of the affiliated bus terminals and of Fieldbus Box Modules. The connection between bus coupler / Fieldbus Box Module and the PC is established by means of the serial configuration cable or the fieldbus.



Fig. 22: KS2000 configuration software

#### Configuration

You can configure the Fieldbus stations with the Configuration Software KS2000 offline. That means, setting up a terminal station with all settings on the couplers and terminals resp. the Fieldbus Box Modules can be prepared before the commissioning phase. Later on, this configuration can be transferred to the terminal station in the commissioning phase by means of a download. For documentation purposes, you are provided with the breakdown of the terminal station, a parts list of modules used and a list of the parameters you have modified. After an upload, existing fieldbus stations are at your disposal for further editing.

#### Parameterization

KS2000 offers simple access to the parameters of a fieldbus station: specific high-level dialogs are available for all bus couplers, all intelligent bus terminals and Fieldbus Box modules with the aid of which settings can be modified easily. Alternatively, you have full access to all internal registers of the bus couplers and intelligent terminals. Refer to the register description for the meanings of the registers.

## Commissioning

The KS2000 software facilitates commissioning of machine components or their fieldbus stations: Configured settings can be transferred to the fieldbus modules by means of a download. After a *login* to the terminal station, it is possible to define settings in couplers, terminals and Fieldbus Box modules directly *online*. The same high-level dialogs and register access are available for this purpose as in the configuration phase.

The KS2000 offers access to the process images of the bus couplers and Fieldbus Box modules.

- Thus, the coupler's input and output images can be observed by monitoring.
- Process values can be specified in the output image for commissioning of the output modules.

All possibilities in the *online mode* can be used in parallel with the actual fieldbus mode of the terminal station. The fieldbus protocol always has the higher priority in this case.

## 4.2 Parameterization with KS2000

Connect the configuration interface of your fieldbus coupler with the serial interface of your PC via the configuration cable and start the *KS2000* Configuration Software.



Click on the *Login* button. The configuration software will now load the information for the connected fieldbus station.

In the example shown, this is

- a BK9000 Ethernet Coupler
- a KL1xx2 digital input terminal
- a KL3403 Power Measurement Terminal
- a KL9010 bus end terminal

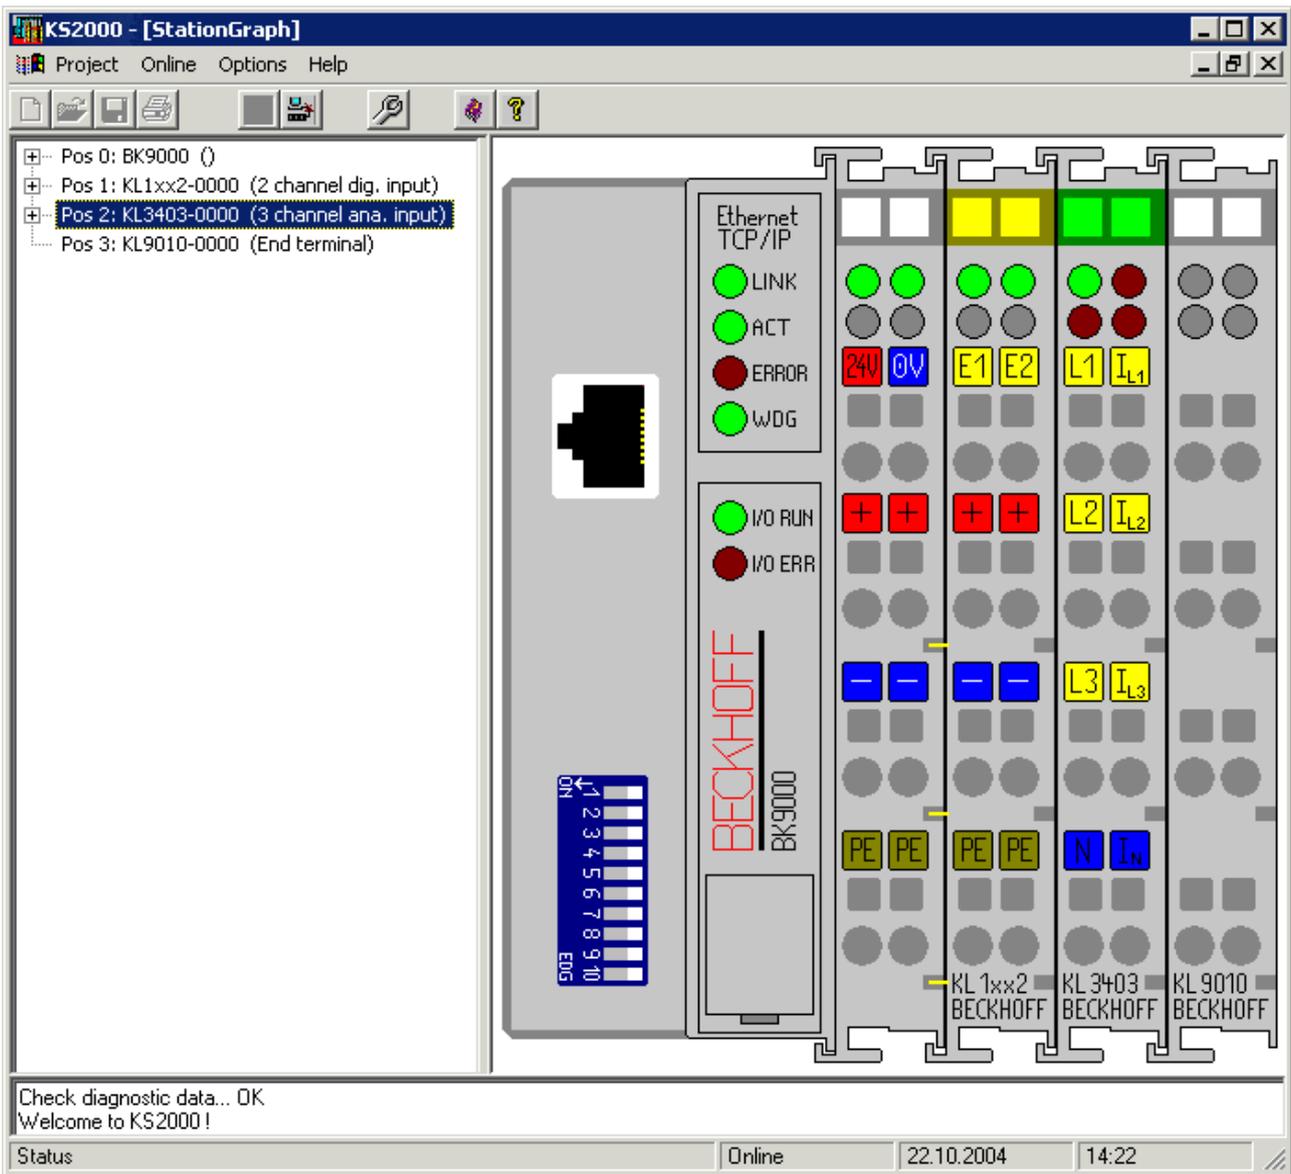


Fig. 23: Display of the fieldbus station in KS2000

The left-hand KS2000 window displays the terminals of the fieldbus station in a tree structure. The right-hand KS2000 window contains a graphic display of the fieldbus station terminals.

In the tree structure of the left-hand window, click on the plus-sign next to the terminal whose parameters you wish to change (item 2 in the example).

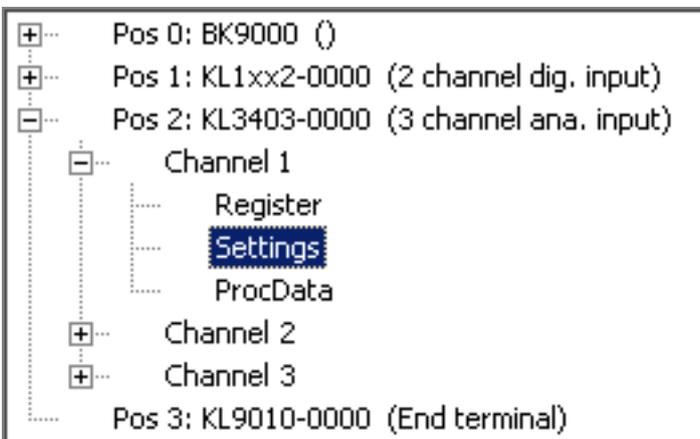


Fig. 24: KS2000 branch for channel 1 of the KL3403

For each of the three channels, the branches *Register*, *Settings* and *ProcData* are displayed:

- Register enables direct access to the channel registers.
- The dialog mask for the parameterization of the KL3403 can be found under [Settings \[▶ 39\]](#).
- ProcData shows the process data of the KL3403.

### 4.3 Settings

The dialog mask for the parameterization of the KL3403 can be found under *Settings*.

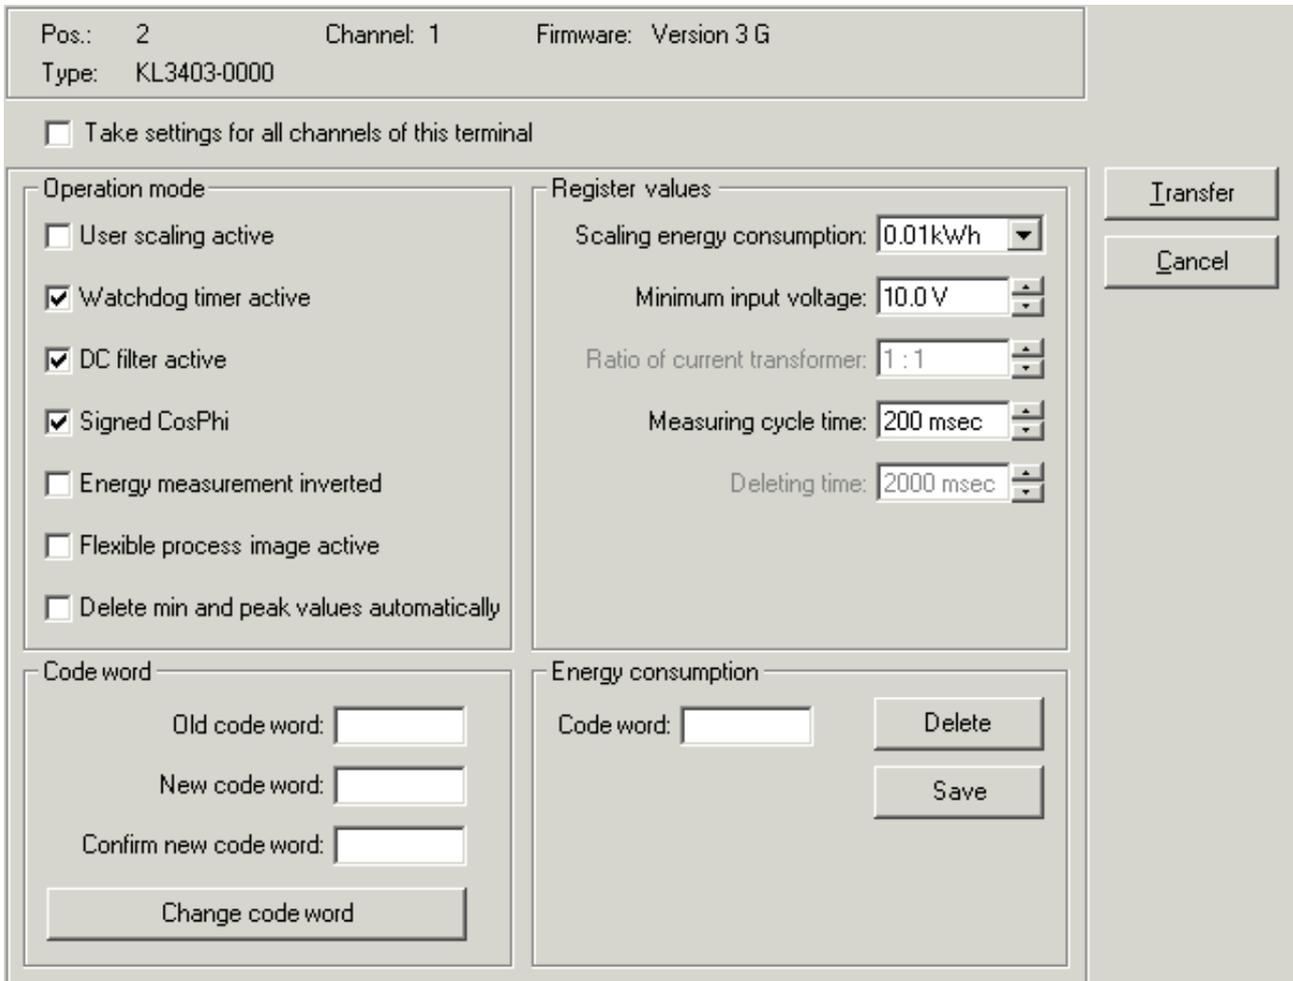


Fig. 25: Settings via KS2000

#### Header

**Pos.:** Position of the terminal in the Bus Terminal block.

**Type:** Terminal type

Firmware: [Firmware version \[▶ 8\]](#) installed on the terminal.

#### Operation mode

##### User scaling active ([R32.0 \[▶ 48\]](#))

You can activate user scaling here (default: deactivated).

##### Watchdog timer active ([R32 \[▶ 48\].2](#))

You can deactivate the watchdog timer here (the default is activated).

**DC filter active (R32.4 [▶ 48])**

Here you can disable the DC filter (default: enabled).

**CosPhi, signed (R32.5 [▶ 48])**

Here you can disable the signed representation for CosPhi (default: enabled).

**Energy measurement inverted (R32.6 [▶ 48])**

Here you can enable sign inversion for the energy measurement (default: disabled).

**Flexible process image active (R32.3 [▶ 48])**

Here you can enable/disable the [flexible process image \[▶ 54\]](#) (default:

- disabled for KL3403-0000, KL3403-0010, KL3403-0025, KL3403-0026, KL3403-0333,
- enabled for KL3403-0020, KL3403-0022)

**Automatically clear minimum and maximum values (R32.7 [▶ 48])**

Here you can enable automatic deletion of the minimum and maximum current, voltage and power values (default: disabled).

**Register values****Energy consumption scaling (R35 [▶ 49])**

Here you can change the scaling of the energy consumption measurement. Default: 4<sub>dec</sub>  
(KL3403-0000 /-002x /-0333: 0,01 kWh, KL3403-0010: 0,05 kWh).

**Minimum input voltage - undervoltage threshold (R36 [▶ 49])**

Here you can change the undervoltage threshold (resolution: 0.1 V).  
If the mains voltage falls below the specified undervoltage threshold (default: 10 V), the red error LED is triggered, and the error bit ([SB1.6 \[▶ 44\]](#)) is set in status byte 0.

**Current transformer ratio (R37 [▶ 49])**

The KL3403 can take the transformer ratio of a connected current transformer into account for the measured value output.

Here you can select the transformer ratio of a connected current transformer and enable this scaling with the option field *User scaling* ([R32.0 \[▶ 48\]](#)).

---

● **Note the permissible range of the measured value output**



The KL3403 should only take the transformer ratio into account if the calculated resulting current does not exceed the value 65535!  
If the calculated result does exceed 65535, the transformer ratio should be taken into account in the PLC.

---

**Measuring cycle time (R39 [▶ 50])**

Here you can change the measuring cycle time (resolution: 1 ms) (default: 200 ms).

**deletion time (R38 [▶ 50])**

Here you can change the time constant (resolution: 10 ms) for automatic deletion of the minimum and maximum current, voltage and power values (default: 2000 ms).

## Password

Here you change can the password for the KL3403 (default: 4661<sub>dec</sub>), in order to prevent unauthorized deletion of the energy consumption:

- Enter the old password in the field at the top.
  - Enter the new password in the field in the center.
  - Repeat the new password in the field at the bottom and click *Change password*
- 

### **i** Password

In this dialog box, you have to enter the passwords in decimal form! You can also use the password change register (R5 | 47) to change the password.

---

## Energy consumption

Here you can clear the stored energy consumption. Enter the password and click *Delete*.

---

### **i** Deleting the energy consumption

Once the energy consumption has been deleted, the value cannot be restored!

---

## 5 Programming

### 5.1 Datenstrukturen

#### 5.1.1 Process image

The KL3403 is represented in the process image with a minimum of 9 bytes of input data and 9 bytes of output data. These are organized as follows:

Byte offset (without word alignment*)	Byte offset (with word alignment*)	Format	Input data	Output data
0	0	Byte	Status byte 1 ( <a href="#">SB1</a> [▶ 44])	Control byte 1 ( <a href="#">CB1</a> [▶ 43])
1	2	Word	DataIN1	DataOUT1
3	4	Byte	Status byte 2 ( <a href="#">SB2</a> [▶ 45])	Control byte 2 ( <a href="#">CB2</a> [▶ 45])
4	6	Word	DataIN2	DataOUT2
6	8	Byte	Status byte 3 ( <a href="#">SB3</a> [▶ 45])	Control byte 3 ( <a href="#">CB3</a> [▶ 45])
7	10	Word	DataIN3	DataOUT3

\*) Word alignment: The Bus Coupler places values on even byte addresses

#### **i** No compact process image

The KL3403 cannot be operated with compact process image (without control and status bytes), since control and status bytes are required for process data operation of the KL3403 to function correctly. Even if your Bus Coupler is set to compact process image, the KL3403 is represented with its complete process image!

#### Output values

Terminal type	Nominal value (effective)	Output for nominal value
KL3403-0000	1.0 A	1000 <sub>dec</sub>
KL3403-0010	5.0 A	1000 <sub>dec</sub>
KL3403-0014	60 mV	25000 <sub>dec</sub>
KL3403-0020	20 mA	1000 <sub>dec</sub>
KL3403-0022	20 mA	4000 <sub>dec</sub>
KL3403-0025	250 mA	1000 <sub>dec</sub>
KL3403-0026	1.0 A	1000 <sub>dec</sub>
KL3403-0333	333 mV	1000 <sub>dec</sub>

## 5.1.2 Control and status bytes

### Control and status byte of the first channel (L1)

#### Process data mode

#### Control byte 1 in process data mode

Control byte 1 (CB1) is located in the [output image \[► 42\]](#), and is transmitted from the controller to the KL3403. Note the assignment of the control bytes to the process input data words.

Bit	CB1.7	CB1.6	CB1.5	CB1.4	CB1.3	CB1.2	CB1.1	CB1.0
Name	RegAccess	R/W	ChannelIdx		ProcDatIdx			

#### Key

Bit	Name	Description				
CB1.7	RegAccess	0 <sub>bin</sub>	Register communication off (process data mode)			
CB1.6	R/W	0 <sub>bin</sub>	Read access			
		(1 <sub>bin</sub> )	Since the process data registers of the KL3403 can only be read, write access is not sensible.			
CB1.5 to CB1.4	ChannelIdx <sup>5</sup>	Enter the channel index of the channel, from which you want to read a measured value with input data word 1 ( <a href="#">DataIN1 [► 42]</a> ).				
		00 <sub>bin</sub>	Channel 1			
		01 <sub>bin</sub>	Channel 2			
		10 <sub>bin</sub>	Channel 3			
		11 <sub>bin</sub>	reserved			
CB1.3 to CB1.0	ProcDatIdx	Enter the process data index of the measured value, which you want to read with input data word 1 ( <a href="#">DataIN1 [► 42]</a> ). The following process data indices are supported:				
		Index	Symbol	Measured value	Resolution	
		0000 <sub>bin</sub>	0x0	I <sub>rms</sub>	<a href="#">Current [► 12]</a> (rms value)	0.001 A (KL3403-0000, KL3403-0026) 0.005 A (KL3403-0010) 20 µA (KL3403-0020) 5 µA (KL3403-0022) 250 µA (KL3403-0025) 333 µV (KL3403-0333)
		0001 <sub>bin</sub>	0x1	U <sub>rms</sub>	<a href="#">Voltage [► 12]</a> (rms value)	0.1 V
		0010 <sub>bin</sub>	0x2	P	<a href="#">Active power [► 13]</a>	0.1 W (KL3403-0000, KL3403-0026) 0.5 W (KL3403-0010) 2 mW (KL3403-0020) flexible, max. 16,000 digit (KL3403-0022) <sup>6</sup> 25 mW (KL3403-0025) flexible, max. 16,000 digit (KL3403-0333) <sup>6</sup>
		0011 <sub>bin</sub>	0x3	cos φ	<a href="#">power factor [► 13]</a> <sup>4</sup>	0.01
		0100 <sub>bin</sub>	0x4	W	<a href="#">Energy consumption</a> <sup>1</sup>	default <sup>3</sup> : 0.01 kWh (KL3403-0000, KL3403-0026) default <sup>3</sup> : 0.05 kWh (KL3403-0010) default <sup>3</sup> : 0.2 Wh (KL3403-0020) flexible (KL3403-0022) <sup>6</sup> default <sup>3</sup> : 2.5 Wh (KL3403-0025) flexible (KL3403-0333) <sup>6</sup>
		0101 <sub>bin</sub>	0x5	I <sub>max</sub>	<a href="#">Peak current value</a> <sup>2</sup>	see index 0 <sub>dec</sub>
		0110 <sub>bin</sub>	0x6	U <sub>max</sub>	<a href="#">Peak voltage value</a> <sup>2</sup>	see index 1 <sub>dec</sub>
		0111 <sub>bin</sub>	0x7	P <sub>max</sub>	<a href="#">Peak active power value</a> <sup>2</sup>	see index 2 <sub>dec</sub>
		1000 <sub>bin</sub>	0x8	f	<a href="#">Frequency [► 16]</a>	0.1 Hz (measuring interval: 5 s)
		1001 <sub>bin</sub>	0x9	I <sub>min</sub>	<a href="#">Minimum current value</a> <sup>2</sup>	see index 0 <sub>dec</sub>
		1010 <sub>bin</sub>	0xA	U <sub>min</sub>	<a href="#">Minimum voltage value</a> <sup>2</sup>	see index 1 <sub>dec</sub>
		1011 <sub>bin</sub>	0xB	P <sub>min</sub>	<a href="#">Minimum active power value</a> <sup>2</sup>	see index 2 <sub>dec</sub>
		further	reserved			

- 1) The energy consumption is counted in RAM and saved every 15 minutes in the EEPROM. It is retained there even if the KL3403 is switched off. The command-register (R7 [▶ 47]) can be used to clear the energy value or to save it manually within 15 minutes.
- 2) The minimum and peak current value is deleted when the KL3403 is switched off. It is recommended to clear the minimum and peak values from the user program once the terminal has started up, because it is possible that incorrect values may have been stored during the startup, i.e. before the terminal measurements have stabilized.
- 3) The resolution of the energy consumption can be scaled for each channel with its register R35 [▶ 49].
- 4) The power factor (cos φ) can be displayed with or without sign (see bit R32.5 [▶ 48] of the feature register).
- 5) The flexible process image must be enabled (R32.3 [▶ 48] = 1), in order to be able to read measured values from each channel with input data word 1 (DataIN1 [▶ 42])!  
With the simple process image (R32.3 [▶ 48] = 0), input data word 1 (DataIN1) can only read the first channel (in this case, bits CB1.5, CB1.4 or SB1.5 and SB1.4 are not active).
- 6) The read values depend on the voltages and currents connected to the current transformer. They have to be converted by the application.

**● Service life of the EEPROM**

**i** The energy consumption is stored in an EEPROM. The EEPROM manufacturer specifies a minimum of 100000, typically 1 million possible write operations for this function block. The resulting service life of the energy consumption memory at continuous operation, assuming that the energy consumption is written to the EEPROM every 15 minutes, is:

- 2.85 years min.
- 28.5 years typical

**Status byte 1 in process data mode**

The status byte 1 (SB1) is located in the input image [▶ 42], and is transmitted from the KL3403 to the controller. Pay attention to the assignment of the control bytes to the process input data words in process data mode.

Bit	SB1.7	SB1.6	SB1.5	SB1.4	SB1.3	SB1.2	SB1.1	SB1.0
Name	RegAccess	ERR L1	ChannelIdx		ProcDatIdx			

**Key**

Bit	Name	Description
SB1.7	RegAccess	0 <sub>bin</sub> Acknowledgment for process data mode
SB1.6	ERR L1	0 <sub>bin</sub> Voltage between L1 and N greater than undervoltage threshold (R36 [▶ 49]).
		1 <sub>bin</sub> Voltage between L1 and N smaller than undervoltage threshold (R36 [▶ 49]). The ERR L [▶ 9]1 LED is on.
SB1.5 to SB1.4	ChannelIdx	00 <sub>bin</sub> The input data word 1 (DataIN1 [▶ 42]) was used to read a measured value from channel 1.
		01 <sub>bin</sub> The input data word 1 (DataIN1 [▶ 42]) was used to read a measured value from channel 2.
		10 <sub>bin</sub> The input data word 1 (DataIN1 [▶ 42]) was used to read a measured value from channel 3.
		11 <sub>bin</sub> reserved
SB1.3 to SB1.0	ProcDatIdx	Index of the measured value [▶ 43] that was read with input data word 1 (DataIN1 [▶ 42]).

**Register communication**

**Control byte 1 in register communication**

Control byte 1 (CB1) is located in the output image [▶ 42], and is transmitted from the controller to the KL3403.

<b>Bit</b>	CB1.7	CB1.6	CB1.5	CB1.4	CB1.3	CB1.2	CB1.1	CB1.0
<b>Name</b>	RegAccess	R/W	Reg. no.					

**Key**

Bit	Name	Description
CB1.7	RegAccess	1 <sub>bin</sub> Register communication switched on
CB1.6	R/W	0 <sub>bin</sub> Read access
		1 <sub>bin</sub> Write access
CB1.5 to CB1.0	Reg. no.	Register number: Enter the number of the <a href="#">register [► 46]</a> that you want to - read with input data word 1 read, or - write with output data word 1.

**⚠ CAUTION**

**No process data access during register communication!**

It is not possible to access the data registers during register communication! Process data that may still be displayed is not valid!

**Status byte 1 in register communication**

The status byte 1 (SB1) is located in the [input image \[► 42\]](#), and is transmitted from the KL3403 to the controller.

<b>Bit</b>	SB1.7	SB1.6	SB1.5	SB1.4	SB1.3	SB1.2	SB1.1	SB1.0
<b>Name</b>	RegAccess	R	Reg. no.					

**Key**

Bit	Name	Description
SB1.7	RegAccess	1 <sub>bin</sub> Acknowledgment for register access
SB1.6	R	0 <sub>bin</sub> Read access
SB1.5 to SB1.0	Reg. no.	Number of the register that was read or written.

**Control and status byte of the second channel (L2)**

Control byte 2 (CB2) is in [output image \[► 42\]](#) and is transferred by the controller to the KL3403 (structure and application see [Control byte 0 \[► 43\]](#)). Pay attention to the assignment of the control bytes to the process input data words in process data mode.

Status byte 2 (SB2) is in the [input image \[► 42\]](#) and is transferred from the KL3403 to the controller (configuration and application see [Status byte 0 \[► 44\]](#)).

**Control and status byte of the third channel (L3)**

Control byte 3 (CB3) is in [output image \[► 42\]](#) and is transferred by the controller to the KL3403 (structure and application see [Control byte 0](#)). Pay attention to the assignment of the control bytes to the process input data words in process data mode.

Status byte 3 (SB3) is in the [input image \[► 42\]](#) and is transferred from the KL3403 to the controller (configuration and application see [Status byte 0](#)).

### 5.1.3 Register overview

These registers are used for the parameterization of the power measurement terminal and exist for each channel. They can be read or written by means of register communication.

Register no.	Comment	Default value		R/W	Memory	
R0 [▶ 46]	Overflow register for energy consumption	0x0000	0 <sub>dec</sub>	R/W	Flash	
R1	reserved	-	-	-	-	
...	...	...	...	...	...	
R4	reserved	-	-	-	-	
R5 [▶ 47]	Password change register	-	-	-	-	
R6	Diagnostic register	-	-	R	RAM	
R7 [▶ 47]	Command register	-	-	-	-	
R8 [▶ 48]	Terminal type	0x0D4B	3403 <sub>dec</sub>	R	ROM	
R9 [▶ 48]	Firmware version	e.g. 0x3143	12611 <sub>dec</sub>	R	ROM	
R10	Multiplex shift register	0x0230 / 0x0318	560 <sub>dec</sub> / 792 <sub>dec</sub>	R	ROM	
R11	Signal channels	0x0318	792 <sub>dec</sub>	R	ROM	
R12	Minimum data length	0x1818	6168 <sub>dec</sub>	R	ROM	
R13	Data structure	0x0007	7 <sub>dec</sub>	R	ROM	
R14	reserved	-	-	-	-	
R15	Alignment register	-	-	R/W	RAM	
R16	Hardware version	e.g. 0x0000	e.g. 0 <sub>dec</sub>	R/W	Flash	
R17 [▶ 48]	Voltage gain compensation	e.g. 0x0400	e.g. 1024 <sub>dec</sub>	R/W	Flash	
R18 [▶ 48]	Current gain compensation	e.g. 0x0400	e.g. 1024 <sub>dec</sub>	R/W	Flash	
R19	reserved	-	-	-	-	
...	...	...	...	...	...	
R29	Terminal type, special identification	e.g. 0x000	e.g. 0 <sub>dec</sub>			
R30	reserved	-	-	-	-	
R31 [▶ 48]	Code word register	0x0000	0 <sub>dec</sub>	R/W	RAM	
R32 [▶ 48]	Feature register	KL3403-0000, KL3403-0010, KL3403-0025, KL3403-0026, KL3403-0333	0x0020	32 <sub>dec</sub>	R/W	Flash
		KL3403-0014, KL3403-0020, KL3403-0022	0x0030	48 <sub>dec</sub>		
R33	reserved	-	-	-	-	
R34	reserved	-	-	-	-	
R35 [▶ 49]	Scaling factor for the energy measurement	0x0004	4 <sub>dec</sub>	R/W	Flash	
R36 [▶ 49]	Undervoltage threshold value	0x0064	100 <sub>dec</sub>	R/W	Flash	
R37 [▶ 49]	Divisor of the current transformer ratio	0x0001	1 <sub>dec</sub>	R/W	Flash	
R38 [▶ 50]	Time constant for automatic deletion of the minimum and maximum values	0x00C8	200 <sub>dec</sub>	R/W	Flash	
R39 [▶ 50]	Measuring cycle time	0x0032	50 <sub>dec</sub>	R/W	Flash	
R40	reserved	-	-	-	-	
...	...	...	...	...	...	
R63	reserved	-	-	-	-	

### 5.1.4 Register description

These registers are used for the parameterization of the power measurement terminal and exist for each channel. They can be read or written by means of register communication.

#### R0: Overflow register for energy consumption

If the register for the energy consumption (read via [process data index \[▶ 43\]](#) 0x4) overflows, this overflow register is incremented. 32 bits are thus available for storing the energy consumption. The overflow register for the energy consumption must be read via the register communication.

**R5: Password change register**

You can change the password for the KL3403 (default: 1235<sub>hex</sub>), in order to prevent unauthorized deletion of the energy consumption.

The password can be changed as follows:

1. Enter the old password (default: 1235<sub>hex</sub>) in the password-register (R31).
2. Enter the new password in the password change register (R5).
3. Repeat the new password in the command register (R7).

The new password is now active without resetting the terminal!

**R7: Command register****Command 0x1004: Deleting the energy consumption (user password must be set)**

Write the value 0x1004 into the command register, in order to delete the energy consumption stored in the process data ([process data index \[▶ 43\] 0x4](#)) and the overflow register for the energy consumption ([R0 \[▶ 46\]](#)).

**Command 0x1005: delete maximum current**

Write the value 0x1005 into the command register, in order to clear the maximum current stored in the process data ([process data index \[▶ 43\] 0x5](#)).

**Command 0x1006: clear maximum voltage**

Write the value 0x1006 into the command register, in order to clear the maximum voltage stored in the process data ([process data index \[▶ 43\] 0x6](#)).

**Command 0x1007: clear maximum active power**

Write the value 0x1007 into the command register, in order to clear the maximum active power stored in the process data ([process data index \[▶ 43\] 0x7](#)).

**Command 0x1009: clear minimum current**

Write the value 0x1009 into the command register, in order to clear the minimum current stored in the process data ([process data index \[▶ 43\] 0x9](#)).

**Command 0x100A: clear minimum voltage**

Write the value 0x100A into the command register, in order to clear the minimum voltage stored in the process data ([process data index \[▶ 43\] 0xA](#)).

**Command 0x100B: clear minimum active power**

Write the value 0x100B into the command register, in order to clear the minimum active power stored in the process data ([process data index \[▶ 43\] 0xB](#)).

**Command 0x1014: store energy consumption early**

The KL3403 logs the energy consumption in the RAM and cyclically saves the values in the EEPROM every 15 minutes. If you want to switch off the KL3403 without losing the energy consumption measured since the last cyclic save operation, you can use this command to manually save the current value in the EEPROM.

**Command 0x1020: clear all minimum and maximum values**

Write the value 0x1020 into the command register, in order to clear all minimum and maximum values.

**Command 0x7000: Restore Factory Settings**

Entering 0x7000 in register R7 restores the delivery state for the following registers:

R32 [▶ 48]:

- 0x0020 for KL3403-0000, KL3403-0010, KL3403-0025, KL3403-0026, KL3403-0333 or
- 0x0030 for KL3403-0014, KL3403-0020, KL3403-0022

R35 [▶ 49]: 4

R36 [▶ 49]: 100<sub>dec</sub>

R37 [▶ 49]: 1

R38 [▶ 50]: 200<sub>dec</sub>

R39 [▶ 50]: 50<sub>dec</sub>

**Repeating the new password**

Repeat the new password in the command register when you change the password (see password change register description R5 [▶ 47]).

**R8: Terminal description**

Register R8 contains the terminal identifier in hexadecimal coding. KL3403: 0x0D4B (3403<sub>dec</sub>)

**R9: Firmware version**

Register R9 contains the firmware revision level of the terminal in hexadecimal coding, e. g. 0x3144 (12611<sub>dec</sub>).

**R17: Voltage gain compensation**

These registers contain the compensation values determined at production, and cannot be changed.

**R18: Current gain compensation**

These registers contain the compensation values determined at production, and cannot be changed.

**R31: Code word register**

- If you write values into the user registers without previously having entered the user code word (0x1235) in the code word register, these values are only stored in the RAM registers, but not in the EEPROM registers and are therefore lost if the terminal is restarted.
- If you write values into the user registers and have previously entered the user code word (0x1235) in the code word register, these values are stored in the RAM registers and in the SEEPROM registers and are therefore retained if the terminal is restarted.

The code word is reset if the terminal is restarted.

**R32: Feature register**

The feature register specifies the terminal's operation mode.

Bit	Feature	Value	Explanation	Default
R32.15 to R32.8	-	-	reserved	0 <sub>bin</sub>
R32.7	enClrMinMaxValues	1 <sub>bin</sub>	Automatic deletion of the minimum and maximum current, voltage and power values enabled (process data index [▶ 43] 0x5, 0x6, 0x7, 0x9, 0xA and 0xB)	0 <sub>bin</sub>
R32.6	invEnergySign	1 <sub>bin</sub>	The energy consumption measurement inverted (generator mode)	0 <sub>bin</sub>
R32.5	signCosPhi	0 <sub>bin</sub>	CosPhi (cos φ) is always shown positive	1 <sub>bin</sub>
		1 <sub>bin</sub>	CosPhi (cos φ) is shown signed: - inductive load: cos φ has positive sign - capacitive load: cos φ has negative sign	
R32.4	skipDcFilter	0 <sub>bin</sub>	DC filter active	0 <sub>bin</sub>
		1 <sub>bin</sub>	DC filter is bypassed	
R32.3	enFlexProclmage	0 <sub>bin</sub>	Simple process image [▶ 53] (compatibility mode)	0 <sub>bin</sub> /1 <sub>bin</sub> *
		1 <sub>bin</sub>	Flexible process image [▶ 54]	
R32.2	disWdTimer	0 <sub>bin</sub>	Watchdog timer active: The watchdog is triggered, if no process data were received for 100 ms	0 <sub>bin</sub>
		1 <sub>bin</sub>	Watchdog timer not active	
R32.1	-	-	reserved	0 <sub>bin</sub>
R32.0	enUserScaling	0 <sub>bin</sub>	User scaling is switched off (ratio is 1:1)	0 <sub>bin</sub>
		1 <sub>bin</sub>	User scaling is switched on (ratio is 1/R37)	

\*) 0<sub>bin</sub> (KL3403-0000, KL3403-0010, KL3403-0025, KL3403-0026, KL3403-0333)  
 1<sub>bin</sub> (KL3403-0020, KL3403-0022)

**R35: Scaling factor for the energy measurement**

This register can be used for scaling the energy measurement. Default: 4<sub>dec</sub> (KL3403-0000 / -002x/ -0333: 0.01 kWh, KL3403-0010: 0.05 kWh). To change the scaling factor, you first have to set the user code word in register R31 [▶ 48]!

Entry	0 <sub>dec</sub>	1 <sub>dec</sub>	2 <sub>dec</sub>	3 <sub>dec</sub>	4 <sub>dec</sub>	5 <sub>dec</sub>	6 <sub>dec</sub>	...
<b>Scaling factor</b> KL3403-0000, KL3403-002x, KL3403-0333	1 mWh	0.01 Wh	0.1 Wh	1 Wh	0.01 kWh	0.1 kWh	1 kWh	reserved
KL3403-0010	5 mWh	0.05 Wh	0.5 Wh	5 Wh	0.05 kWh	0.5 kWh	5 kWh	reserved

**R36: Undervoltage threshold**

If the mains voltage is below the undervoltage threshold the stored in register R36 (resolution: 0.1 V, default: 100<sub>dec</sub>=10 V), the error bit (SB1.6 [▶ 44]) is set in status byte 0, and the red error LED is triggered.

**R37: Divisor of the current transformer ratio**

The KL3403 can take the transformer ratio of a connected current transformer into account for the measured value output. Enter the divisor for the transformation ratio of a connected current transformer here, and enable this scaling with bit R32.0 [▶ 48] of the feature register.



**Note the permissible range of the measured value output**

The KL3403 should only take the transformer ratio into account if the calculated resulting current does not exceed the value 65535!  
 If the calculated result does exceed 65535, the transformer ratio should be taken into account in the PLC.

**R38: Time constant for automatic deletion of the minimum and maximum values**

If bit [R32.7](#) [[▶ 48](#)] is enabled, the minimum and maximum current, voltage and power values of the respective phase are cleared after the set time.

- Default value: 2000 ms (R38 = 200)
- Resolution: 10 ms
- Range of values: 10 ms to 655350 ms

**R39: Measuring cycle time**

With this register, the measuring cycle time of the A/D converter is set:

- Default value: 50 ms
- Resolution: 1 ms
- Range of values: 1 ms to 65535 ms

The correct setting of the measuring interval depends on the mains frequency, among other factors (see chapter Basic function principles).

## 5.2 Examples of Register Communication

The numbering of the bytes in the examples corresponds to the display without word alignment.

### 5.2.1 Example 1: Reading the firmware version from register 9

**Output Data**

Byte 0: Control byte	Byte 1: DataOUT1, high byte	Byte 2: DataOUT1, low byte
0x89 (1000 1001 <sub>bin</sub> )	0xXX	0xXX

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 not set means: reading the register.
- Bits 0.5 to 0.0 specify the register number 9 with 00 1001<sub>bin</sub>.
- The output data word (byte 1 and byte 2) has no meaning during read access. To change a register, write the required value into the output word.

**Input Data (answer of the Bus Terminal)**

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0x89	0x33	0x41

Explanation:

- The terminal returns the value of the control byte as a receipt in the status byte.
- The terminal returns the firmware version 0x3341 in the input data word (byte 1 and byte 2). This is to be interpreted as an ASCII code:
  - ASCII code 0x33 represents the digit 3
  - ASCII code 0x41 represents the letter A
 The firmware version is thus 3A.

## 5.2.2 Example 2: Writing to an user register

### Code word

**i** In normal mode all user registers are read-only with the exception of Register 31. In order to deactivate this write protection you must write the code word (0x1235) into Register 31. If a value other than 0x1235 is written into Register 31, write protection is reactivated. Please note that changes to a register only become effective after restarting the terminal (power-off/power-on).

### I. Write the code word (0x1235) into register 31.

#### Output Data

Byte 0: Control byte	Byte 1: DataOUT1, high byte	Byte 2: DataOUT1, low byte
0xDF (1101 1111 <sub>bin</sub> )	0x12	0x35

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 set means: writing to the register.
- Bits 0.5 to 0.0 specify the register number 31 with 01 1111<sub>bin</sub>.
- The output data word (byte 1 and byte 2) contains the code word (0x1235) for deactivating write protection.

#### Input Data (answer of the Bus Terminal)

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0x9F (1001 1111 <sub>bin</sub> )	0xFF	0xFF

Explanation:

- The terminal returns a value as a receipt in the status byte that differs only in bit 0.6 from the value of the control byte.
- The input data word (byte 1 and byte 2) is of no importance after the write access. Any values still displayed are invalid!

### II. Read Register 31 (check the set code word)

#### Output Data

Byte 0: Control byte	Byte 1: DataOUT1, high byte	Byte 2: DataOUT1, low byte
0x9F (1001 1111 <sub>bin</sub> )	0xFF	0xFF

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 not set means: reading the register.
- Bits 0.5 to 0.0 specify the register number 31 with 01 1111<sub>bin</sub>.
- The output data word (byte 1 and byte 2) has no meaning during read access.

#### Input Data (answer of the Bus Terminal)

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0x9F (1001 1111 <sub>bin</sub> )	0x12	0x35

Explanation:

- The terminal returns the value of the control byte as a receipt in the status byte.
- The terminal returns the current value of the code word register in the input data word (byte 1 and byte 2).

### III. Write to Register 32 (change contents of the feature register)

#### Output data

Byte 0: Control byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0xE0 (1110 0000 <sub>bin</sub> )	0x00	0x02

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 set means: writing to the register.
- Bits 0.5 to 0.0 indicate register number 32 with 10 0000<sub>bin</sub>.
- The output data word (byte 1 and byte 2) contains the new value for the feature register.

#### ⚠ CAUTION

#### Observe the register description!

The value of 0x0002 given here is just an example!

The bits of the feature register change the properties of the terminal and have a different meaning, depending on the type of terminal. Refer to the description of the feature register of your terminal (chapter *Register description*) regarding the meaning of the individual bits before changing the values.

#### Input data (response from the Bus Terminal)

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0xA0 (1010 0000 <sub>bin</sub> )	0xFF	0xFF

Explanation:

- The terminal returns a value as a receipt in the status byte that differs only in bit 0.6 from the value of the control byte.
- The input data word (byte 1 and byte 2) is of no importance after the write access. Any values still displayed are invalid!

### IV. Read register 32 (check changed feature register)

#### Output Data

Byte 0: Control byte	Byte 1: DataOUT1, high byte	Byte 2: DataOUT1, low byte
0xA0 (1010 0000 <sub>bin</sub> )	0xFF	0xFF

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 not set means: reading the register.
- Bits 0.5 to 0.0 indicate register number 32 with 10 0000<sub>bin</sub>.
- The output data word (byte 1 and byte 2) has no meaning during read access.

#### Input Data (answer of the Bus Terminal)

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0xA0 (1010 0000 <sub>bin</sub> )	0x00	0x02

Explanation:

- The terminal returns the value of the control byte as a receipt in the status byte.
- The terminal returns the current value of the feature register in the input data word (byte 1 and byte 2).

**V. Write register 31 (reset code word)**

**Output Data**

Byte 0: Control byte	Byte 1: DataOUT1, high byte	Byte 2: DataOUT1, low byte
0xDF (1101 1111 <sub>bin</sub> )	0x00	0x00

Explanation:

- Bit 0.7 set means: Register communication switched on.
- Bit 0.6 set means: writing to the register.
- Bits 0.5 to 0.0 specify the register number 31 with 01 1111<sub>bin</sub>.
- The output data word (byte 1 and byte 2) contains 0x0000 for reactivating write protection.

**Input Data (answer of the Bus Terminal)**

Byte 0: Status byte	Byte 1: DataIN1, high byte	Byte 2: DataIN1, low byte
0x9F (1001 1111 <sub>bin</sub> )	0xFF	0xFF

Explanation:

- The terminal returns a value as a receipt in the status byte that differs only in bit 0.6 from the value of the control byte.
- The input data word (byte 1 and byte 2) is of no importance after the write access. Any values still displayed are invalid!

## 5.3 Reading the process data

**Simple process image (compatibility mode)**

Supported by all firmware versions.

In the simple process image, each process data word is assigned to a fixed channel and can only read measured values of this channel!

Channel	Control byte	Associated process data word
1	Control byte 1 [▶ 42]	DataIN1 [▶ 42]
2	Control byte 2 [▶ 42]	DataIN2 [▶ 42]
3	Control byte 3 [▶ 42]	DataIN3 [▶ 42]

If a process data index is entered into a control byte in process data mode, the process record is returned in the associated process data word.

The process data indices are listed in chapter Control and status bytes [▶ 43].

**Examples for the simple process image**

**Reading the voltage (RMS value) of phases L1, L2 and L3**

- Enter process data index [▶ 43] 0x1 in control byte 1.  
The voltage (rms value) of phase L1 is returned in process data word DataIN1.
- Enter process data index 0x1 in control byte 2.  
The voltage (rms value) of phase L2 is returned in process data word DataIN2.
- Enter process data index 0x1 in control byte 3.  
The voltage (rms value) of phase L3 is returned in process data word DataIN3.

### Reading the voltage (RMS value) of phase L1, reading the active power of phase L2, and reading the power factor of phase L3

- Enter process data index 0x1 in control byte 1.  
The voltage (rms value) of phase L1 is returned in process data word DataIN1.
- Enter process data index 0x2 in control byte 2.  
The effective power of phase L2 is returned in process data word DataIN2.
- Enter process data index 0x3 in control byte 3.  
The power factor of phase L3 is returned in process data word DataIN3.

### Flexible process image

Supported from [firmware version \[► 8\]](#) 3G by the KL3403-0000, KL3403-0010, KL3403-0025 and KL3403-0026.

Supported from firmware version 4F by the KL3403-0020 and KL3403-0022.

Supported from firmware version 4K by the KL3403-0333.

With the flexible process image, a process data word can read measured values from any channel.

The flexible process image is enabled/disabled with [KS2000 \[► 40\]](#) or bit [R32.3 \[► 48\]](#) of the feature register.

### Examples for the flexible process image

#### Reading current (RMS value), voltage (RMS value) and active power of phase L2

- Enter 0x10 in control byte 1 ([channel index \[► 43\]](#) 01<sub>bin</sub>, [process data index \[► 43\]](#) 0000<sub>bin</sub>).  
The current (RMS value) of phase L2 is returned in process data word DataIN1.
- Enter 0x11 in control byte 2 (channel index 01<sub>bin</sub>, process data index 0001<sub>bin</sub>).  
The voltage (rms value) of phase L2 is returned in process data word DataIN2.
- Enter 0x12 in control byte 3 (channel index 01<sub>bin</sub>, process data index 0010<sub>bin</sub>).  
The effective power of phase L2 is returned in process data word DataIN3.

#### Reading current (RMS value), voltage (RMS value) of phase L1 and voltage of phase L2

- Enter 0x00 in control byte 1 (channel index 00<sub>bin</sub>, process data index 0000<sub>bin</sub>).  
The current (RMS value) of phase L1 is returned in process data word DataIN1.
- Enter 0x01 in control byte 2 (channel index 00<sub>bin</sub>, process data index 0001<sub>bin</sub>).  
The voltage (rms value) of phase L1 is returned in process data word DataIN2.
- Enter 0x11 in control byte 3 (channel index 01<sub>bin</sub>, process data index 0001<sub>bin</sub>).  
The voltage (rms value) of phase L2 is returned in process data word DataIN3.

## 5.4 Sample program for register communication via EtherCAT on KL3314 exemplary

### **i** Using the sample programs

This document contains sample applications of our products for certain areas of application. The application notes provided here are based on typical features of our products and only serve as examples. The notes contained in this document explicitly do not refer to specific applications. The customer is therefore responsible for assessing and deciding whether the product is suitable for a particular application. We accept no responsibility for the completeness and correctness of the source code contained in this document. We reserve the right to modify the content of this document at any time and accept no responsibility for errors and missing information.

### Program description / function

This example program (TwinCAT 3) provides change of single register values of the KL3314 as selection of the element type, characteristic settings of the feature register R32 and user scaling offset and gain (R33 / R34) similar as per KS2000 Configuration Software.

Type: KL3314

Take settings for all channels of this terminal

**Operating mode**

- User scaling active
- Manufacturer scaling active
- Watchdog timer active
- Signed amount representation
- Siemens output format
- Filter 1 active
- Wire break detection deactivated
- Comparison temperature off
- No check of the lower measurement range limit

**Element**

- Typ L
- Typ K
- Typ J
- Typ E
- Typ T
- Typ N
- Typ U
- Typ B
- Typ R
- Typ S
- Output  $\mu$ V (1 $\mu$ V)
- Output  $\mu$ V (2 $\mu$ V)
- Output  $\mu$ V (4 $\mu$ V)

Apply

Refresh

Channel 1

Channel 2

Channel 3

Channel 4

**Scaler values**

Apply changes

Get values

Take values for all channels of this terminal

Fig. 26: Settings of KL3314 via visualization of TwinCAT 3

At least following configuration setup shall be present:

[coupler (e.g. BK1120) or embedded PC] + KL3314 + KL9010.



Download:

<https://infosys.beckhoff.com/content/1033/kl3403/Resources/5996114571.zip>

**Preparations for starting the sample programs (tnzip file / TwinCAT 3)**

- Click on the download button to save the Zip archive locally on your hard disk, then unzip the \*.tnzip archive file in a temporary folder.

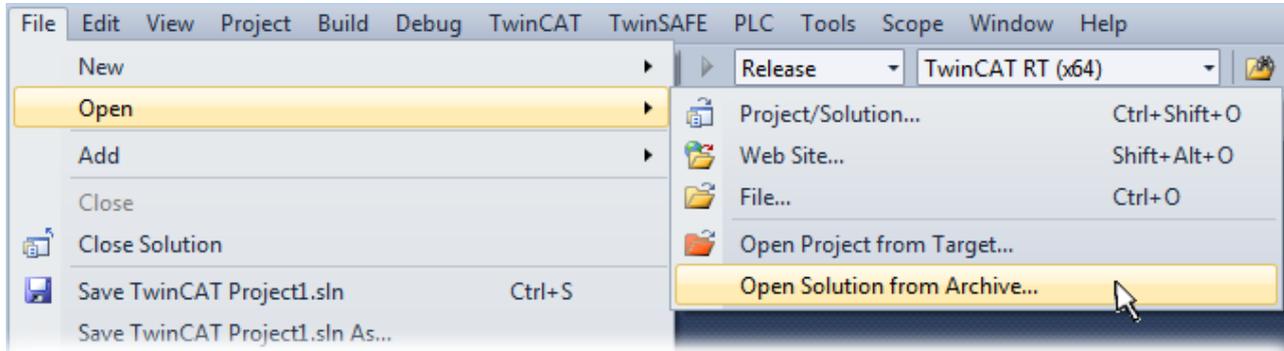


Fig. 27: Opening the \*.tnzip archive

- Select the .tnzip file (sample program).
- A further selection window opens. Select the destination directory for storing the project.
- For a description of the general PLC commissioning procedure and starting the program please refer to the terminal documentation or the EtherCAT system documentation.
- The EtherCAT device of the example should usually be declared your present system. After selection of the EtherCAT device in the “Solutionexplorer” select the “Adapter” tab and click on “Search...”:


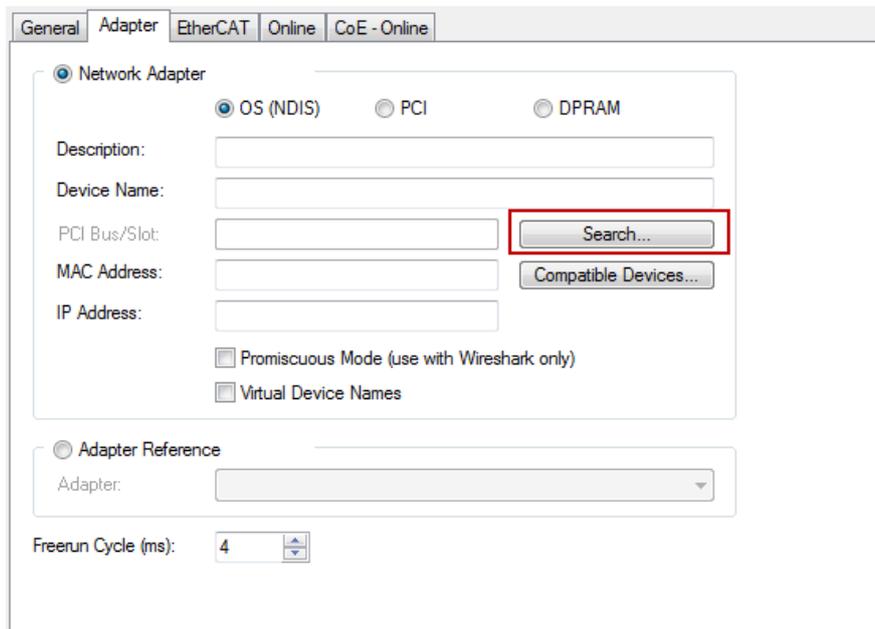


Fig. 28: Search of the existing HW configuration for the EtherCAT configuration of the example

- Checking NetId: the “EtherCAT” tab of the EtherCAT device shows the configured NetId:

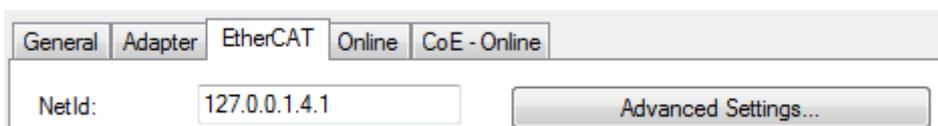

The first four numbers must be identical with the project NetId of the target system. The project NetId can be viewed within the TwinCAT environment above, where a pull down menu can be opened to choose a target system (by clicking right in the text field). The number blocks are placed in brackets there next to each computer name of a target system.

- Modify the NetId: By right clicking on “EtherCAT device” within the solution explorer a context menu opens where “Change NetId...” have to be selected. The first four numbers of the NetId of the target computer must be entered; both last values are 4.1 usually.  
Example:

- NetId of project: myComputer (123.45.67.89.1.1)
- Entry via „Change NetId...“: 123.45.67.89.4.1

## 6 Appendix

### 6.1 Error correction

The following table shows typical errors and how to fix them.

Error	Cause	Remedy
The KL3403 indicates negative power consumption, despite the fact that a consumer is connected.	<ul style="list-style-type: none"> <li>The connection of one or several current circuits is reversed.</li> <li>Current and voltage circuits are not connected correspondingly. Example: Phase L1 is connected to the voltage circuit for L1 (<a href="#">terminal point 1</a> [<a href="#">▶ 27</a>]), but the current transformer connected to phase L1 is connected to <math>I_{L2}</math> (<a href="#">terminal point 6</a> [<a href="#">▶ 27</a>]).</li> </ul>	Check the wiring!
An upstream residual current circuit breaker trips.	A phase is connected to the neutral conductor.	Check the wiring!
They want to measure DC, but the KL3403 does not show any meaningful values.	The DC filter of the KL3403 are switched on (delivery state).	Switch off the DC filters for the KL3403 (using the configuration software <a href="#">KS2000</a> [ <a href="#">▶ 39</a> ] or the register communication (register <a href="#">R32.4</a> [ <a href="#">▶ 48</a> ])) for measuring direct voltage and DC.
Measuring inaccuracies occur with large currents.	Overload at the current inputs of the terminal (see chapter <a href="#">Measuring error due to input overload</a> [ <a href="#">▶ 59</a> ]).	<ul style="list-style-type: none"> <li>Use a terminal type with higher rated current (e.g. <a href="#">KL3403-0010</a> [<a href="#">▶ 11</a>])</li> <li>Use current transformers with a higher ratio.</li> </ul>
Measuring inaccuracies occur when measuring low DC voltages.	In the range 10 to 20 V, the voltage inputs of the KL3403 exhibit a small non-linearity (see chapter <a href="#">Measuring error with DC voltage measurement</a> [ <a href="#">▶ 62</a> ]).	

## 6.2 Measuring error due to input overload

The various variants of the KL3403 differ only in terms of input configuration. The output value for the nominal value (full scale) is the same for most variants (see [process data \[▶ 42\]](#)).

Terminal type	KL3403-...							
	0000	0010	0014*	0020	0022**	0025	0026	0333
Nominal value	1 A	5 A	60 mV	20 mA	20 mA	250 mA	1 A	333 mV
Output for RMS value at nominal value	1000 <sub>dec</sub>	1000 <sub>dec</sub>	25000 <sub>dec</sub>	1000 <sub>dec</sub>	4000 <sub>dec</sub>	1000 <sub>dec</sub>	1000 <sub>dec</sub>	1000 <sub>dec</sub>

\*) for KL3403-0014: three additional voltage circuits instead of the current circuits: 60 mV for connection of external shunts

\*\*\*) for KL3403-0022: three additional current circuits instead of the voltage circuits: also 20 mA

### Current and sampling curve for input signals within the permitted measuring range

If the current input values are within the permitted range, i.e. not above the rated current for the terminal, a valid measured value ( $\leq 1414_{dec}$ ) is read for each interpolation point.

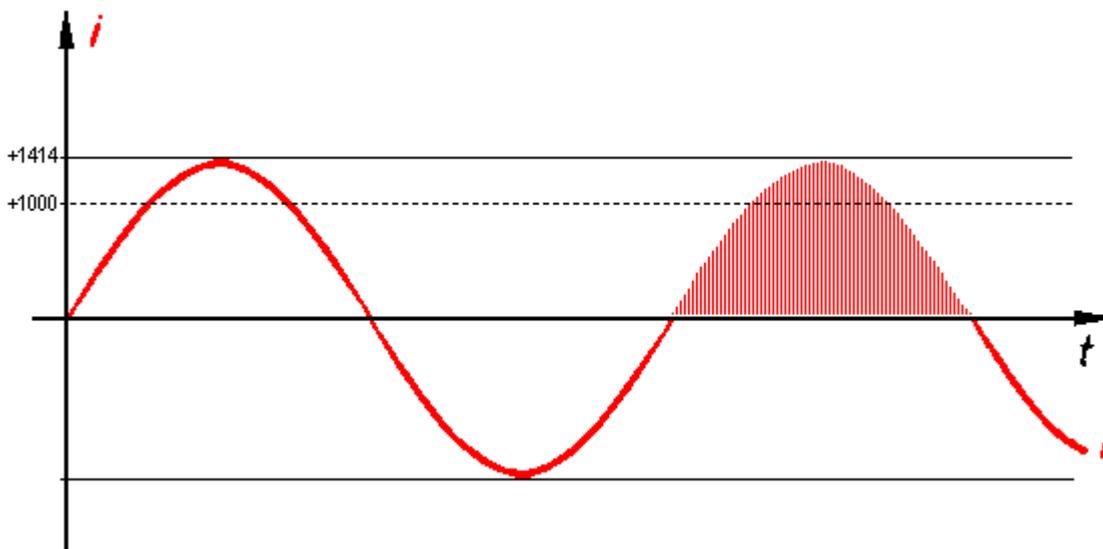


Fig. 29: Current and sampling curve for input signals within the permitted measuring range

In the example shown (full scale), the terminal outputs the value 1000<sub>dec</sub> for the RMS value of the current.

### Current and sampling curve for 20% overload

If the input current exceeds the rated terminal current, the terminal also outputs the value 1414<sub>dec</sub> for the peak values (which are greater than the rated current times root 2). For this interpolation points a measuring error occurs due to input overload.

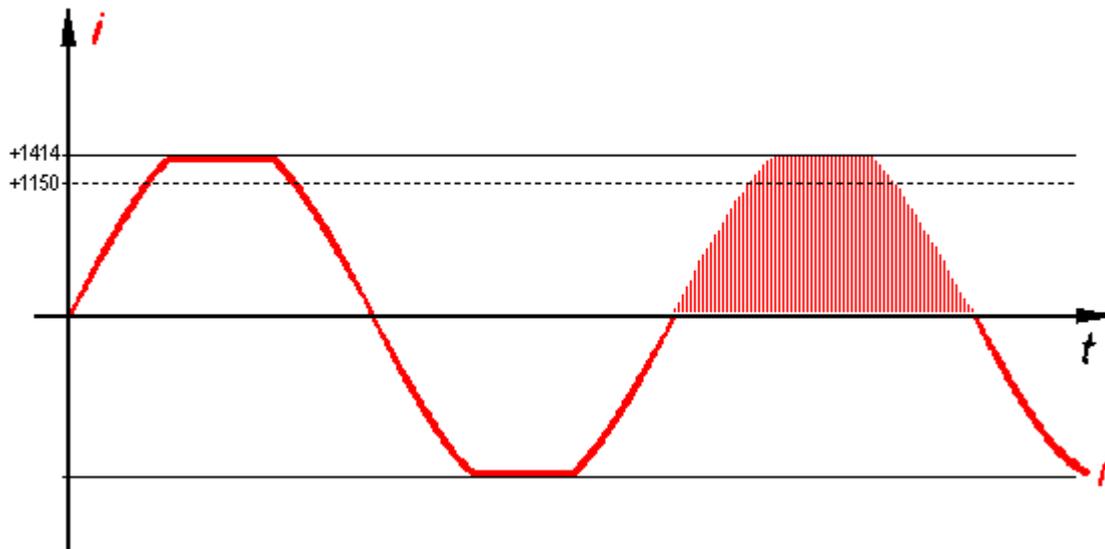


Fig. 30: Current and sampling curve for 20% overload

In the example shown, the terminal outputs a value of approx.  $1150_{\text{dec}}$  for the RMS value of the current. This value is already subject to a small error.

#### Current and sampling curve for 50% overload

The higher the input overload, the more interpolation points are subject to an ever greater measuring error due to the input overload.

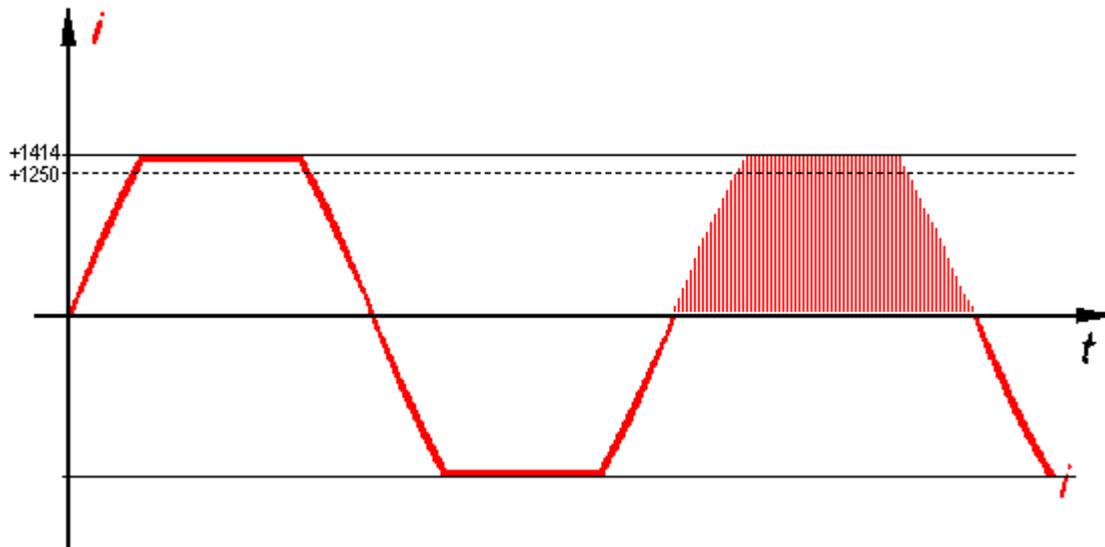


Fig. 31: Current and sampling curve for 50% overload

In the example shown, the terminal outputs a value of approx.  $1250_{\text{dec}}$  for the RMS value of the current. This value is subject to a relevant error.

#### The measuring error increases with the degree of overload

With increasing overload, the RMS value "I" calculated from the interpolation points still increases with the input voltage "U", but it no longer increased linearly with the input signal, and the measuring error "Δ" increases quickly!

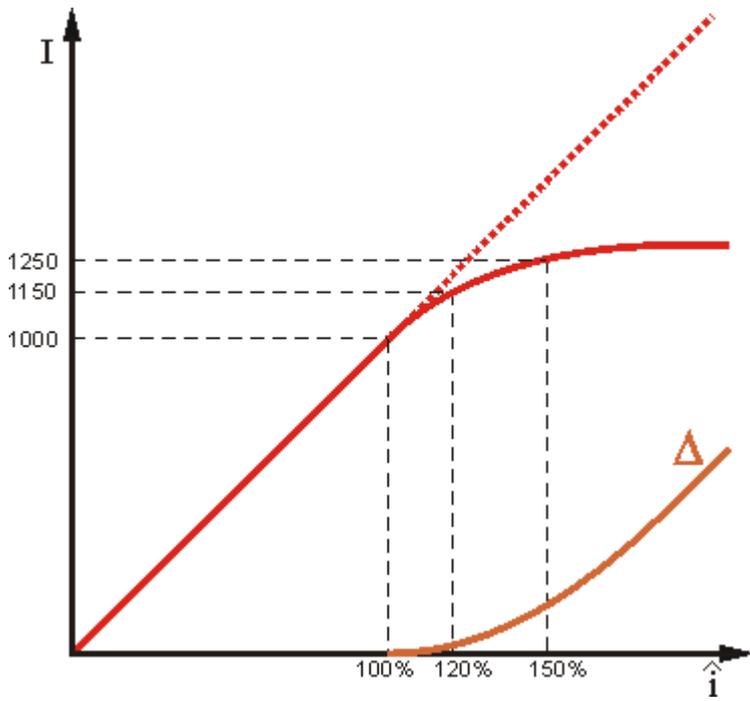


Fig. 32: Increase in measuring error " $\Delta$ " with increasing overload

The output values indicated for input overloads of 20% and 50% are typical values. They may differ to some degree, due to component tolerances between terminals.

### 6.3 Measuring error for DC voltage measurement

Measurements of small DC voltages may be subject to small measuring inaccuracies, since the voltage inputs are subject to a small non-linearity.

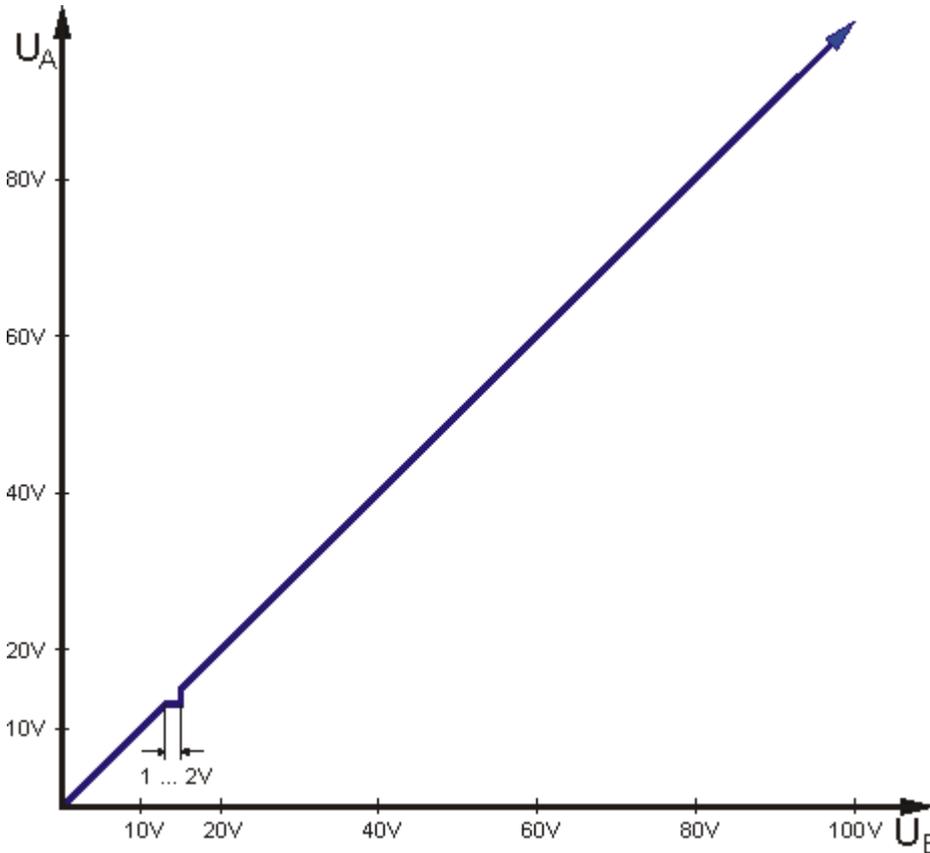


Fig. 33: Measuring error for DC voltage measurement

This stepped drop is approx. 1 to 2 V and typically occurs between 10 and 20 V.

### 6.4 Additional frequency-dependent measuring error

From 70 Hz onwards, there is an additional frequency-dependent measurement error.

<b>Frequency</b>	< 70 Hz	≥ 70 Hz	≥ 75 Hz	≥ 80 Hz	≥ 90 Hz	≥ 100 Hz
<b>Measuring error</b>	< 0.0 %	< 0.2 %	< 0.5 %	< 1.5 %	< 2.0 %	< 3.0 %

This frequency-dependent measurement error must be added to the measurement error specified in the [technical data](#) [► 11].

## 6.5 Beckhoff Identification Code (BIC)

The Beckhoff Identification Code (BIC) is increasingly being applied to Beckhoff products to uniquely identify the product. The BIC is represented as a Data Matrix Code (DMC, code scheme ECC200), the content is based on the ANSI standard MH10.8.2-2016.

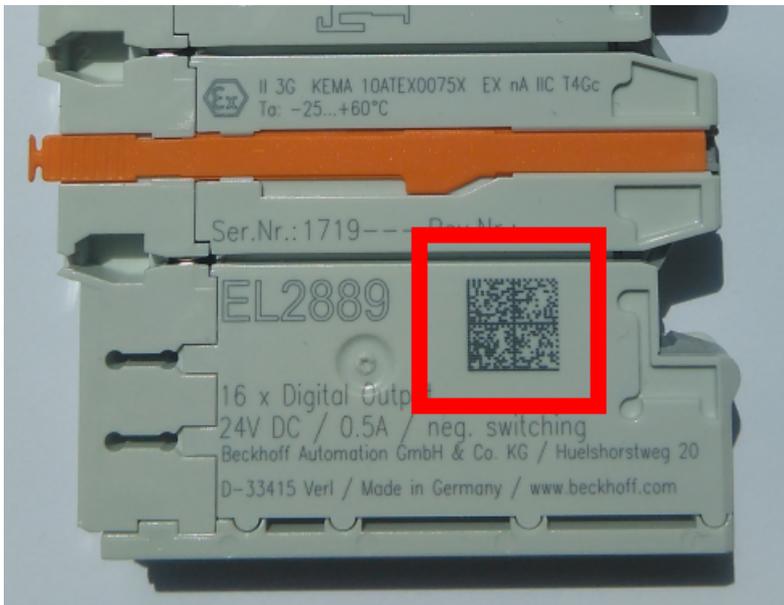


Fig. 34: BIC as data matrix code (DMC, code scheme ECC200)

The BIC will be introduced step by step across all product groups.

Depending on the product, it can be found in the following places:

- on the packaging unit
- directly on the product (if space suffices)
- on the packaging unit and the product

The BIC is machine-readable and contains information that can also be used by the customer for handling and product management.

Each piece of information can be uniquely identified using the so-called data identifier (ANSI MH10.8.2-2016). The data identifier is followed by a character string. Both together have a maximum length according to the table below. If the information is shorter, spaces are added to it.

Following information is possible, positions 1 to 4 are always present, the other according to need of production:

Position	Type of information	Explanation	Data identifier	Number of digits incl. data identifier	Example
1	Beckhoff order number	<b>Beckhoff order number</b>	1P	8	<b>1P</b> 072222
2	Beckhoff Traceability Number (BTN)	<b>Unique serial number, see note below</b>	SBTN	12	<b>SBTN</b> k4p562d7
3	Article description	<b>Beckhoff article description, e.g. EL1008</b>	1K	32	<b>1KEL</b> 1809
4	Quantity	<b>Quantity in packaging unit, e.g. 1, 10, etc.</b>	Q	6	<b>Q1</b>
5	Batch number	Optional: Year and week of production	2P	14	<b>2P</b> 401503180016
6	ID/serial number	Optional: Present-day serial number system, e.g. with safety products	51S	12	<b>51S</b> 678294
7	Variant number	Optional: Product variant number on the basis of standard products	30P	12	<b>30P</b> F971, 2*K183
...					

Further types of information and data identifiers are used by Beckhoff and serve internal processes.

### Structure of the BIC

Example of composite information from positions 1 to 4 and with the above given example value on position 6. The data identifiers are highlighted in bold font:

**1P**072222**SBTN**k4p562d7**1KEL**1809 **Q1** **51S**678294

Accordingly as DMC:



Fig. 35: Example DMC **1P072222SBTN**k4p562d7**1KEL**1809 **Q1** **51S**678294

### BTN

An important component of the BIC is the Beckhoff Traceability Number (BTN, position 2). The BTN is a unique serial number consisting of eight characters that will replace all other serial number systems at Beckhoff in the long term (e.g. batch designations on IO components, previous serial number range for safety products, etc.). The BTN will also be introduced step by step, so it may happen that the BTN is not yet coded in the BIC.

### NOTICE

This information has been carefully prepared. However, the procedure described is constantly being further developed. We reserve the right to revise and change procedures and documentation at any time and without prior notice. No claims for changes can be made from the information, illustrations and descriptions in this documentation.

## 6.6 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages: [www.beckhoff.com](http://www.beckhoff.com)

You will also find further documentation for Beckhoff components there.

### Support

The Beckhoff Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963 157  
e-mail: [support@beckhoff.com](mailto:support@beckhoff.com)  
web: [www.beckhoff.com/support](http://www.beckhoff.com/support)

### Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963 460  
e-mail: [service@beckhoff.com](mailto:service@beckhoff.com)  
web: [www.beckhoff.com/service](http://www.beckhoff.com/service)

### Headquarters Germany

Beckhoff Automation GmbH & Co. KG

Hülshorstweg 20  
33415 Verl  
Germany

Phone: +49 5246 963 0  
e-mail: [info@beckhoff.com](mailto:info@beckhoff.com)  
web: [www.beckhoff.com](http://www.beckhoff.com)

## Table of figures

Fig. 1	KL3403.....	9
Fig. 2	LEDs .....	10
Fig. 3	Voltage $u$ and current $i$ curves .....	12
Fig. 4	Power $s(t)$ curve .....	13
Fig. 5	$u(t)$ , $i(t)$ , $p(t)$ curves with phase shift angle $\varphi$ .....	14
Fig. 6	Four-quadrant representation of active/reactive power in motor and generator mode .....	16
Fig. 7	SCT current transformers - Starting point of the Beckhoff measurement chain.....	18
Fig. 8	Spring contacts of the Beckhoff I/O components .....	19
Fig. 9	Attaching on mounting rail.....	20
Fig. 10	Power contact on left side .....	21
Fig. 11	Disassembling of terminal .....	22
Fig. 12	Standard wiring .....	23
Fig. 13	Pluggable wiring.....	23
Fig. 14	High Density Terminals .....	24
Fig. 15	Connecting a cable on a terminal point.....	25
Fig. 16	Contact assignment .....	27
Fig. 17	Application example - power measurement at a machine .....	29
Fig. 18	Application example - current measurement at a motor .....	30
Fig. 19	Application example - power measurement at a fieldbus station .....	32
Fig. 20	Application example with frequency converter.....	33
Fig. 21	Application example for KL3403-0014 .....	34
Fig. 22	KS2000 configuration software .....	36
Fig. 23	Display of the fieldbus station in KS2000.....	38
Fig. 24	KS2000 branch for channel 1 of the KL3403 .....	38
Fig. 25	Settings via KS2000.....	39
Fig. 26	Settings of KL3314 via visualization of TwinCAT 3.....	55
Fig. 27	Opening the *. tzip archive .....	56
Fig. 28	Search of the existing HW configuration for the EtherCAT configuration of the example.....	56
Fig. 29	Current and sampling curve for input signals within the permitted measuring range.....	59
Fig. 30	Current and sampling curve for 20% overload.....	60
Fig. 31	Current and sampling curve for 50% overload.....	60
Fig. 32	Increase in measuring error " $\Delta$ " with increasing overload.....	61
Fig. 33	Measuring error for DC voltage measurement.....	62
Fig. 34	BIC as data matrix code (DMC, code scheme ECC200) .....	63
Fig. 35	Example DMC 1P072222SBTNk4p562d71KEL1809 Q1 51S678294 .....	64

## **Trademark statements**

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered and licensed trademarks of Beckhoff Automation GmbH.

More Information:  
[www.beckhoff.com/KL3403](http://www.beckhoff.com/KL3403)

Beckhoff Automation GmbH & Co. KG  
Hülshorstweg 20  
33415 Verl  
Germany  
Phone: +49 5246 9630  
[info@beckhoff.com](mailto:info@beckhoff.com)  
[www.beckhoff.com](http://www.beckhoff.com)

