

Documentation | EN

EL5042

2 Channel BiSS-C Interface



Table of contents

| | |
|---|-----------|
| 1 Foreword | 5 |
| 1.1 Notes on the documentation | 5 |
| 1.2 Safety instructions | 6 |
| 1.3 Guide through documentation | 7 |
| 1.4 Documentation issue status | 8 |
| 1.5 Version identification of EtherCAT devices | 9 |
| 1.5.1 General notes on marking | 9 |
| 1.5.2 Version identification of EL terminals | 10 |
| 1.5.3 Beckhoff Identification Code (BIC) | 10 |
| 1.5.4 Electronic access to the BIC (eBIC) | 12 |
| 2 Product overview | 14 |
| 2.1 Introduction | 14 |
| 2.2 Technical data | 15 |
| 2.3 Basics of BiSS-C technology | 16 |
| 2.4 Start | 17 |
| 2.5 Product comparison EL5001, EL5002, EL5042 | 18 |
| 3 Basics communication | 19 |
| 3.1 EtherCAT basics | 19 |
| 3.2 EtherCAT cabling – wire-bound | 19 |
| 3.3 General notes for setting the watchdog | 21 |
| 3.4 EtherCAT State Machine | 22 |
| 3.5 CoE Interface | 24 |
| 3.6 Distributed Clock | 29 |
| 4 Mounting and wiring | 30 |
| 4.1 Instructions for ESD protection | 30 |
| 4.2 Installation on mounting rails | 31 |
| 4.3 Installation instructions for enhanced mechanical load capacity | 34 |
| 4.4 Connection | 35 |
| 4.4.1 Connection system | 35 |
| 4.4.2 Wiring | 37 |
| 4.4.3 Shielding | 38 |
| 4.5 Note - power supply | 38 |
| 4.6 Installation positions | 39 |
| 4.7 Positioning of passive Terminals | 41 |
| 4.8 UL notice | 42 |
| 4.9 LEDs and connection | 43 |
| 4.10 Disposal | 46 |
| 5 Commissioning | 47 |
| 5.1 Quick start | 47 |
| 5.2 TwinCAT Development Environment | 47 |
| 5.2.1 Installation of the TwinCAT real-time driver | 48 |
| 5.2.2 Notes regarding ESI device description | 54 |
| 5.2.3 TwinCAT ESI Updater | 58 |

| | | |
|----------|--|------------|
| 5.2.4 | Distinction between Online and Offline | 58 |
| 5.2.5 | OFFLINE configuration creation..... | 59 |
| 5.2.6 | ONLINE configuration creation | 64 |
| 5.2.7 | EtherCAT subscriber configuration | 72 |
| 5.2.8 | Import/Export of EtherCAT devices with SCI and XTI..... | 82 |
| 5.3 | General Commissioning Instructions for an EtherCAT Slave | 88 |
| 6 | EL5042 - Commissioning | 96 |
| 6.1 | Process data | 96 |
| 6.1.1 | Sync Manager (SM) | 96 |
| 6.1.2 | PDO Assignment..... | 97 |
| 6.1.3 | Predefined PDO Assignment | 98 |
| 6.1.4 | Interpretation of process data | 98 |
| 6.2 | Parameterization | 100 |
| 6.2.1 | Setting the encoder supply voltage..... | 100 |
| 6.2.2 | Parametrization as BiSS-C master | 100 |
| 6.2.3 | Error handling BiSS-C mode..... | 101 |
| 6.2.4 | Parametrization as SSI master | 102 |
| 6.3 | Cycle time | 102 |
| 6.4 | Object description and parameterization..... | 103 |
| 6.4.1 | Restore object..... | 103 |
| 6.4.2 | Configuration data..... | 103 |
| 6.4.3 | Input data | 105 |
| 6.4.4 | Diagnostic data | 105 |
| 6.4.5 | Standard objects | 106 |
| 7 | Diagnostics..... | 111 |
| 7.1 | Diagnostics - basic principles of diag messages..... | 111 |
| 8 | Appendix..... | 121 |
| 8.1 | Firmware compatibility | 121 |
| 8.2 | Firmware Update EL/ES/EM/ELM/EP/EPP/ERPxxxx | 121 |
| 8.2.1 | Device description ESI file/XML | 123 |
| 8.2.2 | Firmware explanation..... | 126 |
| 8.2.3 | Updating controller firmware *.efw | 126 |
| 8.2.4 | FPGA firmware *.rbf..... | 128 |
| 8.2.5 | Simultaneous updating of several EtherCAT devices..... | 132 |
| 8.3 | Restoring the delivery state..... | 133 |
| 8.4 | Support and Service..... | 134 |

1 Foreword

1.1 Notes on the documentation

Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

The qualified personnel is obliged to always use the currently valid documentation.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

Trademarks

Beckhoff®, ATRO®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, MX-System®, Safety over EtherCAT®, TC/BSD®, TwinCAT®, TwinCAT/BSD®, TwinSAFE®, XFC®, XPlanar® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.



EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

Third-party brands

Trademarks of third parties may be used in this documentation. You can find the trademark notices here:

<https://www.beckhoff.com/trademarks>

1.2 Safety instructions

Safety regulations

Please note the following safety instructions and explanations!

Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

Exclusion of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

Signal words

The signal words used in the documentation are classified below. In order to prevent injury and damage to persons and property, read and follow the safety and warning notices.

Personal injury warnings

DANGER

Hazard with high risk of death or serious injury.

WARNING

Hazard with medium risk of death or serious injury.

CAUTION

There is a low-risk hazard that could result in medium or minor injury.

Warning of damage to property or environment

NOTICE

The environment, equipment, or data may be damaged.

Information on handling the product



This information includes, for example:
recommendations for action, assistance or further information on the product.

1.3 Guide through documentation

NOTICE



Further components of documentation

This documentation describes device-specific content. It is part of the modular documentation concept for Beckhoff I/O components. For the use and safe operation of the device / devices described in this documentation, additional cross-product descriptions are required, which can be found in the following table.

| Title | Description |
|---|---|
| EtherCAT System Documentation (PDF) | <ul style="list-style-type: none">• System overview• EtherCAT basics• Cable redundancy• Hot Connect• EtherCAT devices configuration |
| Infrastructure for EtherCAT/Ethernet (PDF) | Technical recommendations and notes for design, implementation and testing |
| Software Declarations I/O (PDF) | Open source software declarations for Beckhoff I/O components |

The documentations can be viewed at and downloaded from the Beckhoff website (www.beckhoff.com) via:

- the “Documentation and Download” area of the respective product page,
- the [Download finder](#),
- the [Beckhoff Information System](#).

If you have any suggestions or proposals for our documentation, please send us an e-mail stating the documentation title and version number to: documentation@beckhoff.com

1.4 Documentation issue status

| Version | Comment |
|---------|---|
| 1.8.0 | <ul style="list-style-type: none"> • Chapter "Guide through documentation" added • Update revision status • Update structure |
| 1.7 | <ul style="list-style-type: none"> • Update chapter "Version identification of EtherCAT devices" • Update chapter "Technical data" • Update chapter "Mounting and wiring" • Correction chapter "Predefined PDO Assignments" • Update structure |
| 1.6 | <ul style="list-style-type: none"> • New Front page • Update chapter "Technical data" • Chapter "Product comparison EL5001, EL5002, EL5042" added • Chapter "UL notice" added • Update structure |
| 1.5 | <ul style="list-style-type: none"> • Update chapter "Diagnostics" • Update chapter "Firmware Update" • Update structure |
| 1.4 | <ul style="list-style-type: none"> • Update chapter "Technical data" • Update chapter "LEDs and connection" • Update structure |
| 1.3 | <ul style="list-style-type: none"> • Update chapter "Process data & parameter setting" • Update structure • Update revision status |
| 1.2 | <ul style="list-style-type: none"> • Update chapter "Object description and parameterization" • Update chapter "Process data & parameter setting" • Update structure |
| 1.1 | <ul style="list-style-type: none"> • Update chapter "Process data" • Update structure |
| 1.0 | <ul style="list-style-type: none"> • Addenda & corrections 1st public issue |
| 0.2 | <ul style="list-style-type: none"> • Addenda & corrections |
| 0.1 | <ul style="list-style-type: none"> • Provisional documentation for EL5042 |

1.5 Version identification of EtherCAT devices

1.5.1 General notes on marking

Designation

A Beckhoff EtherCAT device has a 14-digit designation, made up of

- family key
- type
- version
- revision

| Example | Family | Type | Version | Revision |
|------------------|--|---|--------------------------------|----------|
| EL3314-0000-0016 | EL terminal 12 mm, non-pluggable connection level | 3314 4-channel thermocouple terminal | 0000 basic type | 0016 |
| ES3602-0010-0017 | ES terminal 12 mm, pluggable connection level | 3602 2-channel voltage measurement | 0010 high-precision version | 0017 |
| CU2008-0000-0000 | CU device | 2008 8-port fast ethernet switch | 0000 basic type | 0000 |

Notes

- The elements mentioned above result in the **technical designation**. EL3314-0000-0016 is used in the example below.
- EL3314-0000 is the order identifier, in the case of "-0000" usually abbreviated to EL3314. "-0016" is the EtherCAT revision.
- The **order identifier** is made up of
 - family key (EL, EP, CU, ES, KL, CX, etc.)
 - type (3314)
 - version (-0000)
- The **revision** -0016 shows the technical progress, such as the extension of features with regard to the EtherCAT communication, and is managed by Beckhoff.
In principle, a device with a higher revision can replace a device with a lower revision, unless specified otherwise, e.g. in the documentation.
Associated and synonymous with each revision there is usually a description (ESI, EtherCAT Slave Information) in the form of an XML file, which is available for download from the Beckhoff web site.
From 2014/01 the revision is shown on the outside of the IP20 terminals, see Fig. "EL2872 with revision 0022 and serial number 01200815".
- The type, version and revision are read as decimal numbers, even if they are technically saved in hexadecimal.

1.5.2 Version identification of EL terminals

The serial number/ data code for Beckhoff IO devices is usually the 8-digit number printed on the device or on a sticker. The serial number indicates the configuration in delivery state and therefore refers to a whole production batch, without distinguishing the individual modules of a batch.

Structure of the serial number: **KK YY FF HH**

KK - week of production (CW, calendar week)

YY - year of production

FF - firmware version

HH - hardware version

Example with serial number 12 06 3A 02:

12 - production week 12

06 - production year 2006

3A - firmware version 3A

02 - hardware version 02



Fig. 1: EL2872 with revision 0022 and serial number 01200815

1.5.3 Beckhoff Identification Code (BIC)

The Beckhoff Identification Code (BIC) is increasingly being applied to Beckhoff products to uniquely identify the product. The BIC is represented as a Data Matrix Code (DMC, code scheme ECC200), the content is based on the ANSI standard MH10.8.2-2016.

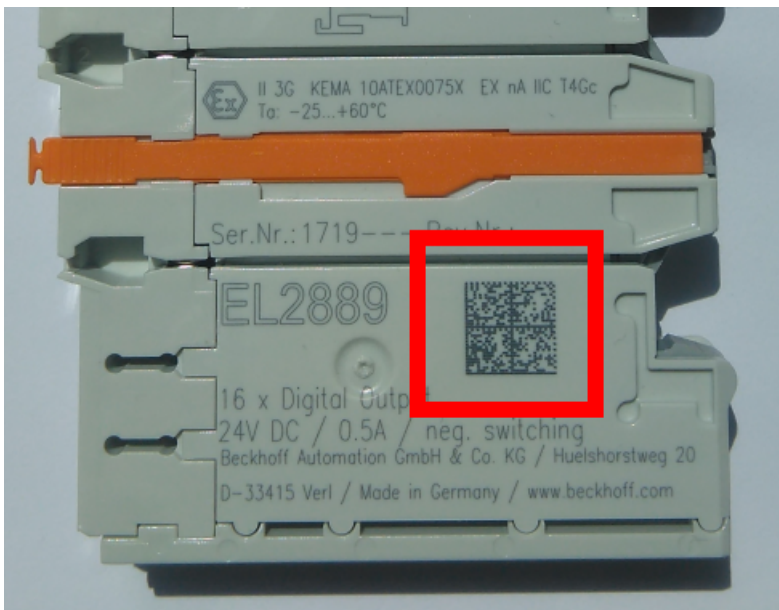


Fig. 2: BIC as data matrix code (DMC, code scheme ECC200)

The BIC will be introduced step by step across all product groups.

Depending on the product, it can be found in the following places:

- on the packaging unit
- directly on the product (if space suffices)
- on the packaging unit and the product

The BIC is machine-readable and contains information that can also be used by the customer for handling and product management.

Each piece of information can be uniquely identified using the so-called data identifier (ANSI MH10.8.2-2016). The data identifier is followed by a character string. Both together have a maximum length according to the table below. If the information is shorter, spaces are added to it.

Following information is possible, positions 1 to 4 are always present, the other according to need of production:

| Position | Type of information | Explanation | Data identifier | Number of digits incl. data identifier | Example |
|----------|------------------------------------|---|-----------------|--|-------------------------|
| 1 | Beckhoff order number | Beckhoff order number | 1P | 8 | 1P 072222 |
| 2 | Beckhoff Traceability Number (BTN) | Unique serial number, see note below | SBTN | 12 | SBTN k4p562d7 |
| 3 | Article description | Beckhoff article description, e.g. EL1008 | 1K | 32 | 1K EL1809 |
| 4 | Quantity | Quantity in packaging unit, e.g. 1, 10, etc. | Q | 6 | Q 1 |
| 5 | Batch number | Optional: Year and week of production | 2P | 14 | 2P 401503180016 |
| 6 | ID/serial number | Optional: Present-day serial number system, e.g. with safety products | 51S | 12 | 51S 678294 |
| 7 | Variant number | Optional: Product variant number on the basis of standard products | 30P | 12 | 30P F971, 2*K183 |
| ... | | | | | |

Further types of information and data identifiers are used by Beckhoff and serve internal processes.

Structure of the BIC

Example of composite information from positions 1 to 4 and with the above given example value on position 6. The data identifiers are highlighted in bold font:

1P072222**SBTN**k4p562d7**1K**EL1809 **Q**1 **51S**678294

Accordingly as DMC:



Fig. 3: Example DMC **1P**072222**SBTN**k4p562d7**1K**EL1809 **Q**1 **51S**678294

BTN

An important component of the BIC is the Beckhoff Traceability Number (BTN, position 2). The BTN is a unique serial number consisting of eight characters that will replace all other serial number systems at Beckhoff in the long term (e.g. batch designations on IO components, previous serial number range for safety products, etc.). The BTN will also be introduced step by step, so it may happen that the BTN is not yet coded in the BIC.

NOTICE

This information has been carefully prepared. However, the procedure described is constantly being further developed. We reserve the right to revise and change procedures and documentation at any time and without prior notice. No claims for changes can be made from the information, illustrations and descriptions in this documentation.

1.5.4 Electronic access to the BIC (eBIC)

Electronic BIC (eBIC)

The Beckhoff Identification Code (BIC) is applied to the outside of Beckhoff products in a visible place. If possible, it should also be electronically readable.

The interface that the product can be electronically addressed by is crucial for the electronic readout.

K-bus devices (IP20, IP67)

Currently, no electronic storage or readout is planned for these devices.


EtherCAT devices (IP20, IP67)

All Beckhoff EtherCAT devices have an ESI-EEPROM which contains the EtherCAT identity with the revision number. The EtherCAT slave information, also colloquially known as the ESI/XML configuration file for the EtherCAT master, is stored in it. See the corresponding chapter in the EtherCAT system manual ([Link](#)) for the relationships.

Beckhoff also stores the eBIC in the ESI-EEPROM. The eBIC was introduced into Beckhoff IO production (terminals, box modules) in 2020; as of 2023, implementation is largely complete.

The user can electronically access the eBIC (if present) as follows:

- With all EtherCAT devices, the EtherCAT master (TwinCAT) can read the eBIC from the ESI-EEPROM
 - From TwinCAT 3.1 build 4024.11, the eBIC can be displayed in the online view.
 - To do this, check the "Show Beckhoff Identification Code (BIC)" checkbox under EtherCAT → Advanced Settings → Diagnostics:

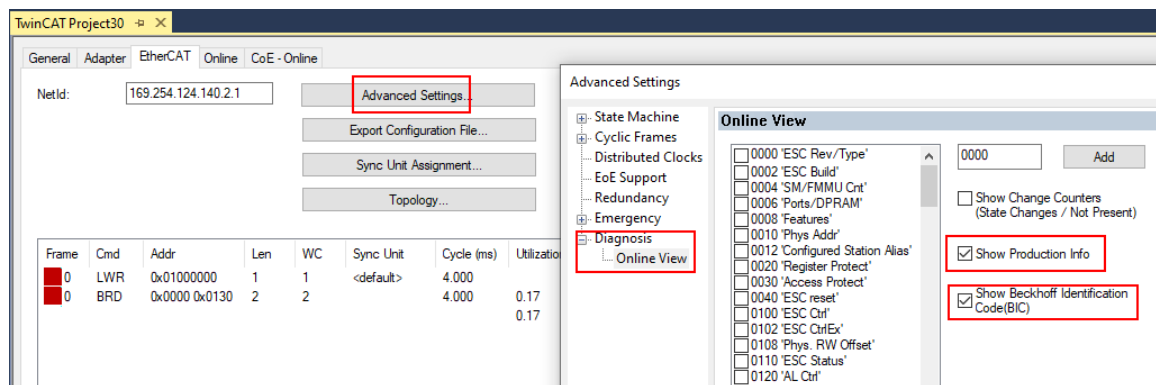

- The BTN and its contents are then displayed:

| No | Addr | Name | State | CRC | Fw | Hw | Production Data | ItemNo | BTN | Description | Quantity | BatchNo | SerialNo |
|----|------|-----------------|-------|-----|----|----|-----------------|--------|----------|-------------|----------|---------|----------|
| 1 | 1001 | Term 1 (EK1100) | OP | 0.0 | 0 | 0 | --- | | | | | | |
| 2 | 1002 | Term 2 (EL1018) | OP | 0.0 | 0 | 0 | 2020 KW36 Fr | 072222 | k4p562d7 | EL1809 | 1 | | 678294 |
| 3 | 1003 | Term 3 (EL3204) | OP | 0.0 | 7 | 6 | 2012 KW24 Sa | | | | | | |
| 4 | 1004 | Term 4 (EL2004) | OP | 0.0 | 0 | 0 | --- | 072223 | k4p562d7 | EL2004 | 1 | | 678295 |
| 5 | 1005 | Term 5 (EL1008) | OP | 0.0 | 0 | 0 | --- | | | | | | |
| 6 | 1006 | Term 6 (EL2008) | OP | 0.0 | 0 | 12 | 2014 KW14 Mo | | | | | | |
| 7 | 1007 | Term 7 (EK1110) | OP | 0 | 1 | 8 | 2012 KW25 Mo | | | | | | |

- Note: As shown in the figure, the production data HW version, FW version, and production date, which have been programmed since 2012, can also be displayed with "Show production info".
- Access from the PLC: From TwinCAT 3.1. build 4024.24, the functions *FB_EcReadBIC* and *FB_EcReadBTN* for reading into the PLC are available in the Tc2_EtherCAT library from v3.3.19.0.
- EtherCAT devices with a CoE directory may also have the object 0x10E2:01 to display their own eBIC, which can also be easily accessed by the PLC:

- The device must be in PREOP/SAFEOP/OP for access:

| Index | Name | Flags | Value |
|---------|---|-------|---|
| 1000 | Device type | RO | 0x015E1389 (22942601) |
| 1008 | Device name | RO | ELM3704-0000 |
| 1009 | Hardware version | RO | 00 |
| 100A | Software version | RO | 01 |
| 100B | Bootloader version | RO | J0.1.27.0 |
| 1011:0 | Restore default parameters | RO | > 1 < |
| 1018:0 | Identity | RO | > 4 < |
| 10E2:0 | Manufacturer-specific Identification C... | RO | > 1 < |
| 10E2:01 | SubIndex 001 | RO | 1P158442SBTN0008jckp1KELM3704 Q1 2P482001000016 |
| 10F0:0 | Backup parameter handling | RO | > 1 < |
| 10F3:0 | Diagnosis History | RO | > 21 < |
| 10F8 | Actual Time Stamp | RO | 0x170fb277e |

- The object 0x10E2 will be preferentially introduced into stock products in the course of necessary firmware revision.
- From TwinCAT 3.1. build 4024.24, the functions *FB_EcCoEReadBIC* and *FB_EcCoEReadBTN* for reading into the PLC are available in the Tc2_EtherCAT library from v3.3.19.0
- The following auxiliary functions are available for processing the BIC/BTN data in the PLC in *Tc2_Uilities* as of TwinCAT 3.1 build 4024.24
 - *F_SplitBIC*: The function splits the Beckhoff Identification Code (BIC) sBICValue into its components using known identifiers and returns the recognized substrings in the ST_SplittedBIC structure as a return value
 - *BIC_TO_BTN*: The function extracts the BTN from the BIC and returns it as a return value
- Note: If there is further electronic processing, the BTN is to be handled as a string(8); the identifier "SBTN" is not part of the BTN.
- Technical background
The new BIC information is written as an additional category in the ESI-EEPROM during device production. The structure of the ESI content is largely dictated by the ETG specifications, therefore the additional vendor-specific content is stored using a category in accordance with the ETG.2010. ID 03 tells all EtherCAT masters that they may not overwrite these data in the event of an update or restore the data after an ESI update.
The structure follows the content of the BIC, see here. The EEPROM therefore requires approx. 50..200 bytes of memory.
- Special cases
 - If multiple hierarchically arranged ESCs are installed in a device, only the top-level ESC carries the eBIC information.
 - If multiple non-hierarchically arranged ESCs are installed in a device, all ESCs carry the eBIC information.
 - If the device consists of several sub-devices which each have their own identity, but only the top-level device is accessible via EtherCAT, the eBIC of the top-level device is located in the CoE object directory 0x10E2:01 and the eBICs of the sub-devices follow in 0x10E2:nn.

PROFIBUS, PROFINET, and DeviceNet devices

Currently, no electronic storage or readout is planned for these devices.

2 Product overview

2.1 Introduction

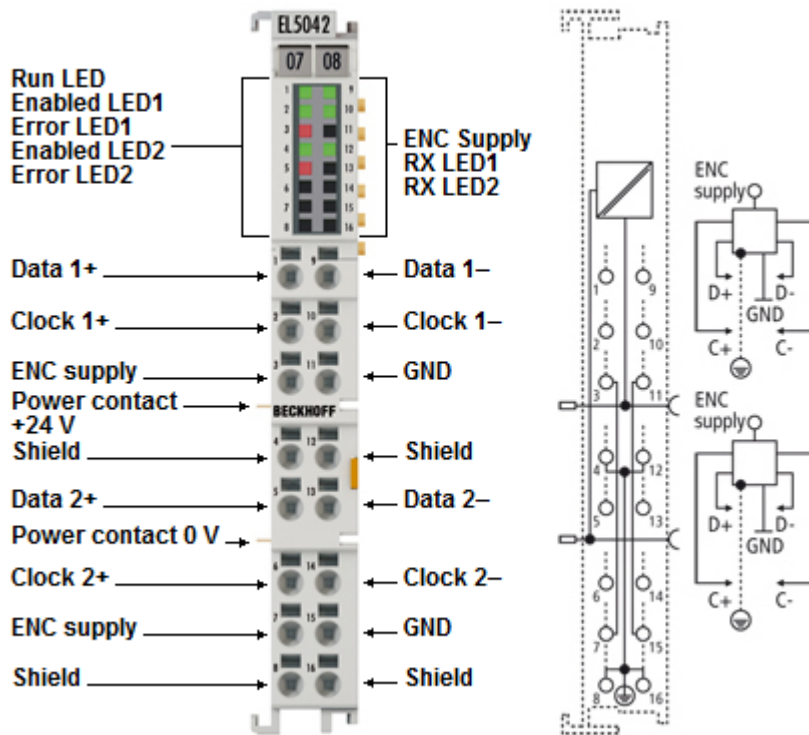


Fig. 4: EL5042

2 channel BiSS-C interface

The EL5042 2-channel BiSS-C interface can be used for direct connection of BiSS-C encoders. As a master, the EL5042 sends the clock signal to the BiSS-C slave (encoder), which transmits the position data. Here a position value can be represented in the process image with up to 64 bits, depending on the resolution of the connected sensor. Furthermore, the EL5042 enables the reading of warning and error status bits, which are represented separately in the process image. Different operation modes, transmission frequencies and frame widths can be configured. The EL5042 supports unidirectional BiSS-C communication.

The EL5042 has distributed clocks, so that the position value can be read with precise system synchronicity. If the distributed clock function is deactivated, the EL5042 cycles are synchronised with the EtherCAT cycle.

Quick links

- [Basic function principles \[► 16\]](#)
- [Quick start \[► 47\]](#)
- [Object description and parameterization \[► 103\]](#)

2.2 Technical data

| Technical data | EL5042 |
|--|--|
| Encoder type | BiSS-C, unidirectional |
| Number of channels | 2 |
| Encoder connection | D+, D-, C+, C- |
| Encoder operating voltage / Encoder supply | optionally 5 V _{DC} or 9 V _{DC} (generated from the 24 V _{DC} power contacts) |
| Encoder output current | max. 0.5 A for both channels |
| Supply voltage electronics | 24 V _{DC} (via power contacts) |
| Resolution | max. 64 bit position, 2 bit status, 8 bit CRC |
| Data transfer rates | up to 10 MHz, variable |
| Current consumption power contacts | typ. 150 mA |
| Current consumption E-bus | typ. 120 mA |
| Distributed clocks | yes |
| Special features | adjustable clock frequency, data length, two status bits (error and warning) can be evaluated separately |
| Configuration | via EtherCAT master/CoE |
| Weight | approx. 50 g |
| Permissible ambient temperature range during operation | 0°C ... +55°C |
| Permissible ambient temperature range during storage | -25°C ... +85°C |
| Permissible relative humidity | 95 %, no condensation |
| Dimensions (W x H x D) | approx. 15 mm x 100 mm x 70 mm (width aligned: 12 mm) |
| Mounting | on 35 mm mounting rail conforms to EN 60715 |
| Vibration/shock resistance | conforms to EN 60068-2-6 / EN 60068-2-27, see also installation instructions for enhanced mechanical load capacity [► 34] |
| EMC immunity/emission | conforms to EN 61000-6-2 / EN 61000-6-4 |
| Protection class | IP20 |
| Installation position | variable |
| Approvals / markings* | CE, EAC, UKCA cULus [► 42] |

*) Real applicable approvals/markings see type plate on the side (product marking).

2.3 Basics of BiSS-C technology

The EL5042 support the unidirectional BiSS-C communication. The transmission of the data is triggered by the master clock. The end of data transmission is identified with the timeout. A typical communication process is following:

1. Idle state: master clock is high and the BiSS-C slave indicates his ready state also with high value.
2. With the first rising edge of the master clock the synchronous position acquisition is started.
3. After the second rising edge of master clock, the slave responds with a low value "Ack" period.
4. After the "Ack" period is completed, the slave generates a "start" bit, which is always followed by a "0" bit. The position data is transferred with the 2nd bit after the start bit, according to the data format of the slave. The communication is synchronized with the master clock. The status bits "Error" and "Warning" and the CRC are transmitted after the position data.
5. The communication ends with the BiSS timeout. No further pulses are send to the slave, master clock set the line to the idle state "1". After the timeout is expired and the slave is ready to transmit new position data, the slave line goes also to the idle state "1". The communication starts again.

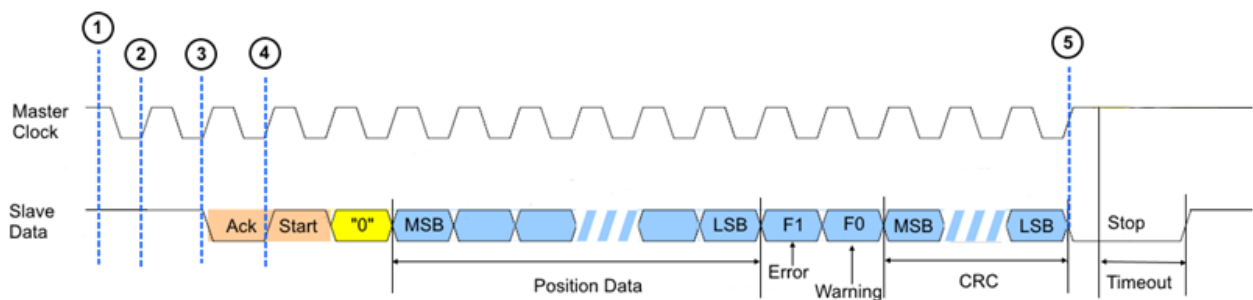


Fig. 5: BiSS-C communication process

2.4 Start

For commissioning:

- mount the EL5042 as explained in the chapter [Mounting and wiring](#) [► 30]
- configure the EL5042 in TwinCAT as described in the chapter [Commissioning](#) [► 47].

For fast commissioning please refer to chapter [Commissioning -> Quick start](#) [► 47].

2.5 Product comparison EL5001, EL5002, EL5042

| Technical Data | EL5001 | EL5002 | EL5042 |
|---|--|--|---|
| Signal type | SSI | SSI | BiSS-C, SSI |
| Number of channels | 1 | 2 | 2 |
| Encoder operating voltage | 24 V (generated from the power contacts) | External | 5 V or 9 V 0,5 A total current (generated from the power contacts) |
| Sampling type | / | Multiplex | Simultaneous |
| Distributed Clocks | Yes | Yes | Yes |
| Coding | Binary code, Gray code | Binary code, Gray code | Binary code, Gray code |
| Max. data length (adjustable) | 32 Bit | 32 Bit | 64 Bit |
| Max. transfer rates | 1 Mbaud / 1 MHz | 1 Mbaud / 1 MHz | 2 Mbaud / 2 MHz (for SSI) |
| Diagnostics per channel | <ul style="list-style-type: none"> • 1 x Error Bit (Power failure) • Frame error • Data Error | <ul style="list-style-type: none"> • 1 x Error Bit (Power failure) • Frame error • Data Error | <ul style="list-style-type: none"> • 2 x Error Bit • Ready bit • Supply voltage present (1 Diag object for both channels, settings from channel 1 apply to both channels) |
| Evaluation of Error-Bits from SSI-Frame | • Power failure Bit (LSB) | • Power failure Bit (LSB) | <ul style="list-style-type: none"> • Warning Bit • Error Bit |
| Additional features | • Inhibit time | <ul style="list-style-type: none"> • Inhibit time • Multiple transmission mode | • Offset LSB Bit |

3 Basics communication

3.1 EtherCAT basics

Please refer to the [EtherCAT System Documentation](#) for the EtherCAT fieldbus basics.

3.2 EtherCAT cabling – wire-bound

The cable length between two EtherCAT devices must not exceed 100 m. This results from the FastEthernet technology, which, above all for reasons of signal attenuation over the length of the cable, allows a maximum link length of 5 + 90 + 5 m if cables with appropriate properties are used. See also the [Design recommendations for the infrastructure for EtherCAT/Ethernet](#).

Cables and connectors

For connecting EtherCAT devices only Ethernet connections (cables + plugs) that meet the requirements of at least category 5 (Cat5) according to EN 50173 or ISO/IEC 11801 should be used. EtherCAT uses 4 wires for signal transfer.

EtherCAT uses RJ45 plug connectors, for example. The pin assignment is compatible with the Ethernet standard (ISO/IEC 8802-3).

| Pin | Color of conductor | Signal | Description |
|-----|--------------------|--------|---------------------|
| 1 | yellow | TD + | Transmission Data + |
| 2 | orange | TD - | Transmission Data - |
| 3 | white | RD + | Receiver Data + |
| 6 | blue | RD - | Receiver Data - |

Due to automatic cable detection (auto-crossing) symmetric (1:1) or cross-over cables can be used between EtherCAT devices from Beckhoff.



Recommended cables

It is recommended to use the appropriate Beckhoff components e.g.

- cable sets ZK1090-9191-xxxx respectively
- RJ45 connector, field assembly ZS1090-0005
- EtherCAT cable, field assembly ZB9010, ZB9020

Suitable cables for the connection of EtherCAT devices can be found on the [Beckhoff website](#)!

E-Bus supply

A bus coupler can supply the EL terminals added to it with the E-bus system voltage of 5 V; a coupler is thereby loadable up to 2 A as a rule (see details in respective device documentation). Information on how much current each EL terminal requires from the E-bus supply is available online and in the catalogue. If the added terminals require more current than the coupler can supply, then power feed terminals (e.g. [EL9410](#)) must be inserted at appropriate places in the terminal strand.

The pre-calculated theoretical maximum E-Bus current is displayed in the TwinCAT System Manager. A shortfall is marked by a negative total amount and an exclamation mark; a power feed terminal is to be placed before such a position.

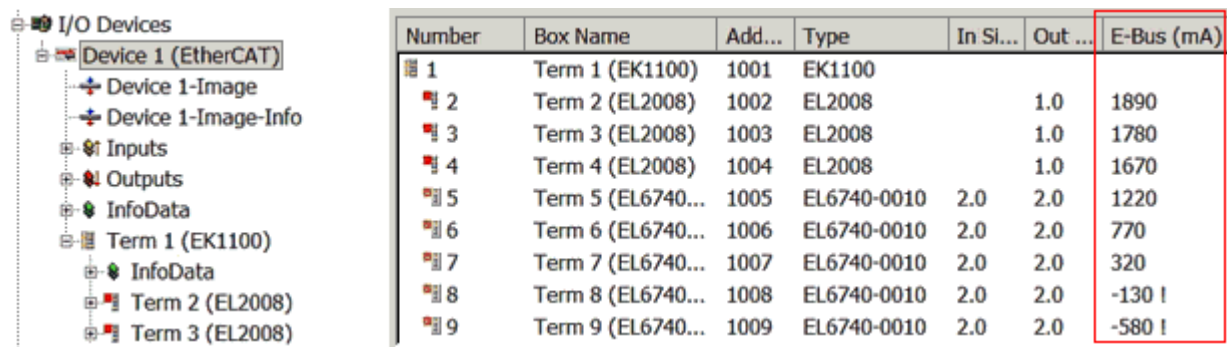


Fig. 6: System manager current calculation

NOTICE

Malfunction possible!

The same ground potential must be used for the E-Bus supply of all EtherCAT terminals in a terminal block!

3.3 General notes for setting the watchdog

The EtherCAT terminals are equipped with a safety device (watchdog) which, e. g. in the event of interrupted process data traffic, switches the outputs (if present) to a presettable state after a presettable time, depending on the device and setting, e. g. to FALSE (off) or an output value.

The EtherCAT slave controller features two watchdogs:

- Sync Manager (SM) watchdog (default: 100 ms)
- Process Data (PDI) watchdog (default: 100 ms)

Their times are individually parameterized in TwinCAT as follows:

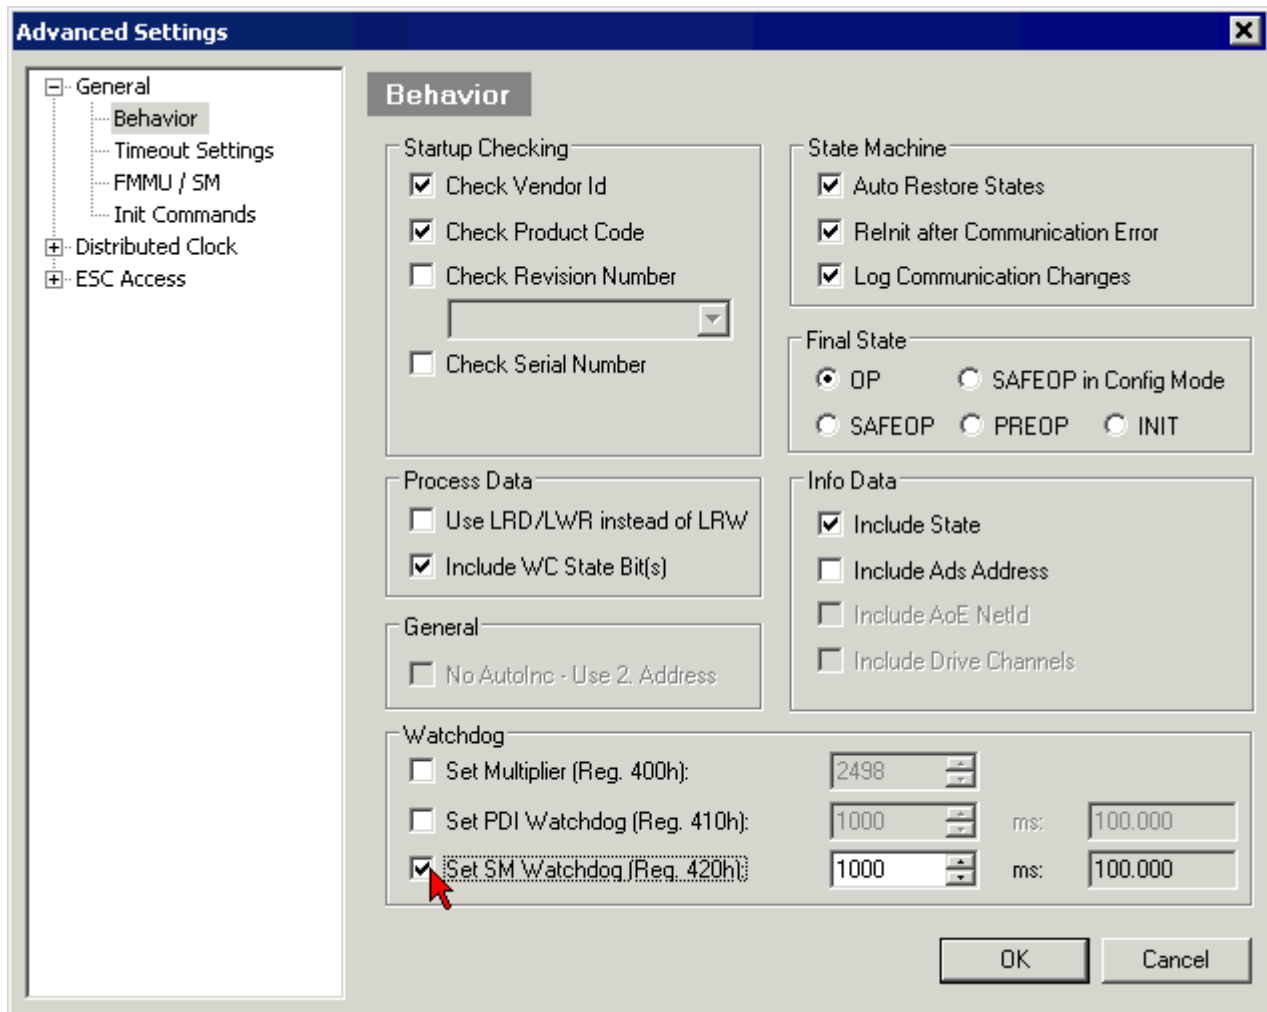


Fig. 7: eEtherCAT tab -> Advanced Settings -> Behavior -> Watchdog

Notes:

- the Multiplier Register 400h (hexadecimal, i. e. 0x0400) is valid for both watchdogs.
- each watchdog has its own timer setting 410h or 420h, which together with the Multiplier results in a resulting time.
- important: the Multiplier/Timer setting is only loaded into the slave at EtherCAT startup if the checkbox in front of it is activated.
- if it is not checked, nothing is downloaded and the setting located in the ESC remains unchanged.
- the downloaded values can be seen in the ESC registers 400h, 410h and 420h: ESC Access -> Memory

SM watchdog (SyncManager Watchdog)

The SyncManager watchdog is reset with each successful EtherCAT process data communication with the terminal. If, for example, no EtherCAT process data communication with the terminal takes place for longer than the set and activated SM watchdog time due to a line interruption, the watchdog is triggered. The status of the terminal (usually OP) remains unaffected. The watchdog is only reset again by a successful EtherCAT process data access.

The SyncManager watchdog is therefore a monitoring for correct and timely process data communication with the ESC from the EtherCAT side.

The maximum possible watchdog time depends on the device. For example, for "simple" EtherCAT slaves (without firmware) with watchdog execution in the ESC it is usually up to 170 seconds. For complex EtherCAT slaves (with firmware) the SM watchdog function is usually parameterized via register 400h/420h but executed by the microcontroller (μ C) and can be significantly lower. In addition, the execution may then be subject to a certain time uncertainty. Since the TwinCAT dialog may allow inputs up to 65535, a test of the desired watchdog time is recommended.

PDI watchdog (Process Data Watchdog)

If there is no PDI communication with the ESC for longer than the set and activated Process Data Interface (PDI) watchdog time, this watchdog is triggered.

The PDI is the internal interface of the ESC, e.g. to local processors in the EtherCAT slave. With the PDI watchdog this communication can be monitored for failure.

The PDI watchdog is therefore a monitoring for correct and timely process data communication with the ESC, but viewed from the application side.

Calculation

Watchdog time = $[1/25 \text{ MHz} * (\text{Watchdog multiplier} + 2)] * \text{SM/PDI watchdog}$

Example: default setting Multiplier = 2498, SM watchdog = 1000 => 100 ms

The value in "Watchdog multiplier + 2" in the formula above corresponds to the number of 40ns base ticks representing one watchdog tick.

CAUTION

Undefined state possible!

The function for switching off the SM watchdog via SM watchdog = 0 is only implemented in terminals from revision -0016. In previous versions this operating mode should not be used.

CAUTION

Damage of devices and undefined state possible!

If the SM watchdog is activated and a value of 0 is entered the watchdog switches off completely. This is the deactivation of the watchdog! Set outputs are NOT set in a safe state if the communication is interrupted.

3.4 EtherCAT State Machine

The state of the EtherCAT slave is controlled via the EtherCAT State Machine (ESM). Depending upon the state, different functions are accessible or executable in the EtherCAT slave. Specific commands must be sent by the EtherCAT master to the device in each state, particularly during the bootup of the slave.

A distinction is made between the following states:

- Init
- Pre-Operational
- Safe-Operational
- Operational

- Bootstrap

The regular state of each EtherCAT slave after bootup is the OP state.

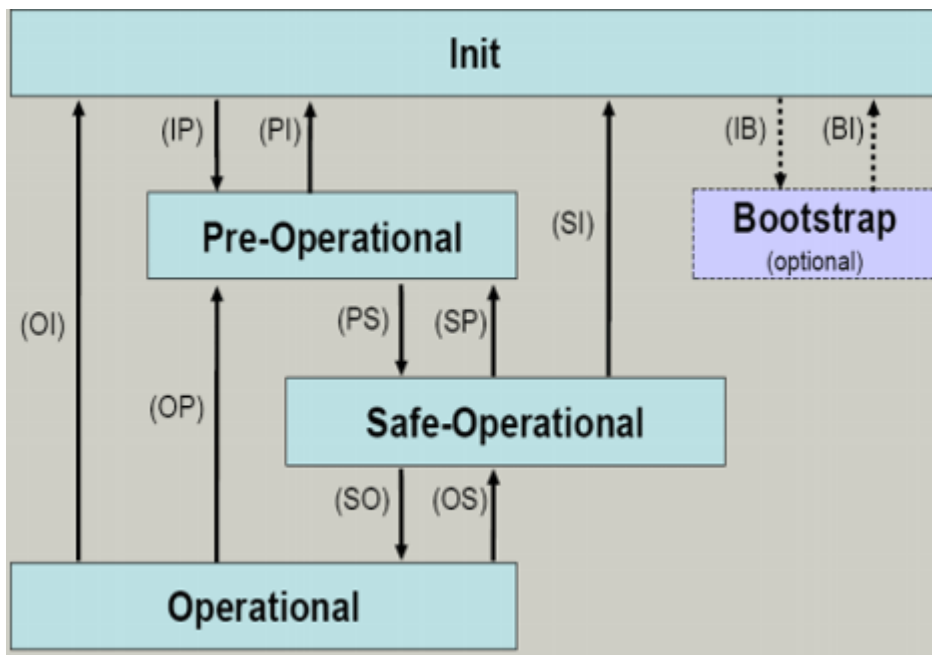


Fig. 8: States of the EtherCAT State Machine

Init

After switch-on the EtherCAT slave in the *Init* state. No mailbox or process data communication is possible. The EtherCAT master initializes sync manager channels 0 and 1 for mailbox communication.

Pre-Operational (Pre-Op)

During the transition between *Init* and *Pre-Op* the EtherCAT slave checks whether the mailbox was initialized correctly.

In *Pre-Op* state mailbox communication is possible, but not process data communication. The EtherCAT master initializes the sync manager channels for process data (from sync manager channel 2), the Fieldbus Memory Management Unit (FMMU) channels and, if the slave supports configurable mapping, PDO mapping or the sync manager PDO assignment. In this state the settings for the process data transfer and perhaps terminal-specific parameters that may differ from the default settings are also transferred.

Safe-Operational (Safe-Op)

During transition between *Pre-Op* and *Safe-Op* the EtherCAT slave checks whether the sync manager channels for process data communication and, if required, the Distributed Clocks settings are correct. Before it acknowledges the change of state, the EtherCAT slave copies current input data into the associated Dual Port (DP)-RAM areas of the ESC.

In *Safe-Op* state mailbox and process data communication is possible, although the slave keeps its outputs in a safe state, while the input data are updated cyclically.

● Outputs in SAFEOP state

I

The default set watchdog monitoring sets the outputs of the ESC module in a safe state - depending on the settings in SAFEOP and OP - e.g. in OFF state. If this is prevented by deactivation of the monitoring in the module, the outputs can be switched or set also in the SAFEOP state.

Operational (Op)

Before the EtherCAT master switches the EtherCAT slave from *Safe-Op* to *Op* it must transfer valid output data.

In the *Op* state the slave copies the output data of the masters to its outputs. Process data and mailbox communication is possible.

Boot

In the *Boot* state the slave firmware can be updated. The *Boot* state can only be reached via the *Init* state.

In the *Boot* state mailbox communication via the file access over EtherCAT (FoE) protocol is possible, but no other mailbox communication and no process data communication.

3.5 CoE Interface

General description

The CoE interface (CAN application protocol over EtherCAT interface) is used for parameter management of EtherCAT devices. EtherCAT slaves or the EtherCAT master manage fixed (read only) or variable parameters which they require for operation, diagnostics or commissioning.

CoE parameters are arranged in a table hierarchy. In principle, the user has access via the fieldbus. The EtherCAT master (TwinCAT System Manager) can access the local CoE lists of the slaves via EtherCAT in read or write mode, depending on the attributes.

Different CoE data types are possible, including string (text), integer numbers, Boolean values or larger byte fields. They can be used to describe a wide range of features. Examples of such parameters include manufacturer ID, serial number, process data settings, device name, calibration values for analog measurement or passwords.

The order is specified in two levels via hexadecimal numbering: (main)index, followed by subindex.

The value ranges are

- Index: 0x0000 ... 0xFFFF (0...65535_{dec})
- Subindex: 0x00...0xFF (0...255_{dec})

A parameter localized in this way is normally written as 0x8010:07, with preceding "0x" to identify the hexadecimal numerical range and a colon between index and subindex.

The relevant ranges for EtherCAT fieldbus users are:

- 0x1000: This is where fixed identity information for the device is stored, including name, manufacturer, serial number etc., plus information about the current and available process data configurations.
- 0x8000: This is where the operational and functional parameters for all channels are stored, such as filter settings or output frequency.

Other important ranges are:

- 0x4000: here are the channel parameters for some EtherCAT devices. Historically, this was the first parameter area before the 0x8000 area was introduced. EtherCAT devices that were previously equipped with parameters in 0x4000 and changed to 0x8000 support both ranges for compatibility reasons and mirror internally.
- 0x6000: Input PDOs ("inputs" from the perspective of the EtherCAT master)
- 0x7000: Output PDOs ("outputs" from the perspective of the EtherCAT master)

● Availability



Not every EtherCAT device must have a CoE list. Simple I/O modules without dedicated processor usually have no variable parameters and therefore no CoE list.

If a device has a CoE list, it is shown in the TwinCAT System Manager as a separate tab with a listing of the elements:

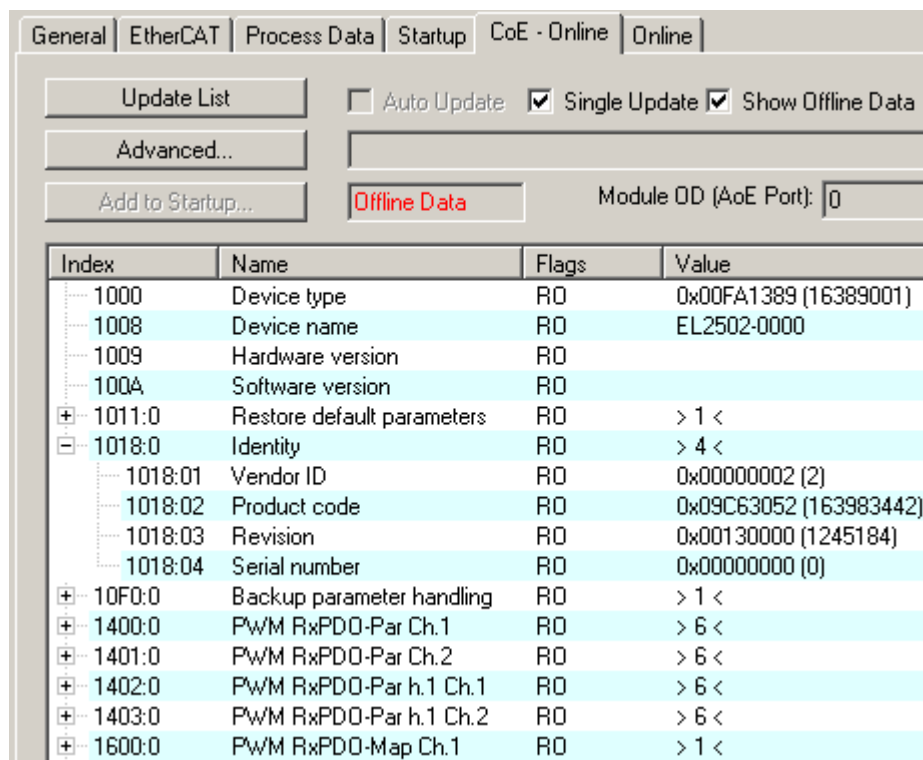


Fig. 9: "CoE Online" tab

The figure "CoE Online" tab shows the CoE objects available in device "EL2502", ranging from 0x1000 to 0x1600. The subindices for 0x1018 are expanded.

NOTICE

Changes in the CoE directory (CAN over EtherCAT directory), program access

When using/manipulating the CoE parameters observe the general CoE notes in chapter "[CoE interface](#)" of the EtherCAT system documentation:

- Keep a startup list if components have to be replaced,
- Distinction between online/offline dictionary,
- Existence of current XML description (download from the [Beckhoff website](#)),
- "CoE-Reload" for resetting the changes
- Program access during operation via PLC (see [TwinCAT 3 | PLC Library: "Tc2_EtherCAT"](#) and [Example program R/W CoE](#))

Data management and function "NoCoeStorage"

Some parameters, particularly the setting parameters of the slave, are configurable and writeable,

- via the System Manager (Fig. "CoE Online" tab) by clicking.
This is useful for commissioning of the system or slaves. Click on the row of the index to be parameterized and enter a value in the "SetValue" dialog.
- from the control system or PLC via ADS, e.g. through blocks from the TcEtherCAT.lib library.
This is recommended for modifications while the system is running or if no System Manager or operating staff are available.

i Data management

If slave CoE parameters are modified online, Beckhoff devices store any changes in a fail-safe manner in the EEPROM, i.e. the modified CoE parameters are still available after a restart. The situation may be different with other manufacturers.

An EEPROM is subject to a limited lifetime with respect to write operations. From typically 100,000 write operations onwards it can no longer be guaranteed that new (changed) data are reliably saved or are still readable. This is irrelevant for normal commissioning. However, if CoE parameters are continuously changed via ADS at machine runtime, it is quite possible for the lifetime limit to be reached. Support for the NoCoeStorage function, which suppresses the saving of changed CoE values, depends on the firmware version.

Please refer to the technical data in this documentation as to whether this applies to the respective device.

- If the function is supported: the function is activated by entering the code word 0x12345678 once in CoE index 0xF008 and remains active as long as the code word is not changed. After switching the device on it is then inactive. Changed CoE values are not saved in the EEPROM and can thus be changed any number of times.
- If the function is not supported: continuous changing of CoE values is not permissible in view of the lifetime limit.

i Startup list

Changes in the local CoE list of the terminal are lost if the terminal is replaced. If a terminal is replaced with a new Beckhoff terminal, it will have the default settings. It is therefore advisable to link all changes in the CoE list of an EtherCAT slave with the Startup list of the slave, which is processed whenever the EtherCAT fieldbus is started. In this way a replacement EtherCAT slave can automatically be parameterized with the specifications of the user.

If EtherCAT slaves are used which are unable to store local CoE values permanently, the Startup list must be used.

Recommended approach for manual modification of CoE parameters

- Make the required change in the System Manager (the values are stored locally in the EtherCAT slave).
- If the value is to be stored permanently, enter it in the Startup list.
The order of the Startup entries is usually irrelevant.

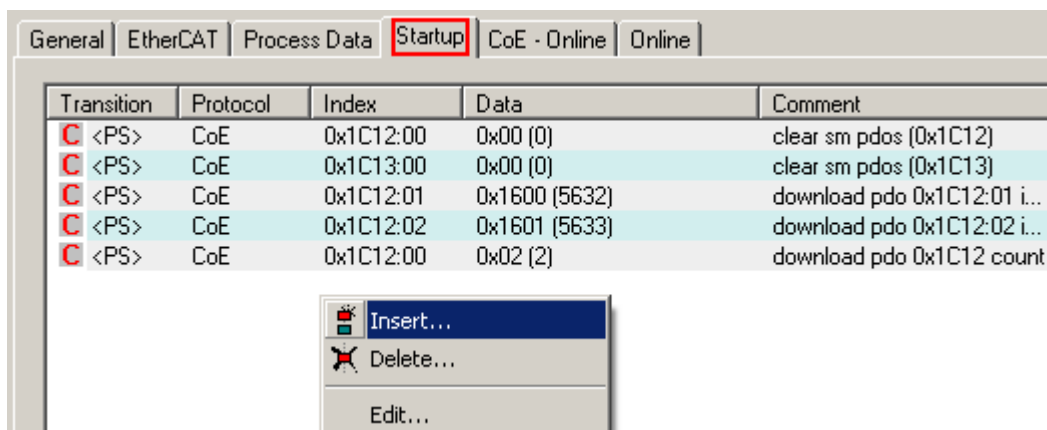


Fig. 10: Startup list in the TwinCAT System Manager


The Startup list may already contain values that were configured by the System Manager based on the ESI specifications. Additional application-specific entries can also be created.

Online / offline list

When working with the TwinCAT System Manager, a distinction must be made as to whether the EtherCAT device is currently "available", i.e. switched on and connected via EtherCAT - i.e. **online** - or whether a configuration is created **offline** without slaves being connected.

In both cases a CoE list as shown in Fig. “CoE online tab” is displayed. The connectivity is shown as offline/online.

- If the slave is offline:
 - The offline list from the ESI file is displayed. In this case modifications are not meaningful or possible.
 - The configured status is shown under Identity.
 - No firmware or hardware version is displayed since these are features of the physical device.
 - **Offline Data** is shown in red.

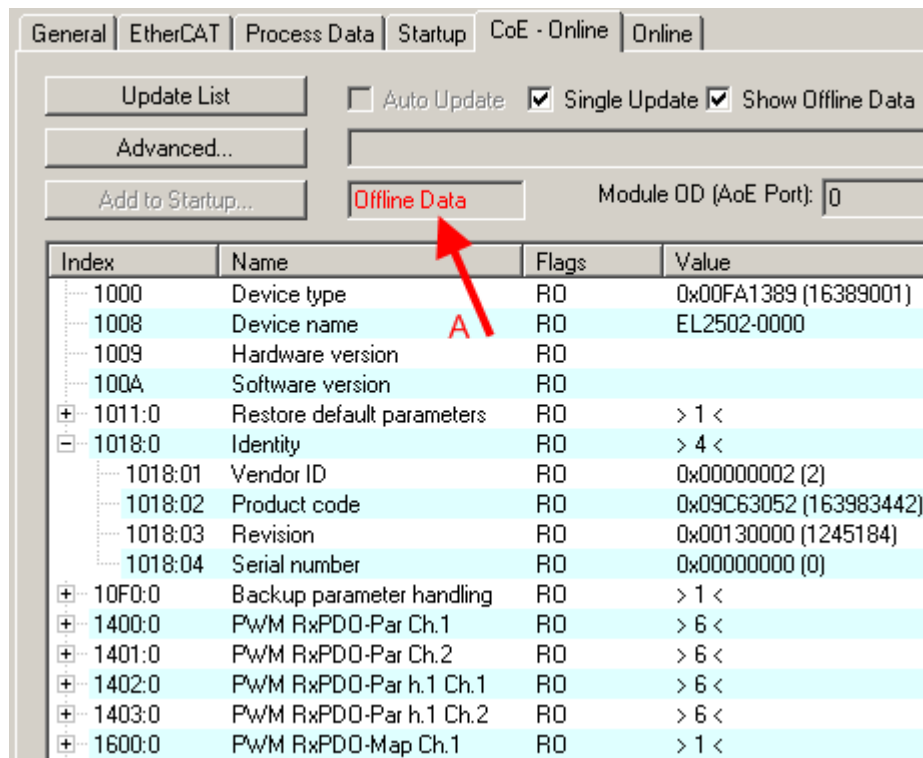

The screenshot shows the 'CoE - Online' tab in a software interface. It includes buttons for 'Update List', 'Advanced...', and 'Add to Startup...'. There are checkboxes for 'Auto Update', 'Single Update', and 'Show Offline Data'. A text field for 'Module OD (AoE Port):' is set to '0'. Below these is a table with columns 'Index', 'Name', 'Flags', and 'Value'. The table lists various device parameters, with the 'Name' column highlighted in red. A red arrow points to the 'Offline Data' label in the 'Name' column header.

| Index | Name | Flags | Value |
|---------|----------------------------|-------|------------------------|
| 1000 | Device type | RO | 0x00FA1389 (16389001) |
| 1008 | Device name | RO | EL2502-0000 |
| 1009 | Hardware version | RO | |
| 100A | Software version | RO | |
| 1011:0 | Restore default parameters | RO | > 1 < |
| 1018:0 | Identity | RO | > 4 < |
| 1018:01 | Vendor ID | RO | 0x00000002 (2) |
| 1018:02 | Product code | RO | 0x09C63052 (163983442) |
| 1018:03 | Revision | RO | 0x00130000 (1245184) |
| 1018:04 | Serial number | RO | 0x00000000 (0) |
| 10F0:0 | Backup parameter handling | RO | > 1 < |
| 1400:0 | PWM RxD0-Par Ch.1 | RO | > 6 < |
| 1401:0 | PWM RxD0-Par Ch.2 | RO | > 6 < |
| 1402:0 | PWM RxD0-Par h.1 Ch.1 | RO | > 6 < |
| 1403:0 | PWM RxD0-Par h.1 Ch.2 | RO | > 6 < |
| 1600:0 | PWM RxD0-Map Ch.1 | RO | > 1 < |

Fig. 11: Offline list

- If the slave is online:
 - The actual current slave list is read. This may take several seconds, depending on the size and cycle time.
 - The actual identity is displayed.
 - The firmware and hardware status of the device is displayed in the CoE.
 - **Online Data** is shown in green.

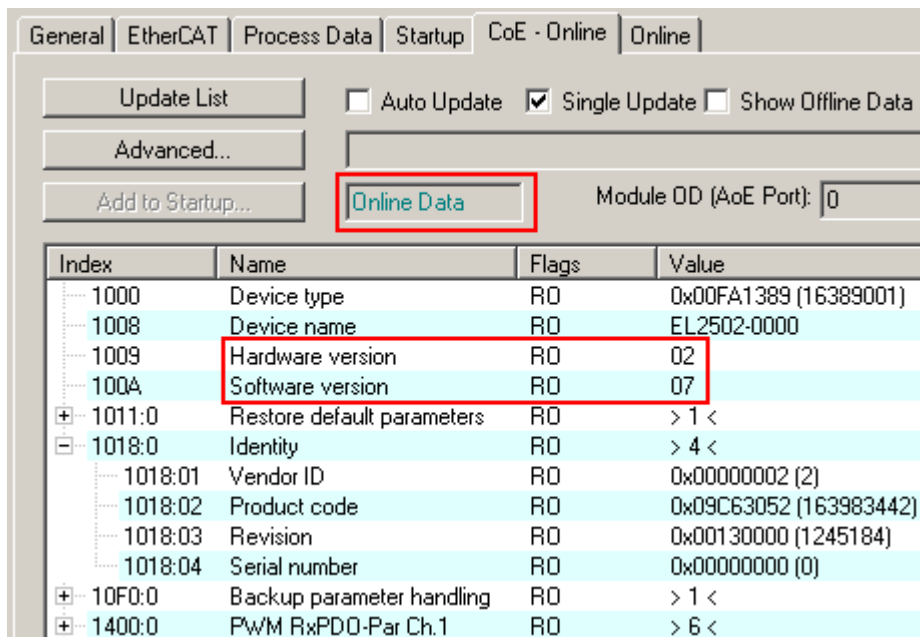


Fig. 12: Online list

Channel-based order

The CoE list is available in EtherCAT devices that usually feature several functionally equivalent channels, for example, a 4-channel analog input terminal also has four logical channels and therefore four identical sets of parameter data for the channels. In order to avoid having to list each channel in the documentation, the placeholder “n” tends to be used for the individual channel numbers.

In the CoE system 16 indices, each with 255 subindices, are generally sufficient for representing all channel parameters. The channel-based order is therefore arranged in 16_{dec} or 10_{hex} steps. The parameter range 0x8000 exemplifies this:

- Channel 0: parameter range 0x8000:00 ... 0x800F:255
- Channel 1: parameter range 0x8010:00 ... 0x801F:255
- Channel 2: parameter range 0x8020:00 ... 0x802F:255
- ...

This is generally written as 0x80n0.

Detailed information on the CoE interface can be found in the [EtherCAT system documentation](#) on the Beckhoff website.

3.6 Distributed Clock

The distributed clock represents a local clock in the EtherCAT slave controller (ESC) with the following characteristics:

- Unit *1 ns*
- Zero point *1.1.2000 00:00*
- Size *64 bit* (sufficient for the next 584 years; however, some EtherCAT slaves only offer 32-bit support, i.e. the variable overflows after approx. 4.2 seconds)
- The EtherCAT master automatically synchronizes the local clock with the master clock in the EtherCAT bus with a precision of < 100 ns.

For detailed information please refer to the [EtherCAT system description](#).

4 Mounting and wiring

4.1 Instructions for ESD protection

NOTICE

Destruction of the devices by electrostatic discharge possible!

The devices contain components at risk from electrostatic discharge caused by improper handling.

- When handling the components, ensure that there is no electrostatic discharge; also avoid touching the spring contacts directly (see illustration).
- Contact with highly insulating materials (synthetic fibers, plastic films, etc.) should be avoided when handling components at the same time.
- When handling the components, ensure that the environment (workplace, packaging and persons) is properly earthed.
- Each bus station must be terminated on the right-hand side with the [EL9011](#) or [EL9012](#) end cap to ensure the degree of protection and ESD protection.

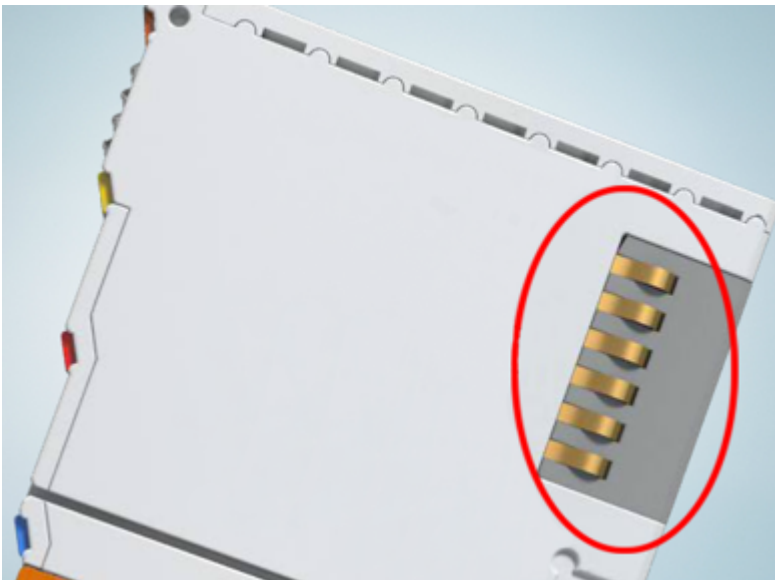


Fig. 13: Spring contacts of the Beckhoff I/O components

4.2 Installation on mounting rails

⚠ WARNING

Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

The Bus Terminal system and is designed for mounting in a control cabinet or terminal box.

Assembly

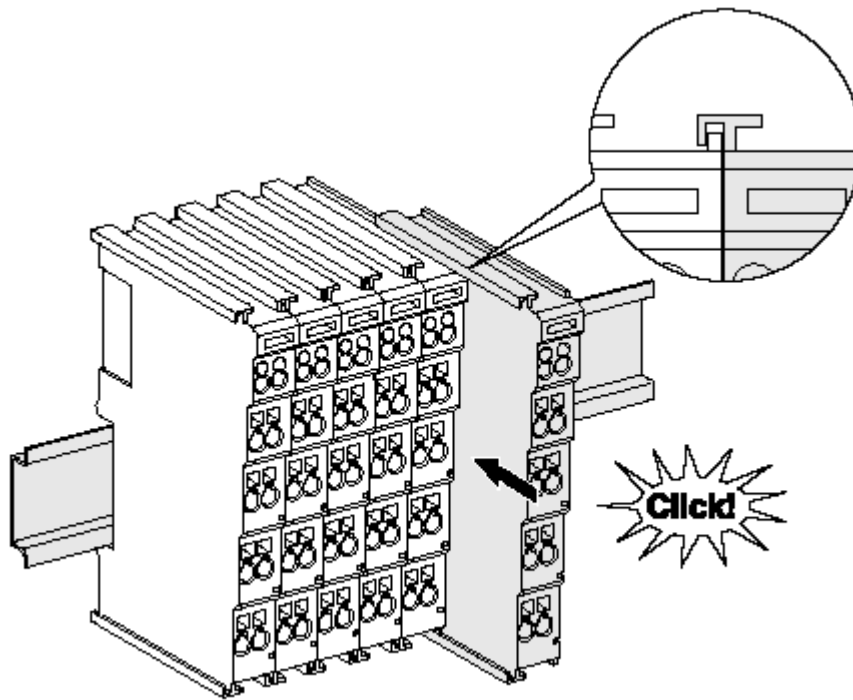


Fig. 14: Attaching on mounting rail

The bus coupler and bus terminals are attached to commercially available 35 mm mounting rails (DIN rails according to EN 60715) by applying slight pressure:

1. First attach the fieldbus coupler to the mounting rail.
2. The bus terminals are now attached on the right-hand side of the fieldbus coupler. Join the components with tongue and groove and push the terminals against the mounting rail, until the lock clicks onto the mounting rail.

If the terminals are clipped onto the mounting rail first and then pushed together without tongue and groove, the connection will not be operational! When correctly assembled, no significant gap should be visible between the housings.

● Fixing of mounting rails

i The locking mechanism of the terminals and couplers extends to the profile of the mounting rail. At the installation, the locking mechanism of the components must not come into conflict with the fixing bolts of the mounting rail. To mount the mounting rails with a height of 7.5 mm under the terminals and couplers, you should use flat mounting connections (e.g. countersunk screws or blind rivets).

Disassembly

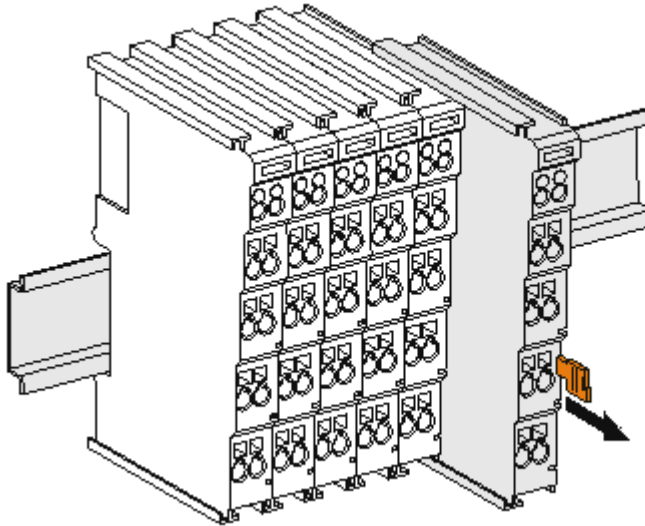


Fig. 15: Disassembling of terminal

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

1. Pull the terminal by its orange-colored lugs approximately 1 cm away from the mounting rail. In doing so for this terminal the mounting rail lock is released automatically and you can pull the terminal out of the bus terminal block easily without excessive force.
2. Grasp the released terminal with thumb and index finger simultaneous at the upper and lower grooved housing surfaces and pull the terminal out of the bus terminal block.

Connections within a bus terminal block

The electric connections between the Bus Coupler and the Bus Terminals are automatically realized by joining the components:

- The six spring contacts of the K-Bus/E-Bus deal with the transfer of the data and the supply of the Bus Terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminals points on the Bus Coupler (up to 24 V) or for higher voltages via power feed terminals.

● Power Contacts

i During the design of a bus terminal block, the pin assignment of the individual Bus Terminals must be taken account of, since some types (e.g. analog Bus Terminals or digital 4-channel Bus Terminals) do not or not fully loop through the power contacts. Power Feed Terminals (KL91xx, KL92xx or EL91xx, EL92xx) interrupt the power contacts and thus represent the start of a new supply rail.

PE power contact

The power contact labeled PE can be used as a protective earth. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

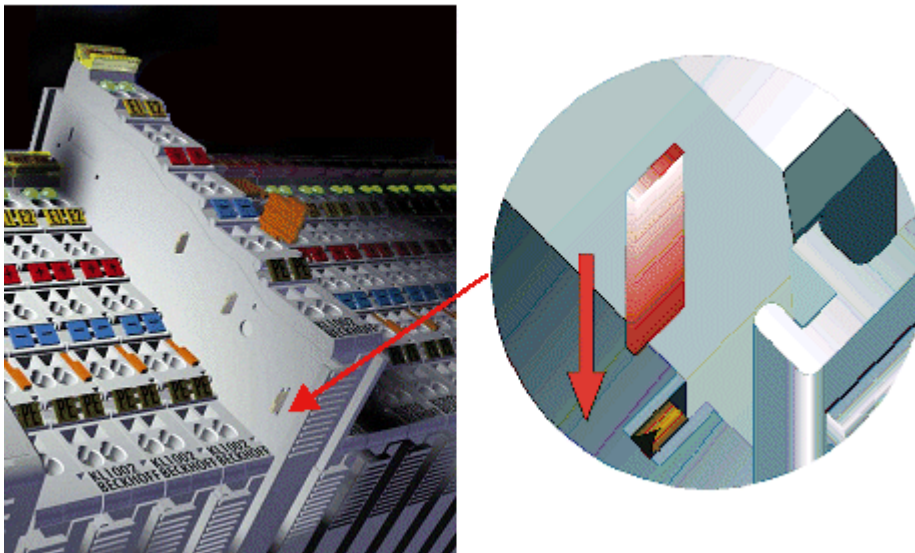


Fig. 16: Power contact on left side

NOTICE

Possible damage of the device

Note that, for reasons of electromagnetic compatibility, the PE contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage on the terminal (e.g. disruptive discharge to the PE line during insulation testing of a consumer with a nominal voltage of 230 V). For insulation testing, disconnect the PE supply line at the Bus Coupler or the Power Feed Terminal! In order to decouple further feed points for testing, these Power Feed Terminals can be released and pulled at least 10 mm from the group of terminals.

⚠ WARNING

Risk of electric shock!

The PE power contact must not be used for other potentials!

4.3 Installation instructions for enhanced mechanical load capacity

WARNING

Risk of injury through electric shock and damage to the device!

Bring the Bus Terminal system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!

Additional checks

The terminals have undergone the following additional tests:

| Verification | Explanation |
|--------------|---|
| Vibration | 10 frequency runs in 3 axes |
| | 6 Hz < f < 60 Hz displacement 0.35 mm, constant amplitude |
| | 60.1 Hz < f < 500 Hz acceleration 5 g, constant amplitude |
| Shocks | 1000 shocks in each direction, in 3 axes |
| | 25 g, 6 ms |

Additional installation instructions and notes

For terminals with enhanced mechanical load capacity, the following additional installation instructions and notes apply:

- The enhanced mechanical load capacity is valid for all permissible installation positions.
- Use a mounting rail according to EN 60715 TH35-15.
- Fix the terminal segment on both sides of the mounting rail with a mechanical fixture, e.g. an earth terminal or reinforced end clamp.
- The maximum total extension of the terminal segment (without coupler) is:
64 terminals (12 mm mounting width) or 32 terminals (24 mm mounting width)
- Avoid deformation, twisting, crushing and bending of the mounting rail during edging and installation of the rail.
- The mounting points of the mounting rail must be set at 5 cm intervals.
- Use countersunk head screws to fasten the mounting rail.
- The free length between the strain relief and the wire connection should be kept as short as possible. A distance of approx. 10 cm should be maintained to the cable duct.

4.4 Connection

4.4.1 Connection system

⚠ WARNING

Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

Overview

The bus terminal system offers different connection options for optimum adaptation to the respective application:

- The terminals of ELxxxx and KLxxxx series with standard wiring include electronics and connection level in a single enclosure.
- The terminals of ESxxxx and KSxxxx series feature a pluggable connection level and enable steady wiring while replacing.
- The High Density Terminals (HD Terminals) include electronics and connection level in a single enclosure and have advanced packaging density.

Standard wiring (ELxxxx / KLxxxx)



Fig. 17: Standard wiring

The terminals of the ELxxxx and KLxxxx series integrate screwless spring-cage technology for quick and easy wiring.

Pluggable wiring (ESxxxx / KSxxxx)



Fig. 18: Pluggable wiring

The terminals of ESxxxx and KSxxxx series feature a pluggable connection level. The assembly and wiring procedure is the same as for the ELxxxx and KLxxxx series. The pluggable connection level enables the complete wiring to be removed as a plug connector from the top of the housing for servicing. The lower section can be removed from the terminal block by pulling the unlocking tab. Insert the new component and plug in the connector with the wiring. This reduces the installation time and eliminates the risk of wires being mixed up.

The familiar dimensions of the terminal only had to be changed slightly. The new connector adds about 3 mm. The maximum height of the terminal remains unchanged.

A tab for strain relief of the cable simplifies assembly in many applications and prevents tangling of individual connection wires when the connector is removed.

Conductor cross sections between 0.08 mm² and 2.5 mm² can continue to be used with the proven spring force technology.

The overview and nomenclature of the product names for ESxxxx and KSxxxx series has been retained as known from ELxxxx and KLxxxx series.

High Density Terminals (HD Terminals)



Fig. 19: High Density Terminals

The terminals from these series with 16/32 terminal points are distinguished by a particularly compact design, as the packaging density is twice as large as that of the standard 12 mm bus terminals. Massive conductors and conductors with a wire end sleeve can be inserted directly into the spring loaded terminal point without tools.



Wiring HD Terminals

The High Density Terminals of the ELx8xx and KLx8xx series doesn't support pluggable wiring.

Ultrasonically compacted (ultrasonically welded) strands



Ultrasonically compacted (ultrasonically welded) strands

Ultrasonically compacted (ultrasonically welded) strands can also be connected to the standard and high-density terminals. In this case, please note the tables concerning the wire-size width [► 38]!

4.4.2 Wiring

⚠ WARNING

Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the bus terminals!

Terminals for standard wiring ELxxxx/KLxxxx and for pluggable wiring ESxxxx/KSxxxx

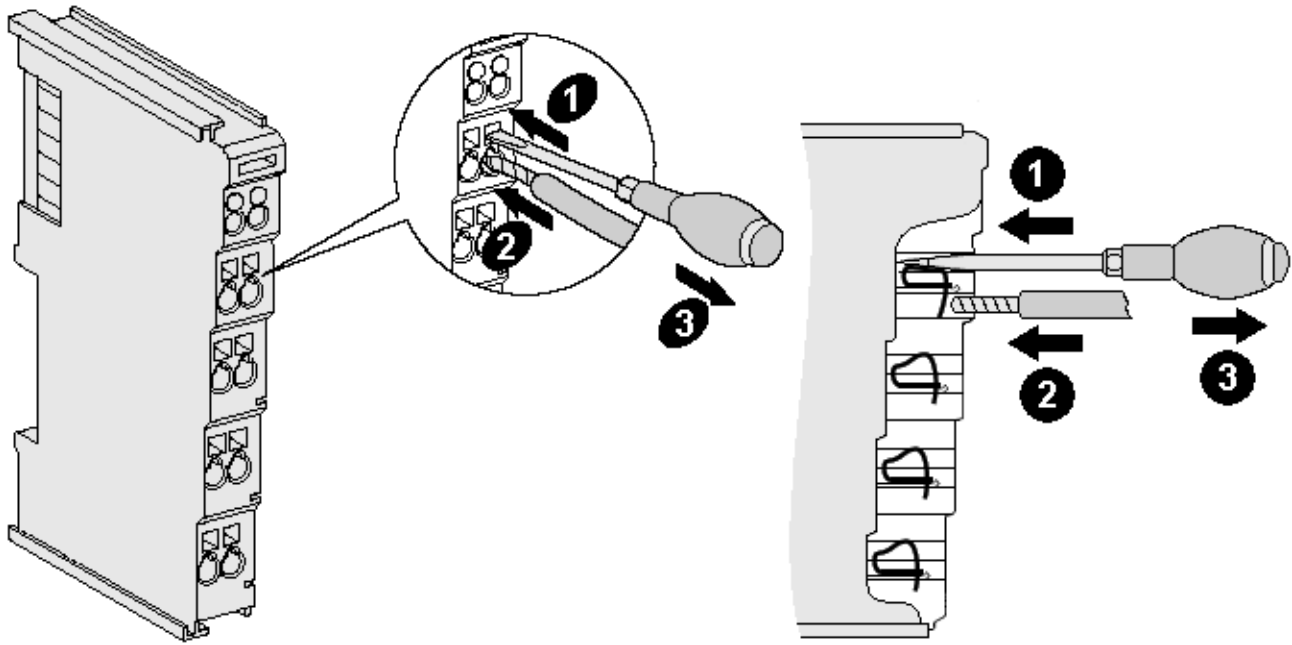


Fig. 20: Connecting a cable on a terminal point

Up to eight terminal points enable the connection of solid or finely stranded cables to the bus terminal. The terminal points are implemented in spring force technology. Connect the cables as follows (see fig. "Connecting a cable on a terminal point"):

1. Open a terminal point by pushing a screwdriver straight against the stop into the square opening above the terminal point. Do not turn the screwdriver or move it alternately (don't toggle).
2. The wire can now be inserted into the round terminal opening without any force.
3. When the screwdriver is removed, the terminal point closes automatically and holds the wire securely and permanently in place

See the following table for the suitable wire size width:

| Terminal housing | ELxxxx, KLxxxx | ESxxxx, KSxxxx |
|---|------------------------------|------------------------------|
| Wire size width (single core wires) | 0.08 ... 2.5 mm ² | 0.08 ... 2.5 mm ² |
| Wire size width (fine-wire conductors) | 0.08 ... 2.5 mm ² | 0.08 ... 2.5 mm ² |
| Wire size width (conductors with a wire end sleeve) | 0.14 ... 1.5 mm ² | 0.14 ... 1.5 mm ² |
| Wire stripping length | 8 ... 9 mm | 9 ... 10 mm |

High Density Terminals (**HD Terminals** [► 36]) with 16/32 terminal points

The conductors of the HD Terminals are connected without tools for single-wire conductors using the direct plug-in technique, i.e. after stripping the wire is simply plugged into the terminal point. The cables are released, as usual, using the contact release with the aid of a screwdriver. See the following table for the suitable wire size width.

| Terminal housing | High Density Housing |
|--|--|
| Wire size width (single core wires) | 0.08 ... 1.5 mm ² |
| Wire size width (fine-wire conductors) | 0.25 ... 1.5 mm ² |
| Wire size width (conductors with a wire end sleeve) | 0.14 ... 0.75 mm ² |
| Wire size width (ultrasonically compacted [ultrasonically welded] strands) | only 1.5 mm ² (see notice [► 36]) |
| Wire stripping length | 8 ... 9 mm |

4.4.3 Shielding



Shielding

Encoder, analog sensors and actuators should always be connected with shielded, twisted paired wires.

4.5 Note - power supply

⚠ WARNING

Power supply from SELV / PELV power supply unit!

SELV / PELV circuits (safety extra-low voltage / protective extra-low voltage) according to IEC 61010-2-201 must be used to supply this device.

Notes:

- SELV / PELV circuits may give rise to further requirements from standards such as IEC 60204-1 et al, for example with regard to cable spacing and insulation.
- A SELV supply provides safe electrical isolation and limitation of the voltage without a connection to the protective conductor, a PELV supply also requires a safe connection to the protective conductor.

4.6 Installation positions

NOTICE

Constraints regarding installation position and operating temperature range

Please refer to the technical data for a terminal to ascertain whether any restrictions regarding the installation position and/or the operating temperature range have been specified. When installing high power dissipation terminals ensure that an adequate spacing is maintained between other components above and below the terminal in order to guarantee adequate ventilation!

Optimum installation position (standard)

The optimum installation position requires the mounting rail to be installed horizontally and the connection surfaces of the EL- / KL terminals to face forward (see Fig. "Recommended distances for standard installation position"). The terminals are ventilated from below, which enables optimum cooling of the electronics through convection. "From below" is relative to the acceleration of gravity.

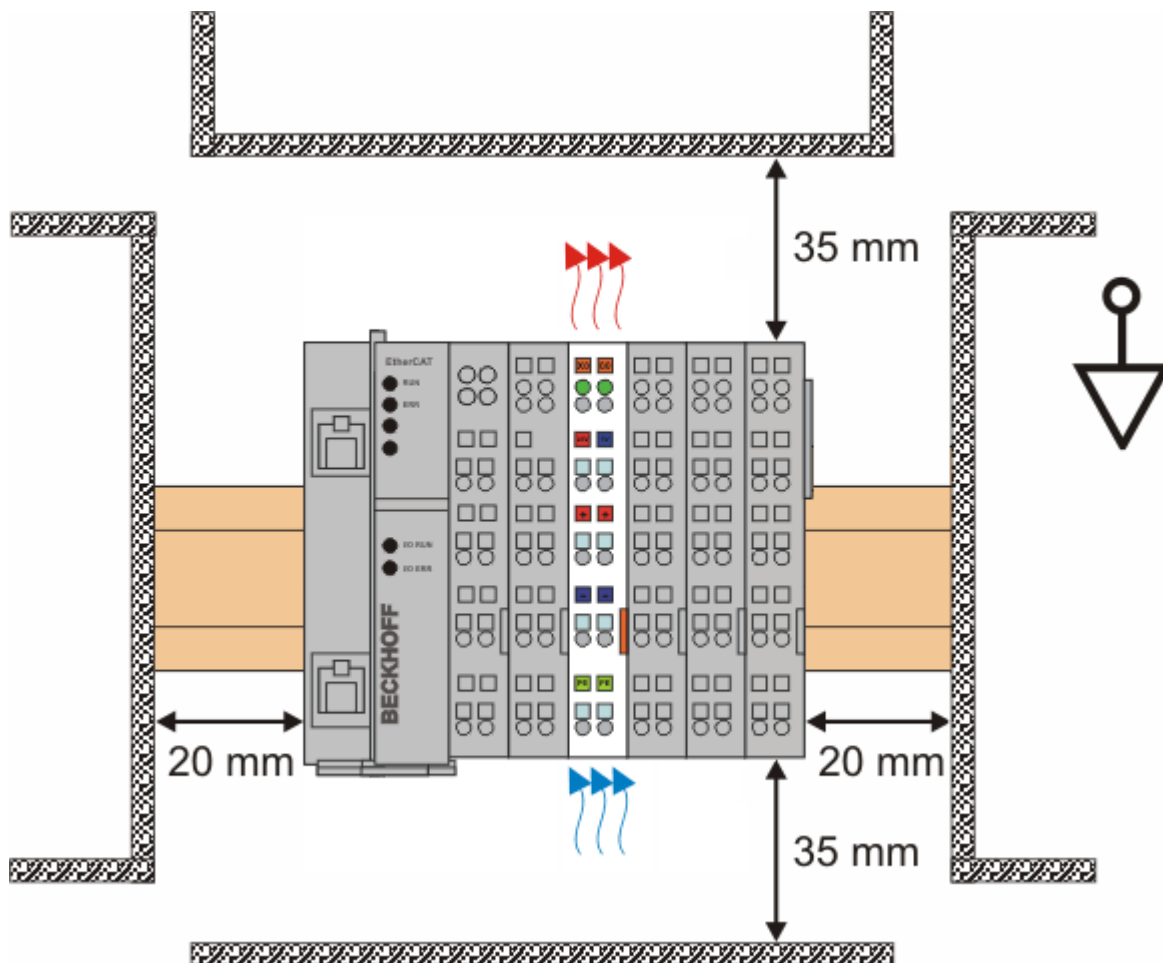


Fig. 21: Recommended distances for standard installation position

Compliance with the distances shown in Fig. "Recommended distances for standard installation position" is recommended.

Other installation positions

All other installation positions are characterized by different spatial arrangement of the mounting rail - see Fig "Other installation positions".

The minimum distances to ambient specified above also apply to these installation positions.

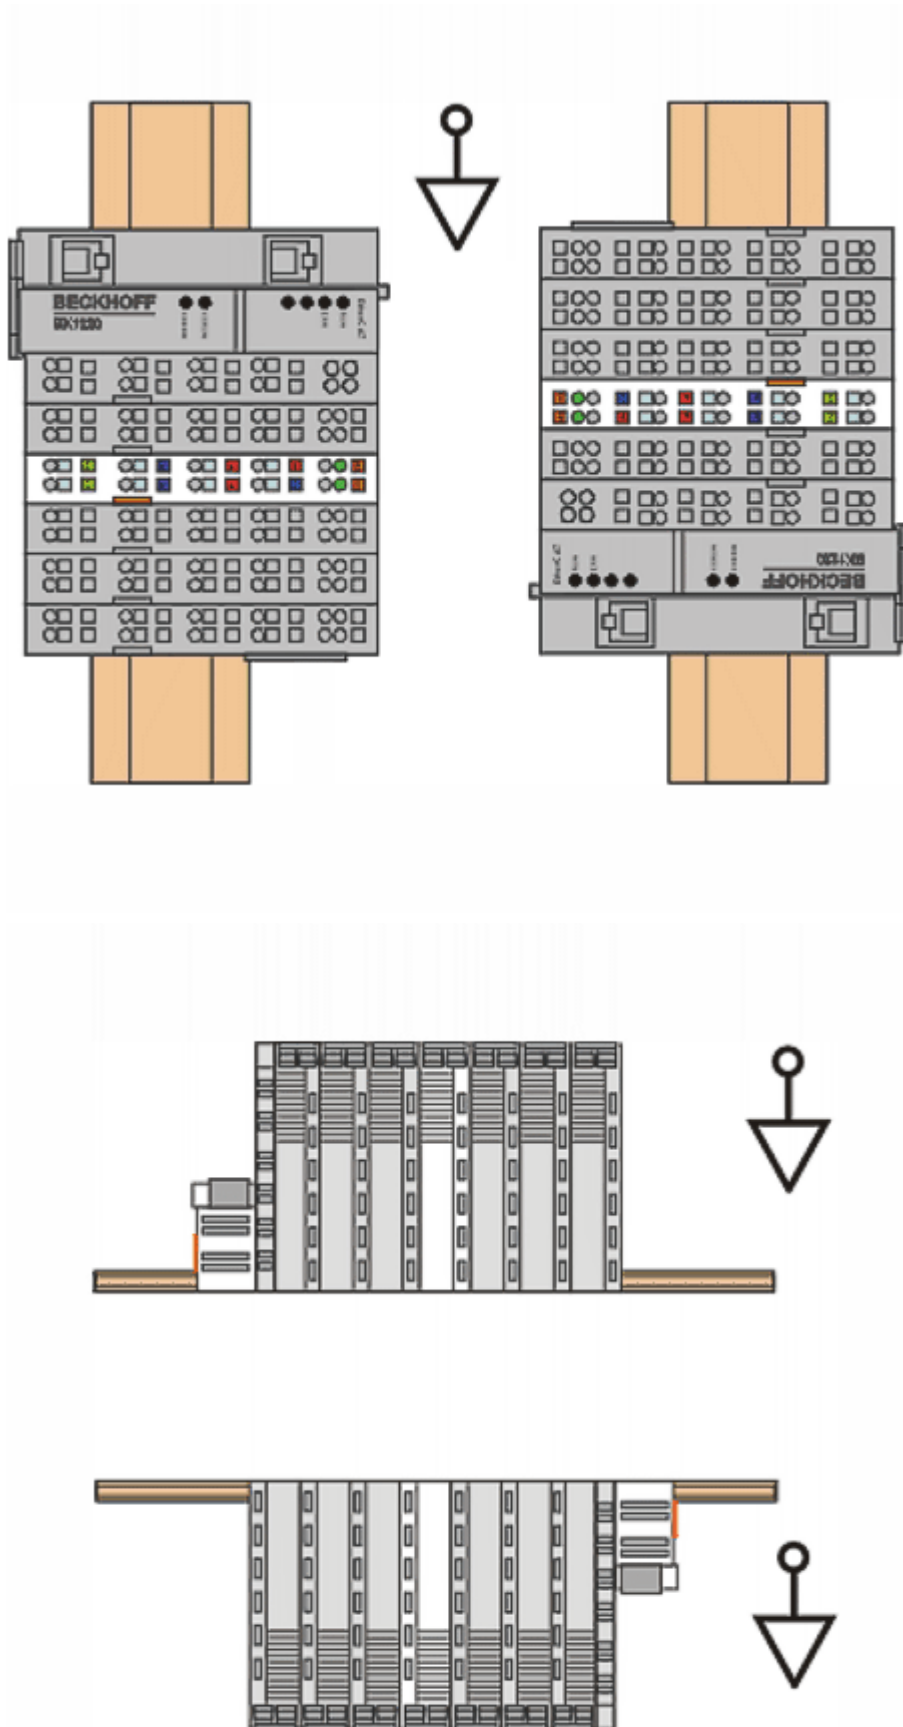


Fig. 22: Other installation positions

4.7 Positioning of passive Terminals

i Hint for positioning of passive terminals in the bus terminal block

EtherCAT Terminals (ELxxxx / ESxxxx), which do not take an active part in data transfer within the bus terminal block are so called passive terminals. The passive terminals have no current consumption out of the E-Bus.

To ensure an optimal data transfer, you must not directly string together more than two passive terminals!

Examples for positioning of passive terminals (highlighted)

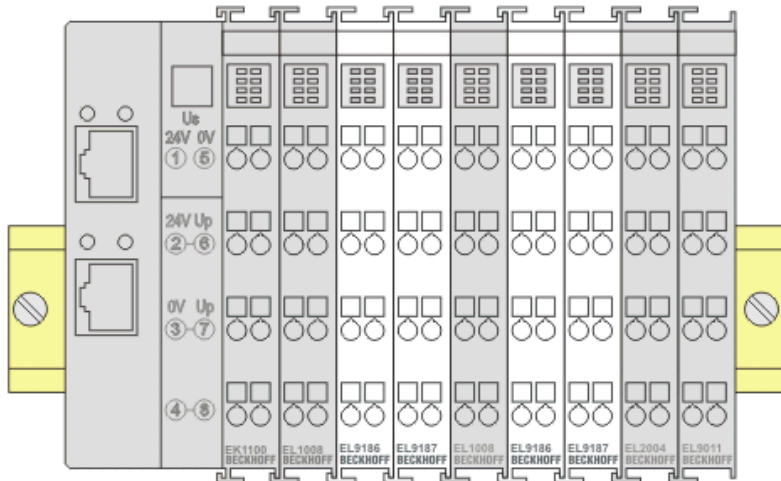


Fig. 23: Correct positioning

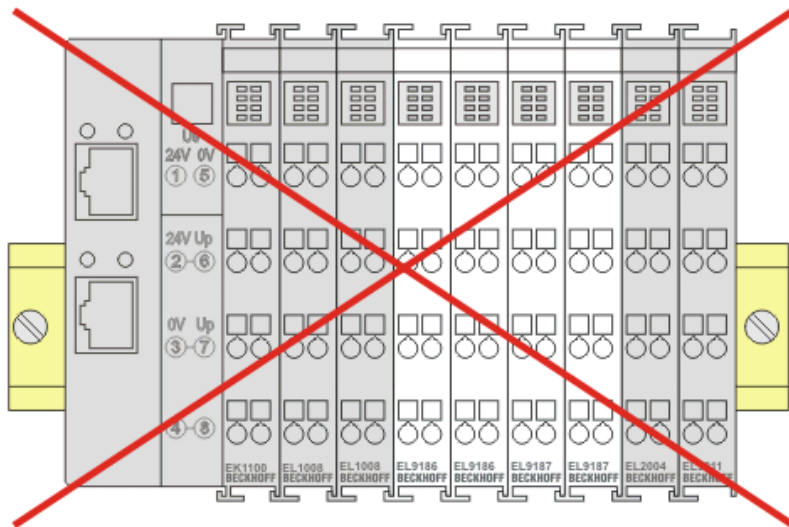





Fig. 24: Incorrect positioning

4.8 UL notice

| ⚠ CAUTION | |
|---|---|
|  | Application Beckhoff EtherCAT modules are intended for use with Beckhoff's UL Listed EtherCAT System only. |
| ⚠ CAUTION | |
|  | Examination For cULus examination, the Beckhoff I/O System has only been investigated for risk of fire and electrical shock (in accordance with UL508 and CSA C22.2 No. 142). |
| ⚠ CAUTION | |
|  | For devices with Ethernet connectors Not for connection to telecommunication circuits. |

Basic principles

UL certification according to UL508. Devices with this kind of certification are marked by this sign:



4.9 LEDs and connection

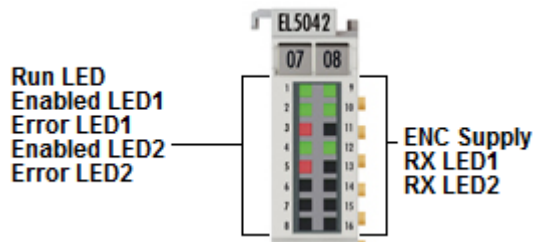


Fig. 25: EL5042 - LEDs

NOTICE

Possible damage of devices: Note encoder supply voltage!

Note the limit values for the supply voltage specified in the data sheets of the encoder manufacturers. The encoder supply voltage may have to be adjusted in object [0x80p8:12 \[► 104\]](#) (5 V or 9 V)!

LEDs

| LED | Color | Meaning | |
|--------------------------------|-------|--------------|---|
| RUN (1) | green | | This LED indicates the terminal's operating state: |
| | | off | State of the EtherCAT State Machine: INIT = initialization of the terminal |
| | | flashing | State of the EtherCAT State Machine: PREOP = function for mailbox communication and different standard-settings set |
| | | single flash | State of the EtherCAT State Machine: SAFEOP = verification of the sync manager channels and the distributed clocks. Outputs remain in safe state |
| | | on | State of the EtherCAT State Machine: OP = normal operating state; mailbox and process data communication is possible |
| | | flickering | State of the EtherCAT State Machine: BOOTSTRAP = function for terminal firmware updates |
| ENABLED 1 (2) ENABLED 2 (4) | green | ON | Connected encoder for the corresponding channel initialized and ready for operation (Ready bit is set) |
| | | OFF | Connected encoder for the corresponding channel not ready for operation (Ready bit is not set) |
| ERROR 1 (3) ERROR 2 (5) | red | ON | No encoder connected to the corresponding channel, or position values invalid (TxPDO bit set) |
| | | OFF | No error |
| ENC SUPPLY (9) | green | ON | Encoder voltage present |
| | | OFF | 24 V field voltage missing or encoder voltage overload |
| RX 1 (10) RX 2 (12) | green | FLASHES | Terminal receives position values at the corresponding channel |

Connection

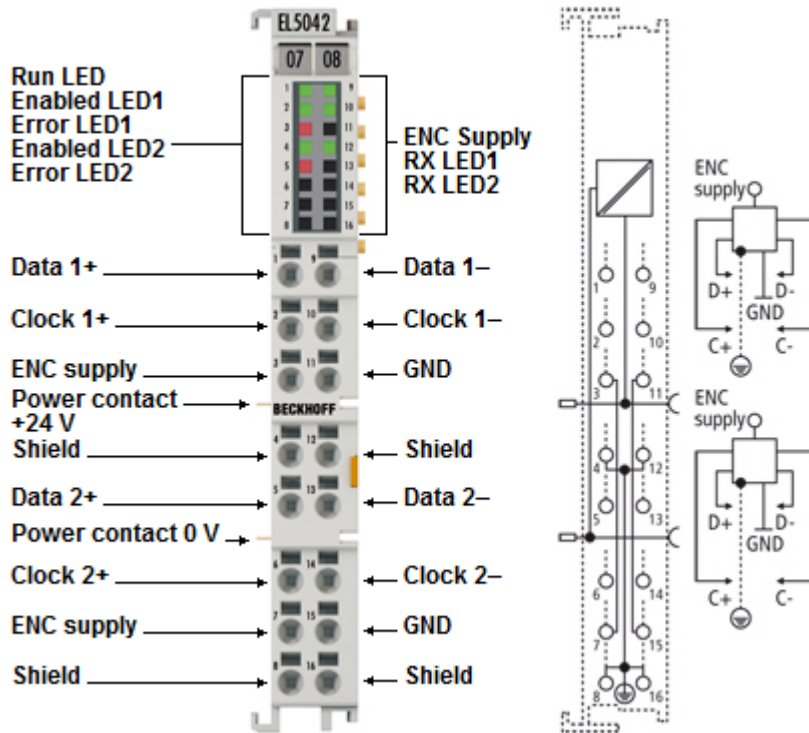


Fig. 26: EL5042 - Connection

NOTICE

Encoder supply via the terminal

The encoder supply voltage (5 V or 9 V), which can be set in object `0x80p8:12` [► 104], can be taken from the terminal points 3 (channel 1) and 7 (channel 2).

| Terminal point | | Description |
|----------------|-----|--|
| Name | No. | |
| Data 1+ | 1 | Data + input (channel 1) |
| Clock 1+ | 2 | Clock + input (channel 1) |
| 5 V / 9 V | 3 | Supply voltage for encoder (+5 V / +9 V) |
| Shield | 4 | Shield |
| Data 2+ | 5 | Data + input (channel 2) |
| Clock 2+ | 6 | Clock + input (channel 2) |
| 5 V / 9 V | 7 | Supply voltage for encoder (+5 V / +9 V) |
| Shield | 8 | Shield |
| Data 1- | 9 | Data - input (channel 1) |
| Clock 1- | 10 | Clock - input (channel 1) |
| GND | 11 | Ground |
| Shield | 12 | Shield |
| Data 2- | 13 | Data - input (channel 2) |
| Clock 2- | 14 | Clock - input (channel 2) |
| GND | 15 | Ground |
| Shield | 16 | Shield |

Data transfer medium

The BiSS-C and also SSI information (Clock and Data) are transmitted as differential signals. To ensure a good EMC immunity, also for long distances, shielded cables with twisted pair conductors should be used. The cable shield should be connected to earth at both channel ends and the two end devices should be always at the same reference potential. When using external shielded cables, particular care should be paid not to damage or to interrupt the shield itself. Shield should be connected near by the connector. Refer also to the corresponding notes of the sensor manufacturer.

The value of each termination resistor should be equal to the cable characteristic impedance, typically 120 ohms for EIA-422 or RS-422 standard.

4.10 Disposal



Products marked with a crossed-out wheeled bin shall not be discarded with the normal waste stream. The device is considered as waste electrical and electronic equipment. The national regulations for the disposal of waste electrical and electronic equipment must be observed.

5 Commissioning

5.1 Quick start

Proceed as follows for standard commissioning of the EL5042 with BiSS-C devices.

1. Install the EL5042 in the E-bus terminal strand on an EtherCAT coupler, e.g. EK1100 or EK1501.
2. Connect the BiSS-C device(s) according to the connection diagram (Data(+/-), Clock(+/-) and supply voltage).
3. Set up a correct EtherCAT configuration with the terminal.
Since the device is present and is electrically reachable, the simplest way of accomplishing this is by [scanning the devices](#) [[▶ 64](#)].
4. Activate the EtherCAT master and start the terminal in OP state.
In the input variables the EL5042 must deliver State=8 and WC=0.
5. Parameterize the CoE settings of the EL5042 according to the BiSS-C device data sheet.
 - Reverse any previous parameter changes by means of a CoE reset: enter **0x64616F6C** in object [0x1011:01](#) [[▶ 103](#)].
 - If an encoder voltage of, for example, 9 V is set in object [0x8008:1](#) [[▶ 104](#)]², ensure before connecting that this is supported by both encoders.
6. The data can now be read via the [process data](#) [[▶ 103](#)].

5.2 TwinCAT Development Environment

The Software for automation TwinCAT (The Windows Control and Automation Technology) will be distinguished into:

- TwinCAT 2: System Manager (Configuration) & PLC Control (Programming)
- TwinCAT 3: Enhancement of TwinCAT 2 (Programming and Configuration takes place via a common Development Environment)

Details:

- **TwinCAT 2:**
 - Connects I/O devices to tasks in a variable-oriented manner
 - Connects tasks to tasks in a variable-oriented manner
 - Supports units at the bit level
 - Supports synchronous or asynchronous relationships
 - Exchange of consistent data areas and process images
 - Datalink on NT - Programs by open Microsoft Standards (OLE, OCX, ActiveX, DCOM+, etc.)
 - Integration of IEC 61131-3-Software-SPS, Software- NC and Software-CNC within Windows NT/ 2000/XP/Vista, Windows 7, NT/XP Embedded, CE
 - Interconnection to all common fieldbusses
 - [More...](#)

Additional features:

- **TwinCAT 3 (eXtended Automation):**
 - Visual Studio® integration
 - Choice of the programming language
 - Supports object orientated extension of IEC 61131-3
 - Usage of C/C++ as programming language for real time applications
 - Connection to MATLAB®/Simulink®
 - Open interface for expandability

- Flexible run-time environment
- Active support of multi-core- and 64 bit operating system
- Automatic code generation and project creation with the TwinCAT Automation Interface
- More...

Within the following sections commissioning of the TwinCAT Development Environment on a PC System for the control and also the basically functions of unique control elements will be explained.

Please see further information to TwinCAT 2 and TwinCAT 3 at <http://infosys.beckhoff.com>.

5.2.1 Installation of the TwinCAT real-time driver

In order to assign real-time capability to a standard Ethernet port of an IPC controller, the Beckhoff real-time driver has to be installed on this port under Windows.

This can be done in several ways.

A: Via the TwinCAT Adapter dialog

In the System Manager call up the TwinCAT overview of the local network interfaces via Options → Show Real Time Ethernet Compatible Devices.




Fig. 27: System Manager “Options” (TwinCAT 2)

This have to be called up by the menu “TwinCAT” within the TwinCAT 3 environment:

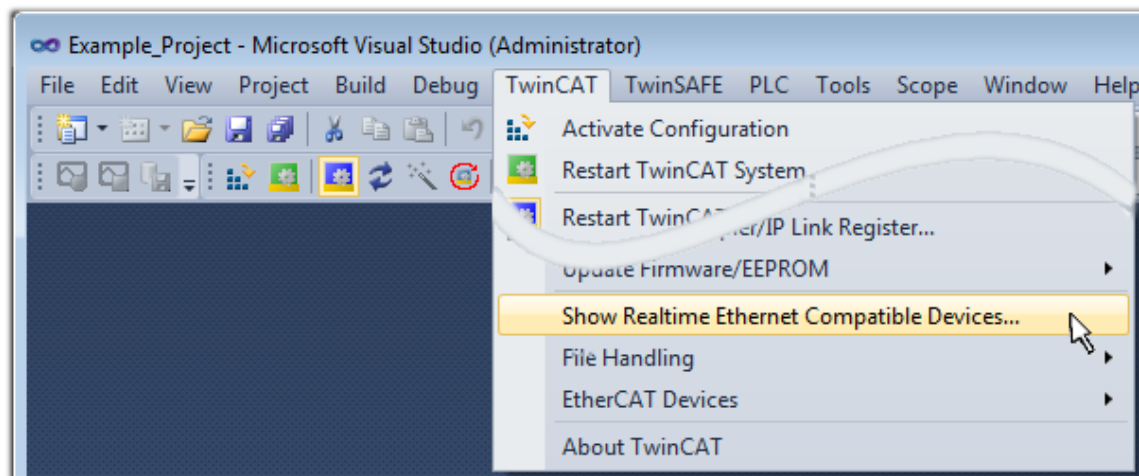


Fig. 28: Call up under VS Shell (TwinCAT 3)

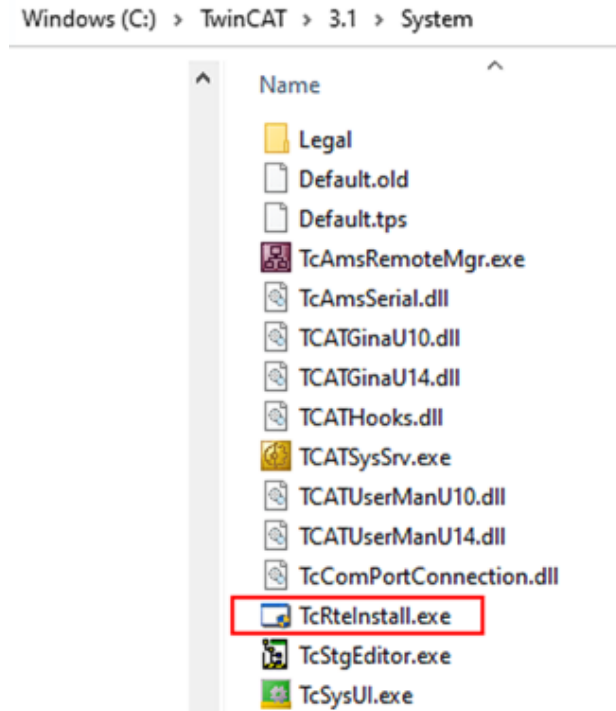
B: Via TcRteInstall.exe in the TwinCAT directory

Fig. 29: TcRteInstall in the TwinCAT directory

In both cases, the following dialog appears:

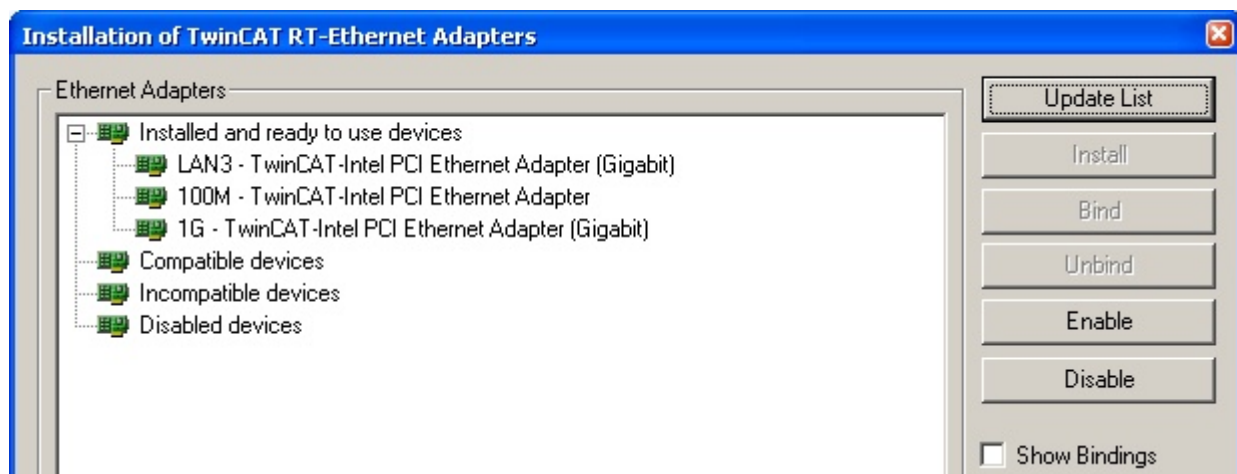


Fig. 30: Overview of network interfaces

Interfaces listed under “Compatible devices” can be assigned a driver via the “Install” button. A driver should only be installed on compatible devices.

A Windows warning regarding the unsigned driver can be ignored.

Alternatively an EtherCAT-device can be inserted first of all as described in chapter [Offline configuration creation](#), section “Creating the EtherCAT device” [► 59] in order to view the compatible ethernet ports via its EtherCAT properties (tab “Adapter”, button “Compatible Devices...”):



Fig. 31: EtherCAT device properties (TwinCAT 2): click on “Compatible Devices...” of tab “Adapter”

TwinCAT 3: the properties of the EtherCAT device can be opened by double click on “Device .. (EtherCAT)” within the Solution Explorer under “I/O”:



After the installation the driver appears activated in the Windows overview for the network interface (Windows Start → System Properties → Network)

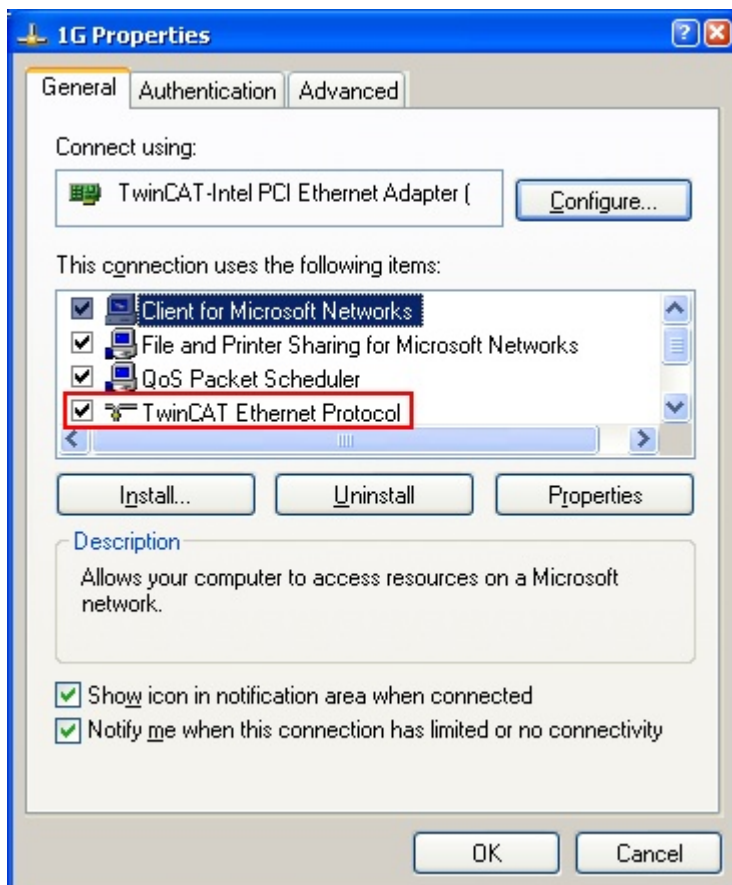


Fig. 32: Windows properties of the network interface

A correct setting of the driver could be:

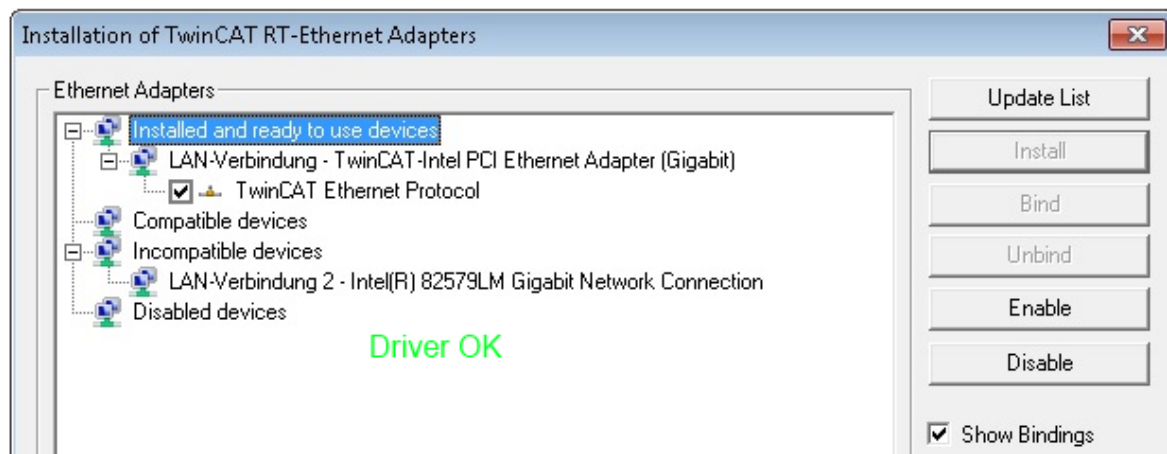


Fig. 33: Exemplary correct driver setting for the Ethernet port

Other possible settings have to be avoided:

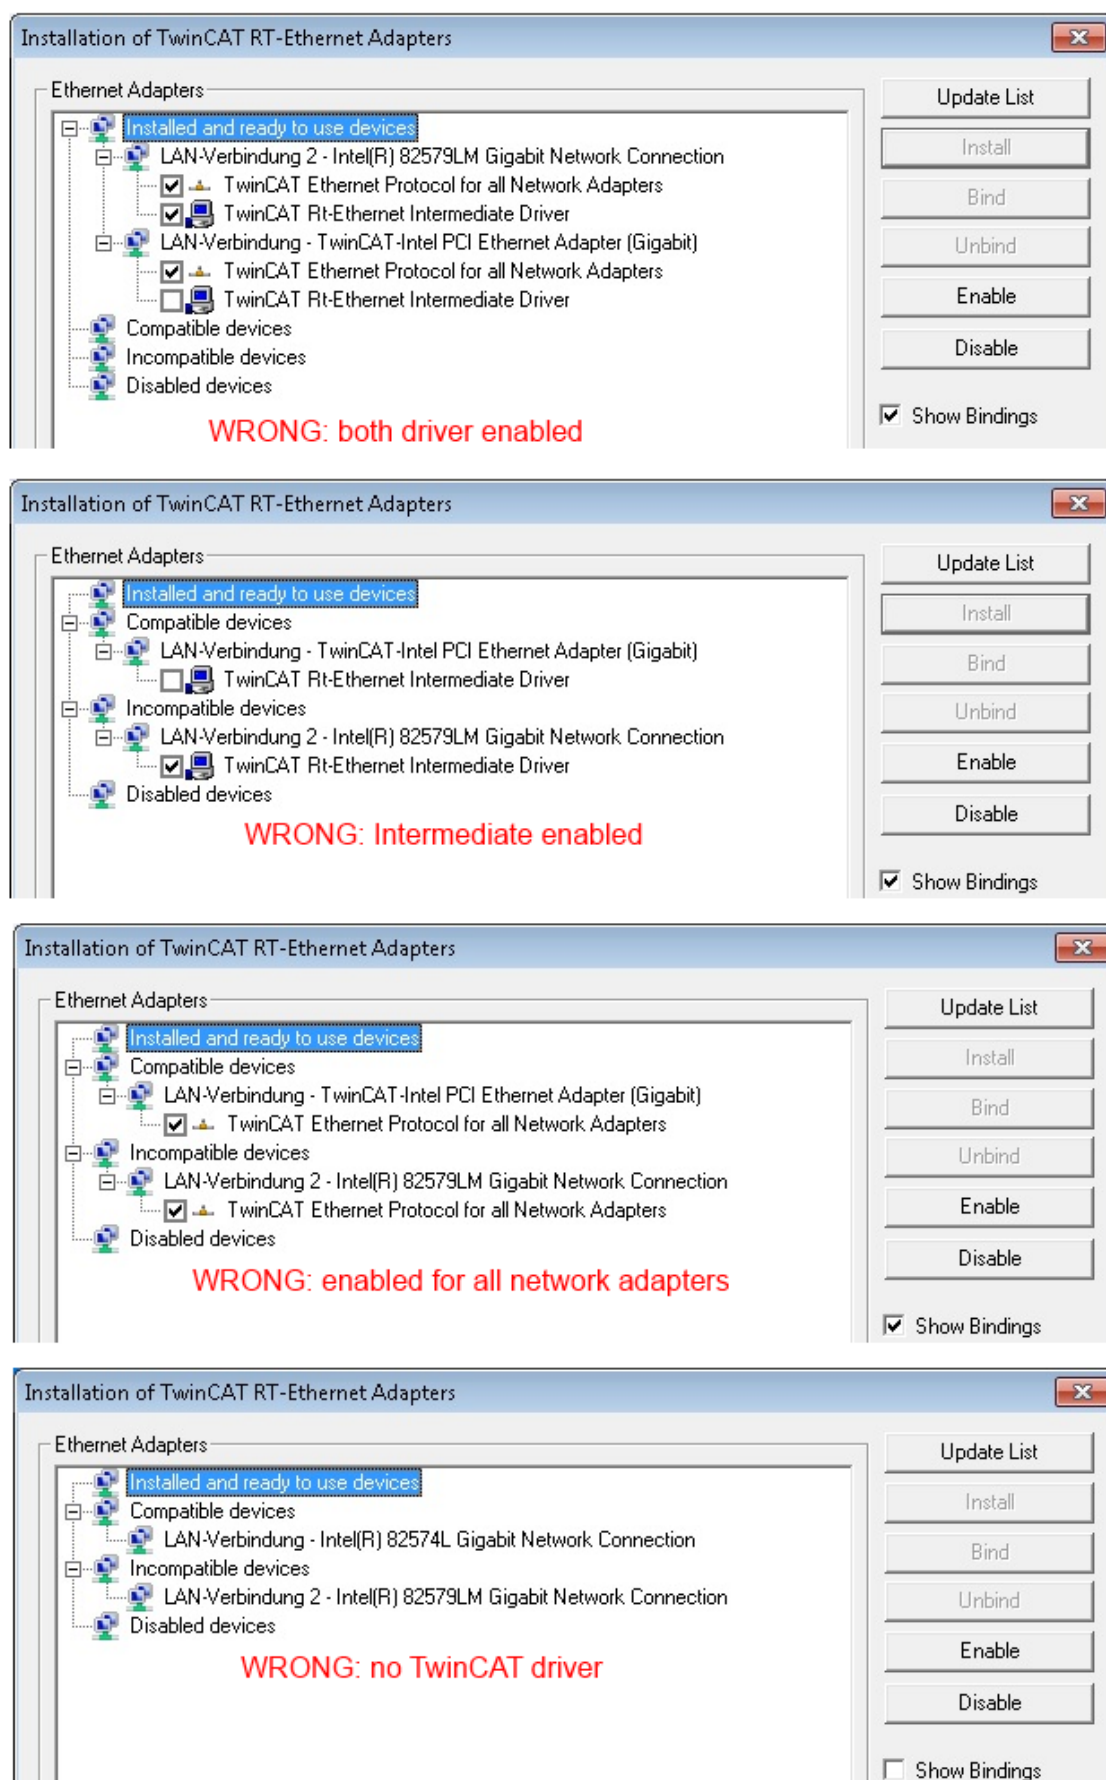


Fig. 34: Incorrect driver settings for the Ethernet port

IP address of the port used

i IP address/DHCP

In most cases an Ethernet port that is configured as an EtherCAT device will not transport general IP packets. For this reason and in cases where an EL6601 or similar devices are used it is useful to specify a fixed IP address for this port via the "Internet Protocol TCP/IP" driver setting and to disable DHCP. In this way the delay associated with the DHCP client for the Ethernet port assigning itself a default IP address in the absence of a DHCP server is avoided. A suitable address space is 192.168.x.x, for example.

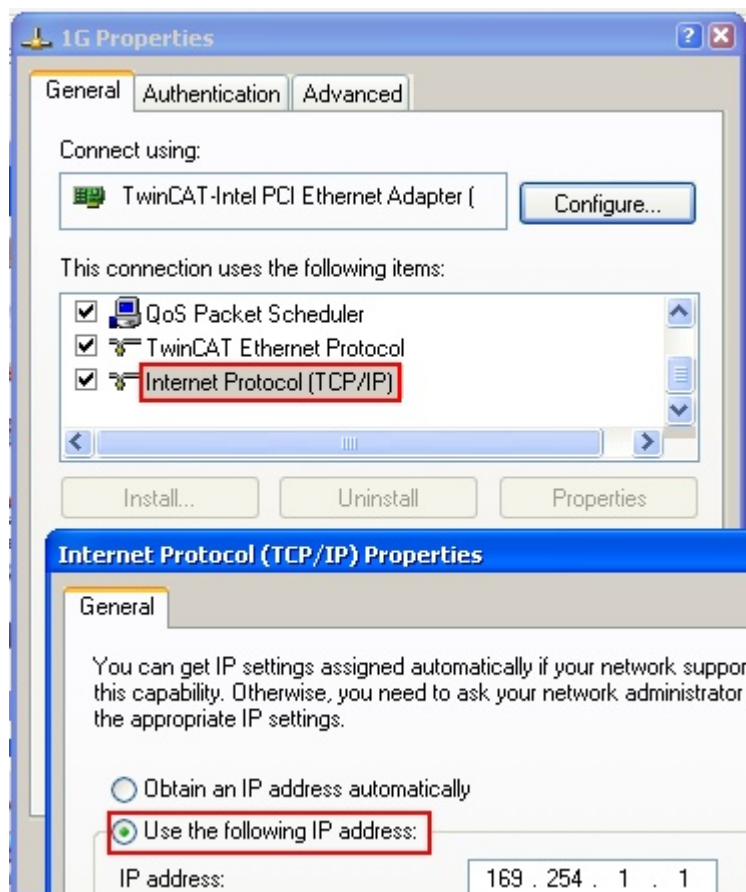


Fig. 35: TCP/IP setting for the Ethernet port

5.2.2 Notes regarding ESI device description

Installation of the latest ESI device description

The TwinCAT EtherCAT master/System Manager needs the device description files for the devices to be used in order to generate the configuration in online or offline mode. The device descriptions are contained in the so-called ESI files (EtherCAT Slave Information) in XML format. These files can be requested from the respective manufacturer and are made available for download. An *.xml file may contain several device descriptions.

The ESI files for Beckhoff EtherCAT devices are available on the [Beckhoff website](#).

The ESI files should be stored in the TwinCAT installation directory.

Default settings:

- **TwinCAT 2:** C:\TwinCAT\IO\EtherCAT
- **TwinCAT 3:** C:\TwinCAT\3.1\Config\Io\EtherCAT

The files are read (once) when a new System Manager window is opened, if they have changed since the last time the System Manager window was opened.

A TwinCAT installation includes the set of Beckhoff ESI files that was current at the time when the TwinCAT build was created.

For TwinCAT 2.11/TwinCAT 3 and higher, the ESI directory can be updated from the System Manager, if the programming PC is connected to the Internet; by

- **TwinCAT 2:** Option → “Update EtherCAT Device Descriptions”
- **TwinCAT 3:** TwinCAT → EtherCAT Devices → “Update Device Descriptions (via ETG Website)...”

The [TwinCAT ESI Updater](#) [► 58] is available for this purpose.



ESI

The *.xml files are associated with *.xsd files, which describe the structure of the ESI XML files. To update the ESI device descriptions, both file types should therefore be updated.

Device differentiation

EtherCAT devices/slaves are distinguished by four properties, which determine the full device identifier. For example, the device identifier EL2521-0025-1018 consists of:

- family key “EL”
- name “2521”
- type “0025”
- and revision “1018”

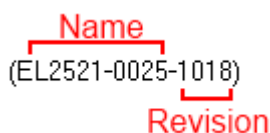


Fig. 36: Identifier structure

The order identifier consisting of name + type (here: EL2521-0025) describes the device function. The revision indicates the technical progress and is managed by Beckhoff. In principle, a device with a higher revision can replace a device with a lower revision, unless specified otherwise, e.g. in the documentation. Each revision has its own ESI description. See [further notes](#) [► 9].

Online description

If the EtherCAT configuration is created online through scanning of real devices (see section Online setup) and no ESI descriptions are available for a slave (specified by name and revision) that was found, the System Manager asks whether the description stored in the device should be used. In any case, the System Manager needs this information for setting up the cyclic and acyclic communication with the slave correctly.

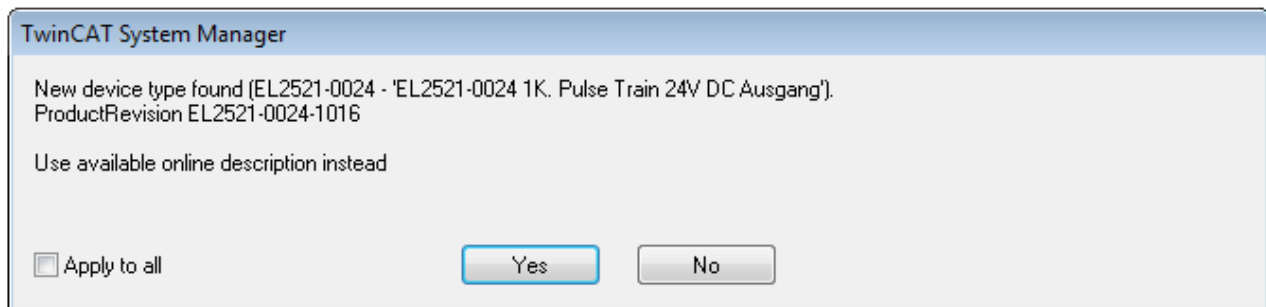


Fig. 37: OnlineDescription information window (TwinCAT 2)

In TwinCAT 3 a similar window appears, which also offers the Web update:

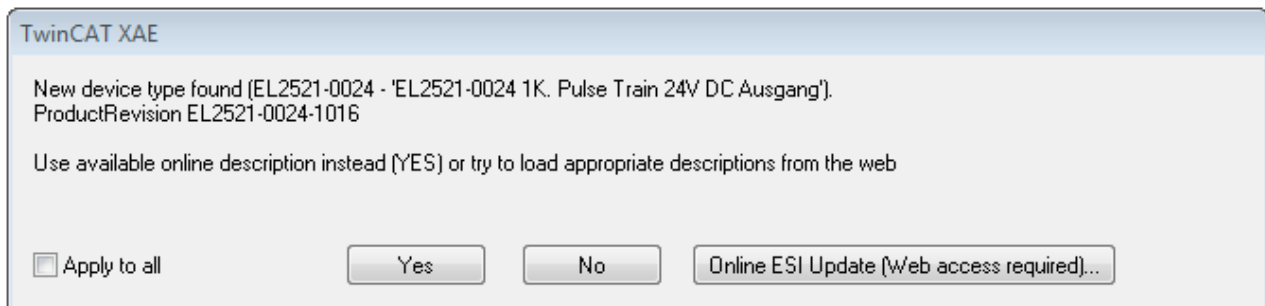


Fig. 38: Information window OnlineDescription (TwinCAT 3)

If possible, the Yes is to be rejected and the required ESI is to be requested from the device manufacturer. After installation of the XML/XSD file the configuration process should be repeated.

NOTICE

Changing the “usual” configuration through a scan

- ✓ If a scan discovers a device that is not yet known to TwinCAT, distinction has to be made between two cases. Taking the example here of the EL2521-0000 in the revision 1019
 - a) no ESI is present for the EL2521-0000 device at all, either for the revision 1019 or for an older revision. The ESI must then be requested from the manufacturer (in this case Beckhoff).
 - b) an ESI is present for the EL2521-0000 device, but only in an older revision, e.g. 1018 or 1017. In this case an in-house check should first be performed to determine whether the spare parts stock allows the integration of the increased revision into the configuration at all. A new/higher revision usually also brings along new features. If these are not to be used, work can continue without reservations with the previous revision 1018 in the configuration. This is also stated by the Beckhoff compatibility rule.

Refer in particular to the chapter “General notes on the use of Beckhoff EtherCAT IO components” and for manual configuration to the chapter “Offline configuration creation [► 59]”.

If the OnlineDescription is used regardless, the System Manager reads a copy of the device description from the EEPROM in the EtherCAT slave. In complex slaves the size of the EEPROM may not be sufficient for the complete ESI, in which case the ESI would be *incomplete* in the configurator. Therefore it's recommended using an offline ESI file with priority in such a case.

The System Manager creates for online recorded device descriptions a new file “OnlineDescription0000...xml” in its ESI directory, which contains all ESI descriptions that were read online.

OnlineDescriptionCache000000002.xml

Fig. 39: File OnlineDescription.xml created by the System Manager

If a slave is desired to be added manually to the configuration at a later stage, online created slaves are indicated by a prepended symbol ">" in the selection list (see Figure *Indication of an online recorded ESI of EL2521 as an example*).

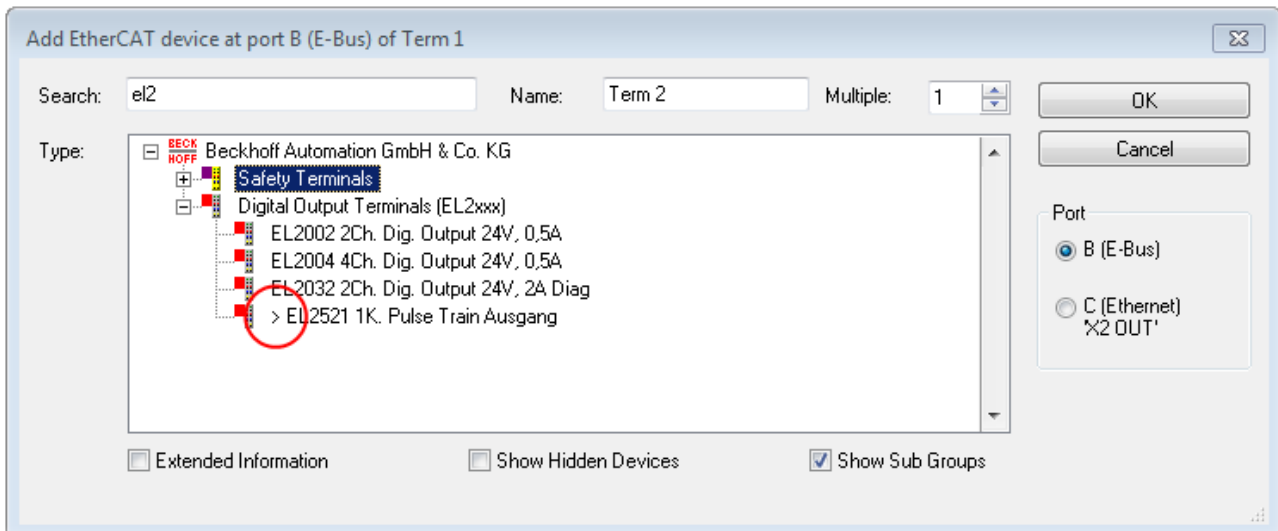


Fig. 40: Indication of an online recorded ESI of EL2521 as an example

If such ESI files are used and the manufacturer's files become available later, the file OnlineDescription.xml should be deleted as follows:

- close all System Manager windows
- restart TwinCAT in Config mode
- delete "OnlineDescription0000...xml"
- restart TwinCAT System Manager

This file should not be visible after this procedure, if necessary press <F5> to update

OnlineDescription for TwinCAT 3.x

In addition to the file described above "OnlineDescription0000...xml", a so called EtherCAT cache with new discovered devices is created by TwinCAT 3.x, e.g. under Windows 7:

`C:\User\[USERNAME]\AppData\Roaming\Beckhoff\TwinCAT3\Components\Base\EtherCATCache.xml`

(Please note the language settings of the OS!)

You have to delete this file, too.

Faulty ESI file

If an ESI file is faulty and the System Manager is unable to read it, the System Manager brings up an information window.

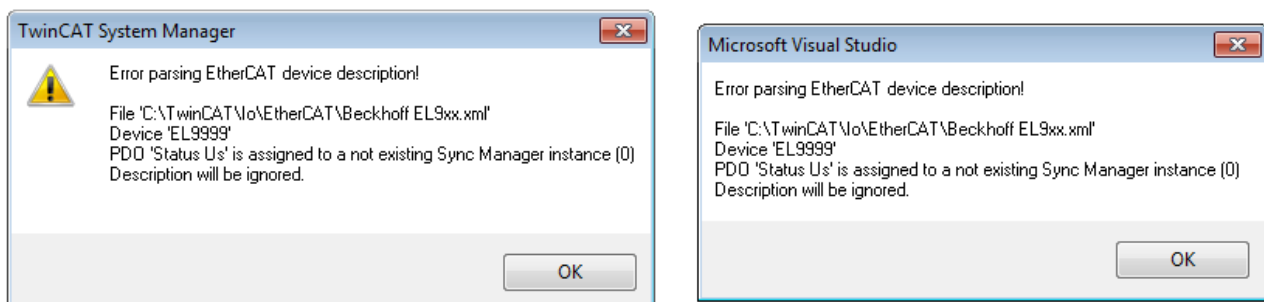


Fig. 41: Information window for faulty ESI file (left: TwinCAT 2; right: TwinCAT 3)

Reasons may include:

- Structure of the *.xml does not correspond to the associated *.xsd file → check your schematics
- Contents cannot be translated into a device description → contact the file manufacturer

5.2.3 TwinCAT ESI Updater

For TwinCAT 2.11 and higher, the System Manager can search for current Beckhoff ESI files automatically, if an online connection is available:




Fig. 42: Using the ESI Updater (>= TwinCAT 2.11)

The call up takes place under:
 “Options” → “Update EtherCAT Device Descriptions”

Selection under TwinCAT 3:

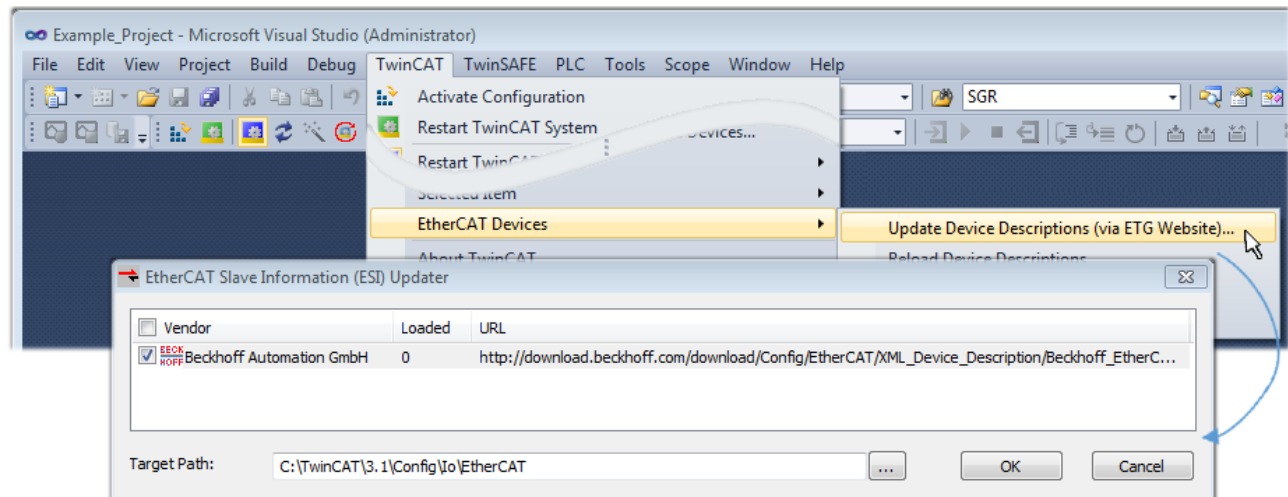


Fig. 43: Using the ESI Updater (TwinCAT 3)

The ESI Updater (TwinCAT 3) is a convenient option for automatic downloading of ESI data provided by EtherCAT manufacturers via the Internet into the TwinCAT directory (ESI = EtherCAT slave information). TwinCAT accesses the central ESI ULR directory list stored at ETG; the entries can then be viewed in the Updater dialog, although they cannot be changed there.

The call up takes place under:
 “TwinCAT” → “EtherCAT Devices” → “Update Device Description (via ETG Website)...”.

5.2.4 Distinction between Online and Offline

The distinction between online and offline refers to the presence of the actual I/O environment (drives, terminals, EJ-modules). If the configuration is to be prepared in advance of the system configuration as a programming system, e.g. on a laptop, this is only possible in “Offline configuration” mode. In this case all components have to be entered manually in the configuration, e.g. based on the electrical design.

If the designed control system is already connected to the EtherCAT system and all components are energised and the infrastructure is ready for operation, the TwinCAT configuration can simply be generated through “scanning” from the runtime system. This is referred to as online configuration.

In any case, during each startup the EtherCAT master checks whether the slaves it finds match the configuration. This test can be parameterised in the extended slave settings. Refer to note “Installation of the latest ESI-XML device description” [► 54].

For preparation of a configuration:

- the real EtherCAT hardware (devices, couplers, drives) must be present and installed
- the devices/modules must be connected via EtherCAT cables or in the terminal/ module strand in the same way as they are intended to be used later
- the devices/modules be connected to the power supply and ready for communication

- TwinCAT must be in CONFIG mode on the target system.

The online scan process consists of:

- detecting the EtherCAT device [► 64] (Ethernet port at the IPC)
- detecting the connected EtherCAT devices [► 65]. This step can be carried out independent of the preceding step
- troubleshooting [► 68]

The scan with existing configuration [► 69] can also be carried out for comparison.

5.2.5 OFFLINE configuration creation

Creating the EtherCAT device

Create an EtherCAT device in an empty System Manager window.

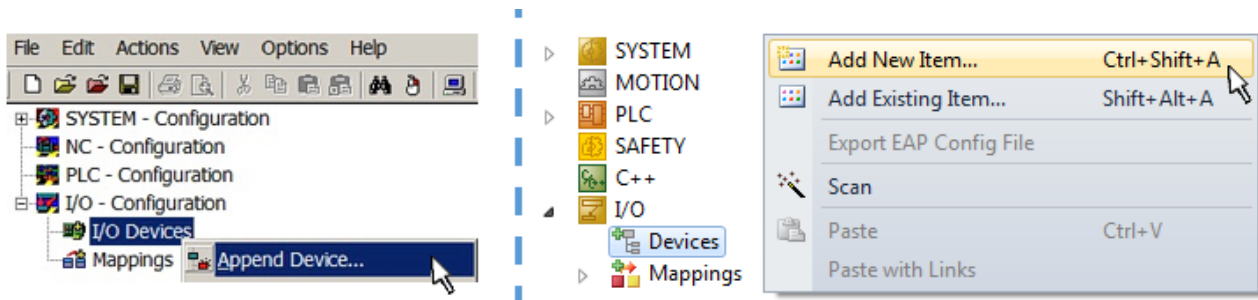


Fig. 44: Append EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

Select type “EtherCAT” for an EtherCAT I/O application with EtherCAT slaves. For the present publisher/ subscriber service in combination with an EL6601/EL6614 terminal select “EtherCAT Automation Protocol via EL6601”.

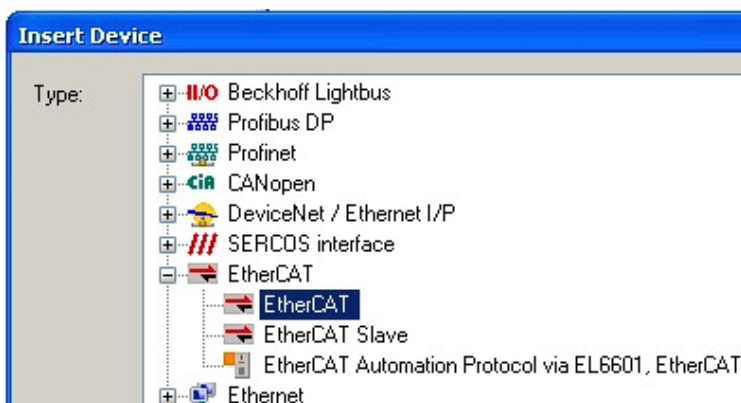


Fig. 45: Selecting the EtherCAT connection (TwinCAT 2.11, TwinCAT 3)

Then assign a real Ethernet port to this virtual device in the runtime system.

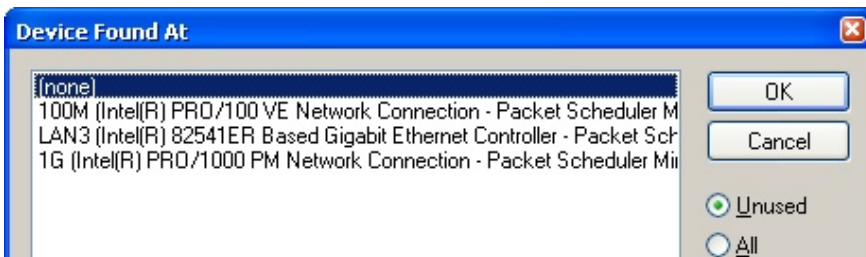


Fig. 46: Selecting the Ethernet port

This query may appear automatically when the EtherCAT device is created, or the assignment can be set/modified later in the properties dialog; see Fig. “EtherCAT device properties (TwinCAT 2)”.


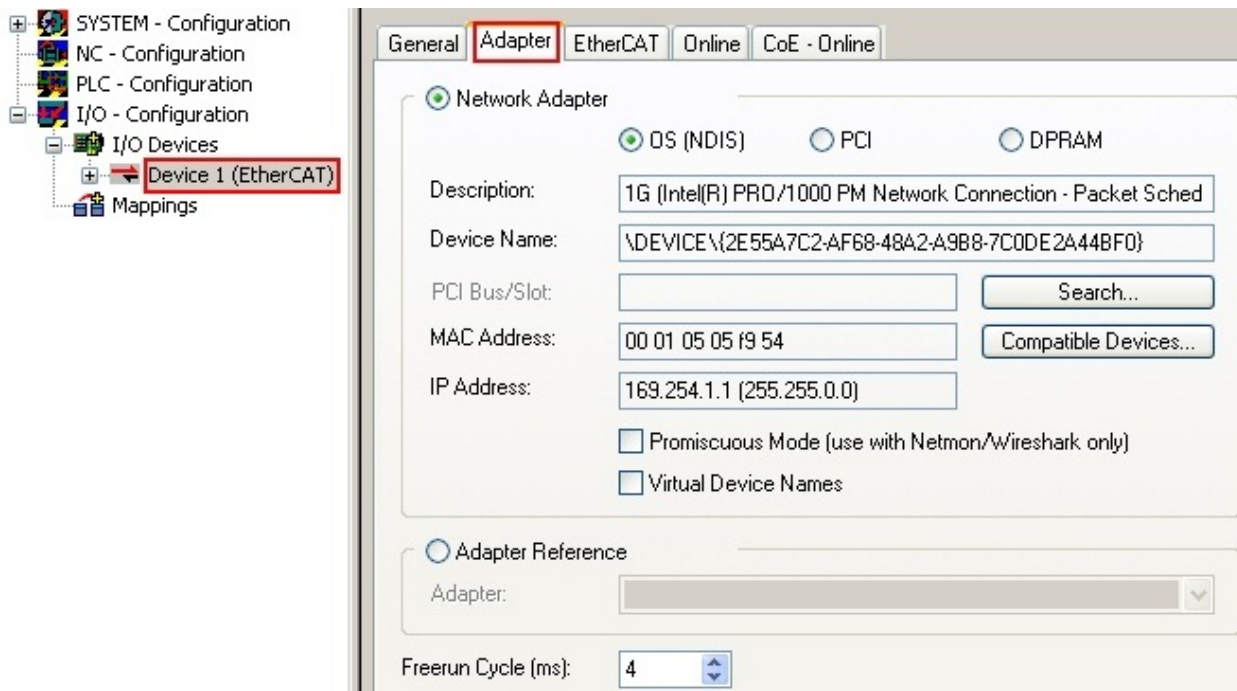


Fig. 47: EtherCAT device properties (TwinCAT 2)

TwinCAT 3: the properties of the EtherCAT device can be opened by double click on “Device .. (EtherCAT)” within the Solution Explorer under “I/O”:

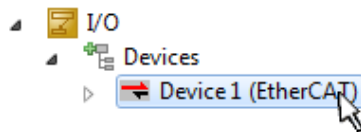

i Selecting the Ethernet port

Ethernet ports can only be selected for EtherCAT devices for which the TwinCAT real-time driver is installed. This has to be done separately for each port. Please refer to the respective [installation page \[► 48\]](#).

Defining EtherCAT slaves

Further devices can be appended by right-clicking on a device in the configuration tree.

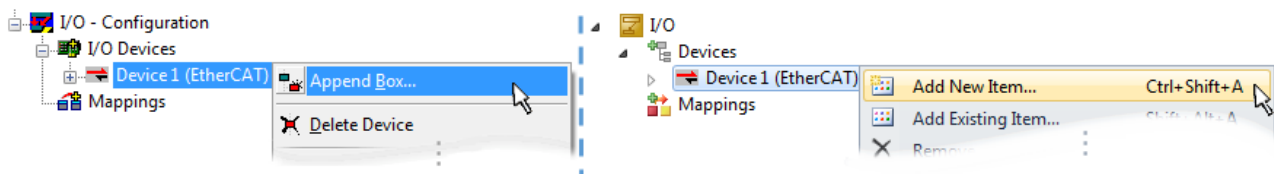


Fig. 48: Appending EtherCAT devices (left: TwinCAT 2; right: TwinCAT 3)

The dialog for selecting a new device opens. Only devices for which ESI files are available are displayed.

Only devices are offered for selection that can be appended to the previously selected device. Therefore, the physical layer available for this port is also displayed (Fig. “Selection dialog for new EtherCAT device”, A). In the case of cable-based Fast-Ethernet physical layer with PHY transfer, then also only cable-based devices are available, as shown in Fig. “Selection dialog for new EtherCAT device”. If the preceding device has several free ports (e.g. EK1122 or EK1100), the required port can be selected on the right-hand side (A).

Overview of physical layer

- “Ethernet”: cable-based 100BASE-TX: couplers, box modules, devices with RJ45/M8/M12 connector

- “E-Bus”: LVDS “terminal bus”, EtherCAT plug-in modules (EJ), EtherCAT terminals (EL/ES), various modular modules

The search field facilitates finding specific devices (since TwinCAT 2.11 or TwinCAT 3).

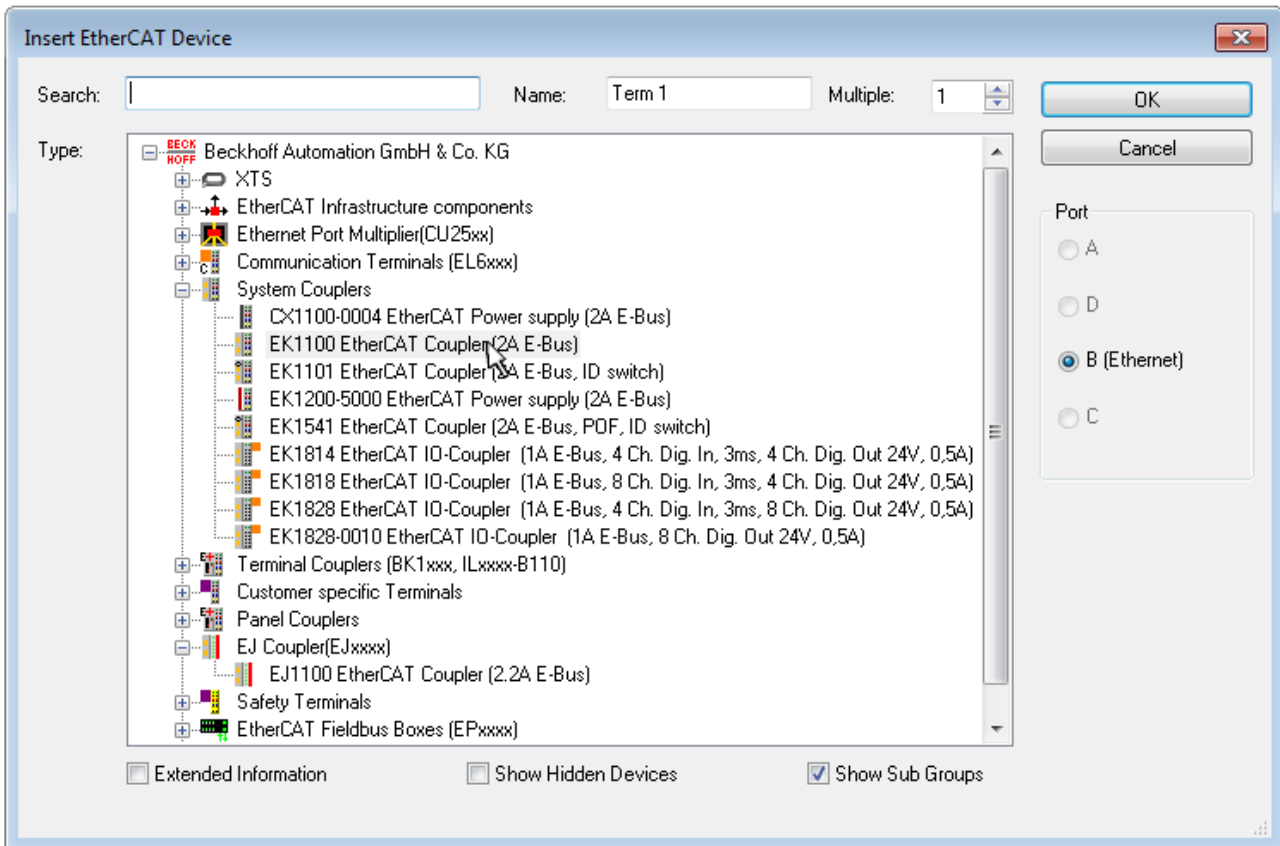


Fig. 49: Selection dialog for new EtherCAT device

By default, only the name/device type is used as selection criterion. For selecting a specific revision of the device, the revision can be displayed as “Extended Information”.

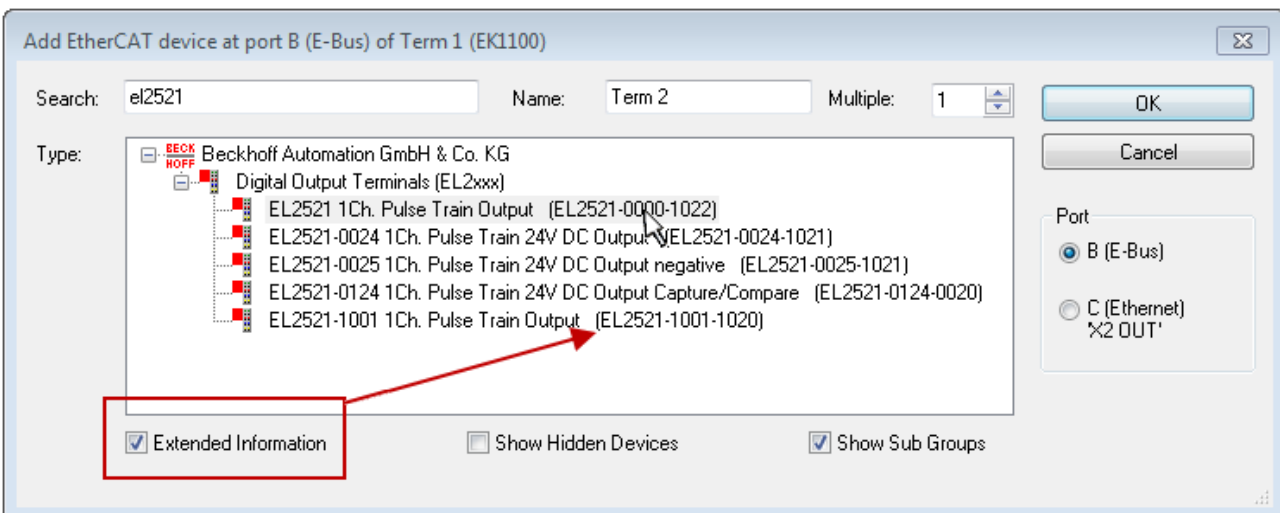


Fig. 50: Display of device revision

In many cases several device revisions were created for historic or functional reasons, e.g. through technological advancement. For simplification purposes (see Fig. “Selection dialog for new EtherCAT device”) only the last (i.e. highest) revision and therefore the latest state of production is displayed in the selection dialog for Beckhoff devices. To show all device revisions available in the system as ESI descriptions tick the “Show Hidden Devices” check box, see Fig. “Display of previous revisions”.

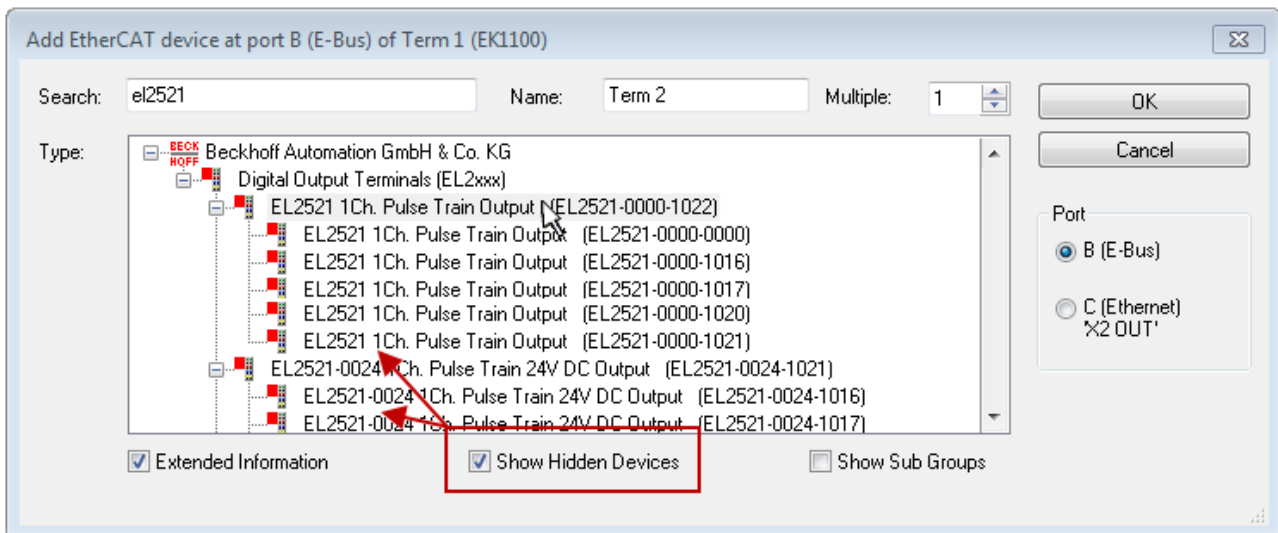


Fig. 51: Display of previous revisions

● Device selection based on revision, compatibility

i The ESI description also defines the process image, the communication type between master and slave/device and the device functions, if applicable. The physical device (firmware, if available) has to support the communication queries/settings of the master. This is backward compatible, i.e. newer devices (higher revision) should be supported if the EtherCAT master addresses them as an older revision. The following compatibility rule of thumb is to be assumed for Beckhoff EtherCAT Terminals/ Boxes/ EJ-modules:

device revision in the system \geq device revision in the configuration

This also enables subsequent replacement of devices without changing the configuration (different specifications are possible for drives).

Example

If an EL2521-0025-**1018** is specified in the configuration, an EL2521-0025-**1018** or higher (**-1019**, **-1020**) can be used in practice.

Name
(EL2521-0025-1018)
Revision

Fig. 52: Name/revision of the terminal

If current ESI descriptions are available in the TwinCAT system, the last revision offered in the selection dialog matches the Beckhoff state of production. It is recommended to use the last device revision when creating a new configuration, if current Beckhoff devices are used in the real application. Older revisions should only be used if older devices from stock are to be used in the application.

In this case the process image of the device is shown in the configuration tree and can be parameterized as follows: linking with the task, CoE/DC settings, plug-in definition, startup settings, ...

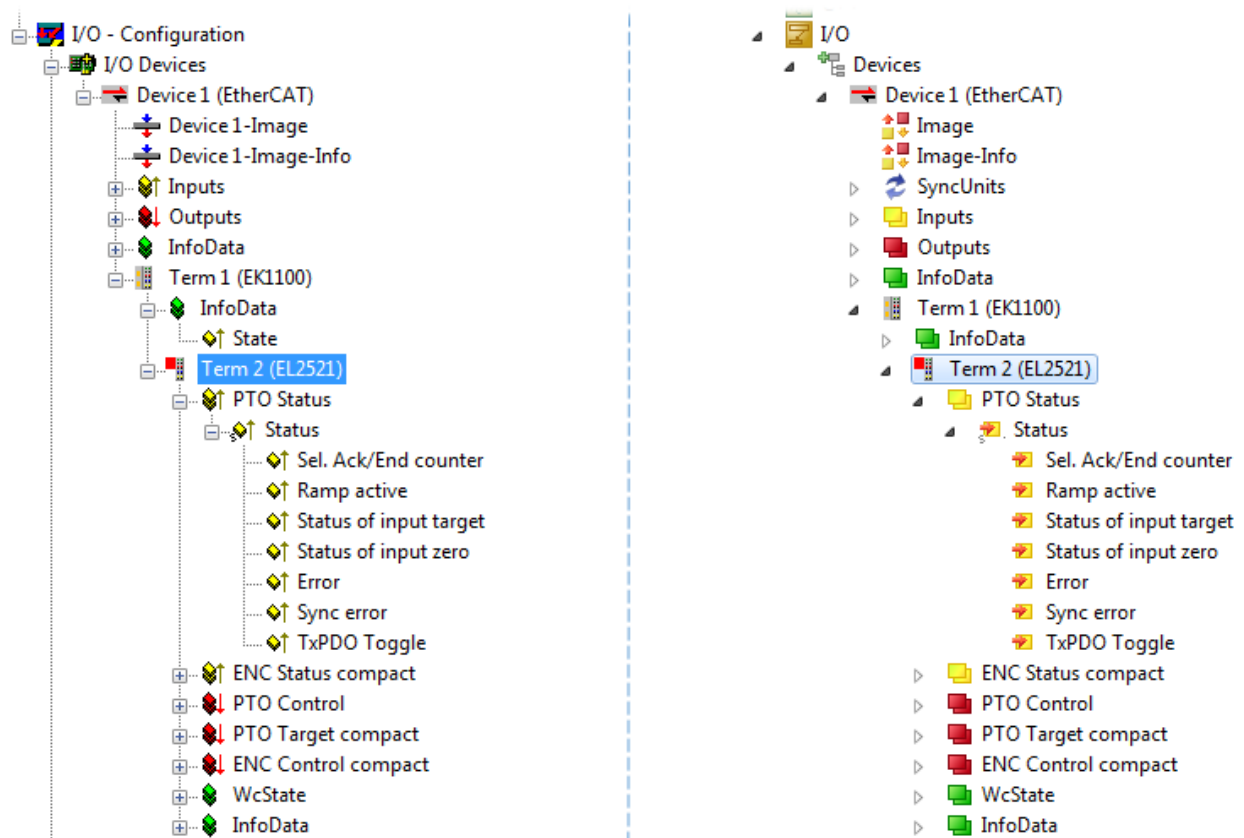




Fig. 53: EtherCAT terminal in the TwinCAT tree (left: TwinCAT 2; right: TwinCAT 3)



5.2.6 ONLINE configuration creation

Detecting/scanning of the EtherCAT device

The online device search can be used if the TwinCAT system is in CONFIG mode. This can be indicated by a symbol right below in the information bar:



- on TwinCAT 2 by a blue display “Config Mode” within the System Manager window:  .
- on TwinCAT 3 within the user interface of the development environment by a symbol  .

TwinCAT can be set into this mode:

- TwinCAT 2: by selection of  in the Menubar or by “Actions” → “Set/Reset TwinCAT to Config Mode...”
- TwinCAT 3: by selection of  in the Menubar or by “TwinCAT” → “Restart TwinCAT (Config Mode)”

1 Online scanning in Config mode

The online search is not available in RUN mode (production operation). Note the differentiation between TwinCAT programming system and TwinCAT target system.

The TwinCAT 2 icon () or TwinCAT 3 icon () within the Windows-Taskbar always shows the TwinCAT mode of the local IPC. Compared to that, the System Manager window of TwinCAT 2 or the user interface of TwinCAT 3 indicates the state of the target system.

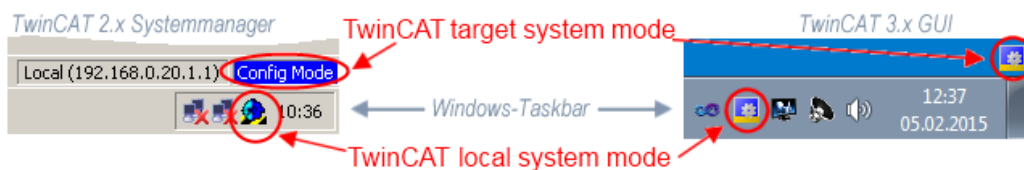


Fig. 54: Differentiation local/target system (left: TwinCAT 2; right: TwinCAT 3)

Right-clicking on “I/O Devices” in the configuration tree opens the search dialog.

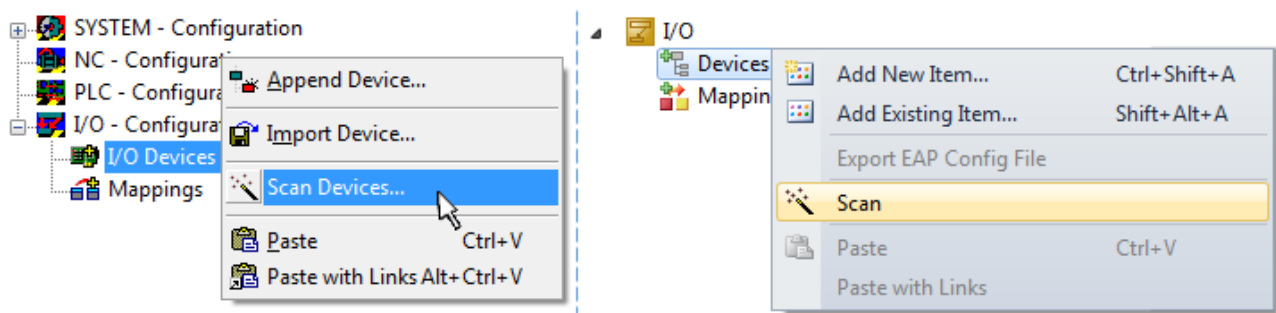


Fig. 55: Scan Devices (left: TwinCAT 2; right: TwinCAT 3)

This scan mode attempts to find not only EtherCAT devices (or Ethernet ports that are usable as such), but also NOVRAM, fieldbus cards, SMB etc. However, not all devices can be found automatically.

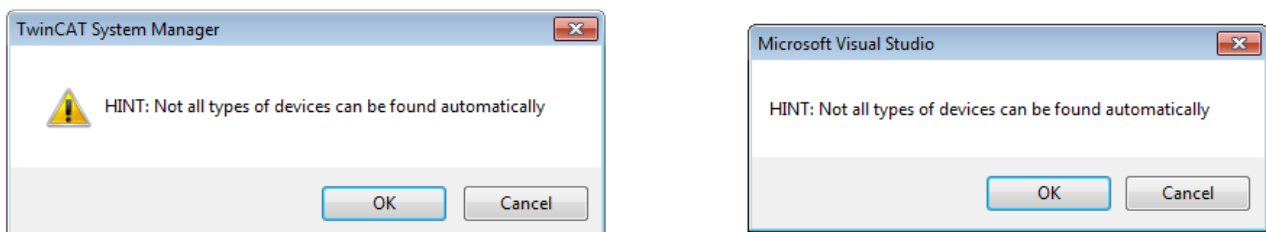


Fig. 56: Note for automatic device scan (left: TwinCAT 2; right: TwinCAT 3)

Ethernet ports with installed TwinCAT real-time driver are shown as “RT Ethernet” devices. An EtherCAT frame is sent to these ports for testing purposes. If the scan agent detects from the response that an EtherCAT slave is connected, the port is immediately shown as an “EtherCAT Device”.

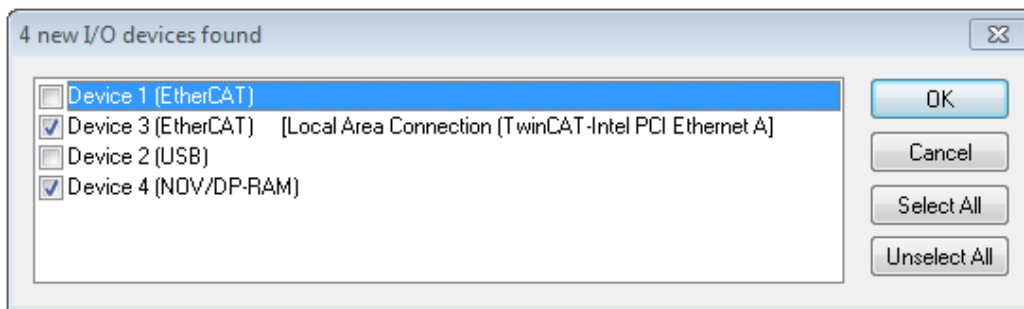


Fig. 57: Detected Ethernet devices

Via respective checkboxes devices can be selected (as illustrated in Fig. “Detected Ethernet devices” e.g. Device 3 and Device 4 were chosen). After confirmation with “OK” a device scan is suggested for all selected devices, see Fig.: “Scan query after automatic creation of an EtherCAT device”.

● Selecting the Ethernet port



Ethernet ports can only be selected for EtherCAT devices for which the TwinCAT real-time driver is installed. This has to be done separately for each port. Please refer to the respective [installation page](#) [► 48].

Detecting/Scanning the EtherCAT devices

● Online scan functionality



During a scan the master queries the identity information of the EtherCAT slaves from the slave EEPROM. The name and revision are used for determining the type. The respective devices are located in the stored ESI data and integrated in the configuration tree in the default state defined there.

Name
(EL2521-0025-1018)
Revision

Fig. 58: Example default state

NOTICE

Slave scanning in practice in series machine production

The scanning function should be used with care. It is a practical and fast tool for creating an initial configuration as a basis for commissioning. In series machine production or reproduction of the plant, however, the function should no longer be used for the creation of the configuration, but if necessary for [comparison](#) [► 69] with the defined initial configuration. Background: since Beckhoff occasionally increases the revision version of the delivered products for product maintenance reasons, a configuration can be created by such a scan which (with an identical machine construction) is identical according to the device list; however, the respective device revision may differ from the initial configuration.

Example:

Company A builds the prototype of a machine B, which is to be produced in series later on. To do this the prototype is built, a scan of the IO devices is performed in TwinCAT and the initial configuration “B.tsm” is created. The EL2521-0025 EtherCAT terminal with the revision 1018 is located somewhere. It is thus built into the TwinCAT configuration in this way:

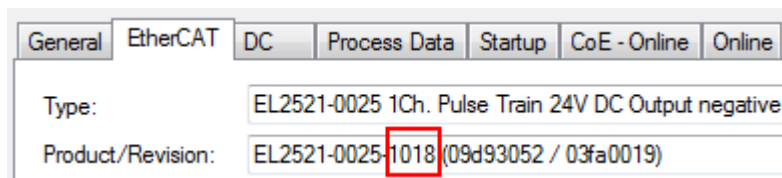


Fig. 59: Installing EtherCAT terminal with revision -1018

Likewise, during the prototype test phase, the functions and properties of this terminal are tested by the programmers/commissioning engineers and used if necessary, i.e. addressed from the PLC “B.pro” or the NC. (the same applies correspondingly to the TwinCAT 3 solution files).

The prototype development is now completed and series production of machine B starts, for which Beckhoff continues to supply the EL2521-0025-0018. If the commissioning engineers of the series machine production department always carry out a scan, a B configuration with the identical contents results again for each machine. Likewise, A might create spare parts stores worldwide for the coming series-produced machines with EL2521-0025-1018 terminals.

After some time Beckhoff extends the EL2521-0025 by a new feature C. Therefore the FW is changed, outwardly recognizable by a higher FW version and a **new revision -1019**. Nevertheless the new device naturally supports functions and interfaces of the predecessor version(s); an adaptation of “B.tsm” or even “B.pro” is therefore unnecessary. The series-produced machines can continue to be built with “B.tsm” and “B.pro”; it makes sense to perform a comparative scan [► 69] against the initial configuration “B.tsm” in order to check the built machine.

However, if the series machine production department now doesn't use “B.tsm”, but instead carries out a scan to create the productive configuration, the revision **-1019** is automatically detected and built into the configuration:

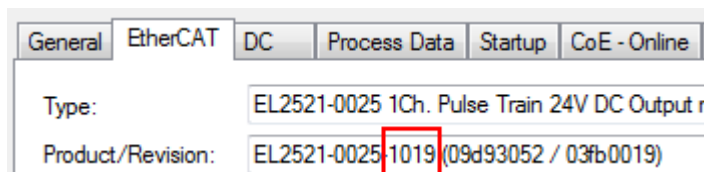


Fig. 60: Detection of EtherCAT terminal with revision -1019

This is usually not noticed by the commissioning engineers. TwinCAT cannot signal anything either, since a new configuration is essentially created. According to the compatibility rule, however, this means that no EL2521-0025-**1018** should be built into this machine as a spare part (even if this nevertheless works in the vast majority of cases).

In addition, it could be the case that, due to the development accompanying production in company A, the new feature C of the EL2521-0025-1019 (for example, an improved analog filter or an additional process data for the diagnosis) is discovered and used without in-house consultation. The previous stock of spare part devices are then no longer to be used for the new configuration “B2.tsm” created in this way. ► if series machine production is established, the scan should only be performed for informative purposes for comparison with a defined initial configuration. Changes are to be made with care!

If an EtherCAT device was created in the configuration (manually or through a scan), the I/O field can be scanned for devices/slaves.



Fig. 61: Scan query after automatic creation of an EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

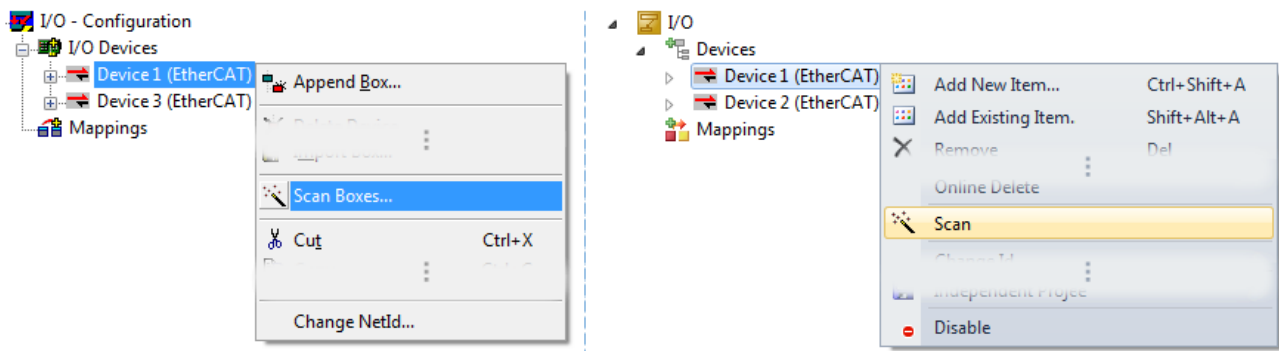


Fig. 62: Manual scanning for devices on a specified EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

In the System Manager (TwinCAT 2) or the User Interface (TwinCAT 3) the scan process can be monitored via the progress bar at the bottom in the status bar.



Fig. 63: Scan progress example by TwinCAT 2

The configuration is established and can then be switched to online state (OPERATIONAL).



Fig. 64: Config/FreeRun query (left: TwinCAT 2; right: TwinCAT 3)

In Config/FreeRun mode the System Manager display alternates between blue and red, and the EtherCAT device continues to operate with the idling cycle time of 4 ms (default setting), even without active task (NC, PLC).



Fig. 65: Displaying of "Free Run" and "Config Mode" toggling right below in the status bar



Fig. 66: TwinCAT can also be switched to this state by using a button (left: TwinCAT 2; right: TwinCAT 3)

The EtherCAT system should then be in a functional cyclic state, as shown in Fig. *Online display example*.

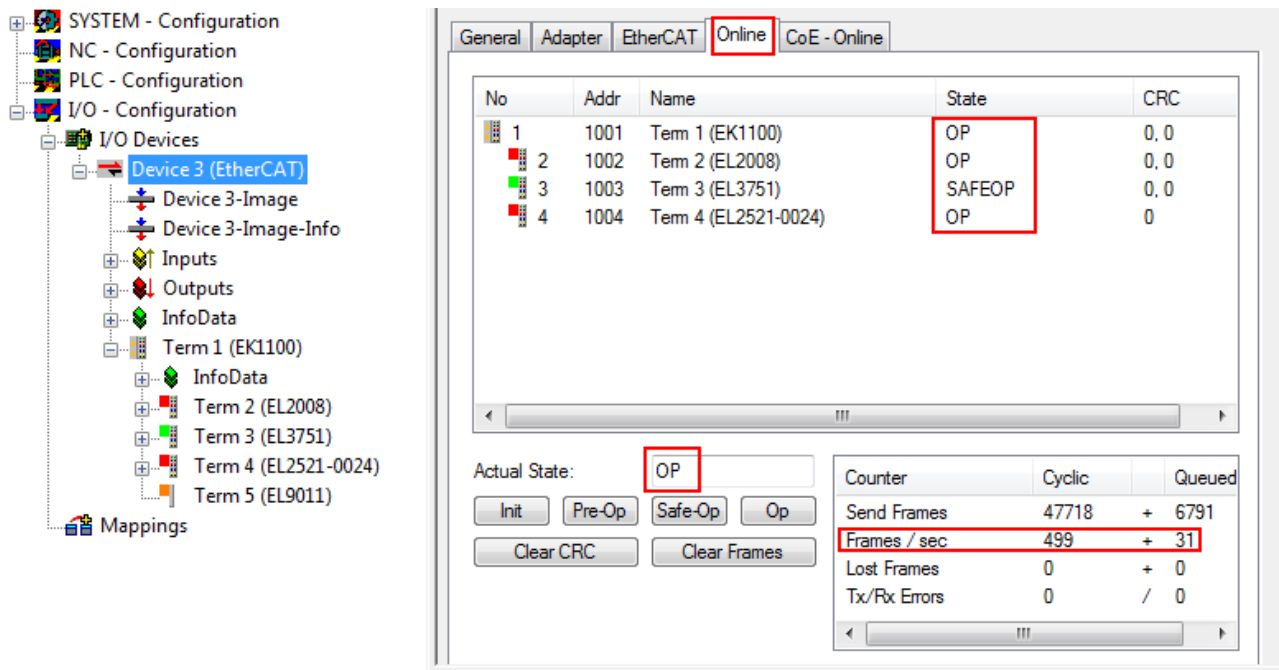


Fig. 67: Online display example

Please note:

- all slaves should be in OP state
- the EtherCAT master should be in “Actual State” OP
- “frames/sec” should match the cycle time taking into account the sent number of frames
- no excessive “LostFrames” or CRC errors should occur

The configuration is now complete. It can be modified as described under [manual procedure](#) [► 59].

Troubleshooting

Various effects may occur during scanning.

- An **unknown device** is detected, i.e. an EtherCAT slave for which no ESI XML description is available. In this case the System Manager offers to read any ESI that may be stored in the device. This case is described in the chapter “Notes regarding ESI device description”.
- **Device are not detected properly**
Possible reasons include:
 - faulty data links, resulting in data loss during the scan
 - slave has invalid device description

The connections and devices should be checked in a targeted manner, e.g. via the emergency scan. Then re-run the scan.

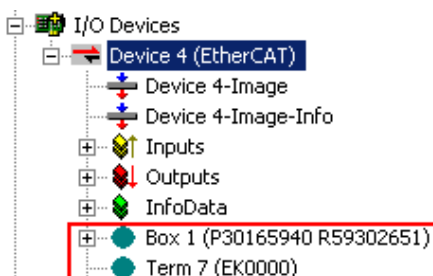


Fig. 68: Faulty identification

In the System Manager such devices may be set up as EK0000 or unknown devices. Operation is not possible or meaningful.

Scan over existing Configuration

NOTICE**Change of the configuration after comparison**

With this scan (TwinCAT 2.11 or 3.1) only the device properties vendor (manufacturer), device name and revision are compared at present! A “ChangeTo” or “Copy” should only be carried out with care, taking into consideration the Beckhoff IO compatibility rule (see above). The device configuration is then replaced by the revision found; this can affect the supported process data and functions.

If a scan is initiated for an existing configuration, the actual I/O environment may match the configuration exactly or it may differ. This enables the configuration to be compared.



Fig. 69: Identical configuration (left: TwinCAT 2; right: TwinCAT 3)

If differences are detected, they are shown in the correction dialog, so that the user can modify the configuration as required.

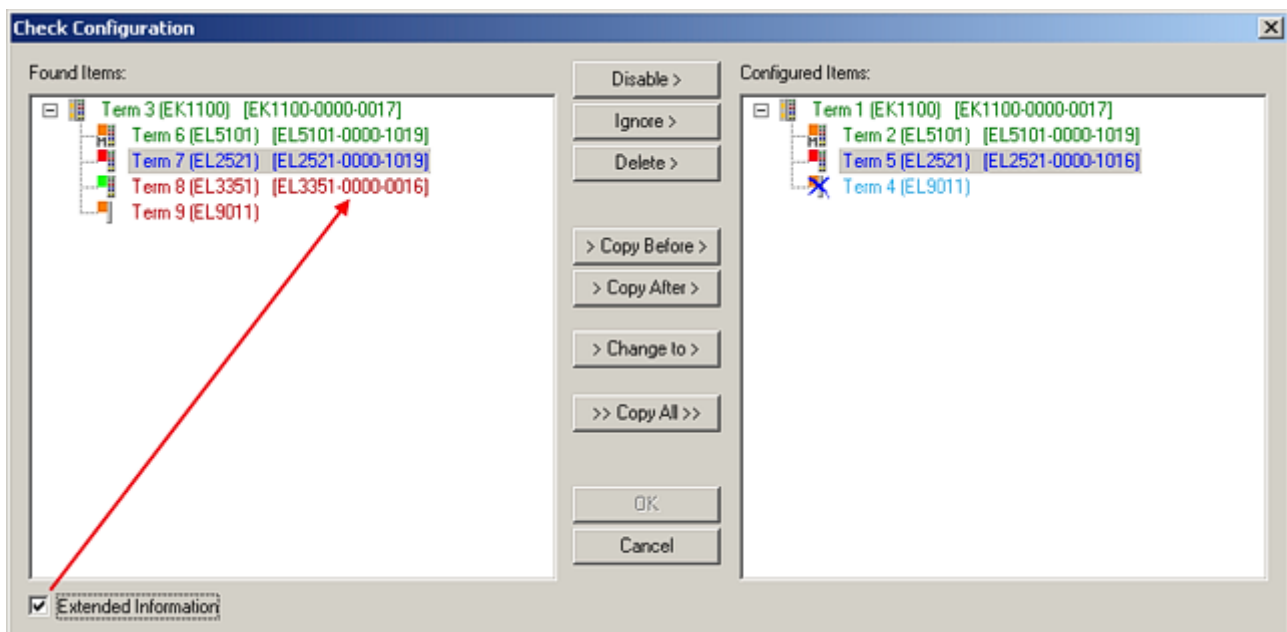


Fig. 70: Correction dialog

It is advisable to tick the “Extended Information” check box to reveal differences in the revision.

| Color | Explanation |
|------------|--|
| green | This EtherCAT slave matches the entry on the other side. Both type and revision match. |
| blue | <p>This EtherCAT slave is present on the other side, but in a different revision. This other revision can have other default values for the process data as well as other/additional functions.</p> <p>If the found revision is higher than the configured revision, the slave may be used provided compatibility issues are taken into account.</p> <p>If the found revision is lower than the configured revision, it is likely that the slave cannot be used. The found device may not support all functions that the master expects based on the higher revision number.</p> |
| light blue | This EtherCAT slave is ignored ("Ignore" button) |
| red | <ul style="list-style-type: none"> This EtherCAT slave is not present on the other side. It is present, but in a different revision, which also differs in its properties from the one specified. The compatibility principle then also applies here: if the found revision is higher than the configured revision, use is possible provided compatibility issues are taken into account, since the successor devices should support the functions of the predecessor devices. If the found revision is lower than the configured revision, it is likely that the slave cannot be used. The found device may not support all functions that the master expects based on the higher revision number. |

● **Device selection based on revision, compatibility**

i The ESI description also defines the process image, the communication type between master and slave/device and the device functions, if applicable. The physical device (firmware, if available) has to support the communication queries/settings of the master. This is backward compatible, i.e. newer devices (higher revision) should be supported if the EtherCAT master addresses them as an older revision. The following compatibility rule of thumb is to be assumed for Beckhoff EtherCAT Terminals/ Boxes/ EJ-modules:

device revision in the system \geq device revision in the configuration

This also enables subsequent replacement of devices without changing the configuration (different specifications are possible for drives).

Example

If an EL2521-0025-**1018** is specified in the configuration, an EL2521-0025-**1018** or higher (**-1019**, **-1020**) can be used in practice.

Name

 (EL2521-0025-1018)

 Revision

Fig. 71: Name/revision of the terminal

If current ESI descriptions are available in the TwinCAT system, the last revision offered in the selection dialog matches the Beckhoff state of production. It is recommended to use the last device revision when creating a new configuration, if current Beckhoff devices are used in the real application. Older revisions should only be used if older devices from stock are to be used in the application.

In this case the process image of the device is shown in the configuration tree and can be parameterized as follows: linking with the task, CoE/DC settings, plug-in definition, startup settings, ...

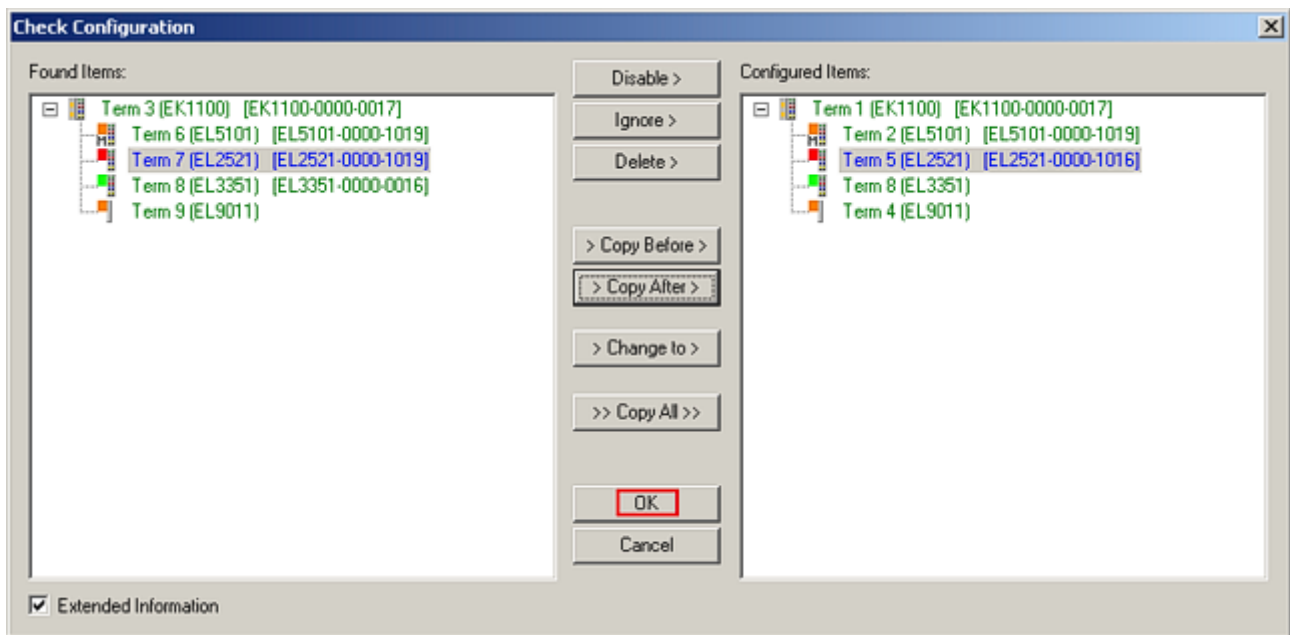


Fig. 72: Correction dialog with modifications

Once all modifications have been saved or accepted, click “OK” to transfer them to the real *.tsm configuration.

Change to Compatible Type

TwinCAT offers a function *Change to Compatible Type...* for the exchange of a device whilst retaining the links in the task.

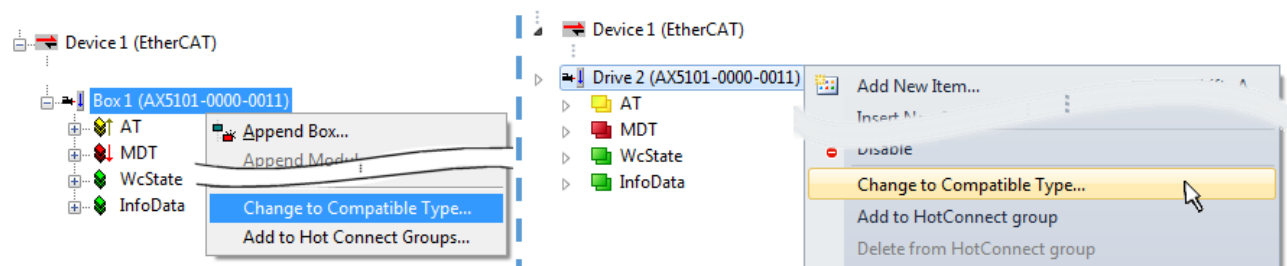


Fig. 73: Dialog “Change to Compatible Type...” (left: TwinCAT 2; right: TwinCAT 3)

The following elements in the ESI of an EtherCAT device are compared by TwinCAT and assumed to be the same in order to decide whether a device is indicated as “compatible”:

- Physics (e.g. RJ45, Ebus...)
- FMMU (additional ones are allowed)
- SyncManager (SM, additional ones are allowed)
- EoE (attributes MAC, IP)
- CoE (attributes SdoInfo, PdoAssign, PdoConfig, PdoUpload, CompleteAccess)
- FoE
- PDO (process data: Sequence, SyncUnit SU, SyncManager SM, EntryCount, Entry.Datatype)

This function is preferably to be used on AX5000 devices.

Change to Alternative Type

The TwinCAT System Manager offers a function for the exchange of a device: Change to Alternative Type

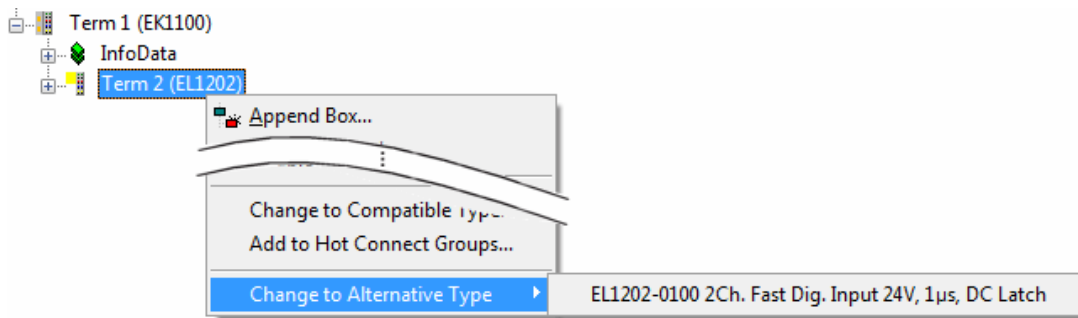


Fig. 74: TwinCAT 2 Dialog Change to Alternative Type

If called, the System Manager searches in the procured device ESI (in this example: EL1202-0000) for details of compatible devices contained there. The configuration is changed and the ESI-EEPROM is overwritten at the same time – therefore this process is possible only in the online state (ConfigMode).

5.2.7 EtherCAT subscriber configuration

In the left-hand window of the TwinCAT 2 System Manager or the Solution Explorer of the TwinCAT 3 Development Environment respectively, click on the element of the terminal within the tree you wish to configure (in the example: EL3751 Terminal 3).

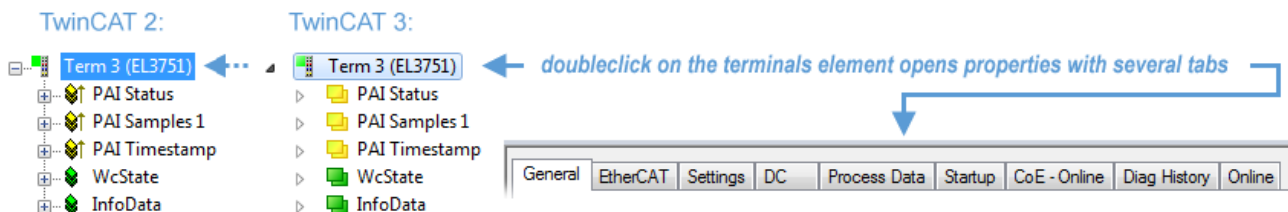


Fig. 75: Branch element as terminal EL3751

In the right-hand window of the TwinCAT System Manager (TwinCAT 2) or the Development Environment (TwinCAT 3), various tabs are now available for configuring the terminal. And yet the dimension of complexity of a subscriber determines which tabs are provided. Thus as illustrated in the example above the terminal EL3751 provides many setup options and also a respective number of tabs are available. On the contrary by the terminal EL1004 for example the tabs “General”, “EtherCAT”, “Process Data” and “Online” are available only. Several terminals, as for instance the EL6695 provide special functions by a tab with its own terminal name, so “EL6695” in this case. A specific tab “Settings” by terminals with a wide range of setup options will be provided also (e.g. EL3751).

“General” tab

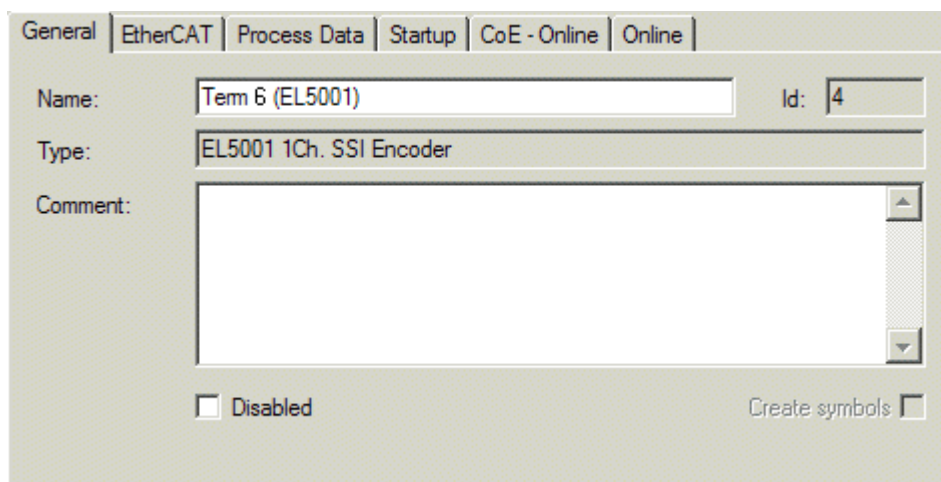


Fig. 76: “General” tab

| | |
|-----------------------|---|
| Name | Name of the EtherCAT device |
| Id | Number of the EtherCAT device |
| Type | EtherCAT device type |
| Comment | Here you can add a comment (e.g. regarding the system). |
| Disabled | Here you can deactivate the EtherCAT device. |
| Create symbols | Access to this EtherCAT slave via ADS is only available if this control box is activated. |

“EtherCAT” tab

Fig. 77: “EtherCAT” tab

| | |
|--------------------------|---|
| Type | EtherCAT device type |
| Product/Revision | Product and revision number of the EtherCAT device |
| Auto Inc Addr. | Auto increment address of the EtherCAT device. The auto increment address can be used for addressing each EtherCAT device in the communication ring through its physical position. Auto increment addressing is used during the start-up phase when the EtherCAT master allocates addresses to the EtherCAT devices. With auto increment addressing the first EtherCAT slave in the ring has the address 0000 _{hex} . For each further slave the address is decremented by 1 (FFFF _{hex} , FFFE _{hex} etc.). |
| EtherCAT Addr. | Fixed address of an EtherCAT slave. This address is allocated by the EtherCAT master during the start-up phase. Tick the control box to the left of the input field in order to modify the default value. |
| Previous Port | Name and port of the EtherCAT device to which this device is connected. If it is possible to connect this device with another one without changing the order of the EtherCAT devices in the communication ring, then this combination field is activated and the EtherCAT device to which this device is to be connected can be selected. |
| Advanced Settings | This button opens the dialogs for advanced settings. |

The link at the bottom of the tab points to the product page for this EtherCAT device on the web.

“Process Data” tab

Indicates the configuration of the process data. The input and output data of the EtherCAT slave are represented as CANopen process data objects (**Process Data Objects**, PDOs). The user can select a PDO via PDO assignment and modify the content of the individual PDO via this dialog, if the EtherCAT slave supports this function.

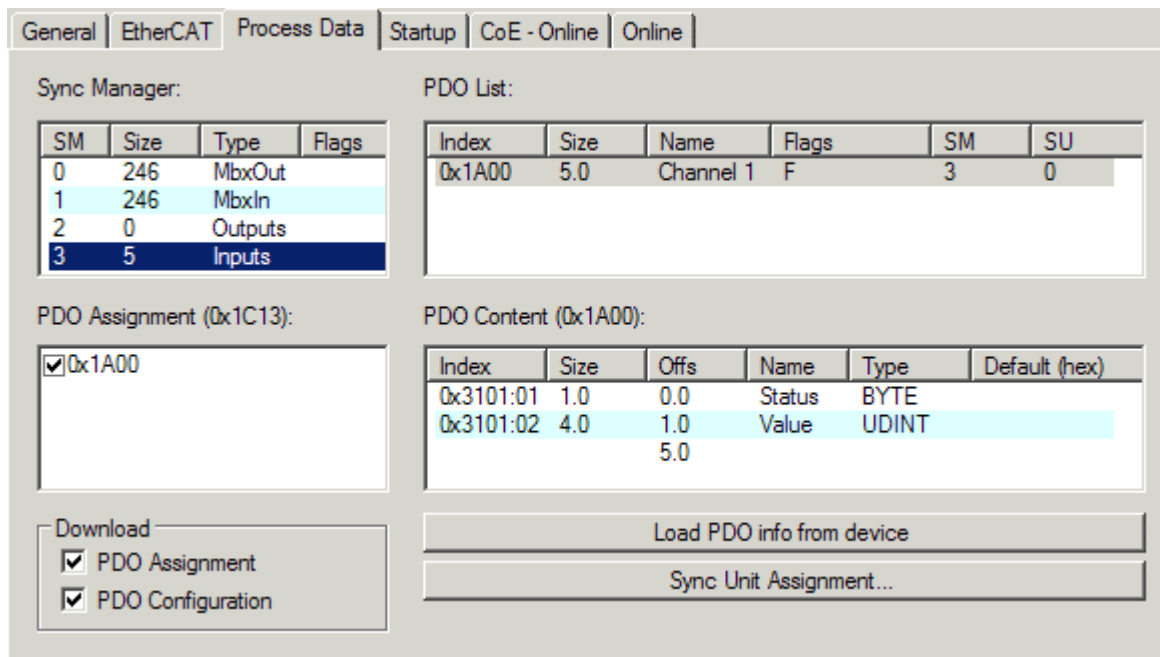


Fig. 78: "Process Data" tab

The process data (PDOs) transferred by an EtherCAT slave during each cycle are user data which the application expects to be updated cyclically or which are sent to the slave. To this end the EtherCAT master (Beckhoff TwinCAT) parameterizes each EtherCAT slave during the start-up phase to define which process data (size in bits/bytes, source location, transmission type) it wants to transfer to or from this slave. Incorrect configuration can prevent successful start-up of the slave.

For Beckhoff EtherCAT EL, ES, EM, EJ and EP slaves the following applies in general:

- The input/output process data supported by the device are defined by the manufacturer in the ESI/XML description. The TwinCAT EtherCAT Master uses the ESI description to configure the slave correctly.
- The process data can be modified in the System Manager. See the device documentation. Examples of modifications include: mask out a channel, displaying additional cyclic information, 16-bit display instead of 8-bit data size, etc.
- In so-called "intelligent" EtherCAT devices the process data information is also stored in the CoE directory. Any changes in the CoE directory that lead to different PDO settings prevent successful startup of the slave. It is not advisable to deviate from the designated process data, because the device firmware (if available) is adapted to these PDO combinations.

If the device documentation allows modification of process data, proceed as follows (see Figure *Configuring the process data*).

- A: select the device to configure
- B: in the "Process Data" tab select Input or Output under SyncManager (C)
- D: the PDOs can be selected or deselected
- H: the new process data are visible as linkable variables in the System Manager
The new process data are active once the configuration has been activated and TwinCAT has been restarted (or the EtherCAT master has been restarted)
- E: if a slave supports this, Input and Output PDO can be modified simultaneously by selecting a so-called PDO record ("predefined PDO settings").

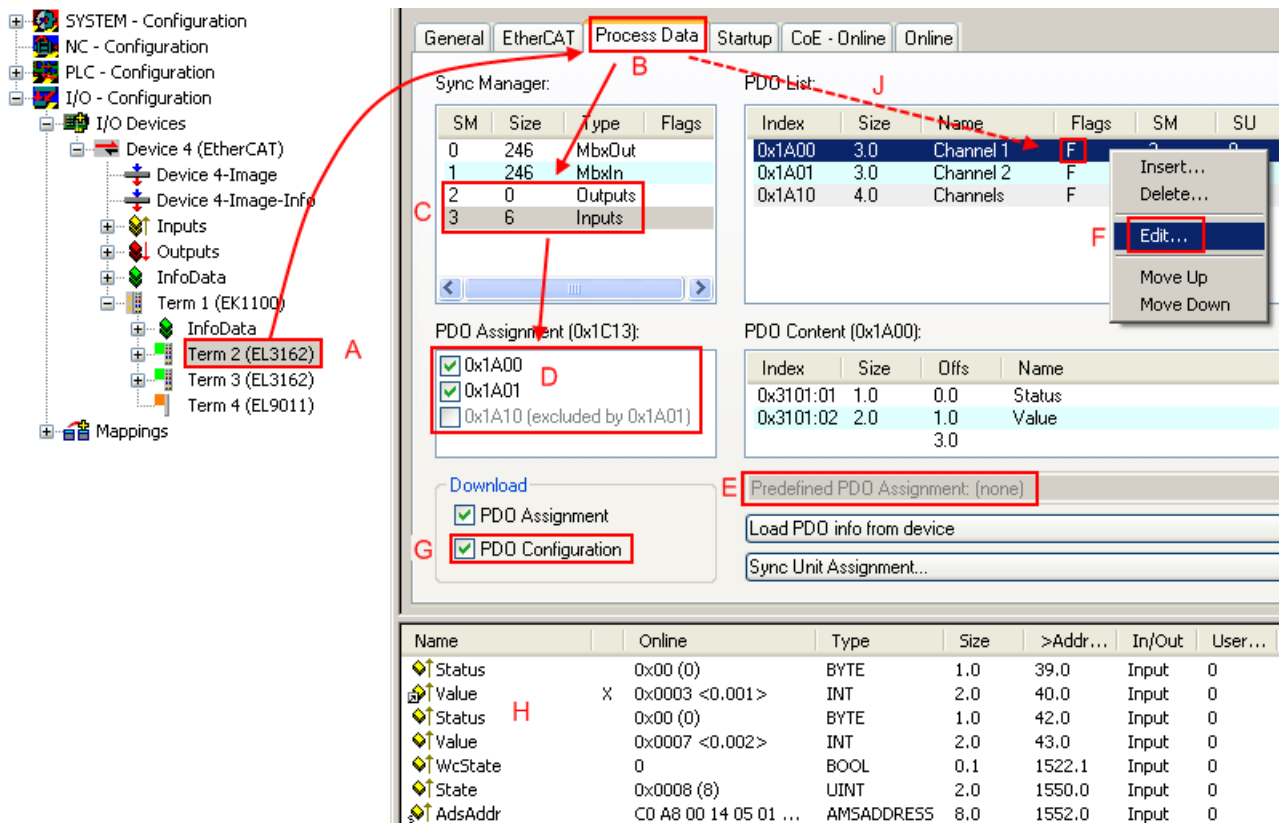


Fig. 79: Configuring the process data

Manual modification of the process data

According to the ESI description, a PDO can be identified as “fixed” with the flag “F” in the PDO overview (Fig. *Configuring the process data*, J). The configuration of such PDOs cannot be changed, even if TwinCAT offers the associated dialog (“Edit”). In particular, CoE content cannot be displayed as cyclic process data. This generally also applies in cases where a device supports download of the PDO configuration, “G”. In case of incorrect configuration the EtherCAT slave usually refuses to start and change to OP state. The System Manager displays an “invalid SM cfg” logger message: This error message (“invalid SM IN cfg” or “invalid SM OUT cfg”) also indicates the reason for the failed start.

A detailed description [► 80] can be found at the end of this section.

“Startup” tab

The *Startup* tab is displayed if the EtherCAT slave has a mailbox and supports the *CANopen over EtherCAT* (CoE) or *Servo drive over EtherCAT* protocol. This tab indicates which download requests are sent to the mailbox during startup. It is also possible to add new mailbox requests to the list display. The download requests are sent to the slave in the same order as they are shown in the list.

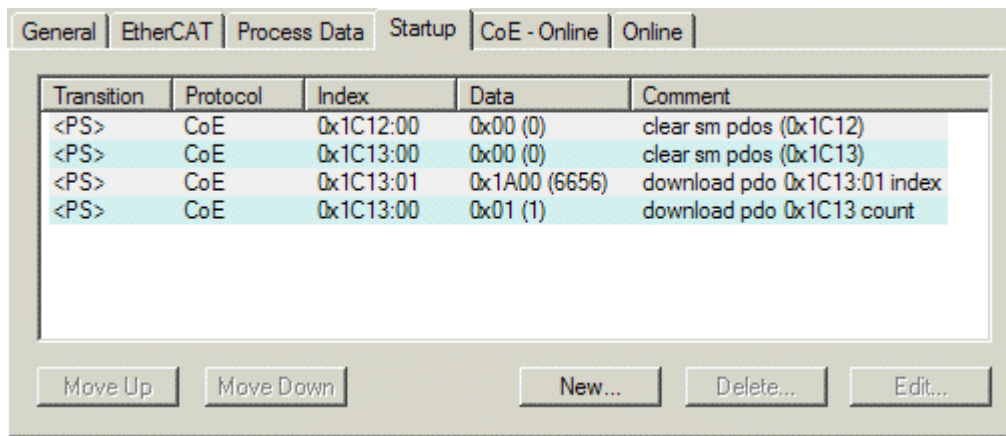


Fig. 80: "Startup" tab

| Column | Description |
|------------|--|
| Transition | Transition to which the request is sent. This can either be <ul style="list-style-type: none"> the transition from pre-operational to safe-operational (PS), or the transition from safe-operational to operational (SO). If the transition is enclosed in "<>" (e.g. <PS>), the mailbox request is fixed and cannot be modified or deleted by the user. |
| Protocol | Type of mailbox protocol |
| Index | Index of the object |
| Data | Date on which this object is to be downloaded. |
| Comment | Description of the request to be sent to the mailbox |

| | |
|------------------|--|
| Move Up | This button moves the selected request up by one position in the list. |
| Move Down | This button moves the selected request down by one position in the list. |
| New | This button adds a new mailbox download request to be sent during startup. |
| Delete | This button deletes the selected entry. |
| Edit | This button edits an existing request. |

"CoE - Online" tab

The additional *CoE - Online* tab is displayed if the EtherCAT slave supports the *CANopen over EtherCAT* (CoE) protocol. This dialog lists the content of the object list of the slave (SDO upload) and enables the user to modify the content of an object from this list. Details for the objects of the individual EtherCAT devices can be found in the device-specific object descriptions.

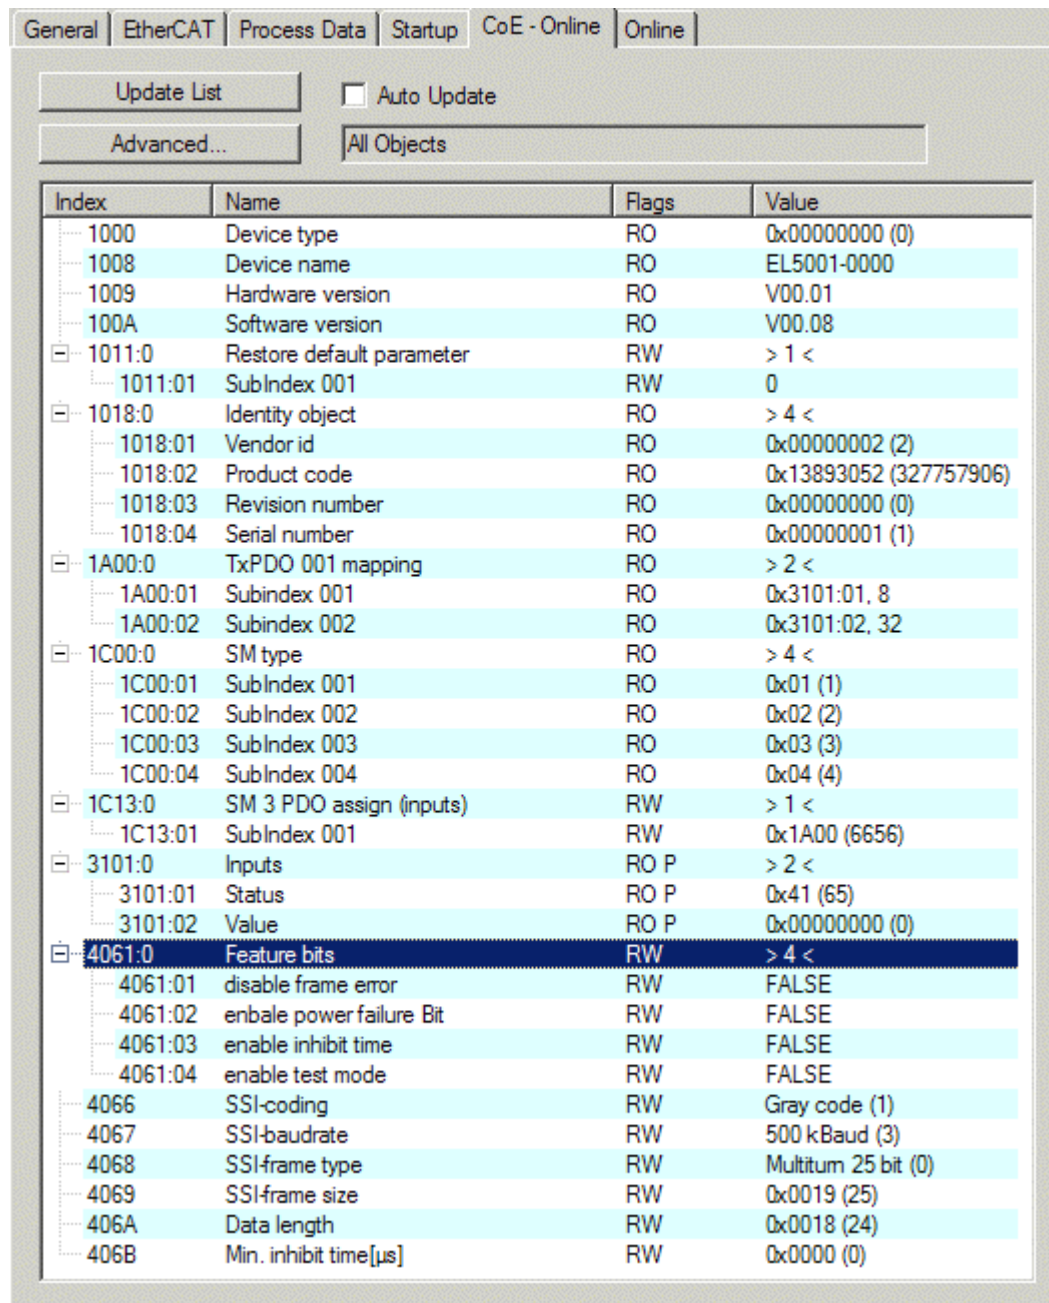


Fig. 81: "CoE - Online" tab

Object list display

| Column | Description |
|--------|---|
| Index | Index and sub-index of the object |
| Name | Name of the object |
| Flags | RW The object can be read, and data can be written to the object (read/write) |
| | RO The object can be read, but no data can be written to the object (read only) |
| | P An additional P identifies the object as a process data object. |
| Value | Value of the object |

Update List The *Update list* button updates all objects in the displayed list

Auto Update If this check box is selected, the content of the objects is updated automatically.

Advanced The *Advanced* button opens the *Advanced Settings* dialog. Here you can specify which objects are displayed in the list.

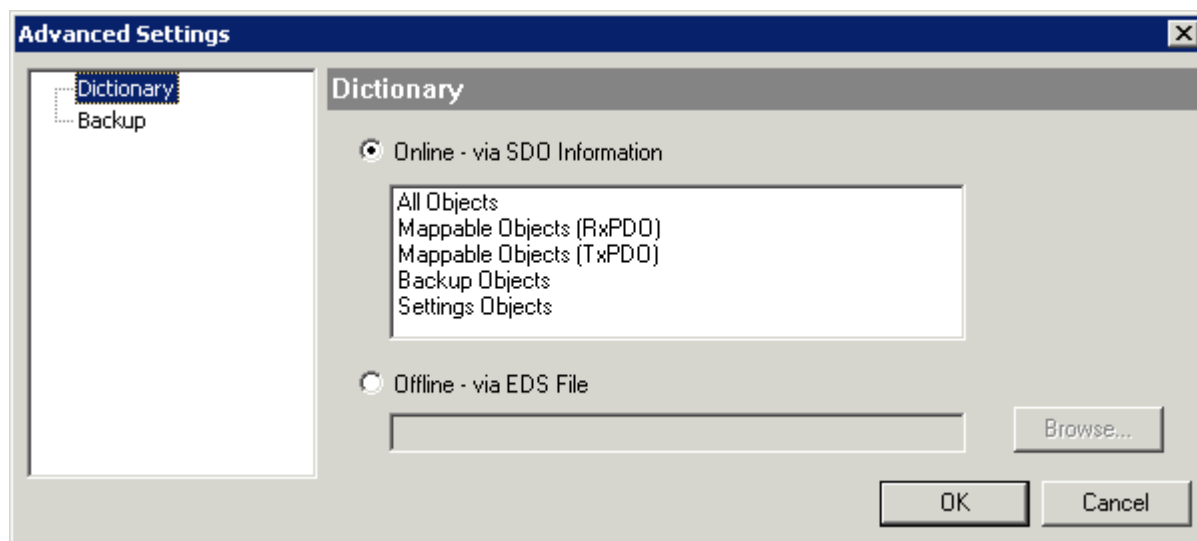


Fig. 82: Dialog "Advanced settings"

Online - via SDO Information If this option button is selected, the list of the objects included in the object list of the slave is uploaded from the slave via SDO information. The list below can be used to specify which object types are to be uploaded.

Offline - via EDS File If this option button is selected, the list of the objects included in the object list is read from an EDS file provided by the user.

"Online" tab

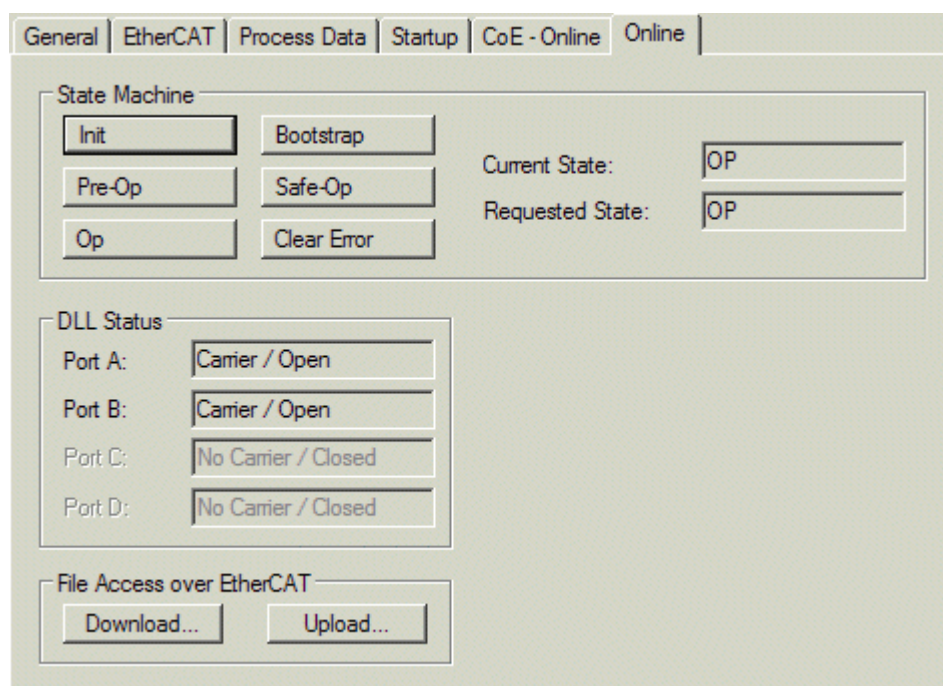


Fig. 83: "Online" tab

State Machine

| | |
|------------------------|---|
| Init | This button attempts to set the EtherCAT device to the <i>Init</i> state. |
| Pre-Op | This button attempts to set the EtherCAT device to the <i>pre-operational</i> state. |
| Op | This button attempts to set the EtherCAT device to the <i>operational</i> state. |
| Bootstrap | This button attempts to set the EtherCAT device to the <i>Bootstrap</i> state. |
| Safe-Op | This button attempts to set the EtherCAT device to the <i>safe-operational</i> state. |
| Clear Error | This button attempts to delete the fault display. If an EtherCAT slave fails during change of state it sets an error flag. Example: An EtherCAT slave is in PREOP state (pre-operational). The master now requests the SAFEOP state (safe-operational). If the slave fails during change of state it sets the error flag. The current state is now displayed as ERR PREOP. When the <i>Clear Error</i> button is pressed the error flag is cleared, and the current state is displayed as PREOP again. |
| Current State | Indicates the current state of the EtherCAT device. |
| Requested State | Indicates the state requested for the EtherCAT device. |

DLL Status

Indicates the DLL status (data link layer status) of the individual ports of the EtherCAT slave. The DLL status can have four different states:

| Status | Description |
|---------------------|---|
| No Carrier / Open | No carrier signal is available at the port, but the port is open. |
| No Carrier / Closed | No carrier signal is available at the port, and the port is closed. |
| Carrier / Open | A carrier signal is available at the port, and the port is open. |
| Carrier / Closed | A carrier signal is available at the port, but the port is closed. |

File Access over EtherCAT

| | |
|-----------------|--|
| Download | With this button a file can be written to the EtherCAT device. |
| Upload | With this button a file can be read from the EtherCAT device. |

“DC” tab (Distributed Clocks)

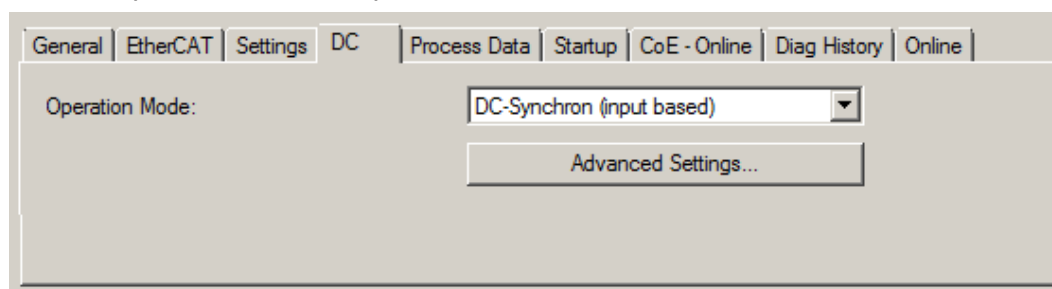


Fig. 84: “DC” tab (Distributed Clocks)

| | |
|-----------------------------|--|
| Operation Mode | Options (optional): <ul style="list-style-type: none"> • FreeRun • SM-Synchron • DC-Synchron (Input based) • DC-Synchron |
| Advanced Settings... | Advanced settings for readjustment of the real time determinant TwinCAT-clock |

Detailed information to Distributed Clocks is specified on <http://infosys.beckhoff.com>:

Fieldbus Components → EtherCAT Terminals → EtherCAT System documentation → EtherCAT basics → Distributed Clocks

5.2.7.1 Detailed description of Process Data tab

Sync Manager

Lists the configuration of the Sync Manager (SM).

If the EtherCAT device has a mailbox, SM0 is used for the mailbox output (MbxOut) and SM1 for the mailbox input (MbxIn).

SM2 is used for the output process data (outputs) and SM3 (inputs) for the input process data.

If an input is selected, the corresponding PDO assignment is displayed in the *PDO Assignment* list below.

PDO Assignment

PDO assignment of the selected Sync Manager. All PDOs defined for this Sync Manager type are listed here:

- If the output Sync Manager (outputs) is selected in the Sync Manager list, all RxPDOs are displayed.
- If the input Sync Manager (inputs) is selected in the Sync Manager list, all TxPDOs are displayed.

The selected entries are the PDOs involved in the process data transfer. In the tree diagram of the System Manager these PDOs are displayed as variables of the EtherCAT device. The name of the variable is identical to the *Name* parameter of the PDO, as displayed in the PDO list. If an entry in the PDO assignment list is deactivated (not selected and greyed out), this indicates that the input is excluded from the PDO assignment. In order to be able to select a greyed out PDO, the currently selected PDO has to be deselected first.

● **i** Activation of PDO assignment

- ✓ If you have changed the PDO assignment, in order to activate the new PDO assignment,
 - a) the EtherCAT slave has to run through the PS status transition cycle (from pre-operational to safe-operational) once (see [Online tab \[► 78\]](#)),
 - b) and the System Manager has to reload the EtherCAT slaves



(button for TwinCAT 2 or



button for TwinCAT 3)

PDO list

List of all PDOs supported by this EtherCAT device. The content of the selected PDOs is displayed in the *PDO Content* list. The PDO configuration can be modified by double-clicking on an entry.

| Column | Description | |
|--------|---|---|
| Index | PDO index. | |
| Size | Size of the PDO in bytes. | |
| Name | Name of the PDO. If this PDO is assigned to a Sync Manager, it appears as a variable of the slave with this parameter as the name. | |
| Flags | F | Fixed content: The content of this PDO is fixed and cannot be changed by the System Manager. |
| | M | Mandatory PDO. This PDO is mandatory and must therefore be assigned to a Sync Manager! Consequently, this PDO cannot be deleted from the <i>PDO Assignment</i> list |
| SM | Sync Manager to which this PDO is assigned. If this entry is empty, this PDO does not take part in the process data traffic. | |
| SU | Sync unit to which this PDO is assigned. | |

PDO Content

Indicates the content of the PDO. If flag F (fixed content) of the PDO is not set the content can be modified.

Download

If the device is intelligent and has a mailbox, the configuration of the PDO and the PDO assignments can be downloaded to the device. This is an optional feature that is not supported by all EtherCAT slaves.

PDO Assignment

If this check box is selected, the PDO assignment that is configured in the PDO Assignment list is downloaded to the device on startup. The required commands to be sent to the device can be viewed in the [Startup \[► 75\]](#) tab.

PDO Configuration

If this check box is selected, the configuration of the respective PDOs (as shown in the PDO list and the PDO Content display) is downloaded to the EtherCAT slave.

5.2.8 Import/Export of EtherCAT devices with SCI and XTI

SCI and XTI Export/Import – Handling of user-defined modified EtherCAT slaves

5.2.8.1 Basic principles

An EtherCAT slave is basically parameterized through the following elements:

- Cyclic process data (PDO)
- Synchronization (Distributed Clocks, FreeRun, SM-Synchron)
- CoE parameters (acyclic object dictionary)

Note: Not all three elements may be present, depending on the slave.

For a better understanding of the export/import function, let's consider the usual procedure for IO configuration:

- The user/programmer processes the IO configuration in the TwinCAT system environment. This involves all input/output devices such as drives that are connected to the fieldbuses used.
Note: In the following sections, only EtherCAT configurations in the TwinCAT system environment are considered.
- For example, the user manually adds devices to a configuration or performs a scan on the online system.
- This results in the IO system configuration.
- On insertion, the slave appears in the system configuration in the default configuration provided by the vendor, consisting of default PDO, default synchronization method and CoE StartUp parameter as defined in the ESI (XML device description).
- If necessary, elements of the slave configuration can be changed, e.g. the PDO configuration or the synchronization method, based on the respective device documentation.

It may become necessary to reuse the modified slave in other projects in this way, without having to make equivalent configuration changes to the slave again. To accomplish this, proceed as follows:

- Export the slave configuration from the project,
- Store and transport as a file,
- Import into another EtherCAT project.

TwinCAT offers two methods for this purpose:

- within the TwinCAT environment: Export/Import as **xti** file or
- outside, i.e. beyond the TwinCAT limits: Export/Import as **sci** file.

An example is provided below for illustration purposes: an EL3702 terminal with standard setting is switched to 2-fold oversampling (blue) and the optional PDO "StartTimeNextLatch" is added (red):

The screenshot shows the TwinCAT Project34 interface. The left pane displays the project tree with 'Term 2 (EL3702)' selected. The right pane shows the 'Process Data' tab with a table of PDO assignments. Red arrows indicate the flow from the project tree to the 'Process Data' tab and then to the 'PDO List' table.

| SM | Size | Type | Flags |
|----|------|--------|-------|
| 0 | 6 | Inputs | |
| 1 | 6 | Inputs | |
| 2 | 4 | Inputs | |

| Index | Size | Name |
|--------|------|----------------|
| 0x1B00 | 2.0 | Ch1 CycleCount |
| 0x1A00 | 2.0 | Ch1 Sample 0 |
| 0x1A01 | 2.0 | Ch1 Sample 1 |
| 0x1A02 | 2.0 | Ch1 Sample 2 |
| 0x1A03 | 2.0 | Ch1 Sample 3 |
| 0x1A04 | 2.0 | Ch1 Sample 4 |
| 0x1A05 | 2.0 | Ch1 Sample 5 |

| Index | Size | Offs | Name |
|-----------|------|------|----------------|
| 0x6800:01 | 2.0 | 0.0 | Ch1 CycleCount |
| | | 2.0 | |

| Name | Online | Type | Size | >Addr... |
|--------------------|--------|-------|------|----------|
| Ch1 CycleCount | | UINT | 2.0 | 58.0 |
| Ch1 Value | | INT | 2.0 | 60.0 |
| Ch1 Value | | INT | 2.0 | 62.0 |
| Ch2 CycleCount | | UINT | 2.0 | 64.0 |
| Ch2 Value | | INT | 2.0 | 66.0 |
| Ch2 Value | | INT | 2.0 | 68.0 |
| StartTimeNextLa... | | UDINT | 4.0 | 70.0 |
| WcState | | BIT | 0.1 | 1522.2 |

The two methods for exporting and importing the modified terminal referred to above are demonstrated below.

5.2.8.2 Procedure within TwinCAT with xti files

Each IO device can be exported/saved individually:


The screenshot shows the context menu for 'Term 2 (EL3702)' in the TwinCAT Project34 interface. The menu options are:

- Add New Item...
- Insert New Item...
- Insert Existing Item...
- Remove
- Save Term 2 (EL3702) As...

The xti file can be stored:

The screenshot shows the file save dialog with the filename 'Term 2 (EL3702).xti' and the file type 'TwinCAT Export File (*.xti)'.

and imported again in another TwinCAT system via "Insert Existing item":

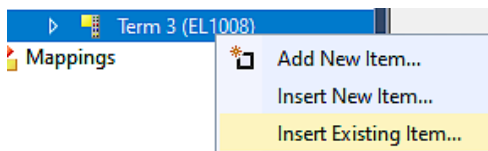

5.2.8.3 Procedure within and outside TwinCAT with sci file


Note regarding availability (2021/01)

The SCI method is available from TwinCAT 3.1 build 4024.14.


The Slave Configuration Information (SCI) describes a specific complete configuration for an EtherCAT slave (terminal, box, drive...) based on the setting options of the device description file (ESI, EtherCAT Slave Information). That is, it includes PDO, CoE, synchronization.

Export:

- select a single device via the menu (multiple selection is also possible):
TwinCAT → EtherCAT Devices → Export SCI.

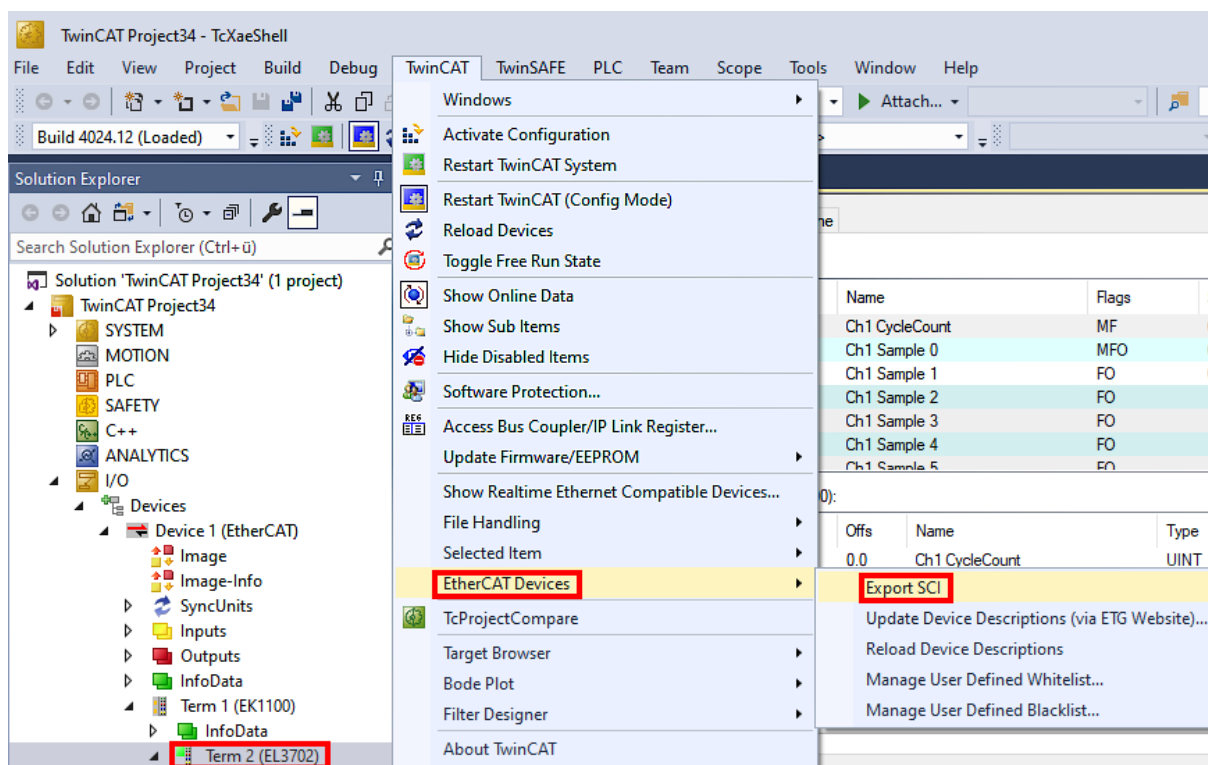

- If TwinCAT is offline (i.e. if there is no connection to an actual running controller) a warning message may appear, because after executing the function the system attempts to reload the EtherCAT segment. However, in this case this is not relevant for the result and can be acknowledged by clicking OK:

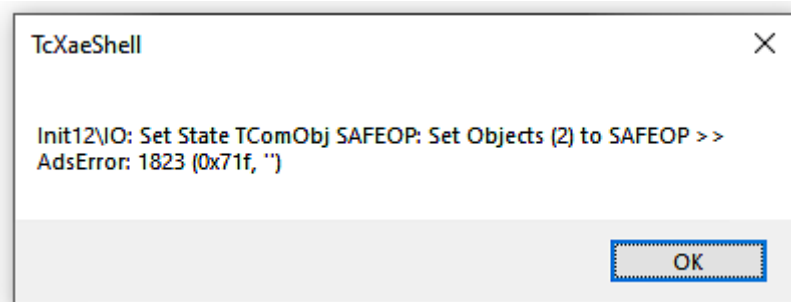

- A description may also be provided:

- Explanation of the dialog box:

| | | |
|-------------|--|---|
| Name | Name of the SCI, assigned by the user. | |
| Description | Description of the slave configuration for the use case, assigned by the user. | |
| Options | Keep modules | If a slave supports modules/slots, the user can decide whether these are to be exported or whether the module and device data are to be combined during export. |
| | AoE Set AmsNetId | The configured AmsNetId is exported. Usually this is network-dependent and cannot always be determined in advance. |
| | EoE Set MAC and IP | The configured virtual MAC and IP addresses are stored in the SCI. Usually these are network-dependent and cannot always be determined in advance. |
| | CoE Set cycle time(0x1C3x.2) | The configured cycle time is exported. Usually this is network-dependent and cannot always be determined in advance. |
| ESI | Reference to the original ESI file. | |
| Export | Save SCI file. | |


- A list view is available for multiple selections (*Export multiple SCI files*):

- Selection of the slaves to be exported:
 - All:
All slaves are selected for export.

- None:
All slaves are deselected.
- The sci file can be saved locally:

| | |
|------------|--|
| Dateiname: | EL3702 with added StartTimeNextLatch.sci |
| Dateityp: | SCI file (*.sci) |

- The export takes place:

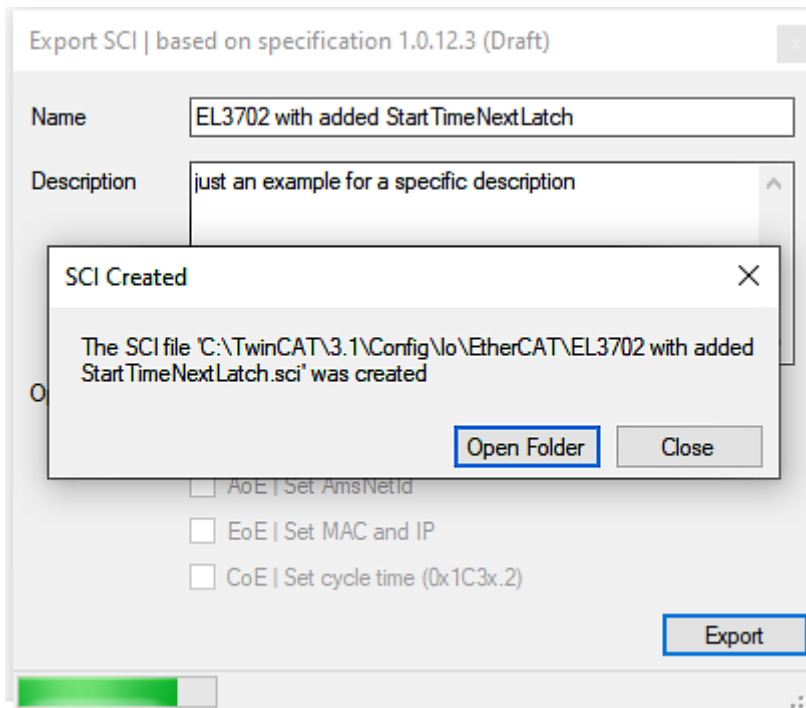


Import


- An sci description can be inserted manually into the TwinCAT configuration like any normal Beckhoff device description.
- The sci file must be located in the TwinCAT ESI path, usually under:
C:\TwinCAT\3.1\Config\Io\EtherCAT

| | | | | |
|---|--|------------------|-----------|------|
|  | EL3702 with added StartTimeNextLatch.sci | 11.01.2021 13:29 | SCI-Datei | 6 KB |
|---|--|------------------|-----------|------|

- Open the selection dialog:

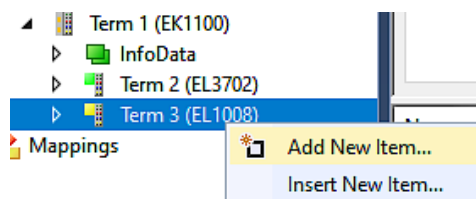


- Display SCI devices and select and insert the desired device:

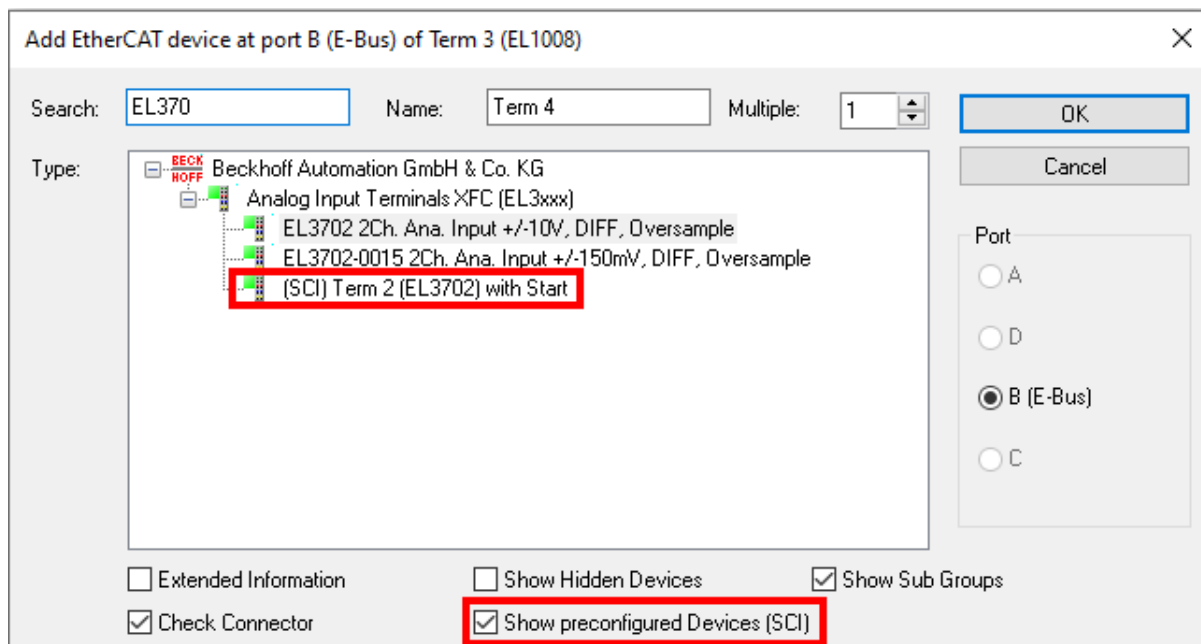

Additional Notes


- Settings for the SCI function can be made via the general Options dialog (Tools → Options → TwinCAT → Export SCI):

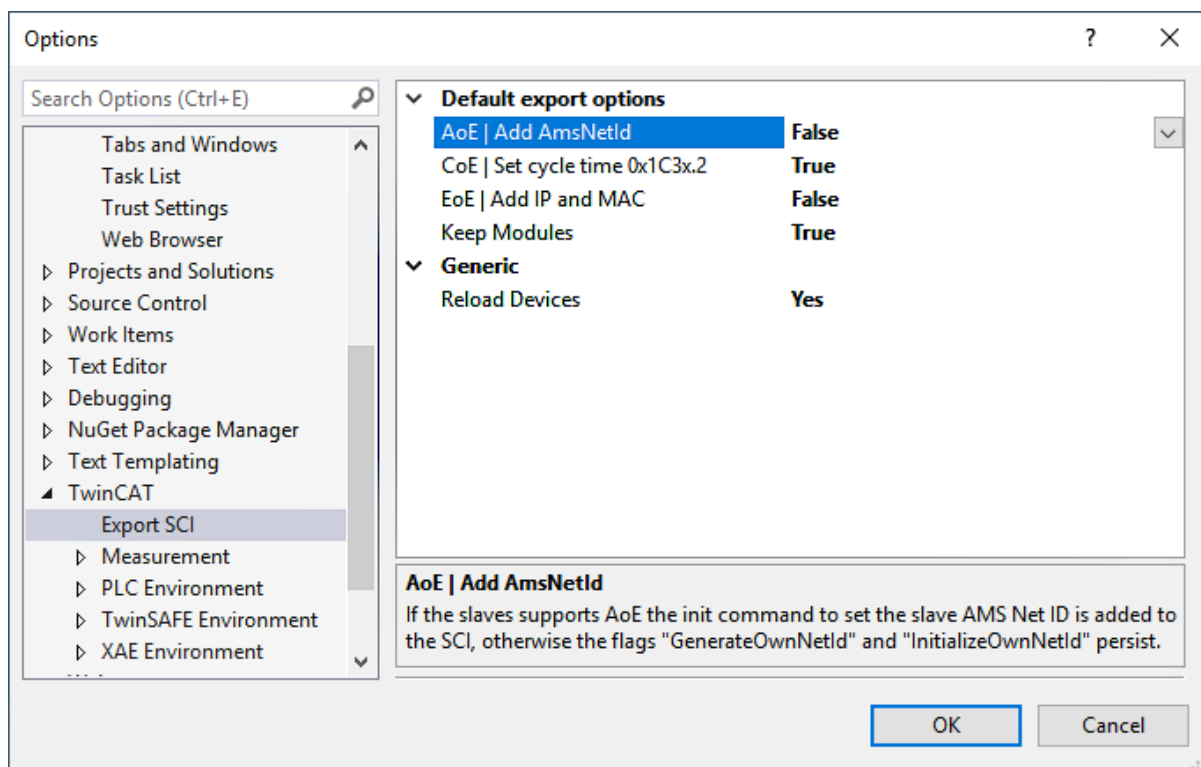

Explanation of the settings:

| | | |
|------------------------|--------------------------------|---|
| Default export options | AoE Set AmsNetId | Default setting whether the configured AmsNetId is exported. |
| | CoE Set cycle time(0x1C3x.2) | Default setting whether the configured cycle time is exported. |
| | EoE Set MAC and IP | Default setting whether the configured MAC and IP addresses are exported. |
| | Keep modules | Default setting whether the modules persist. |
| Generic | Reload Devices | Setting whether the Reload Devices command is executed before the SCI export. This is strongly recommended to ensure a consistent slave configuration. |

SCI error messages are displayed in the TwinCAT logger output window if required:

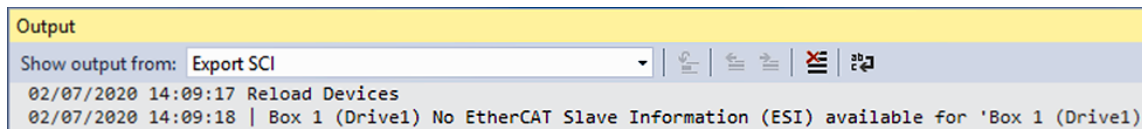

5.3 General Commissioning Instructions for an EtherCAT Slave

This summary briefly deals with a number of aspects of EtherCAT Slave operation under TwinCAT. More detailed information on this may be found in the corresponding sections of, for instance, the [EtherCAT System Documentation](#).

Diagnosis in real time: WorkingCounter, EtherCAT State and Status

Generally speaking an EtherCAT Slave provides a variety of diagnostic information that can be used by the controlling task.

This diagnostic information relates to differing levels of communication. It therefore has a variety of sources, and is also updated at various times.

Any application that relies on I/O data from a fieldbus being correct and up to date must make diagnostic access to the corresponding underlying layers. EtherCAT and the TwinCAT System Manager offer comprehensive diagnostic elements of this kind. Those diagnostic elements that are helpful to the controlling task for diagnosis that is accurate for the current cycle when in operation (not during commissioning) are discussed below.

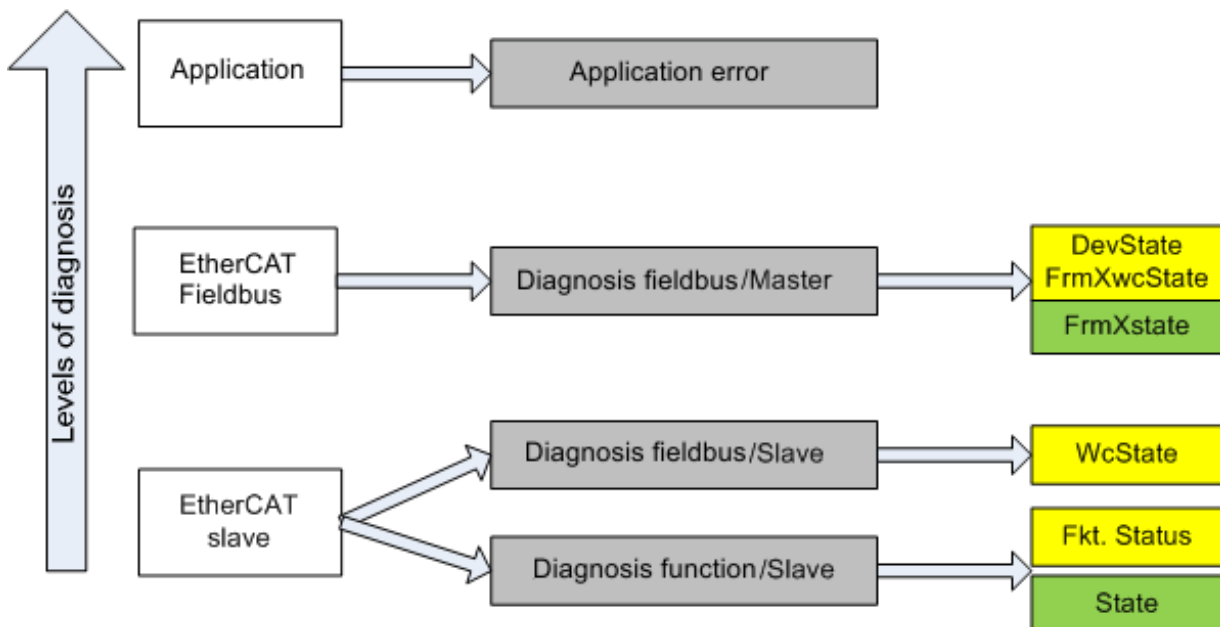


Fig. 85: Selection of the diagnostic information of an EtherCAT Slave

In general, an EtherCAT Slave offers

- communication diagnosis typical for a slave (diagnosis of successful participation in the exchange of process data, and correct operating mode)
This diagnosis is the same for all slaves.

as well as

- function diagnosis typical for a channel (device-dependent)
See the corresponding device documentation

The colors in Fig. *Selection of the diagnostic information of an EtherCAT Slave* also correspond to the variable colors in the System Manager, see Fig. *Basic EtherCAT Slave Diagnosis in the PLC*.

| Colour | Meaning |
|--------|--|
| yellow | Input variables from the Slave to the EtherCAT Master, updated in every cycle |
| red | Output variables from the Slave to the EtherCAT Master, updated in every cycle |
| green | Information variables for the EtherCAT Master that are updated acyclically. This means that it is possible that in any particular cycle they do not represent the latest possible status. It is therefore useful to read such variables through ADS. |

Fig. Basic EtherCAT Slave Diagnosis in the PLC shows an example of an implementation of basic EtherCAT Slave Diagnosis. A Beckhoff EL3102 (2-channel analogue input terminal) is used here, as it offers both the communication diagnosis typical of a slave and the functional diagnosis that is specific to a channel. Structures are created as input variables in the PLC, each corresponding to the process image.

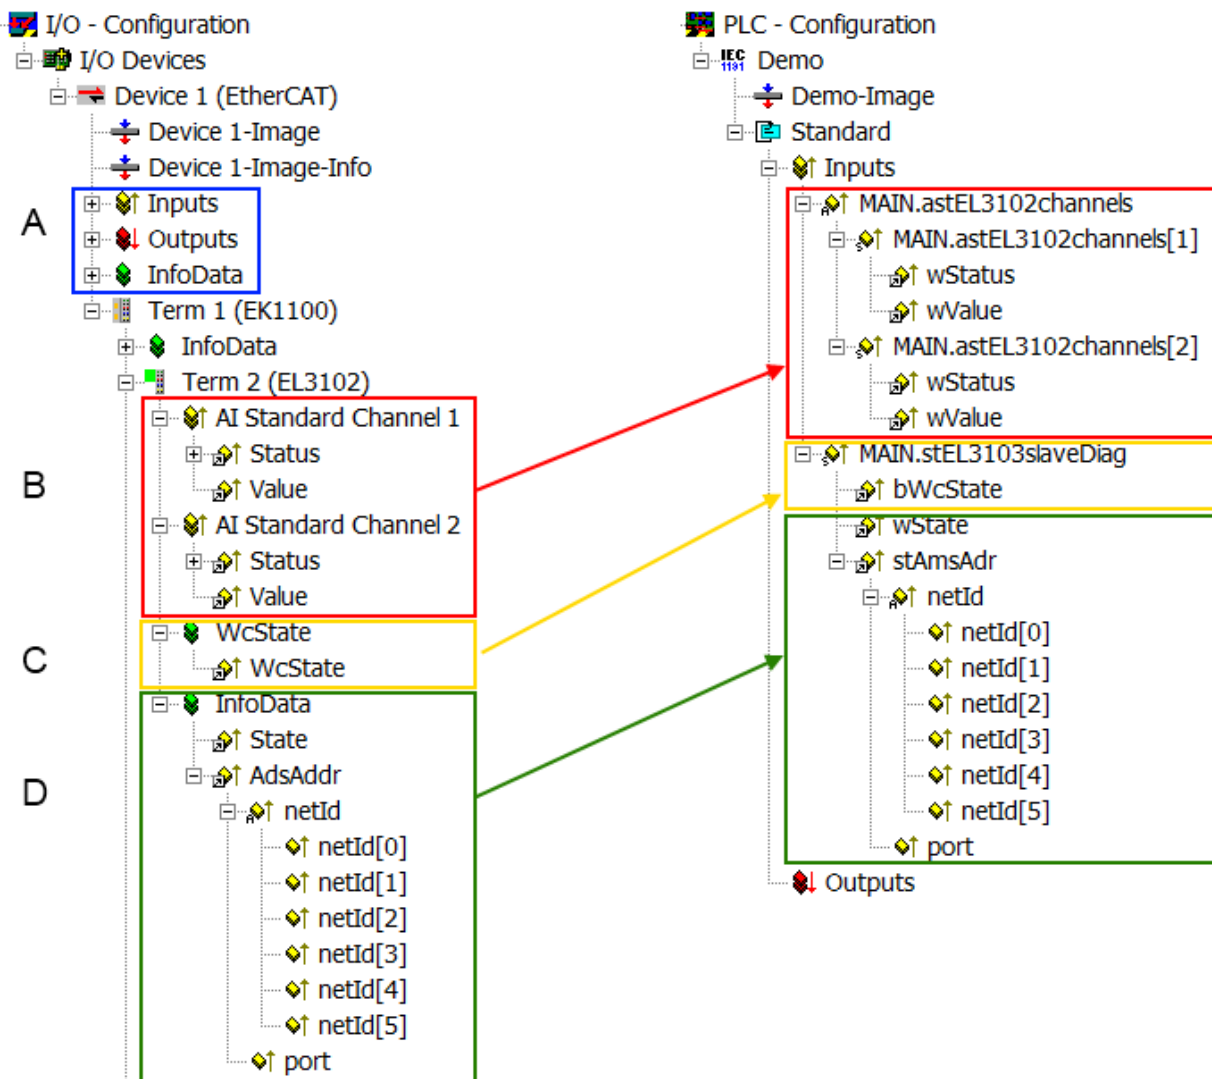


Fig. 86: Basic EtherCAT Slave Diagnosis in the PLC

The following aspects are covered here:

| Code | Function | Implementation | Application/evaluation |
|------|--|---|---|
| A | The EtherCAT Master's diagnostic information updated cyclically (yellow) or provided acyclically (green). | | At least the DevState is to be evaluated for the most recent cycle in the PLC. The EtherCAT Master's diagnostic information offers many more possibilities than are treated in the EtherCAT System Documentation. A few keywords: <ul style="list-style-type: none"> • CoE in the Master for communication with/through the Slaves • Functions from <i>TcEtherCAT.lib</i> • Perform an OnlineScan |
| B | In the example chosen (EL3102) the EL3102 comprises two analogue input channels that transmit a single function status for the most recent cycle. | Status <ul style="list-style-type: none"> • the bit significations may be found in the device documentation • other devices may supply more information, or none that is typical of a slave | In order for the higher-level PLC task (or corresponding control applications) to be able to rely on correct data, the function status must be evaluated there. Such information is therefore provided with the process data for the most recent cycle. |
| C | For every EtherCAT Slave that has cyclic process data, the Master displays, using what is known as a WorkingCounter, whether the slave is participating successfully and without error in the cyclic exchange of process data. This important, elementary information is therefore provided for the most recent cycle in the System Manager 1. at the EtherCAT Slave, and, with identical contents 2. as a collective variable at the EtherCAT Master (see Point A) for linking. | WcState (Working Counter) 0: valid real-time communication in the last cycle 1: invalid real-time communication This may possibly have effects on the process data of other Slaves that are located in the same SyncUnit | In order for the higher-level PLC task (or corresponding control applications) to be able to rely on correct data, the communication status of the EtherCAT Slave must be evaluated there. Such information is therefore provided with the process data for the most recent cycle. |
| D | Diagnostic information of the EtherCAT Master which, while it is represented at the slave for linking, is actually determined by the Master for the Slave concerned and represented there. This information cannot be characterized as real-time, because it <ul style="list-style-type: none"> • is only rarely/never changed, except when the system starts up • is itself determined acyclically (e.g. EtherCAT Status) | State current Status (INIT..OP) of the Slave. The Slave must be in OP (=8) when operating normally. <i>AdsAddr</i> The ADS address is useful for communicating from the PLC/task via ADS with the EtherCAT Slave, e.g. for reading/writing to the CoE. The AMS-NetID of a slave corresponds to the AMS-NetID of the EtherCAT Master; communication with the individual Slave is possible via the <i>port</i> (= EtherCAT address). | Information variables for the EtherCAT Master that are updated acyclically. This means that it is possible that in any particular cycle they do not represent the latest possible status. It is therefore possible to read such variables through ADS. |

NOTICE

Diagnostic information

It is strongly recommended that the diagnostic information made available is evaluated so that the application can react accordingly.

CoE Parameter Directory

The CoE parameter directory (CanOpen-over-EtherCAT) is used to manage the set values for the slave concerned. Changes may, in some circumstances, have to be made here when commissioning a relatively complex EtherCAT Slave. It can be accessed through the TwinCAT System Manager, see Fig. *EL3102, CoE directory*:

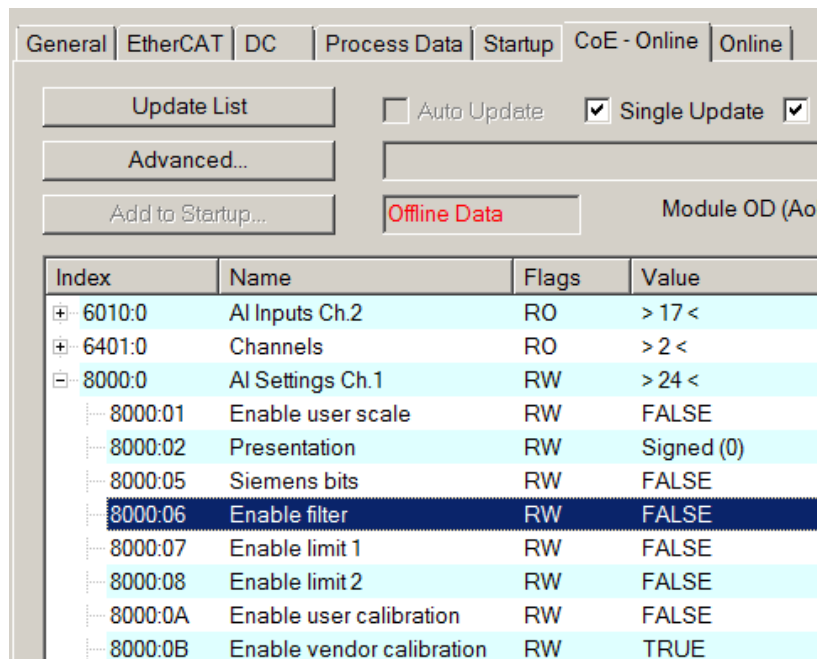


Fig. 87: EL3102, CoE directory

i EtherCAT System Documentation

The comprehensive description in the [EtherCAT System Documentation](#) (EtherCAT Basics --> CoE Interface) must be observed!

A few brief extracts:

- Whether changes in the online directory are saved locally in the slave depends on the device. EL terminals (except the EL66xx) are able to save in this way.
- The user must manage the changes to the StartUp list.

Commissioning aid in the TwinCAT System Manager

Commissioning interfaces are being introduced as part of an ongoing process for EL/EP EtherCAT devices. These are available in TwinCAT System Managers from TwinCAT 2.11R2 and above. They are integrated into the System Manager through appropriately extended ESI configuration files.

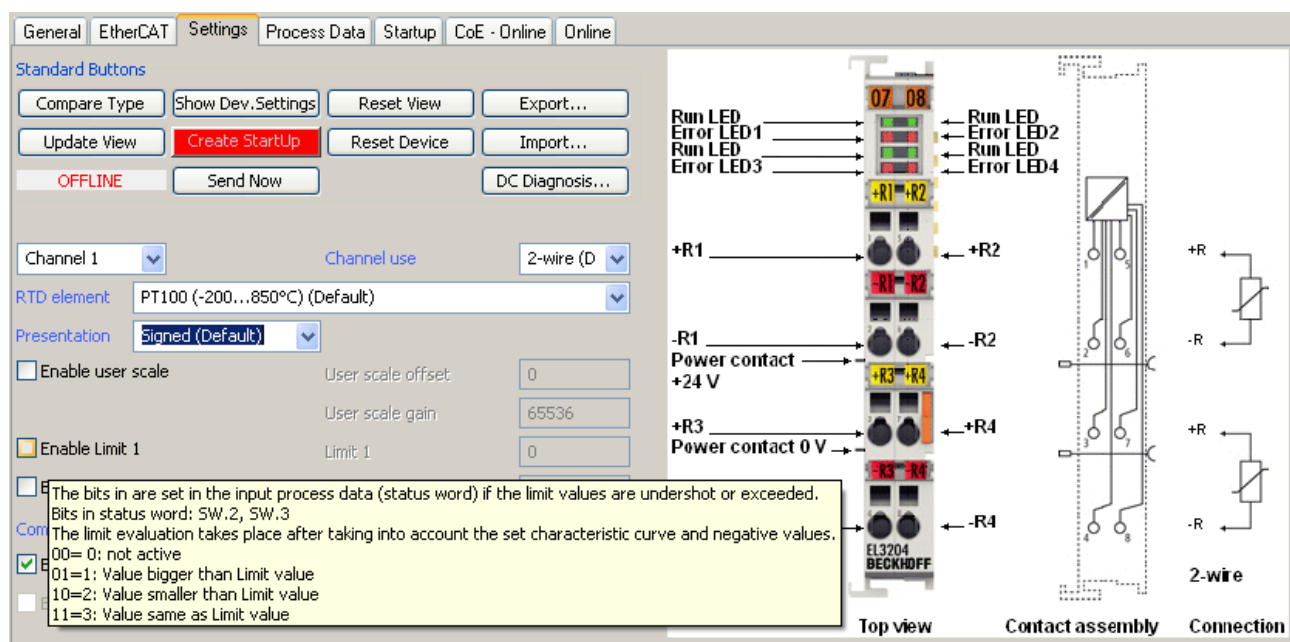


Fig. 88: Example of commissioning aid for a EL3204

This commissioning process simultaneously manages

- CoE Parameter Directory
- DC/FreeRun mode
- the available process data records (PDO)

Although the “Process Data”, “DC”, “Startup” and “CoE-Online” that used to be necessary for this are still displayed, it is recommended that, if the commissioning aid is used, the automatically generated settings are not changed by it.

The commissioning tool does not cover every possible application of an EL/EP device. If the available setting options are not adequate, the user can make the DC, PDO and CoE settings manually, as in the past.

EtherCAT State: automatic default behaviour of the TwinCAT System Manager and manual operation

After the operating power is switched on, an EtherCAT Slave must go through the following statuses

- INIT
- PREOP
- SAFEOP
- OP

to ensure sound operation. The EtherCAT Master directs these statuses in accordance with the initialization routines that are defined for commissioning the device by the ES/XML and user settings (Distributed Clocks (DC), PDO, CoE). See also the section on "Principles of [Communication, EtherCAT State Machine \[► 22\]](#)" in this connection. Depending how much configuration has to be done, and on the overall communication, booting can take up to a few seconds.

The EtherCAT Master itself must go through these routines when starting, until it has reached at least the OP target state.

The target state wanted by the user, and which is brought about automatically at start-up by TwinCAT, can be set in the System Manager. As soon as TwinCAT reaches the status RUN, the TwinCAT EtherCAT Master will approach the target states.

Standard setting

The advanced settings of the EtherCAT Master are set as standard:

- EtherCAT Master: OP
 - Slaves: OP
- This setting applies equally to all Slaves.

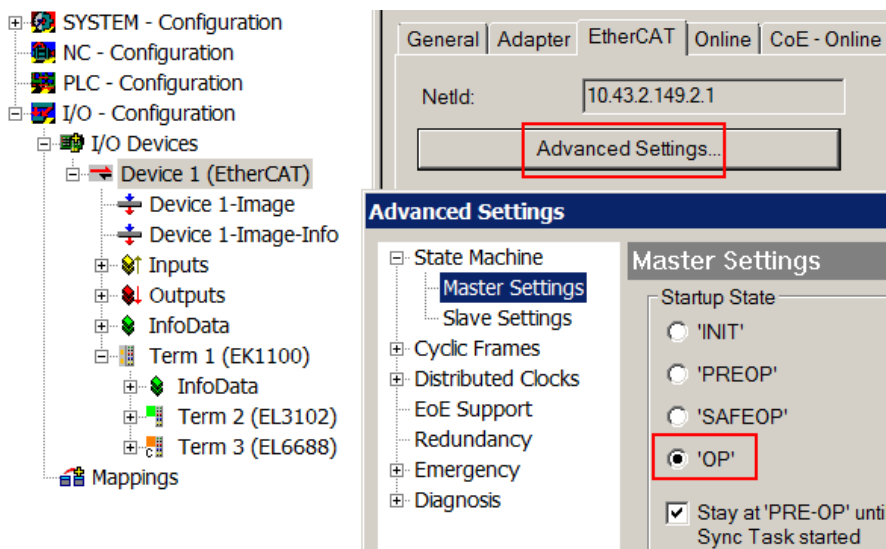


Fig. 89: Default behaviour of the System Manager

In addition, the target state of any particular Slave can be set in the “Advanced Settings” dialogue; the standard setting is again OP.

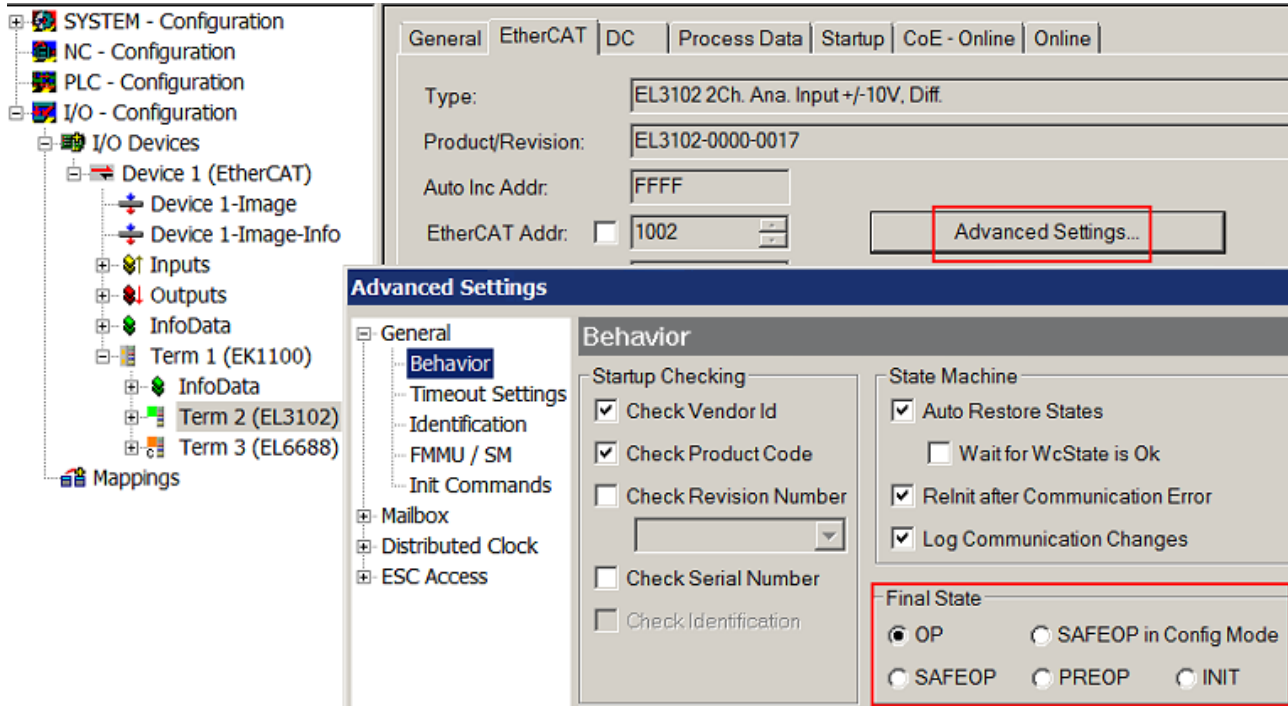


Fig. 90: Default target state in the Slave

Manual Control

There are particular reasons why it may be appropriate to control the states from the application/task/PLC. For instance:

- for diagnostic reasons
- to induce a controlled restart of axes
- because a change in the times involved in starting is desirable

In that case it is appropriate in the PLC application to use the PLC function blocks from the *TcEtherCAT.lib*, which is available as standard, and to work through the states in a controlled manner using, for instance, *FB_EcSetMasterState*.

It is then useful to put the settings in the EtherCAT Master to INIT for master and slave.

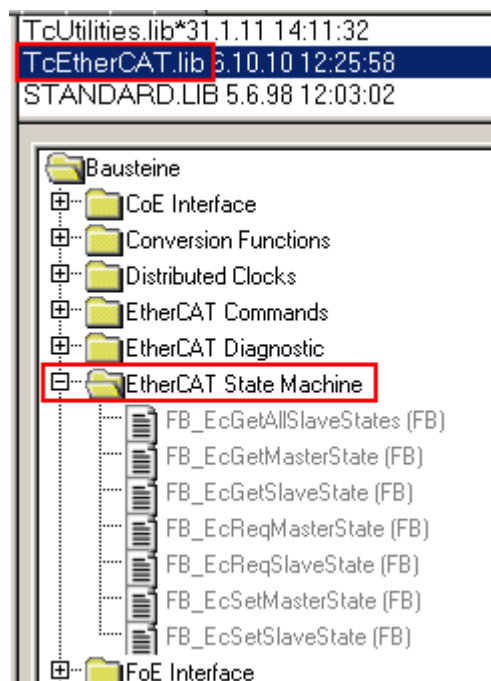


Fig. 91: PLC function blocks

Note regarding E-Bus current

EL/ES terminals are placed on the DIN rail at a coupler on the terminal strand. A Bus Coupler can supply the EL terminals added to it with the E-bus system voltage of 5 V; a coupler is thereby loadable up to 2 A as a rule. Information on how much current each EL terminal requires from the E-bus supply is available online and in the catalogue. If the added terminals require more current than the coupler can supply, then power feed terminals (e.g. EL9410) must be inserted at appropriate places in the terminal strand.

The pre-calculated theoretical maximum E-Bus current is displayed in the TwinCAT System Manager as a column value. A shortfall is marked by a negative total amount and an exclamation mark; a power feed terminal is to be placed before such a position.

| General Adapter EtherCAT Online CoE - Online | | | | | | |
|---|------------------|-----------------|--------|----------------------|----------|-----------|
| NetId: | | 10.43.2.149.2.1 | | Advanced Settings... | | |
| Number | Box Name | Address | Type | In Size | Out S... | E-Bus (.. |
| 1 | Term 1 (EK1100) | 1001 | EK1100 | | | |
| 2 | Term 2 (EL3102) | 1002 | EL3102 | 8.0 | | 1830 |
| 3 | Term 4 (EL2004) | 1003 | EL2004 | | 0.4 | 1730 |
| 4 | Term 5 (EL2004) | 1004 | EL2004 | | 0.4 | 1630 |
| 5 | Term 6 (EL7031) | 1005 | EL7031 | 8.0 | 8.0 | 1510 |
| 6 | Term 7 (EL2808) | 1006 | EL2808 | | 1.0 | 1400 |
| 7 | Term 8 (EL3602) | 1007 | EL3602 | 12.0 | | 1210 |
| 8 | Term 9 (EL3602) | 1008 | EL3602 | 12.0 | | 1020 |
| 9 | Term 10 (EL3602) | 1009 | EL3602 | 12.0 | | 830 |
| 10 | Term 11 (EL3602) | 1010 | EL3602 | 12.0 | | 640 |
| 11 | Term 12 (EL3602) | 1011 | EL3602 | 12.0 | | 450 |
| 12 | Term 13 (EL3602) | 1012 | EL3602 | 12.0 | | 260 |
| 13 | Term 14 (EL3602) | 1013 | EL3602 | 12.0 | | 70 |
| 14 | Term 3 (EL6688) | 1014 | EL6688 | 22.0 | | -240 ! |

Fig. 92: Illegally exceeding the E-Bus current

From TwinCAT 2.11 and above, a warning message “E-Bus Power of Terminal...” is output in the logger window when such a configuration is activated:




Fig. 93: Warning message for exceeding E-Bus current

NOTICE

Caution! Malfunction possible!

The same ground potential must be used for the E-Bus supply of all EtherCAT terminals in a terminal block!

6 EL5042 - Commissioning

6.1 Process data

6.1.1 Sync Manager (SM)

The extent of the process data that is made available can be changed via the “Process data” tab (see Fig. *Process data tab SM3, EL5042 (default)*).

General **EtherCAT** **DC** **Process Data** **Startup** **CoE - Online** **Diag History** **Online**

Sync Manager:

| SM | Size | Type | Flags |
|----|------|---------|-------|
| 0 | 128 | MbxOut | |
| 1 | 128 | MbxIn | |
| 2 | 0 | Outputs | |
| 3 | 20 | Inputs | |

PDO List:

| Index | Size | Name | Flags | SM | SU |
|--------|------|-----------------------------|-------|----|----|
| 0x1A00 | 10.0 | FB Inputs Channel 1 | F | 3 | 0 |
| 0x1A01 | 10.0 | FB Inputs Channel 2 | F | 3 | 0 |
| 0x1A02 | 6.0 | FB Inputs Channel 1 compact | F | | 0 |
| 0x1A03 | 6.0 | FB Inputs Channel 2 compact | F | | 0 |

PDO Assignment (0x1C13):

- ☒ 0x1A00
- ☒ 0x1A01
- ☐ 0x1A02 (excluded by 0x1A00)
- ☐ 0x1A03 (excluded by 0x1A01)

PDO Content (0x1A00):

| Index | Size | Offs | Name | Type | Defau |
|-----------|------|------|---------------------|------|-------|
| 0x6000:01 | 0.1 | 0.0 | Status__Warning | BOOL | |
| 0x6000:02 | 0.1 | 0.1 | Status__Error | BOOL | |
| 0x6000:03 | 0.1 | 0.2 | Status__Ready | BOOL | |
| --- | 0.5 | 0.3 | --- | | |
| --- | 0.4 | 1.0 | --- | | |
| 0x6000:0D | 0.1 | 1.4 | Status__Diag | BOOL | |
| 0x6000:0E | 0.1 | 1.5 | Status__TxPDO State | BOOL | |

Download

- ☒ PDO Assignment
- ☐ PDO Configuration

Predefined PDO Assignment: '2 Ch. Standard'

Load PDO info from device

Sync Unit Assignment...

Fig. 94: Process data tab SM3, EL5042 (default)

6.1.2 PDO Assignment

Proceed as follows to configure the process data:

1. Select the required Sync Manager (SM2 or SM3) in the "Sync Manager" field at the top left.
2. The process data assigned to this Sync Manager can then be switched on or off in the "PDO Assignment" box underneath.
3. Restarting the EtherCAT system, or reloading the configuration in configuration mode (F4), causes the EtherCAT communication to restart, and the process data is transferred from the terminal.

The following PDO Assignments are available:

| SM3, PDO Assignment 0x1C13 | | | | |
|--|-----------------|----------------------------|-------------------------|-----------------|
| Index | Size (byte.bit) | Name | PDO content | Size (byte.bit) |
| 0x1A00 (default) FB Inputs Channel 1 | 10.0 | Status_Warning | Index 0x6000:01 [►_105] | 0.1 |
| | | Status_Error | Index 0x6000:02 [►_105] | 0.1 |
| | | Status_Ready | Index 0x6000:03 [►_105] | 0.1 |
| | | [Offset] | - | 0.5 |
| | | [Offset] | - | 0.4 |
| | | Status_Diag | Index 0x6000:0D [►_105] | 0.1 |
| | | Status_TxPDO State | Index 0x6000:0E [►_105] | 0.1 |
| | | Status_Input Cycle counter | Index 0x6000:0F [►_105] | 0.2 |
| | | Position | Index 0x6000:11 [►_105] | 8.0 |
| 0x1A01 (default) FB Inputs Channel 2 | 10.0 | Status_Warning | Index 0x6010:01 [►_105] | 0.1 |
| | | Status_Error | Index 0x6010:02 [►_105] | 0.1 |
| | | Status_Ready | Index 0x6010:03 [►_105] | 0.1 |
| | | [Offset] | - | 0.5 |
| | | [Offset] | - | 0.4 |
| | | Status_Diag | Index 0x6010:0D [►_105] | 0.1 |
| | | Status_TxPDO State | Index 0x6010:0E [►_105] | 0.1 |
| | | Status_Input Cycle counter | Index 0x6010:0F [►_105] | 0.2 |
| | | Position | Index 0x6010:11 [►_105] | 8.0 |
| 0x1A02 FB Inputs Channel 1 compact | 6.0 | Status_Warning | Index 0x6000:01 [►_105] | 0.1 |
| | | Status_Error | Index 0x6000:02 [►_105] | 0.1 |
| | | Status_Ready | Index 0x6000:03 [►_105] | 0.1 |
| | | [Offset] | - | 0.5 |
| | | [Offset] | - | 0.4 |
| | | Status_Diag | Index 0x6000:0D [►_105] | 0.1 |
| | | Status_TxPDO State | Index 0x6000:0E [►_105] | 0.1 |
| | | Status_Input Cycle counter | Index 0x6000:0F [►_105] | 0.2 |
| | | Position | Index 0x6000:11 [►_105] | 4.0 |
| 0x1A03 FB Inputs Channel 2 compact | 6.0 | Status_Warning | Index 0x6010:01 [►_105] | 0.1 |
| | | Status_Error | Index 0x6010:02 [►_105] | 0.1 |
| | | Status_Ready | Index 0x6010:03 [►_105] | 0.1 |
| | | [Offset] | - | 0.5 |
| | | [Offset] | - | 0.4 |
| | | Status_Diag | Index 0x6010:0D [►_105] | 0.1 |
| | | Status_TxPDO State | Index 0x6010:0E [►_105] | 0.1 |
| | | Status_Input Cycle counter | Index 0x6010:0F [►_105] | 0.2 |
| | | Position | Index 0x6010:11 [►_105] | 4.0 |

6.1.3 Predefined PDO Assignment

The "Predefined PDO Assignment" enables a simplified selection of the process data. The desired function is selected on the lower part of the "Process Data" tab. As a result, all necessary PDOs are automatically activated and the unnecessary PDOs are deactivated.

Four PDO assignments are available:

| Name | SM3, PDO assignment |
|----------------|--|
| 1 Ch. Standard | 0x1A00 [►_107] (FB Inputs Channel 1) |
| 1 Ch. Compact | 0x1A02 [►_108] (FB Inputs Channel 1 compact) |
| 2 Ch. Standard | 0x1A01 [►_107] (FB Inputs Channel 2) |
| 2 Ch. Compact | 0x1A03 [►_108] (FB Inputs Channel 2 compact) |

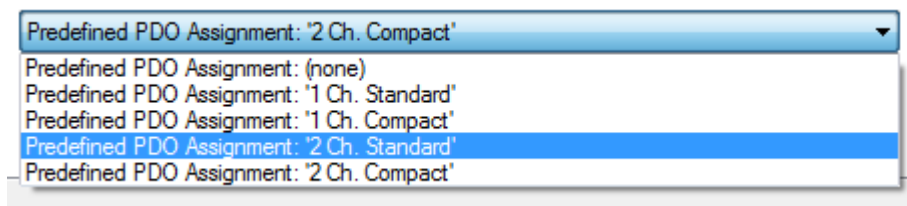


Fig. 95: Process data tab Predefined PDO Assignment, EL5042

6.1.4 Interpretation of process data

Following process data are provided:

| Name | Online | Type | Size | >Addr... | In/Out |
|-----------------------|--------|---------------|------|----------|--------|
| ✚ Status | | Status_365... | 2.0 | 51.0 | Input |
| ✚ Warning | | BIT | 0.1 | 51.0 | Input |
| ✚ Error | | BIT | 0.1 | 51.1 | Input |
| ✚ Ready | | BIT | 0.1 | 51.2 | Input |
| ✚ Diag | | BIT | 0.1 | 52.4 | Input |
| ✚ TxPDO State | | BIT | 0.1 | 52.5 | Input |
| ✚ Input cycle counter | | BIT2 | 0.2 | 52.6 | Input |
| ✚ Position | | ULINT | 8.0 | 53.0 | Input |
| ✚ Status | | Status_365... | 2.0 | 61.0 | Input |
| ✚ Warning | | BIT | 0.1 | 61.0 | Input |
| ✚ Error | | BIT | 0.1 | 61.1 | Input |
| ✚ Ready | | BIT | 0.1 | 61.2 | Input |
| ✚ Diag | | BIT | 0.1 | 62.4 | Input |
| ✚ TxPDO State | | BIT | 0.1 | 62.5 | Input |
| ✚ Input cycle counter | | BIT2 | 0.2 | 62.6 | Input |
| ✚ Position | | ULINT | 8.0 | 63.0 | Input |

Fig. 96: EL5042, process data

The interpretation of the process data depend on the mode (BiSS-C or SSI).

| Name | Description for BiSS-C mode |
|----------------------------|--|
| Status_Warning | Status bit "Warning" is part of the BiSS-C frame and is directly communicated from the slave. The bit is active HIGH. For troubleshooting please refer to slave documentation. |
| Status_Error | Status bit "Error" is part of the BiSS-C frame and is directly communicated from the slave. The bit is active HIGH. If the error bit is HIGH, it will be also displayed in the "TxPDO State". For troubleshooting please refer to slave documentation. |
| Status_Ready | In the idle state of BiSS-C communication the slave indicates his ready state with high value. Only if the ready bit is HIGH, data transmission can be started. If the ready bit is LOW, please check chapter <i>error handling</i> . |
| Status_Diag | Indicates that a new message is available in the "Diag History". |
| Status_TxPDO State | Validity of the data of the associated TxPDO 0 = valid 1 = invalid |
| Status_Input cycle counter | 2-bit counter for synchronization, is incremented only if a new value is present. |
| Position | BiSS-C position value |

| Name | Description for SSI mode |
|----------------------------|---|
| Status_Warning | Status bit "Warning" is deactivated by default in SSI mode. If status bits are activated (0x80p8:02 "Disable Status Bits" = FALSE), the last 2 bits of the SSI frame are directly mapped as warning and error bit. |
| Status_Error | Status bit "Error" is deactivated by default in SSI mode. If status bits are activated (0x80p8:02 "Disable Status Bits" = FALSE), the last 2 bits of the SSI frame are directly mapped as warning and error bit. |
| Status_Ready | In the idle state of SSI communication the slave indicates his ready state with HIGH value. Only if the ready bit is high, data transmission can be started. If the ready bit is LOW, please check chapter <i>error handling</i> . |
| Status_Diag | Indicates that a new message is available in the "Diag History". |
| Status_TxPDO State | Validity of the data of the associated TxPDO 0 = valid 1 = invalid |
| Status_Input cycle counter | 2-bit counter for synchronization, is incremented only if a new value is present |
| Position | SSI position value |

6.2 Parameterization

The terminal works as a BiSS-C and also as SSI master. Various parameters have to be set in the configuration data (object 0x80p0 [► 103] and object 0x80p8 [► 104]) to ensure, that the data of the slave are transmitted correctly (see chapter Parametrization as BiSS-C master [► 100] and chapter Parametrization as SSI master [► 102]).

6.2.1 Setting the encoder supply voltage

The EL5042 provides 5 V and 9 V encoder power supply (0x80p8:12 supply voltage) for both channels with max. 0.5 A.



Setting the encoder supply voltage

- ✓ Condition: To write 0x8008:12 [► 104] "Supply Voltage", the value 0x72657375 (ASCII: "user") must be set in 0xF00 [► 110]8 "Code word".
- a) Set the value into index 0x8008:12 "Supply Voltage" (Specification in steps of 0.1 V). Only the values 50 (5.0 V) and 90 (9.0 V) are permissible. This setting applies to both channels.
- b) Before switching to 9.0 V make sure that **both** BiSS encoders support the extended voltage range!
 - ⇒ The setting is only adopted in the "INIT" state.
 - ⇒ The encoder supply voltage is set for both channels in object 0x8008:12 [► 104]!

6.2.2 Parametrization as BiSS-C master

- BiSS-C mode (0x80p8:18)
 - In the object 0x80p8:18 Mode: BiSS-C (0x00) need to be selected.
- CRC polynomial (0x80p8:11)
 - The transmission of the data is CRC-secured. The counter polynomial for CRC determination is slave specific. Is the CRC transmitted inverted, the 0x80p8:03 "CRC invert" need to be set to TRUE.
- Clock frequency (0x80p8:13)
 - Clock rate, limitations by the max. cable length need to be considered. A runtime compensation for the clock and data line is implemented, therefore the use of long cables and high data rates is possible (max. 10 MHz).
- Multiturn [Bit] (0x80p8:15)
 - Number of multiturn bits provided by the slave. If only singleturn bits are provided (e. g. linear encoder) the value can be set to 0.
- Singleturn [Bit] (0x80p8:16)
 - Number of singleturn bits provided by the slave.
- Offset LSB Bit [Bit] (0x80p8:17)
 - Right aligned offset bits (null bits) can be set, if available (slave specific). The position data is shifted by the number of the offset bits.



Note about the counter polynomial

The counter polynomial for the CRC determination is manufacturer-specific. Common values are 0x43_{hex} (67_{dec}) or 0x97_{hex} (151_{dec}).

This value can be entered directly in the object 0x80p8:11 [► 104].

The calculation of the polynomial and the cyclical data check between master and slave are carried out automatically.

The BiSS-C frame structure is following:

| Offset MSB Bit (optional) | Position [max. 64 Bit] | | Offset LSB Bit (optional) | Error [1Bit] | Warning [1Bit] | CRC [8Bit] |
|---------------------------|------------------------|----------------------|--|--|----------------|--------------------------|
| Not relevant | Multiturn data | Singleturn data | Optional | Status Bits | | CRC polynomial |
| | 0x80p8:15 Multiturn | 0x80p8:16 Singleturn | 0x80p8:17 Offset LSB Bit (right aligned) | 0x80p8:02 Disable Status Bits = TRUE; bits will not be analyzed separately | | 0x80p8:11 CRC Polynomial |

6.2.3 Error handling BiSS-C mode

| State | Description |
|-------|--|
| 1 | Permanent bit state TRUE |
| X | Bit state change, depend on encoder position |

| Warning Bit | Error Bit | Ready Bit | TxPDO Bit | Error description | Possible reasons |
|-------------|-----------|-----------|-----------|---|---|
| 0 | 0 | 1 | 0 | No error Encoder is ready for communication position value is valid | Encoder is connected in the right way, communication is established |
| 0 | 0 | 0 | 1 | Encoder is not ready for communication or position value is invalid | Wiring error: <ul style="list-style-type: none"> Encoder is not powered Up not connected Data lines (D+ / D-) twisted Wrong parametrization: <ul style="list-style-type: none"> Invalid CRC Incorrect 0x80n0 settings Communication error: <ul style="list-style-type: none"> Watchdog Error |
| | | 1 | 1 | Encoder is ready, but position value is invalid | Wrong parametrization: <ul style="list-style-type: none"> Invalid CRC Incorrect 0x80n0 settings Communication error: <ul style="list-style-type: none"> Watchdog Error |
| 1 | 0 | X | 0 | BiSS-C warning bit set | Encoder specific warning, check manufacturer datasheet |
| | 1 | X | 1 | BiSS-C error bit set | Encoder specific error, check manufacturer datasheet |
| X | X | X | X | Position value is invalid | Wrong parametrization: <ul style="list-style-type: none"> Incorrect 0x80n0 settings, check coding 0x80n0:14 |
| 1 | 1 | X | 1 | BiSS-C error bit and BiSS-C warning bit set | Encoder specific error and warning, check manufacturer datasheet |

6.2.4 Parametrization as SSI master

- SSI mode (0x80p8:18)
 - In the Object 0x80p8:18 Mode: SSI (0x01) need to be selected.
 - CRC polynomial (0x80p8:11) is automatically set to 0.
 - Status Bits are automatically disabled (0x80p8:02 set to TRUE).

NOTICE

Possible impairment of devices!

If the object 0x80n8:11 "CRC polynomial" is set to "0", the data transmission is not CRC secured anymore. Therefore wrong counter values may not be detected by the encoder!

- Clock frequency (0x80p8:13)
 - Clock rate, limitations by the max. cable length need to be considered. Max. Frequency for SSI 2 MHz, slave specific
- Multiturn [Bit] (0x80p8:15)
 - Number of multiturn bits provided by the slave. If only singleturn bits are provided (e.g. linear encoder) the value can be set to 0.
- Singleturn [Bit] (0x80p8:16)
 - Number of singleturn bits provided by the slave.
- Offset LSB Bit [Bit] (0x80p8:17)
 - Right aligned offset bits (additional bits, which should be blend out of the SSI frame) can be set, if available (slave specific). The position data is shifted by the number of the offset bits.

The SSI frame structure is following:

| Position [max. 64 Bit] | | Offset LSB Bit (optional) | Error [1Bit] (optional) | Warning [1Bit] (optional) |
|---------------------------|-------------------------|--|--|------------------------------|
| Multiturn data | Singleturn data | Optional | Status Bits, disabled per default | |
| 0x80p8:15 Multiturn | 0x80p8:16 Singleturn | 0x80p8:17 Offset LSB Bit (right aligned) | 0x80p8:02 Disable Status Bits = TRUE (default for SSI mode); bits will not be analyzed separately | |

Are additional bits in the SSI frame available (e.g. parity bit or power good bit), and should these bits be blended out, offset bits (0x80p8:17) can be set. The position data is than shifted by the number of the offset bits.

6.3 Cycle time

The minimum cycle time of the EL5042 depends on the configuration of the terminal.

At least with the predefined PDO assignment "1 Ch. Standard" and the default settings (BiSS-C mode, 10 MHz clock frequency), a cycle time of 100 µs can be realized.

If another configuration, than the predefined PDO assignment "1 Ch. Standard", is used, the minimum cycle time can be read out in the object 0x1C33:05 minimum cycle time, by set the object 0x1C33:08 command to 1.

6.4 Object description and parameterization

i EtherCAT XML Device Description

The display matches that of the CoE objects from the EtherCAT ESI Device Description ([XML](#)). We recommend downloading the latest XML file from the download area of the [Beckhoff website](#) and installing it according to installation instructions.

i Parameterization via the CoE list (CAN over EtherCAT)

The EtherCAT device is parameterized via the [CoE-Online tab \[► 76\]](#) (double-click on the respective object) or via the [Process Data tab \[► 73\]](#) (allocation of PDOs). Please note the following general [CoE notes \[► 24\]](#) when using/manipulating the CoE parameters:

- Keep a startup list if components have to be replaced
- Differentiation between online/offline dictionary, existence of current XML description
- use "[CoE reload \[► 133\]](#)" for resetting changes

6.4.1 Restore object

Index 1011 Restore default parameters

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--|---|-----------|-------|--------------------------------|
| 1011:0 | Restore default parameters [► 133] | Restore default parameters | UINT8 | RO | 0x01 (1 _{dec}) |
| 1011:01 | SubIndex 001 | If this object is set to " 0x64616F6C " in the set value dialog, all backup objects are reset to their delivery state. | UINT32 | RW | 0x00000000 (0 _{dec}) |

6.4.2 Configuration data

Index 80p0 FB Settings (for Ch.1, p = 0; Ch.2, p = 1)

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|---------------------------|---|-----------|-------|--------------------------------|
| 80p0:0 | FB Settings | Max. subindex | UINT8 | RO | 0x11 (17 _{dec}) |
| 80p0:01 | Invert feedback direction | TRUE: Negates the 64-bit position value | BOOLEAN | RW | FALSE |
| 80p0:11 | Device type | 03: BiSS | UINT32 | RW | 0x00000003 (2 _{dec}) |

Index 80p8 FB BiSS-C settings (for Ch.1, p = 0; Ch.2, p = 1)

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|---------------------------|--|-----------|-------|---------------------------------|
| 80p8:0 | FB BiSS-C settings | Max. subindex | UINT8 | RO | 0x18 (24 _{dec}) |
| 80p8:01 | Invert feedback direction | FALSE: 64-bit position value TRUE: Negates the 64-bit position value | BOOLEAN | RW | FALSE |
| 0x80p8:02 | Disable Status Bits | FALSE: status bits enabled TRUE: status bits disabled | BOOLEAN | RW | FALSE |
| 0x80p8:03 | CRC Invert | FALSE: CRC invert deactivated TRUE: CRC is transferred invert | BOOLEAN | RW | TRUE |
| 0x80p8:11 | CRC Polynomial | Counter polynomial for CRC determination 0: Transmission is not CRC-secured (slave specific) | UINT32 | RW | 0x00000043 (67 _{dec}) |
| 0x80p8:12 | Supply Voltage | Encoder supply voltage: 50: 5.0 V 90: 9.0 V (see note below) | UINT8 | RW | 5.0V (50) |
| 0x80p8:13 | Clock Frequency | 0: 10 MHz 1: 5 MHz 2: 3.33 MHz 3: 2.5 MHz 4: 2 MHz 9: 1 MHz 17: 500 kHz 19: 250 kHz | UINT8 | RW | 0x00 (0 _{dec}) |
| 0x80p8:14 | Coding | 0: Dual code active 1: Gray code active | UINT8 | RW | 0x00 (0 _{dec}) |
| 0x80p8:15 | Multiturn [Bit] | Number of multiturn bits | UINT8 | RW | 0x0C (12 _{dec}) |
| 0x80p8:16 | Singleturn [Bit] | Number of singleturn bits | UINT8 | RW | 0x0D (13 _{dec}) |
| 0x80p8:17 | Offset LSB Bit [Bit] | Number of "right aligned" Offset bits | UINT8 | RW | 0x00 (0 _{dec}) |
| 0x80p8:18 | Mode | 0: BiSS-C mode 1: SSI mode | UINT8 | RW | 0x00 (0 _{dec}) |

NOTICE

Possible impairment of devices!

If the object 0x80n8:11 "CRC polynomial" is set to "0", the data transmission is not CRC secured anymore. Therefore wrong counter values may not be detected by the encoder!



Setting the encoder supply voltage

- ✓ Condition: To write 0x8008:12 [► 104] "Supply Voltage", the value 0x72657375 (ASCII: "user") must be set in 0xF008 [► 110] "Code word".
- a) Set the value into index 0x8008:12 "Supply Voltage (Specification in steps of 0.1 V). Only the values 50 (5.0 V) and 90 (9.0 V) are permissible. This setting applies to both channels.
- b) Before switching to 9.0 V, make sure that **both** BiSS encoders support the extended voltage range!
 - ⇒ The setting is only adopted in the "INIT" state.
 - ⇒ The encoder supply voltage is set for both channels in object 0x8008:12 [► 104]!

6.4.3 Input data

Index 60p0 FB Inputs (for Ch.1, p = 0; Ch.2, p = 1)

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------------|--|-----------|-------|----------------------------|
| 60p0:0 | FB Inputs | Max. subindex | UINT8 | RO | 0x11 (17 _{dec}) |
| 60p0:01 | STATUS_Warning | Warning bit of the BiSS-C protocol | BOOLEAN | RO | FALSE |
| 60p0:02 | STATUS_Error | Error collecting bit of the BiSS-C protocol (error message 1/ error message 2) | BOOLEAN | RO | FALSE |
| 60p0:03 | STATUS_Ready | Ready for use (initialization of the encoder completed) | BOOLEAN | RO | FALSE |
| 60p0:0D | STATUS_Diag | Indicates that a new message is available in the "Diag History" | BOOLEAN | RO | TRUE |
| 60p0:0E | STATUS_TxPDO State | Validity of the data of the associated TxPDO 0 = valid 1 = invalid | BOOLEAN | RO | TRUE |
| 60p0:0F | STATUS_Input cycle counter | 2-bit counter for synchronization (incremented only if a new value is present) | BIT2 | RO | 0x00 (0 _{dec}) |
| 60p0:11 | Position | BiSS-C position value | UINT64 | RO | 00 00 00 00 00 00 00 00 |

6.4.4 Diagnostic data

Index 10F3 Diagnosis History

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-----------------------------|---|------------------|-------|----------------------------|
| 10F3:0 | Diagnosis History | Maximum subindex | UINT8 | RO | 0x37 (55 _{dec}) |
| 10F3:01 | Maximum Messages | Maximum number of stored messages A maximum of 50 messages can be stored | UINT8 | RO | 0x32 (50 _{dec}) |
| 10F3:02 | Newest Message | Subindex of the latest message | UINT8 | RO | 0x00 (0 _{dec}) |
| 10F3:03 | Newest Acknowledged Message | Subindex of the last confirmed message | UINT8 | RW | 0x00 (0 _{dec}) |
| 10F3:04 | New Messages Available | Indicates that a new message is available | BOOLEAN | RO | FALSE |
| 10F3:05 | Flags | not used | UINT16 | RW | 0x0000 (0 _{dec}) |
| 10F3:06 | Diagnosis Message 001 | Message 1 | OCTET-STRING[28] | RO | |
| ... | ... | ... | | | |
| 10F3:37 | Diagnosis Message 050 | Message 50 | OCTET-STRING[28] | RO | |

Index 10F8 Actual Time Stamp

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-------------------|------------|-----------|-------|---------|
| 10F8:0 | Actual Time Stamp | Time stamp | UINT64 | RO | |

Index A0p8 FB BiSS-C Diag data (for Ch.1, p = 0; Ch.2, p = 1)

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------|---|-----------|-------|----------------------------|
| A0p8:0 | FB BiSS-C Diag data | Max. Subindex | UINT8 | RO | 0x11 (17 _{dec}) |
| A0p8:01 | Power Supply Present | Power Supply present | BOOLEAN | RO | FALSE |
| A0p8:02 | Error | Error occurred | BOOLEAN | RO | FALSE |
| A0p8:03 | SCD Error | Sync Data Error occurred | BOOLEAN | RO | FALSE |
| A0p8:04 | WD Error | Watch Dog Error occurred | BOOLEAN | RO | FALSE |
| A0p8:05 | Data valid | Valid data present | BOOLEAN | RO | FALSE |
| A0p8:11 | Data raw value | Position value without inversion and offset | UINT64 | RO | 00 00 00 00 00 00 00 00 |

6.4.5 Standard objects

Index 1000 Device type

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-------------|---|-----------|-------|---------------------------------------|
| 1000:0 | Device type | Device type of the EtherCAT slave: The Lo-Word contains the CoE profile used (5001). The Hi-Word contains the module profile according to the modular device profile. | UINT32 | RO | 0x02011389 (33624969 _{dec}) |

Index 1008 Device name

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-------------|-----------------------------------|-----------|-------|---------|
| 1008:0 | Device name | Device name of the EtherCAT slave | STRING | RO | EL5042 |

Index 1009 Hardware version

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|------------------|--|-----------|-------|---------|
| 1009:0 | Hardware version | Hardware version of the EtherCAT slave | STRING | RO | |

Index 100A Software version

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|------------------|--|-----------|-------|---------|
| 100A:0 | Software version | Firmware version of the EtherCAT slave | STRING | RO | |

Index 1018 Identity

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|---------------|---|-----------|-------|--|
| 1018:0 | Identity | Information for identifying the slave | UINT8 | RO | 0x04 (4 _{dec}) |
| 1018:01 | Vendor ID | Vendor ID of the EtherCAT slave | UINT32 | RO | 0x00000002 (2 _{dec}) |
| 1018:02 | Product code | Product code of the EtherCAT slave | UINT32 | RO | 0x13B23052 (330444882 _{dec}) |
| 1018:03 | Revision | Revision number of the EtherCAT slave; the low word (bit 0-15) indicates the special terminal number, the high word (bit 16-31) refers to the device description | UINT32 | RO | |
| 1018:04 | Serial number | Serial number of the EtherCAT slave; the low byte (bit 0-7) of the low word contains the year of production, the high byte (bit 8-15) of the low word contains the week of production, the high word (bit 16-31) is 0 | UINT32 | RO | |

Index 10F0 Backup parameter handling

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|---------------------------|---|-----------|-------|--------------------------------|
| 10F0:0 | Backup parameter handling | Information for standardized loading and saving of backup entries | UINT8 | RO | 0x01 (1 _{dec}) |
| 10F0:01 | Checksum | Checksum across all backup entries of the EtherCAT slave | UINT32 | RO | 0x00000000 (0 _{dec}) |

Index 1800 FB TxPDO-Par Inputs Ch.1

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------------------|--|-----------------|-------|--------------------------|
| 1800:0 | FB TxPDO-Par Inputs Ch.1 | PDO parameter TxPDO 1 | UINT8 | RO | 0x06 (6 _{dec}) |
| 1800:06 | Exclude TxPDOs | Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 1 | OCTET-STRING[2] | RO | 02 1A |

Index 1801 FB TxPDO-Par Inputs Ch.2

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------------------|--|-----------------|-------|--------------------------|
| 1801:0 | FB TxPDO-Par Inputs Ch.2 | PDO parameter TxPDO 2 | UINT8 | RO | 0x06 (6 _{dec}) |
| 1801:06 | Exclude TxPDOs | Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 2 | OCTET-STRING[2] | RO | 03 1A |

Index 1802 FB TxPDO-Par Inputs Ch.1 compact

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------------------|--|-----------------|-------|--------------------------|
| 1802:0 | FB TxPDO-Par Inputs Ch.1 compact | PDO parameter TxPDO 3 | UINT8 | RO | 0x06 (6 _{dec}) |
| 1802:06 | Exclude TxPDOs | Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 3 | OCTET-STRING[2] | RO | 00 1A |

Index 1803 FB TxPDO-Par Inputs Ch.2 compact

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------------------|--|-----------------|-------|--------------------------|
| 1803:0 | FB TxPDO-Par Inputs Ch.2 compact | PDO parameter TxPDO 4 | UINT8 | RO | 0x06 (6 _{dec}) |
| 1803:06 | Exclude TxPDOs | Specifies the TxPDOs (index of TxPDO mapping objects) that must not be transferred together with TxPDO 4 | OCTET-STRING[2] | RO | 01 1A |

Index 1A00 FB TxPDO-Map Inputs Ch.1

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------------------|---|-----------|-------|--------------------------|
| 1A00:0 | FB TxPDO-Map Inputs Ch.1 | PDO Mapping TxPDO 1 | UINT8 | RO | 0x09 (9 _{dec}) |
| 1A00:01 | SubIndex 001 | 1. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x01 (Warning)) | UINT32 | RO | 0x6000:01, 1 |
| 1A00:02 | SubIndex 002 | 2. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x02 (Error)) | UINT32 | RO | 0x6000:02, 1 |
| 1A00:03 | SubIndex 003 | 3. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x03 (Ready)) | UINT32 | RO | 0x6000:03, 1 |
| 1A00:04 | SubIndex 004 | 4. PDO Mapping entry (5 bits align) | UINT32 | RO | 0x0000:00, 5 |
| 1A00:05 | SubIndex 005 | 5. PDO Mapping entry (4 bits align) | UINT32 | RO | 0x0000:00, 4 |
| 1A00:06 | SubIndex 006 | 6. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0D (Diag)) | UINT32 | RO | 0x6000:0D, 1 |
| 1A00:07 | SubIndex 007 | 7. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0E (TxPDO State)) | UINT32 | RO | 0x6000:0E, 1 |
| 1A00:08 | SubIndex 008 | 8. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0F (Input cycle counter)) | UINT32 | RO | 0x6000:0F, 2 |
| 1A00:09 | SubIndex 009 | 9. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x11 (Position)) | UINT32 | RO | 0x6000:11, 64 |

Index 1A01 FB TxPDO-Map Inputs Ch.2

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------------------|---|-----------|-------|--------------------------|
| 1A01:0 | FB TxPDO-Map Inputs Ch.2 | PDO Mapping TxPDO 2 | UINT8 | RO | 0x09 (9 _{dec}) |
| 1A01:01 | SubIndex 001 | 1. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x01 (Warning)) | UINT32 | RO | 0x6010:01, 1 |
| 1A01:02 | SubIndex 002 | 2. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x02 (Error)) | UINT32 | RO | 0x6010:02, 1 |
| 1A01:03 | SubIndex 003 | 3. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x03 (Ready)) | UINT32 | RO | 0x6010:03, 1 |
| 1A01:04 | SubIndex 004 | 4. PDO Mapping entry (5 bits align) | UINT32 | RO | 0x0000:00, 5 |
| 1A01:05 | SubIndex 005 | 5. PDO Mapping entry (4 bits align) | UINT32 | RO | 0x0000:00, 4 |
| 1A01:06 | SubIndex 006 | 6. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0D (Diag)) | UINT32 | RO | 0x6010:0D, 1 |
| 1A01:07 | SubIndex 007 | 7. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0E (TxPDO State)) | UINT32 | RO | 0x6010:0E, 1 |
| 1A01:08 | SubIndex 008 | 8. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0F (Input cycle counter)) | UINT32 | RO | 0x6010:0F, 2 |
| 1A01:09 | SubIndex 009 | 9. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x11 (Position)) | UINT32 | RO | 0x6010:11, 64 |

Index 1A02 FB TxPDO-Map Inputs Ch.1 compact

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------------------|---|-----------|-------|--------------------------|
| 1A02:0 | FB TxPDO-Map Inputs Ch.1 compact | PDO Mapping TxPDO 3 | UINT8 | RO | 0x09 (9 _{dec}) |
| 1A02:01 | SubIndex 001 | 1. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x01 (Warning)) | UINT32 | RO | 0x6000:01, 1 |
| 1A02:02 | SubIndex 002 | 2. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x02 (Error)) | UINT32 | RO | 0x6000:02, 1 |
| 1A02:03 | SubIndex 003 | 3. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x03 (Ready)) | UINT32 | RO | 0x6000:03, 1 |
| 1A02:04 | SubIndex 004 | 4. PDO Mapping entry (5 bits align) | UINT32 | RO | 0x0000:00, 5 |
| 1A02:05 | SubIndex 005 | 5. PDO Mapping entry (4 bits align) | UINT32 | RO | 0x0000:00, 4 |
| 1A02:06 | SubIndex 006 | 6. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0D (Diag)) | UINT32 | RO | 0x6000:0D, 1 |
| 1A02:07 | SubIndex 007 | 7. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0E (TxPDO State)) | UINT32 | RO | 0x6000:0E, 1 |
| 1A02:08 | SubIndex 008 | 8. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x0F (Input cycle counter)) | UINT32 | RO | 0x6000:0F, 2 |
| 1A02:09 | SubIndex 009 | 9. PDO Mapping entry (object 0x6000 (FB Inputs Ch.1), entry 0x11 (Position)) | UINT32 | RO | 0x6000:11, 32 |

Index 1A03 FB TxPDO-Map Inputs Ch.2 compact

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|----------------------------------|---|-----------|-------|--------------------------|
| 1A03:0 | FB TxPDO-Map Inputs Ch.2 compact | PDO Mapping TxPDO 4 | UINT8 | RO | 0x09 (9 _{dec}) |
| 1A03:01 | SubIndex 001 | 1. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x01 (Warning)) | UINT32 | RO | 0x6010:01, 1 |
| 1A03:02 | SubIndex 002 | 2. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x02 (Error)) | UINT32 | RO | 0x6010:02, 1 |
| 1A03:03 | SubIndex 003 | 3. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x03 (Ready)) | UINT32 | RO | 0x6010:03, 1 |
| 1A03:04 | SubIndex 004 | 4. PDO Mapping entry (5 bits align) | UINT32 | RO | 0x0000:00, 5 |
| 1A03:05 | SubIndex 005 | 5. PDO Mapping entry (4 bits align) | UINT32 | RO | 0x0000:00, 4 |
| 1A03:06 | SubIndex 006 | 6. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0D (Diag)) | UINT32 | RO | 0x6010:0D, 1 |
| 1A03:07 | SubIndex 007 | 7. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0E (TxPDO State)) | UINT32 | RO | 0x6010:0E, 1 |
| 1A03:08 | SubIndex 008 | 8. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x0F (Input cycle counter)) | UINT32 | RO | 0x6010:0F, 2 |
| 1A03:09 | SubIndex 009 | 9. PDO Mapping entry (object 0x6010 (FB Inputs Ch.2), entry 0x11 (Position)) | UINT32 | RO | 0x6010:11, 32 |

Index 1C00 Sync manager type

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-------------------|---|-----------|-------|--------------------------|
| 1C00:0 | Sync manager type | Using the sync managers | UINT8 | RO | 0x04 (4 _{dec}) |
| 1C00:01 | SubIndex 001 | Sync-Manager Type Channel 1: Mailbox Write | UINT8 | RO | 0x01 (1 _{dec}) |
| 1C00:02 | SubIndex 002 | Sync-Manager Type Channel 2: Mailbox Read | UINT8 | RO | 0x02 (2 _{dec}) |
| 1C00:03 | SubIndex 003 | Sync-Manager Type Channel 3: Process Data Write (Outputs) | UINT8 | RO | 0x03 (3 _{dec}) |
| 1C00:04 | SubIndex 004 | Sync-Manager Type Channel 4: Process Data Read (Inputs) | UINT8 | RO | 0x04 (4 _{dec}) |

Index 1C12 RxPDO assign

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------|--------------------|-----------|-------|--------------------------|
| 1C12:0 | RxPDO assign | PDO Assign Outputs | UINT8 | RW | 0x00 (0 _{dec}) |

Index 1C13 TxPDO assign

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------|--|-----------|-------|-------------------------------|
| 1C13:0 | TxPDO assign | PDO Assign Inputs | UINT8 | RW | 0x02 (2 _{dec}) |
| 1C13:01 | Subindex 001 | 1. allocated TxPDO (contains the index of the associated TxPDO mapping object) | UINT16 | RW | 0x1A00 (6656 _{dec}) |
| 1C13:02 | Subindex 002 | 2. allocated TxPDO (contains the index of the associated TxPDO mapping object) | UINT16 | RW | 0x1A01 (6657 _{dec}) |

Index 1C33 SM input parameter

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-------------------------|--|-----------|-------|--------------------------------------|
| 1C33:0 | SM input parameter | Synchronization parameters for the inputs | UINT8 | RO | 0x20 (32 _{dec}) |
| 1C33:01 | Sync mode | Current synchronization mode: <ul style="list-style-type: none"> 0: Free Run 1: Synchron with SM 3 Event (no outputs available) 2: DC - Synchron with SYNC0 Event 3: DC - Synchron with SYNC1 Event 34: Synchron with SM 2 Event (outputs available) | UINT16 | RW | 0x0022 (34 _{dec}) |
| 1C33:02 | Cycle time | Cycle time (in ns): <ul style="list-style-type: none"> Free Run: Cycle time of the local timer Synchronous with SM 2 event: Master cycle time DC mode: SYNC0/SYNC1 Cycle Time | UINT32 | RW | 0x000F4240 (1000000 _{dec}) |
| 1C33:03 | Shift time | Time between SYNC0 event and reading of the inputs (in ns, only DC mode) | UINT32 | RO | 0x00000000 (0 _{dec}) |
| 1C33:04 | Sync modes supported | Supported synchronization modes: <ul style="list-style-type: none"> Bit 0: free run is supported Bit 1: Synchronous with SM 2 Event is supported (outputs available) Bit 1: Synchronous with SM 3 Event is supported (no outputs available) Bit 2-3 = 01: DC mode is supported Bit 4-5 = 01: input shift through local event (outputs available) Bit 4-5 = 10: input shift with SYNC1 event (no outputs available) Bit 14 = 1: dynamic times (measurement through writing of 0x1C33:08 ► 109) | UINT16 | RO | 0x0807 (2055 _{dec}) |
| 1C33:05 | Minimum cycle time | Minimum cycle time (in ns) | UINT32 | RO | 0x000186A0 (100000 _{dec}) |
| 1C33:06 | Calc and copy time | Time between reading of the inputs and availability of the inputs for the master (in ns, only DC mode) | UINT32 | RO | 0x00000000 (0 _{dec}) |
| 1C33:07 | Minimum delay time | | UINT32 | RO | 0x00000000 (0 _{dec}) |
| 1C33:08 | Command | <ul style="list-style-type: none"> 0: Measurement of the local cycle time is stopped 1: Measurement of the local cycle time is started <p>The entries 0x1C33:03, 0x1C33:06, 0x1C33:09 are updated with the maximum measured values. For a subsequent measurement the measured values are reset</p> | UINT16 | RW | 0x0000 (0 _{dec}) |
| 1C33:09 | Maximum delay time | Time between SYNC1 event and reading of the inputs (in ns, only DC mode) | UINT32 | RO | 0x00000000 (0 _{dec}) |
| 1C33:0B | SM event missed counter | Number of missed SM events in OPERATIONAL (DC mode only) | UINT16 | RO | 0x0000 (0 _{dec}) |
| 1C33:0C | Cycle exceeded counter | Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early) | UINT16 | RO | 0x0000 (0 _{dec}) |
| 1C33:0D | Shift too short counter | Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only) | UINT16 | RO | 0x0000 (0 _{dec}) |
| 1C33:20 | Sync error | The synchronization was not correct in the last cycle (outputs were output too late; DC mode only) | BOOLEAN | RO | 0x00 (0 _{dec}) |

Index F000 Modular device profile

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|---------------------------|--|-----------|-------|-----------------------------|
| F000:0 | Modular device profile | General information for the modular device profile | UINT8 | RO | 0x02 (2 _{dec}) |
| F000:01 | Module index distance | Index distance of the objects of the individual channels | UINT16 | RO | 0x0010 (16 _{dec}) |
| F000:02 | Maximum number of modules | Number of channels | UINT16 | RO | 0x0002 (2 _{dec}) |

Index F008 Code word

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|-----------|--|-----------|-------|--------------------------------|
| F008:0 | Code word | see object 0x80p8:13 [► 104] | UINT32 | RW | 0x00000000 (0 _{dec}) |

Index F010 Module list

| Index (hex) | Name | Meaning | Data type | Flags | Default |
|-------------|--------------|---------------------|-----------|-------|----------------------------------|
| F010:0 | Module list | Max. subindex | UINT8 | RW | 0x02 (2 _{dec}) |
| F010:01 | SubIndex 001 | MDP FB profiles 513 | UINT32 | RW | 0x00000201 (513 _{dec}) |
| F010:02 | SubIndex 002 | MDP FB profiles 513 | UINT32 | RW | 0x00000201 (513 _{dec}) |

7 Diagnostics

7.1 Diagnostics - basic principles of diag messages

DiagMessages designates a system for the transmission of messages from the EtherCAT Slave to the EtherCAT Master/TwinCAT. The messages are stored by the device in its own CoE under 0x10F3 and can be read by the application or the System Manager. An error message referenced via a code is output for each event stored in the device (warning, error, status change).

Definition

The *DiagMessages* system is defined in the ETG (EtherCAT Technology Group) in the guideline ETG.1020, chapter 13 "Diagnosis handling". It is used so that pre-defined or flexible diagnostic messages can be conveyed from the EtherCAT Slave to the Master. In accordance with the ETG, the process can therefore be implemented supplier-independently. Support is optional. The firmware can store up to 250 *DiagMessages* in its own CoE.

Each *DiagMessage* consists of


- Diag Code (4-byte)
- Flags (2-byte; info, warning or error)
- Text ID (2-byte; reference to explanatory text from the ESI/XML)
- Timestamp (8-byte, local slave time or 64-bit Distributed Clock time, if available)
- Dynamic parameters added by the firmware

The *DiagMessages* are explained in text form in the ESI/XML file belonging to the EtherCAT device: on the basis of the Text ID contained in the *DiagMessage*, the corresponding plain text message can be found in the languages contained in the ESI/XML. In the case of Beckhoff products these are usually German and English.

Via the entry *NewMessagesAvailable* the user receives information that new messages are available.

DiagMessages can be confirmed in the device: the last/latest unconfirmed message can be confirmed by the user.

In the CoE both the control entries and the history itself can be found in the CoE object 0x10F3:

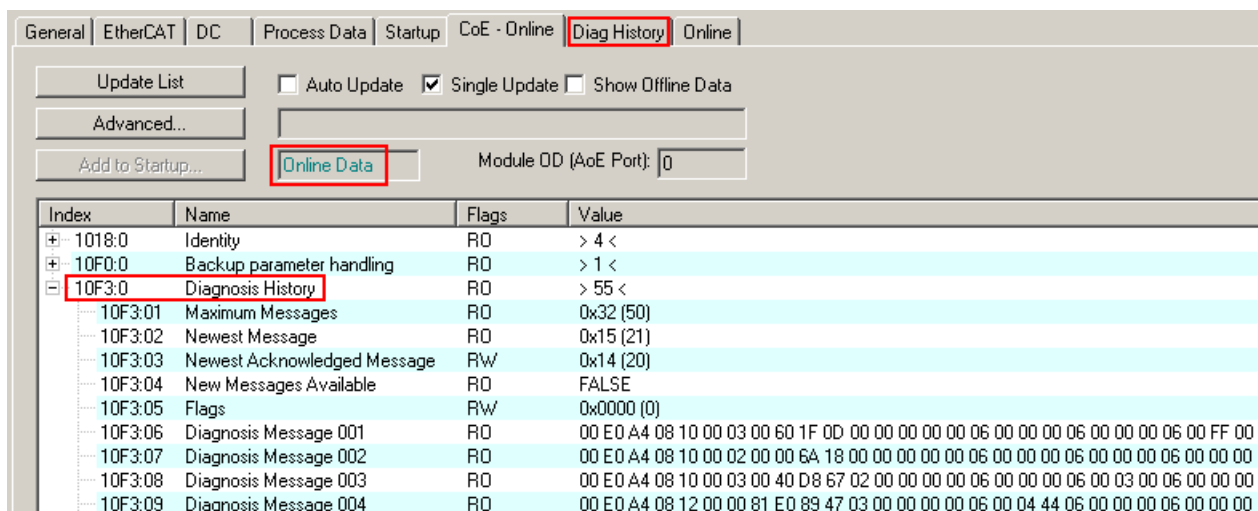

| Index | Name | Flags | Value |
|---------|-----------------------------|-------|--|
| 1018:0 | Identity | RO | > 4 < |
| 10F0:0 | Backup parameter handling | RO | > 1 < |
| 10F3:0 | Diagnosis History | RO | > 55 < |
| 10F3:01 | Maximum Messages | RO | 0x32 (50) |
| 10F3:02 | Newest Message | RO | 0x15 (21) |
| 10F3:03 | Newest Acknowledged Message | RW | 0x14 (20) |
| 10F3:04 | New Messages Available | RO | FALSE |
| 10F3:05 | Flags | RW | 0x0000 (0) |
| 10F3:06 | Diagnosis Message 001 | RO | 00 E0 A4 08 10 00 03 00 60 1F 0D 00 00 00 00 06 00 00 00 06 00 00 00 06 00 FF 00 |
| 10F3:07 | Diagnosis Message 002 | RO | 00 E0 A4 08 10 00 02 00 00 6A 18 00 00 00 00 06 00 00 00 06 00 00 00 06 00 00 00 |
| 10F3:08 | Diagnosis Message 003 | RO | 00 E0 A4 08 10 00 03 00 40 D8 67 02 00 00 00 06 00 00 00 06 00 03 00 06 00 00 00 |
| 10F3:09 | Diagnosis Message 004 | RO | 00 E0 A4 08 12 00 00 81 E0 89 47 03 00 00 00 06 00 04 44 06 00 00 00 06 00 00 00 |

Fig. 97: *DiagMessages* in the CoE

The subindex of the latest *DiagMessage* can be read under 0x10F3:02.



Support for commissioning

The DiagMessages system is to be used above all during the commissioning of the plant. The diagnostic values e.g. in the StatusWord of the device (if available) are helpful for online diagnosis during the subsequent continuous operation.

TwinCAT System Manager implementation

From TwinCAT 2.11 DiagMessages, if available, are displayed in the device's own interface. Operation (collection, confirmation) also takes place via this interface.

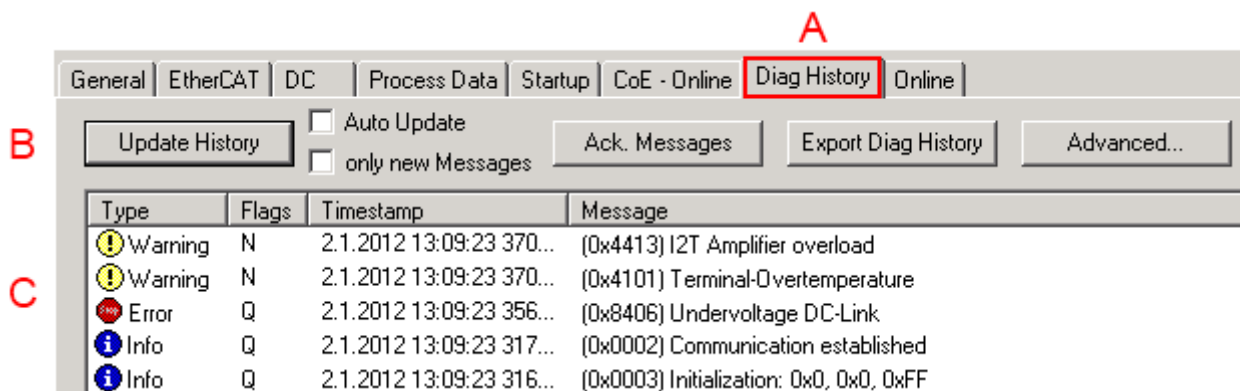


Fig. 98: Implementation of the DiagMessage system in the TwinCAT System Manager

The operating buttons (B) and the history read out (C) can be seen on the Diag History tab (A). The components of the message:

- Info/Warning/Error
- Acknowledge flag (N = unconfirmed, Q = confirmed)
- Time stamp
- Text ID
- Plain text message according to ESI/XML data

The meanings of the buttons are self-explanatory.

DiagMessages within the ADS Logger/Eventlogger

From TwinCAT 3.1 build 4022 onwards, DiagMessages sent by the terminal are shown by the TwinCAT ADS Logger. Given that DiagMessages are represented IO- comprehensive at one place, commissioning will be simplified. In addition, the logger output could be stored into a data file – hence DiagMessages are available long-term for analysis.

DiagMessages are actually only available locally in CoE 0x10F3 in the terminal and can be read out manually if required, e.g. via the DiagHistory mentioned above.

In the latest developments, the EtherCAT Terminals are set by default to report the presence of a DiagMessage as emergency via EtherCAT; the event logger can then retrieve the DiagMessage. The function is activated in the terminal via 0x10F3:05, so such terminals have the following entry in the StartUp list by default:

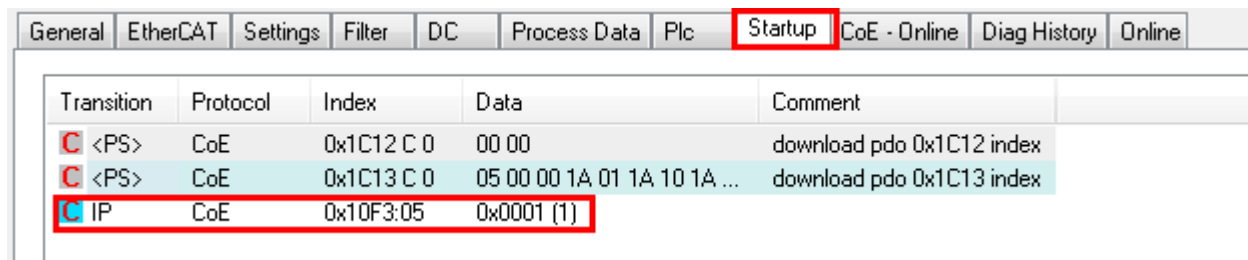


Fig. 99: Startup List

If the function is to be deactivated because, for example, many messages come in or the EventLogger is not used, the StartUp entry can be deleted or set to 0. The value can then be set back to 1 later from the PLC via CoE access if required.

Reading messages into the PLC

- In preparation -

Interpretation

Time stamp

The time stamp is obtained from the local clock of the terminal at the time of the event. The time is usually the distributed clock time (DC) from register x910.

Please note: When EtherCAT is started, the DC time in the reference clock is set to the same time as the local IPC/TwinCAT time. From this moment the DC time may differ from the IPC time, since the IPC time is not adjusted. Significant time differences may develop after several weeks of operation without a EtherCAT restart. As a remedy, external synchronization of the DC time can be used, or a manual correction calculation can be applied, as required: The current DC time can be determined via the EtherCAT master or from register x901 of the DC slave.

Structure of the Text ID

The structure of the MessageID is not subject to any standardization and can be supplier-specifically defined. In the case of Beckhoff EtherCAT devices (EL, EP) it usually reads according to **xyzz**:

| x | y | zz |
|---|---|--------------|
| 0: Systeminfo 2: reserved 1: Info 4: Warning 8: Error | 0: System 1: General 2: Communication 3: Encoder 4: Drive 5: Inputs 6: I/O general 7: reserved | Error number |

Example: Message 0x4413 --> Drive Warning Number 0x13

Overview of text IDs

Specific text IDs are listed in the device documentation.

| Text ID | Type | Place | Text Message | Additional comment |
|---------|-------------|---------------|---|--|
| 0x0001 | Information | System | No error | No error |
| 0x0002 | Information | System | Communication established | Connection established |
| 0x0003 | Information | System | Initialization: 0x%X, 0x%X, 0x%X | General information; parameters depend on event. See device documentation for interpretation. |
| 0x1000 | Information | System | Information: 0x%X, 0x%X, 0x%X | General information; parameters depend on event. See device documentation for interpretation. |
| 0x1012 | Information | System | EtherCAT state change Init - PreOp | |
| 0x1021 | Information | System | EtherCAT state change PreOp - Init | |
| 0x1024 | Information | System | EtherCAT state change PreOp - Safe-Op | |
| 0x1042 | Information | System | EtherCAT state change SafeOp - PreOp | |
| 0x1048 | Information | System | EtherCAT state change SafeOp - Op | |
| 0x1084 | Information | System | EtherCAT state change Op - SafeOp | |
| 0x1100 | Information | General | Detection of operation mode completed: 0x%X, %d | Detection of the mode of operation ended |
| 0x1135 | Information | General | Cycle time o.k.: %d | Cycle time OK |
| 0x1157 | Information | General | Data manually saved (Idx: 0x%X, SubIdx: 0x%X) | Data saved manually |
| 0x1158 | Information | General | Data automatically saved (Idx: 0x%X, SubIdx: 0x%X) | Data saved automatically |
| 0x1159 | Information | General | Data deleted (Idx: 0x%X, SubIdx: 0x%X) | Data deleted |
| 0x117F | Information | General | Information: 0x%X, 0x%X, 0x%X | Information |
| 0x1201 | Information | Communication | Communication re-established | Communication to the field side restored This message appears, for example, if the voltage was removed from the power contacts and re-applied during operation. |
| 0x1300 | Information | Encoder | Position set: %d, %d | Position set - StartInputhandler |
| 0x1303 | Information | Encoder | Encoder Supply ok | Encoder power supply unit OK |
| 0x1304 | Information | Encoder | Encoder initialization successfully, channel: %X | Encoder initialization successfully completed |
| 0x1305 | Information | Encoder | Sent command encoder reset, channel: %X | Send encoder reset command |
| 0x1400 | Information | Drive | Drive is calibrated: %d, %d | Drive is calibrated |
| 0x1401 | Information | Drive | Actual drive state: 0x%X, %d | Current drive status |
| 0x1705 | Information | | CPU usage returns in normal range (< 85%%) | Processor load is back in the normal range |
| 0x1706 | Information | | Channel is not in saturation anymore | Channel is no longer in saturation |
| 0x1707 | Information | | Channel is not in overload anymore | Channel is no longer overloaded |
| 0x170A | Information | | No channel range error anymore | A measuring range error is no longer active |
| 0x170C | Information | | Calibration data saved | Calibration data were saved |
| 0x170D | Information | | Calibration data will be applied and saved after sending the command "0x5AFE" | Calibration data are not applied and saved until the command "0x5AFE" is sent. |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|-------------|--------|--|---|
| 0x2000 | Information | System | %s: %s | |
| 0x2001 | Information | System | %s: Network link lost | Network connection lost |
| 0x2002 | Information | System | %s: Network link detected | Network connection found |
| 0x2003 | Information | System | %s: no valid IP Configuration - Dhcp client started | Invalid IP configuration |
| 0x2004 | Information | System | %s: valid IP Configuration (IP: %d.%d.%d.%d) assigned by Dhcp server %d.%d.%d.%d | Valid IP configuration, assigned by the DHCP server |
| 0x2005 | Information | System | %s: Dhcp client timed out | DHCP client timeout |
| 0x2006 | Information | System | %s: Duplicate IP Address detected (%d.%d.%d.%d) | Duplicate IP address found |
| 0x2007 | Information | System | %s: UDP handler initialized | UDP handler initialized |
| 0x2008 | Information | System | %s: TCP handler initialized | TCP handler initialized |
| 0x2009 | Information | System | %s: No more free TCP sockets available | No free TCP sockets available. |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|---------|---------|--|--|
| 0x4000 | Warning | | Warning: 0x%X, 0x%X, 0x%X | General warning; parameters depend on event. See device documentation for interpretation. |
| 0x4001 | Warning | System | Warning: 0x%X, 0x%X, 0x%X | |
| 0x4002 | Warning | System | %s: %s Connection Open (IN:%d OUT:%d API:%dms) from %d. %d.%d.%d successful | |
| 0x4003 | Warning | System | %s: %s Connection Close (IN:%d OUT:%d) from %d.%d.%d.%d successful | |
| 0x4004 | Warning | System | %s: %s Connection (IN:%d OUT:%d) with %d.%d.%d.%d timed out | |
| 0x4005 | Warning | System | %s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Error: %u) | |
| 0x4006 | Warning | System | %s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Input Data Size expected: %d Byte(s) received: %d Byte(s)) | |
| 0x4007 | Warning | System | %s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Output Data Size expected: %d Byte(s) received: %d Byte(s)) | |
| 0x4008 | Warning | System | %s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (RPI:%dms not supported -> API:%dms) | |
| 0x4101 | Warning | General | Terminal-Overtemperature | Overtemperature. The internal temperature of the terminal exceeds the parameterized warning threshold. |
| 0x4102 | Warning | General | Discrepancy in the PDO-Configuration | The selected PDOs do not match the set operating mode. Sample: Drive operates in velocity mode, but the velocity PDO is but not mapped in the PDOs. |
| 0x417F | Warning | General | Warning: 0x%X, 0x%X, 0x%X | |
| 0x428D | Warning | General | Challenge is not Random | |
| 0x4300 | Warning | Encoder | Subincrements deactivated: %d, %d | Sub-increments deactivated (despite activated configuration) |
| 0x4301 | Warning | Encoder | Encoder-Warning | General encoder error |
| 0x4302 | Warning | Encoder | Maximum frequency of the input signal is nearly reached (channel %d) | |
| 0x4303 | Warning | Encoder | Limit counter value was reduced because of the PDO configuration (channel %d) | |
| 0x4304 | Warning | Encoder | Reset counter value was reduced because of the PDO configuration (channel %d) | |
| 0x4400 | Warning | Drive | Drive is not calibrated: %d, %d | Drive is not calibrated |
| 0x4401 | Warning | Drive | Starttype not supported: 0x%X, %d | Start type is not supported |
| 0x4402 | Warning | Drive | Command rejected: %d, %d | Command rejected |
| 0x4405 | Warning | Drive | Invalid modulo subtype: %d, %d | Modulo sub-type invalid |
| 0x4410 | Warning | Drive | Target overrun: %d, %d | Target position exceeded |
| 0x4411 | Warning | Drive | DC-Link undervoltage (Warning) | The DC link voltage of the terminal is lower than the parameterized minimum voltage. Activation of the output stage is prevented. |
| 0x4412 | Warning | Drive | DC-Link overvoltage (Warning) | The DC link voltage of the terminal is higher than the parameterized maximum voltage. Activation of the output stage is prevented. |
| 0x4413 | Warning | Drive | I2T-Model Amplifier overload (Warning) | <ul style="list-style-type: none"> The amplifier is being operated outside the specification. The I2T-model of the amplifier is incorrectly parameterized. |
| 0x4414 | Warning | Drive | I2T-Model Motor overload (Warning) | <ul style="list-style-type: none"> The motor is being operated outside the parameterized rated values. |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|---------|------------|--|--|
| | | | | <ul style="list-style-type: none"> The I2T-model of the motor is incorrectly parameterized. |
| 0x4415 | Warning | Drive | Speed limitation active | The maximum speed is limited by the parameterized objects (e.g. velocity limitation, motor speed limitation). This warning is output if the set velocity is higher than one of the parameterized limits. |
| 0x4416 | Warning | Drive | Step lost detected at position: 0x%X%X | Step loss detected |
| 0x4417 | Warning | Drive | Motor overtemperature | The internal temperature of the motor exceeds the parameterized warning threshold |
| 0x4418 | Warning | Drive | Limit: Current | Limit: current is limited |
| 0x4419 | Warning | Drive | Limit: Amplifier I2T-model exceeds 100%% | The threshold values for the maximum current were exceeded. |
| 0x441A | Warning | Drive | Limit: Motor I2T-model exceeds 100%% | Limit: Motor I2T-model exceeds 100% |
| 0x441B | Warning | Drive | Limit: Velocity limitation | The threshold values for the maximum speed were exceeded. |
| 0x441C | Warning | Drive | STO while the axis was enabled | An attempt was made to activate the axis, despite the fact that no voltage is present at the STO input. |
| 0x4600 | Warning | General IO | Wrong supply voltage range | Supply voltage not in the correct range |
| 0x4610 | Warning | General IO | Wrong output voltage range | Output voltage not in the correct range |
| 0x4705 | Warning | | Processor usage at %d %% | Processor load at %d %% |
| 0x470A | Warning | | EtherCAT Frame missed (change Settings or DC Operation Mode or Sync0 Shift Time) | EtherCAT frame missed (change DC Operation Mode or Sync0 Shift Time under Settings) |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|-------|---------------|--|---|
| 0x8000 | Error | System | %s: %s | |
| 0x8001 | Error | System | Error: 0x%X, 0x%X, 0x%X | General error; parameters depend on event. See device documentation for interpretation. |
| 0x8002 | Error | System | Communication aborted | Communication aborted |
| 0x8003 | Error | System | Configuration error: 0x%X, 0x%X, 0x%X | General; parameters depend on event. See device documentation for interpretation. |
| 0x8004 | Error | System | %s: Unsuccessful FwdOpen-Response received from %d.%d.%d (%s) (Error: %u) | |
| 0x8005 | Error | System | %s: FwdClose-Request sent to %d.%d.%d (%s) | |
| 0x8006 | Error | System | %s: Unsuccessful FwdClose-Response received from %d.%d.%d (%s) (Error: %u) | |
| 0x8007 | Error | System | %s: Connection with %d.%d.%d (%s) closed | |
| 0x8100 | Error | General | Status word set: 0x%X, %d | Error bit set in the status word |
| 0x8101 | Error | General | Operation mode incompatible to PDO interface: 0x%X, %d | Mode of operation incompatible with the PDO interface |
| 0x8102 | Error | General | Invalid combination of Inputs and Outputs PDOs | Invalid combination of input and output PDOs |
| 0x8103 | Error | General | No variable linkage | No variables linked |
| 0x8104 | Error | General | Terminal-Overtemperature | The internal temperature of the terminal exceeds the parameterized error threshold. Activation of the terminal is prevented |
| 0x8105 | Error | General | PD-Watchdog | Communication between the fieldbus and the output stage is secured by a Watchdog. The axis is stopped automatically if the fieldbus communication is interrupted. <ul style="list-style-type: none"> The EtherCAT connection was interrupted during operation. The Master was switched to Config mode during operation. |
| 0x8135 | Error | General | Cycle time has to be a multiple of 125 µs | The IO or NC cycle time divided by 125 µs does not produce a whole number. |
| 0x8136 | Error | General | Configuration error: invalid sampling rate | Configuration error: Invalid sampling rate |
| 0x8137 | Error | General | Electronic type plate: CRC error | Content of the external name plate memory invalid. |
| 0x8140 | Error | General | Sync Error | Real-time violation |
| 0x8141 | Error | General | Sync%X Interrupt lost | Sync%X Interrupt lost |
| 0x8142 | Error | General | Sync Interrupt asynchronous | Sync Interrupt asynchronous |
| 0x8143 | Error | General | Jitter too big | Jitter limit violation |
| 0x817F | Error | General | Error: 0x%X, 0x%X, 0x%X | |
| 0x8200 | Error | Communication | Write access error: %d, %d | Error while writing |
| 0x8201 | Error | Communication | No communication to field-side (Auxiliary voltage missing) | <ul style="list-style-type: none"> There is no voltage applied to the power contacts. A firmware update has failed. |
| 0x8281 | Error | Communication | Ownership failed: %X | |
| 0x8282 | Error | Communication | To many Keys founded | |
| 0x8283 | Error | Communication | Key Creation failed: %X | |
| 0x8284 | Error | Communication | Key loading failed | |
| 0x8285 | Error | Communication | Reading Public Key failed: %X | |
| 0x8286 | Error | Communication | Reading Public EK failed: %X | |
| 0x8287 | Error | Communication | Reading PCR Value failed: %X | |
| 0x8288 | Error | Communication | Reading Certificate EK failed: %X | |
| 0x8289 | Error | Communication | Challenge could not be hashed: %X | |
| 0x828A | Error | Communication | Tickstamp Process failed | |
| 0x828B | Error | Communication | PCR Process failed: %X | |
| 0x828C | Error | Communication | Quote Process failed: %X | |
| 0x82FF | Error | Communication | Bootmode not activated | Boot mode not activated |
| 0x8300 | Error | Encoder | Set position error: 0x%X, %d | Error while setting the position |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|-------|---------|---|---|
| 0x8301 | Error | Encoder | Encoder increments not configured: 0x%X, %d | Encoder increments not configured |
| 0x8302 | Error | Encoder | Encoder error | The amplitude of the resolver is too small |
| 0x8303 | Error | Encoder | Encoder power missing (channel %d) | |
| 0x8304 | Error | Encoder | Encoder communication error, channel: %X | Encoder communication error |
| 0x8305 | Error | Encoder | EnDat2.2 is not supported, channel: %X | EnDat2.2 is not supported |
| 0x8306 | Error | Encoder | Delay time, tolerance limit exceeded, 0x%X, channel: %X | Runtime measurement, tolerance exceeded |
| 0x8307 | Error | Encoder | Delay time, maximum value exceeded, 0x%X, channel: %X | Runtime measurement, maximum value exceeded |
| 0x8308 | Error | Encoder | Unsupported ordering designation, 0x%X, channel: %X (only 02 and 22 is supported) | Wrong EnDat order ID |
| 0x8309 | Error | Encoder | Encoder CRC error, channel: %X | Encoder CRC error |
| 0x830A | Error | Encoder | Temperature %X could not be read, channel: %X | Temperature cannot be read |
| 0x830C | Error | Encoder | Encoder Single-Cycle-Data Error, channel: %X | CRC error detected. Check the transmission path and the CRC polynomial |
| 0x830D | Error | Encoder | Encoder Watchdog Error, channel: %X | The sensor has not responded within a predefined time period |
| 0x8310 | Error | Encoder | Initialisation error | |
| 0x8311 | Error | Encoder | Maximum frequency of the input signal is exceeded (channel %d) | |
| 0x8312 | Error | Encoder | Encoder plausibility error (channel %d) | |
| 0x8313 | Error | Encoder | Configuration error (channel %d) | |
| 0x8314 | Error | Encoder | Synchronisation error | |
| 0x8315 | Error | Encoder | Error status input (channel %d) | |
| 0x8400 | Error | Drive | Incorrect drive configuration: 0x%X, %d | Drive incorrectly configured |
| 0x8401 | Error | Drive | Limiting of calibration velocity: %d, %d | Limitation of the calibration velocity |
| 0x8402 | Error | Drive | Emergency stop activated: 0x%X, %d | Emergency stop activated |
| 0x8403 | Error | Drive | ADC Error | Error during current measurement in the ADC |
| 0x8404 | Error | Drive | Overcurrent | Overcurrent in phase U, V or W |
| 0x8405 | Error | Drive | Invalid modulo position: %d | Modulo position invalid |
| 0x8406 | Error | Drive | DC-Link undervoltage (Error) | The DC link voltage of the terminal is lower than the parameterized minimum voltage. Activation of the output stage is prevented. |
| 0x8407 | Error | Drive | DC-Link overvoltage (Error) | The DC link voltage of the terminal is higher than the parameterized maximum voltage. Activation of the output stage is prevented. |
| 0x8408 | Error | Drive | I2T-Model Amplifier overload (Error) | <ul style="list-style-type: none"> The amplifier is being operated outside the specification. The I2T-model of the amplifier is incorrectly parameterized. |
| 0x8409 | Error | Drive | I2T-Model motor overload (Error) | <ul style="list-style-type: none"> The motor is being operated outside the parameterized rated values. The I2T-model of the motor is incorrectly parameterized. |
| 0x840A | Error | Drive | Overall current threshold exceeded | Total current exceeded |
| 0x8415 | Error | Drive | Invalid modulo factor: %d | Modulo factor invalid |
| 0x8416 | Error | Drive | Motor overtemperature | The internal temperature of the motor exceeds the parameterized error threshold. The motor stops immediately. Activation of the output stage is prevented. |
| 0x8417 | Error | Drive | Maximum rotating field velocity exceeded | Rotary field speed exceeds the value specified for dual use (EU 1382/2014). |
| 0x841C | Error | Drive | STO while the axis was enabled | An attempt was made to activate the axis, despite the fact that no voltage is present at the STO input. |

| Text ID | Type | Place | Text Message | Additional comment |
|---------|-------------|------------|--------------------------------------|---|
| 0x8550 | Error | Inputs | Zero crossing phase %X missing | Zero crossing phase %X missing |
| 0x8551 | Error | Inputs | Phase sequence Error | Wrong direction of rotation |
| 0x8552 | Error | Inputs | Overcurrent phase %X | Overcurrent phase %X |
| 0x8553 | Error | Inputs | Overcurrent neutral wire | Overcurrent neutral wire |
| 0x8581 | Error | Inputs | Wire broken Ch %D | Wire broken Ch %d |
| 0x8600 | Error | General IO | Wrong supply voltage range | Supply voltage not in the correct range |
| 0x8601 | Error | General IO | Supply voltage to low | Supply voltage too low |
| 0x8602 | Error | General IO | Supply voltage to high | Supply voltage too high |
| 0x8603 | Error | General IO | Over current of supply voltage | Overcurrent of supply voltage |
| 0x8610 | Error | General IO | Wrong output voltage range | Output voltage not in the correct range |
| 0x8611 | Error | General IO | Output voltage to low | Output voltage too low |
| 0x8612 | Error | General IO | Output voltage to high | Output voltage too high |
| 0x8613 | Error | General IO | Over current of output voltage | Overcurrent of output voltage |
| 0x8700 | Error | | Channel/Interface not calibrated | Channel/interface not synchronized |
| 0x8701 | Error | | Operating time was manipulated | Operating time was manipulated |
| 0x8702 | Error | | Oversampling setting is not possible | Oversampling setting not possible |
| 0x8703 | Error | | No slave controller found | No slave controller found |
| 0x8704 | Error | | Slave controller is not in Bootstrap | Slave controller is not in bootstrap |
| 0x8705 | Error | | Processor usage to high (>= 100%%) | Processor load too high (>= 100%%) |
| 0x8706 | Error | | Channel in saturation | Channel in saturation |
| 0x8707 | Error | | Channel overload | Channel overload |
| 0x8708 | Error | | Overloadtime was manipulated | Overload time was manipulated |
| 0x8709 | Error | | Saturationtime was manipulated | Saturation time was manipulated |
| 0x870A | Error | | Channel range error | Measuring range error for the channel |
| 0x870B | Error | | no ADC clock | No ADC clock available |
| 0xFFFF | Information | | Debug: 0x%X, 0x%X, 0x%X | Debug: 0x%X, 0x%X, 0x%X |

8 Appendix

8.1 Firmware compatibility

Beckhoff EtherCAT devices are delivered with the latest available firmware version. Compatibility of firmware and hardware is mandatory; not every combination ensures compatibility. The overview below shows the hardware versions on which a firmware can be operated.

Note

- It is recommended to use the newest possible firmware for the respective hardware
- Beckhoff is not under any obligation to provide customers with free firmware updates for delivered products.

NOTICE

Risk of damage to the device!

Pay attention to the instructions for firmware updates on the [separate page](#) [► 121].

If a device is placed in BOOTSTRAP mode for a firmware update, it does not check when downloading whether the new firmware is suitable.

This can result in damage to the device! Therefore, always make sure that the firmware is suitable for the hardware version!

EL5042

| Hardware (HW) | Firmware | Revision no. | Release date |
|---------------|----------|------------------|--------------|
| 07 - 10* | 01 | EL5042-0000-0016 | 2017/07 |
| | 02 | | 2018/07 |
| | 03 | | 2019/11 |
| | 04 | | 2022/10 |
| | 05* | | 2023/01 |

*) This is the current compatible firmware/hardware version at the time of the preparing this documentation. Check on the Beckhoff web page whether more up-to-date [documentation](#) is available.

8.2 Firmware Update EL/ES/EM/ELM/EP/EPP/ERPxxxx

This section describes the device update for Beckhoff EtherCAT slaves from the EL/ES, ELM, EM, EK, EP, EPP and ERP series. A firmware update should only be carried out after consultation with Beckhoff support.

NOTICE

Only use TwinCAT 3 software!

A firmware update of Beckhoff IO devices must only be performed with a TwinCAT 3 installation. It is recommended to build as up-to-date as possible, available for free download on the [Beckhoff website](#).

To update the firmware, TwinCAT can be operated in the so-called FreeRun mode, a paid license is not required.

The device to be updated can usually remain in the installation location, but TwinCAT has to be operated in the FreeRun. Please make sure that EtherCAT communication is trouble-free (no LostFrames etc.).

Other EtherCAT master software, such as the EtherCAT Configurator, should not be used, as they may not support the complexities of updating firmware, EEPROM and other device components.

Storage locations

An EtherCAT slave stores operating data in up to three locations:

- Each EtherCAT slave has a device description, consisting of identity (name, product code), timing specifications, communication settings, etc.
This device description (ESI; EtherCAT Slave Information) can be downloaded from the Beckhoff

website in the download area as a zip file and used in EtherCAT masters for offline configuration, e.g. in TwinCAT.

Above all, each EtherCAT slave carries its device description (ESI) electronically readable in a local memory chip, the so-called **ESI EEPROM**. When the slave is switched on, this description is loaded locally in the slave and informs it of its communication configuration; on the other hand, the EtherCAT master can identify the slave in this way and, among other things, set up the EtherCAT communication accordingly.

NOTICE

Application-specific writing of the ESI-EEPROM

The ESI is developed by the device manufacturer according to ETG standard and released for the corresponding product.

- Meaning for the ESI file: Modification on the application side (i.e. by the user) is not permitted.
- Meaning for the ESI EEPROM: Even if a writeability is technically given, the ESI parts in the EEPROM and possibly still existing free memory areas must not be changed beyond the normal update process. Especially for cyclic memory processes (operating hours counter etc.), dedicated memory products such as EL6080 or IPC's own NOVRA must be used.

- Depending on functionality and performance EtherCAT slaves have one or several local controllers for processing I/O data. The corresponding program is the so-called **firmware** in *.efw format.
- In some EtherCAT slaves the EtherCAT communication may also be integrated in these controllers. In this case the controller is usually a so-called **FPGA** chip with *.rbf firmware.

Customers can access the data via the EtherCAT fieldbus and its communication mechanisms. Acyclic mailbox communication or register access to the ESC is used for updating or reading of these data.

The TwinCAT System Manager offers mechanisms for programming all three parts with new data, if the slave is set up for this purpose. Generally the slave does not check whether the new data are suitable, i.e. it may no longer be able to operate if the data are unsuitable.

Simplified update by bundle firmware

The update using so-called **bundle firmware** is more convenient: in this case the controller firmware and the ESI description are combined in a *.efw file; during the update both the firmware and the ESI are changed in the terminal. For this to happen it is necessary

- for the firmware to be in a packed format: recognizable by the file name, which also contains the revision number, e.g. ELxxx-xxx_REV0016_SW01.efw
- for password=1 to be entered in the download dialog. If password=0 (default setting) only the firmware update is carried out, without an ESI update.
- for the device to support this function. The function usually cannot be retrofitted; it is a component of many new developments from year of manufacture 2016.

Following the update, its success should be verified

- ESI/Revision: e.g. by means of an online scan in TwinCAT ConfigMode/FreeRun – this is a convenient way to determine the revision
- Firmware: e.g. by looking in the online CoE of the device

NOTICE

Risk of damage to the device!

✓ Note the following when downloading new device files

- a) Firmware downloads to an EtherCAT device must not be interrupted
 - b) Flawless EtherCAT communication must be ensured. CRC errors or LostFrames must be avoided.
 - c) The power supply must adequately dimensioned. The signal level must meet the specification.
- ⇒ In the event of malfunctions during the update process the EtherCAT device may become unusable and require re-commissioning by the manufacturer.

8.2.1 Device description ESI file/XML

NOTICE

Attention regarding update of the ESI description/EEPROM

Some slaves have stored calibration and configuration data from the production in the EEPROM. These are irretrievably overwritten during an update.

The ESI device description is stored locally on the slave and loaded on start-up. Each device description has a unique identifier consisting of slave name (9 characters/digits) and a revision number (4 digits). Each slave configured in the System Manager shows its identifier in the EtherCAT tab:

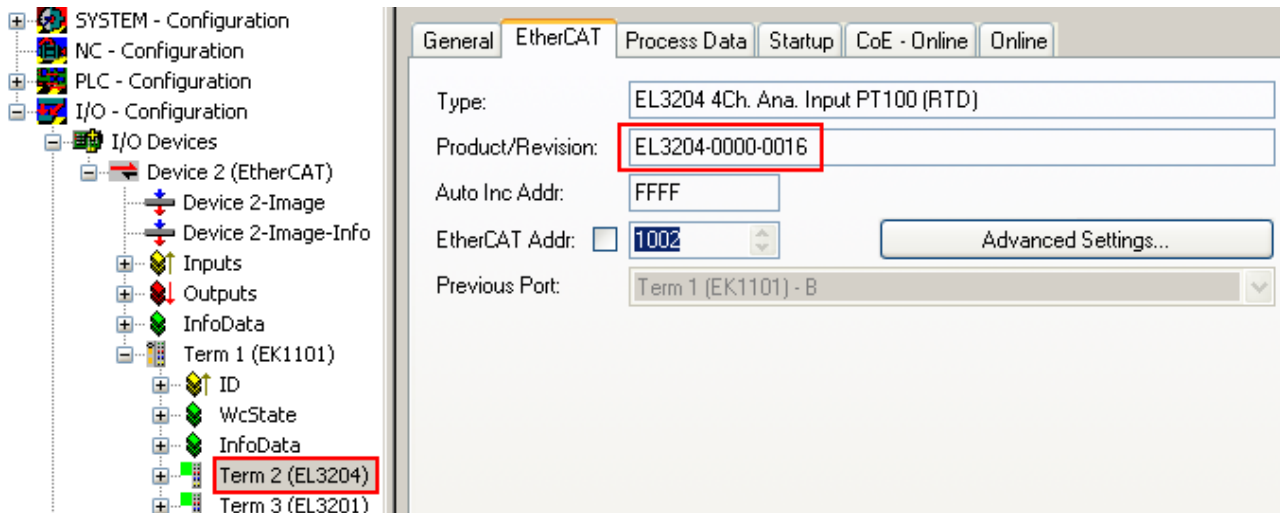


Fig. 100: Device identifier consisting of name EL3204-0000 and revision -0016

The configured identifier must be compatible with the actual device description used as hardware, i.e. the description which the slave has loaded on start-up (in this case EL3204). Normally the configured revision must be the same or lower than that actually present in the terminal network.

For further information on this, please refer to the [EtherCAT system documentation](#).



Update of XML/ESI description

The device revision is closely linked to the firmware and hardware used. Incompatible combinations lead to malfunctions or even final shutdown of the device. Corresponding updates should only be carried out in consultation with Beckhoff support.

Display of ESI slave identifier

The simplest way to ascertain compliance of configured and actual device description is to scan the EtherCAT boxes in TwinCAT mode Config/FreeRun:

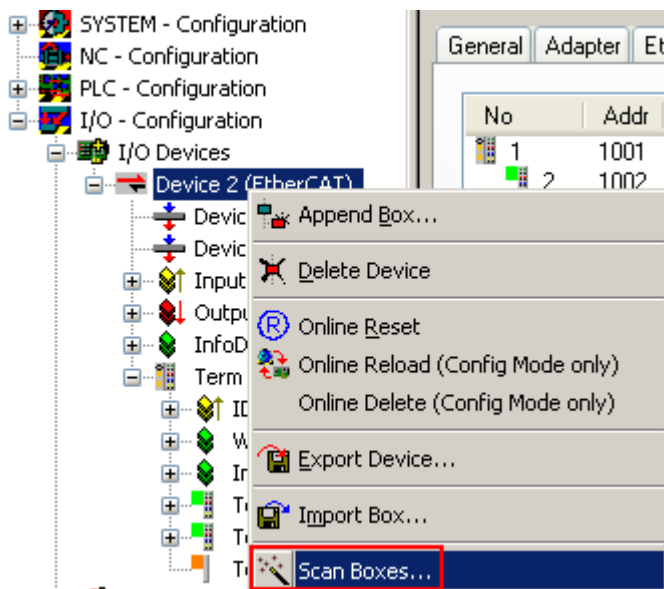


Fig. 101: Scan the subordinate field by right-clicking on the EtherCAT device

If the found field matches the configured field, the display shows



Fig. 102: Configuration is identical

otherwise a change dialog appears for entering the actual data in the configuration.

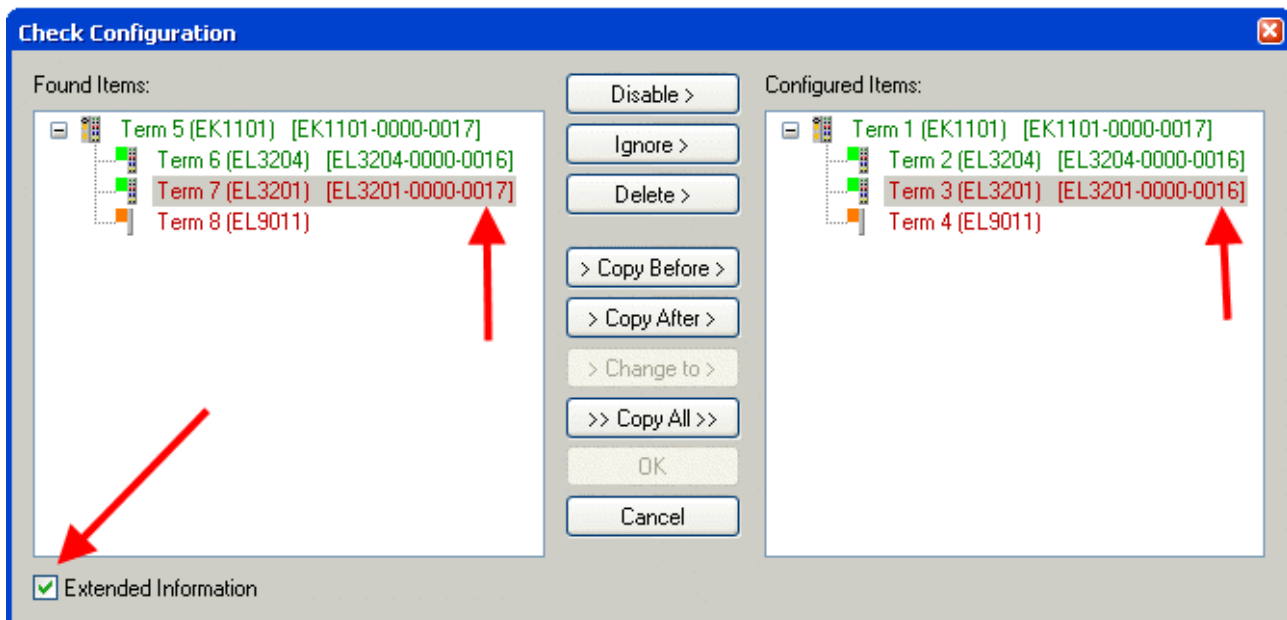


Fig. 103: Change dialog

In this example in Fig. *Change dialog*, an EL3201-0000-**0017** was found, while an EL3201-0000-**0016** was configured. In this case the configuration can be adapted with the *Copy Before* button. The *Extended Information* checkbox must be set in order to display the revision.

Changing the ESI slave identifier

The ESI/EEPROM identifier can be updated as follows under TwinCAT:

- Trouble-free EtherCAT communication must be established with the slave.
- The state of the slave is irrelevant.
- Right-clicking on the slave in the online display opens the *EEPROM Update* dialog, Fig. *EEPROM Update*

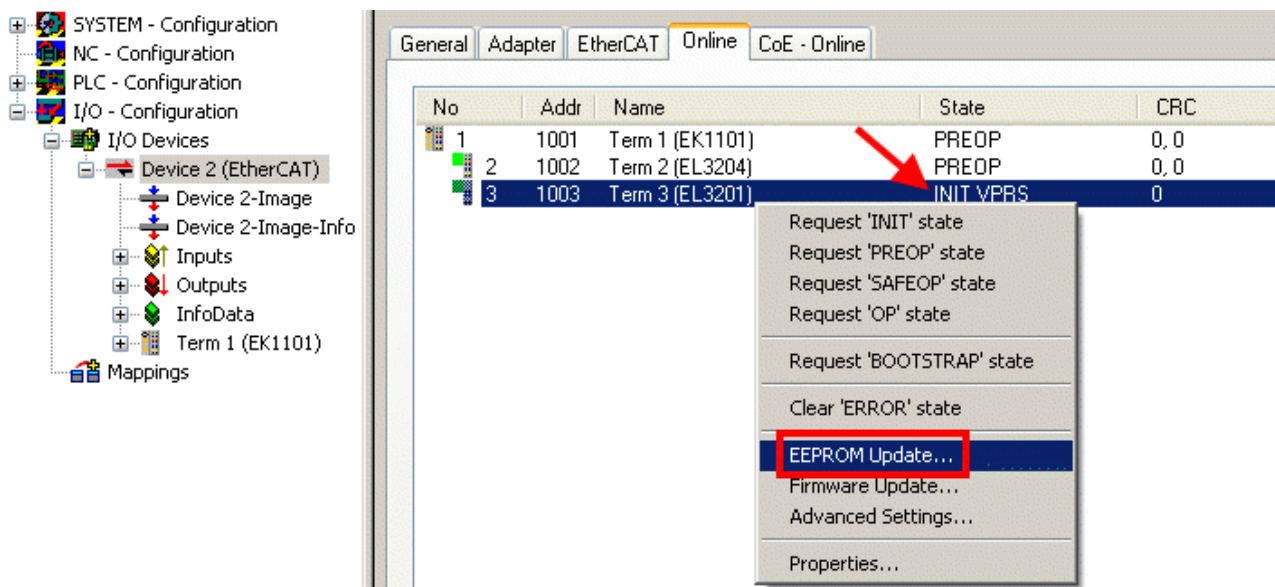


Fig. 104: EEPROM Update

The new ESI description is selected in the following dialog, see Fig. *Selecting the new ESI*. The checkbox *Show Hidden Devices* also displays older, normally hidden versions of a slave.

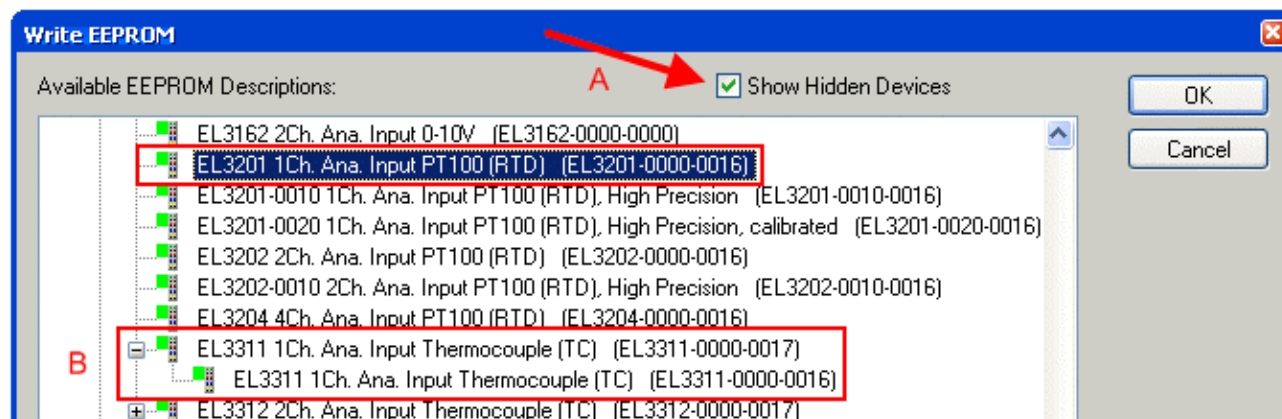


Fig. 105: Selecting the new ESI

A progress bar in the System Manager shows the progress. Data are first written, then verified.

● The change only takes effect after a restart.

i Most EtherCAT devices read a modified ESI description immediately or after startup from the INIT. Some communication settings such as distributed clocks are only read during power-on. The EtherCAT slave therefore has to be switched off briefly in order for the change to take effect.

8.2.2 Firmware explanation

Determining the firmware version

Determining the version via the TwinCAT System Manager

The TwinCAT System Manager shows the version of the controller firmware if the master can access the slave online. Click on the E-Bus Terminal whose controller firmware you want to check (in the example terminal 2 (EL3204)) and select the tab *CoE Online* (CAN over EtherCAT).

● CoE Online and Offline CoE

Two CoE directories are available:

- **online:** This is offered in the EtherCAT slave by the controller, if the EtherCAT slave supports this. This CoE directory can only be displayed if a slave is connected and operational.
- **offline:** The EtherCAT Slave Information ESI/XML may contain the default content of the CoE. This CoE directory can only be displayed if it is included in the ESI (e.g. "Beckhoff EL5xxx.xml").

The Advanced button must be used for switching between the two views.

In Fig. *Display of EL3204 firmware version* the firmware version of the selected EL3204 is shown as 03 in CoE entry 0x100A.

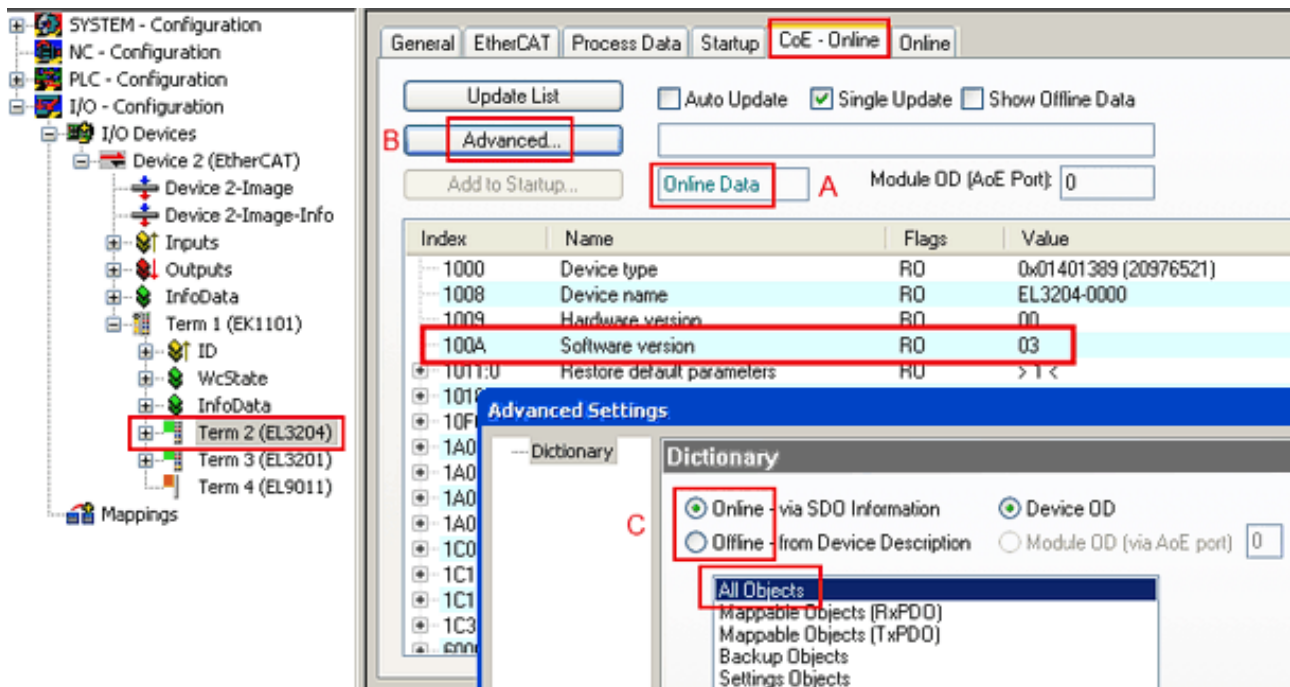


Fig. 106: Display of EL3204 firmware version

In (A) TwinCAT 2.11 shows that the Online CoE directory is currently displayed. If this is not the case, the Online directory can be loaded via the *Online* option in Advanced Settings (B) and double-clicking on *AllObjects*.

8.2.3 Updating controller firmware *.efw

● CoE directory

The Online CoE directory is managed by the controller and stored in a dedicated EEPROM, which is generally not changed during a firmware update.

Switch to the *Online* tab to update the controller firmware of a slave, see Fig. *Firmware Update*.


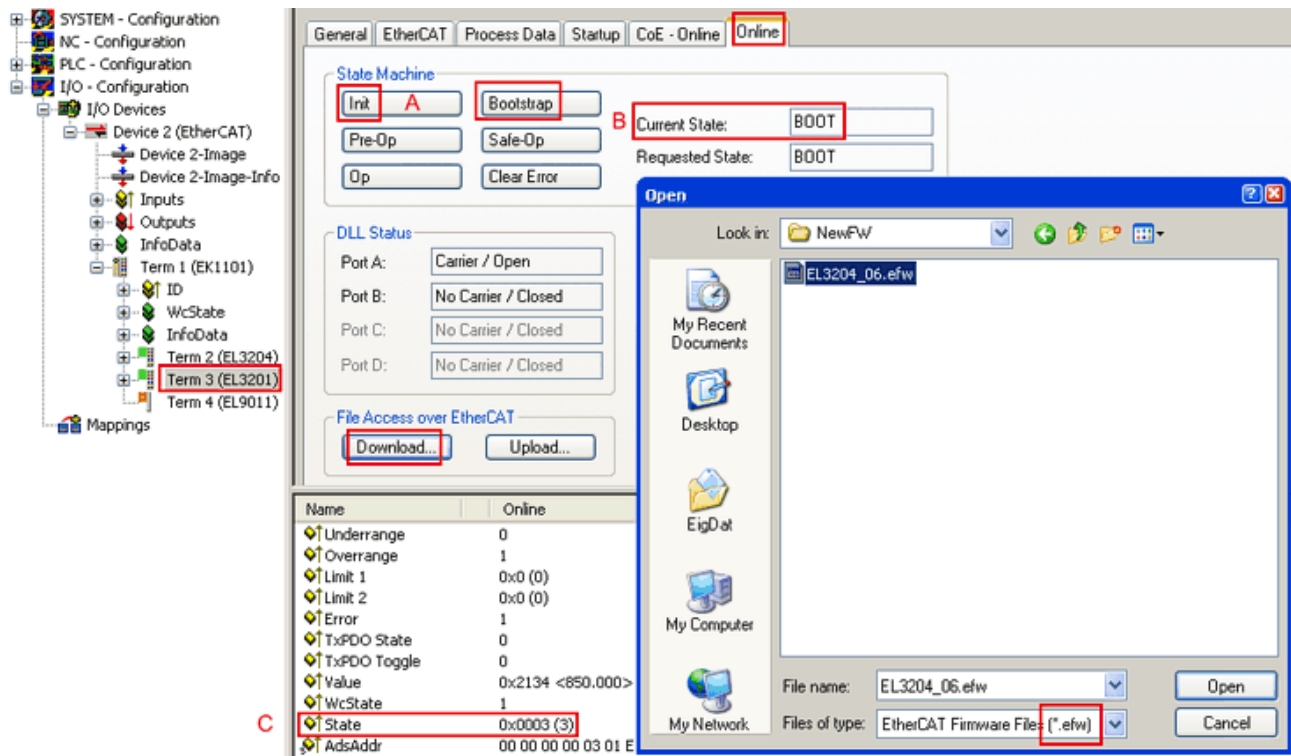



Fig. 107: Firmware Update

Proceed as follows, unless instructed otherwise by Beckhoff support. Valid for TwinCAT 2 and 3 as EtherCAT master.

- Switch TwinCAT system to ConfigMode/FreeRun with cycle time ≥ 1 ms (default in ConfigMode is 4 ms). A FW-Update during real time operation is not recommended.

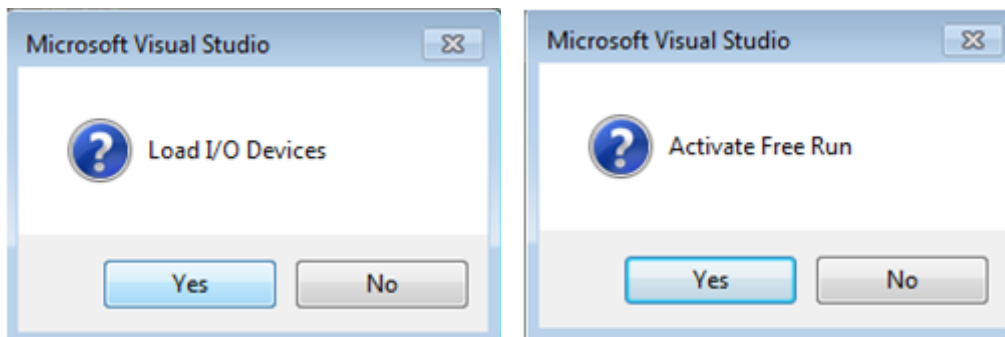


- Switch EtherCAT Master to PreOP

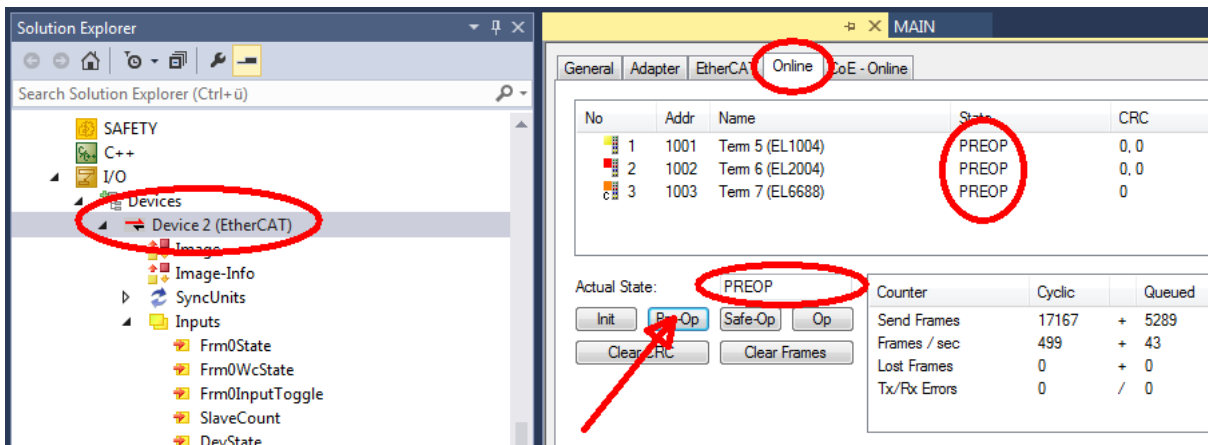

- Switch slave to INIT (A)
- Switch slave to BOOTSTRAP

- Check the current status (B, C)
- Download the new *efw file (wait until it ends). A password will not be necessary usually.

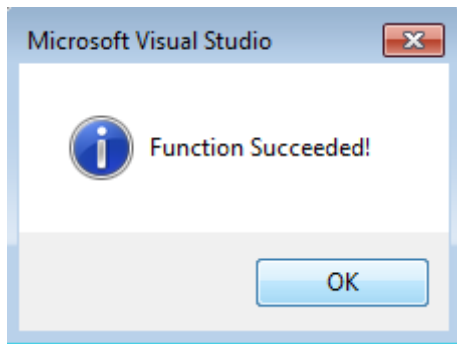

- After the download switch to INIT, then PreOP
- Switch off the slave briefly (don't pull under voltage!)
- Check within CoE 0x100A, if the FW status was correctly overtaken.

8.2.4 FPGA firmware *.rbf

If an FPGA chip deals with the EtherCAT communication an update may be accomplished via an *.rbf file.

- Controller firmware for processing I/O signals
- FPGA firmware for EtherCAT communication (only for terminals with FPGA)

The firmware version number included in the terminal serial number contains both firmware components. If one of these firmware components is modified this version number is updated.

Determining the version via the TwinCAT System Manager

The TwinCAT System Manager indicates the FPGA firmware version. Click on the Ethernet card of your EtherCAT strand (Device 2 in the example) and select the *Online* tab.

The *Reg:0002* column indicates the firmware version of the individual EtherCAT devices in hexadecimal and decimal representation.

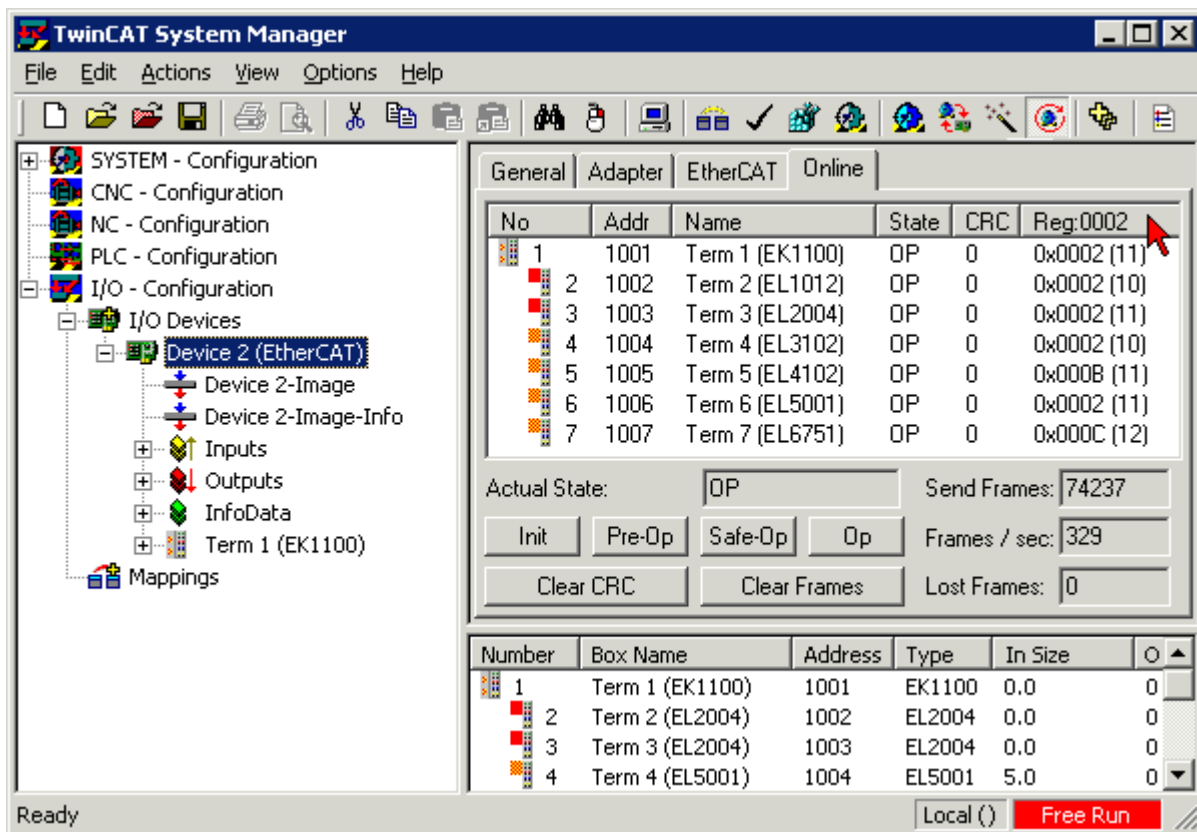
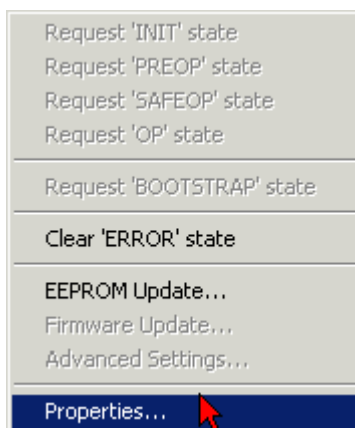


Fig. 108: FPGA firmware version definition

If the column *Reg:0002* is not displayed, right-click the table header and select *Properties* in the context menu.

Fig. 109: Context menu *Properties*

The *Advanced Settings* dialog appears where the columns to be displayed can be selected. Under *Diagnosis/Online View* select the '*0002 ETxxxx Build*' check box in order to activate the FPGA firmware version display.

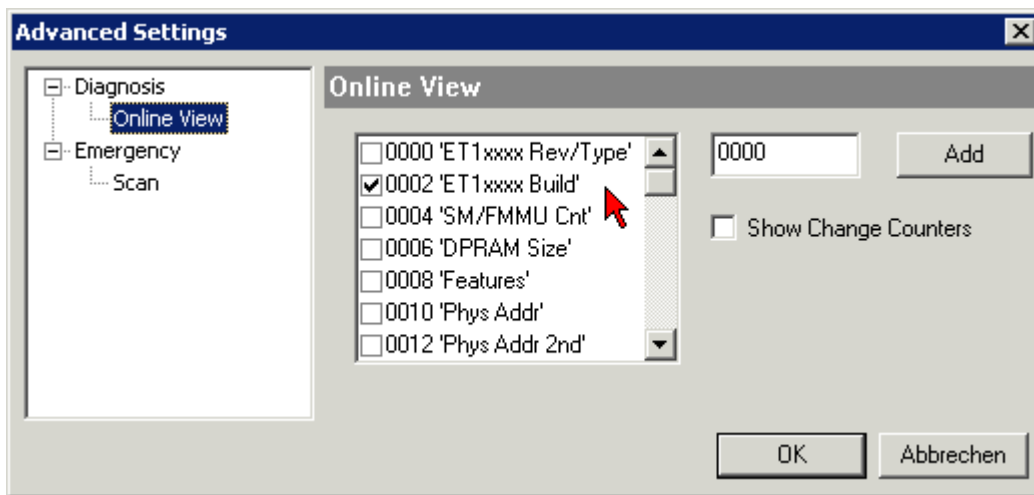


Fig. 110: Dialog *Advanced Settings*

Update

For updating the FPGA firmware

- of an EtherCAT coupler the coupler must have FPGA firmware version 11 or higher;
- of an E-Bus Terminal the terminal must have FPGA firmware version 10 or higher.


Older firmware versions can only be updated by the manufacturer!

Updating an EtherCAT device


The following sequence order have to be met if no other specifications are given (e.g. by the Beckhoff support):

- Switch TwinCAT system to ConfigMode/FreeRun with cycle time ≥ 1 ms (default in ConfigMode is 4 ms). A FW-Update during real time operation is not recommended.


- In the TwinCAT System Manager select the terminal for which the FPGA firmware is to be updated (in the example: Terminal 5: EL5001) and click the *Advanced Settings* button in the *EtherCAT* tab:

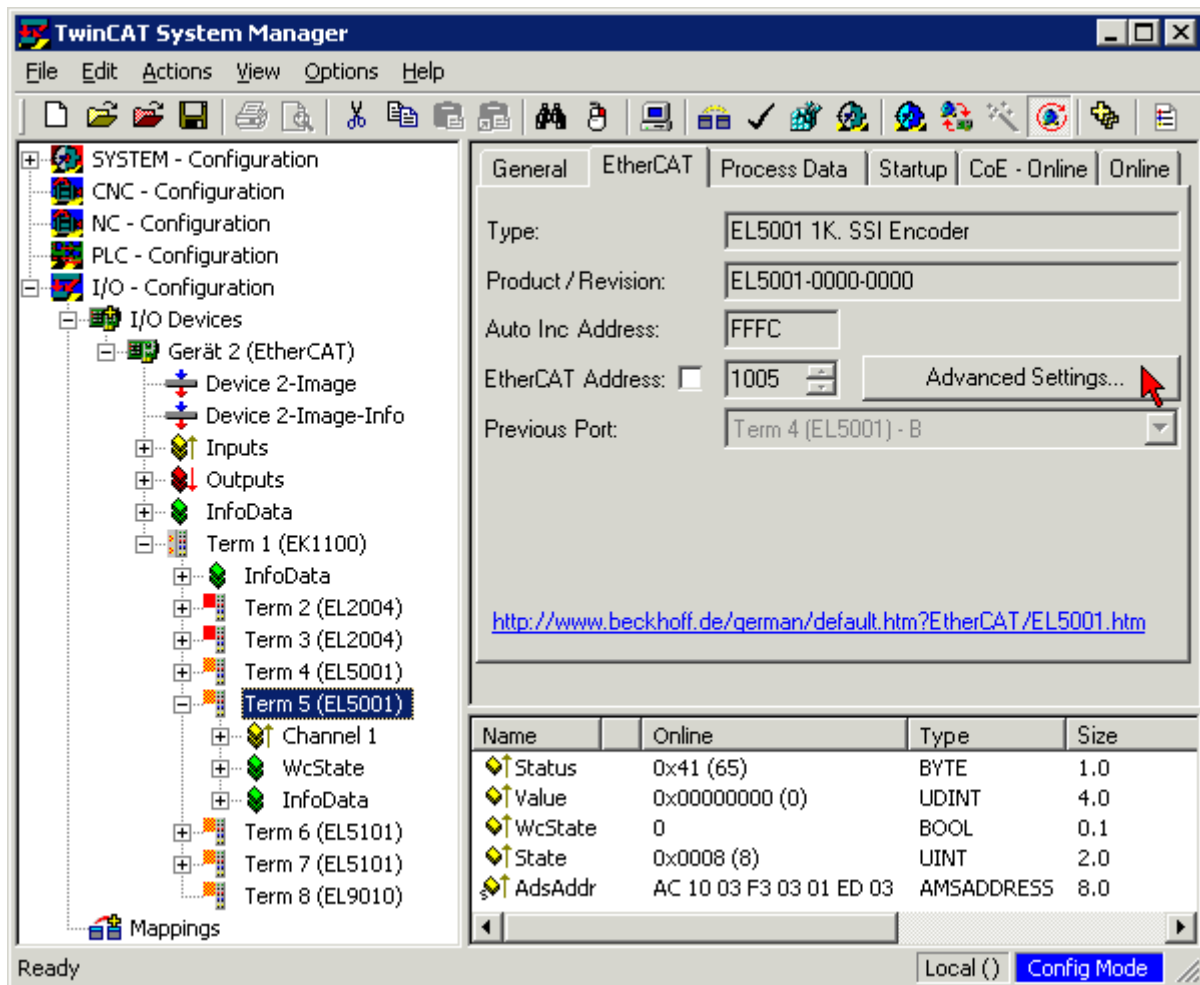

- The *Advanced Settings* dialog appears. Under *ESC Access/E²PROM/FPGA* click on *Write FPGA* button:

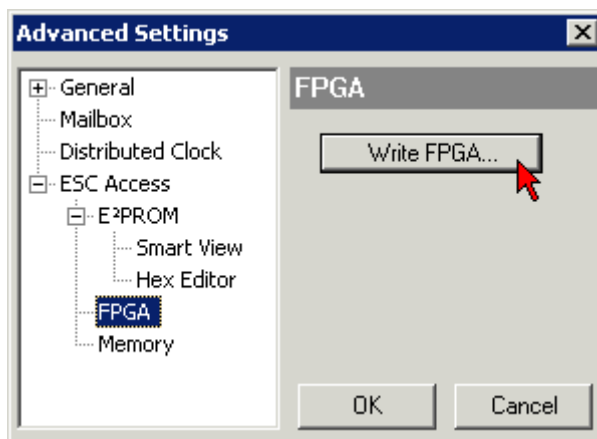

- Select the file (*.rbf) with the new FPGA firmware, and transfer it to the EtherCAT device:

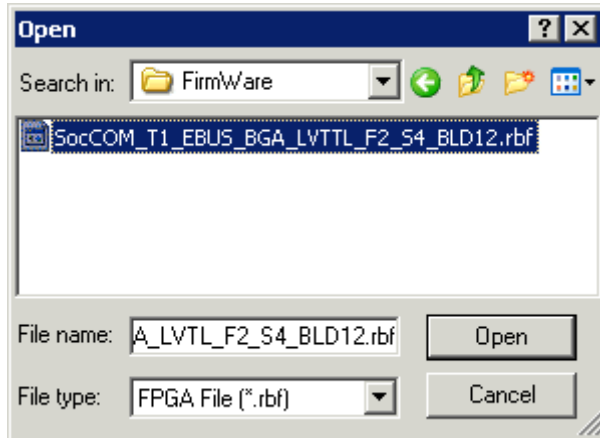

- Wait until download ends
- Switch slave current less for a short time (don't pull under voltage!). In order to activate the new FPGA firmware a restart (switching the power supply off and on again) of the EtherCAT device is required.
- Check the new FPGA status

NOTICE

Risk of damage to the device!

A download of firmware to an EtherCAT device must not be interrupted in any case! If you interrupt this process by switching off power supply or disconnecting the Ethernet link, the EtherCAT device can only be recommissioned by the manufacturer!

8.2.5 Simultaneous updating of several EtherCAT devices

The firmware and ESI descriptions of several devices can be updated simultaneously, provided the devices have the same firmware file/ESI.

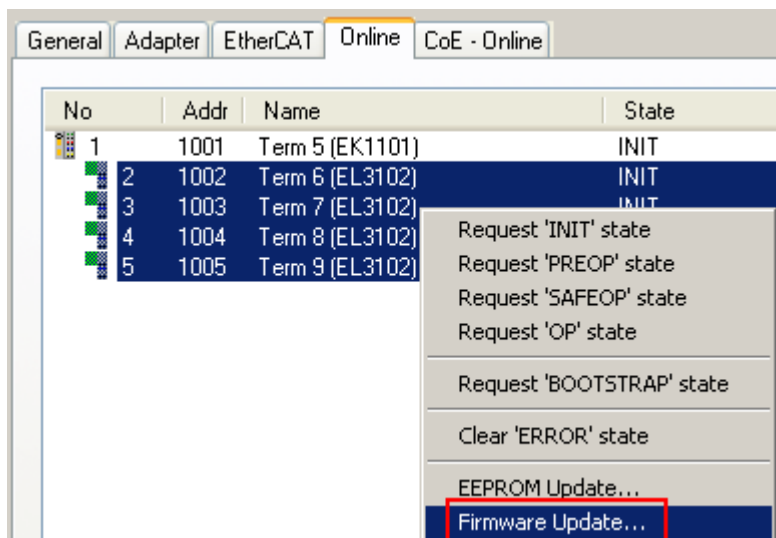


Fig. 111: Multiple selection and firmware update

Select the required slaves and carry out the firmware update in BOOTSTRAP mode as described above.

8.3 Restoring the delivery state

To restore the delivery state (factory settings) of CoE objects for EtherCAT devices ("slaves"), the CoE object *Restore default parameters*, SubIndex 001 can be used via EtherCAT master (e.g. TwinCAT) (see Fig. *Selecting the Restore default parameters PDO*).

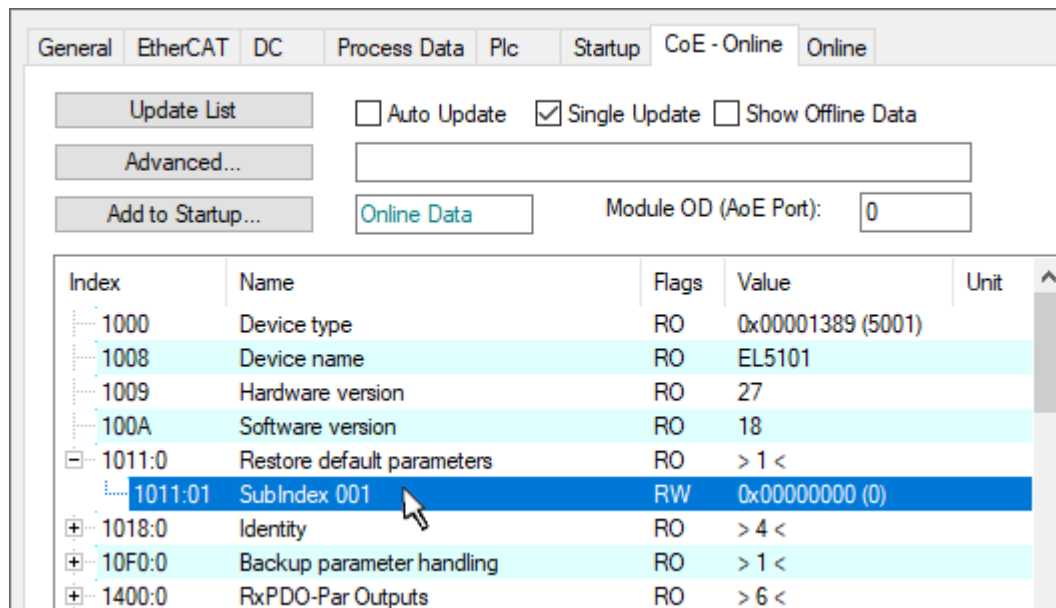


Fig. 112: Selecting the *Restore default parameters* PDO

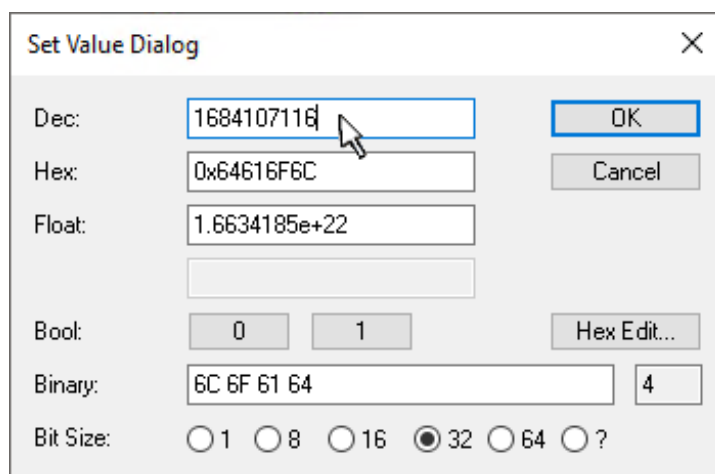


Fig. 113: Entering a restore value in the Set Value dialog

Double-click on *SubIndex 001* to enter the Set Value dialog. Enter the reset value **1684107116** in field *Dec* or the value **0x64616F6C** in field *Hex* (ASCII: "load") and confirm with *OK* (Fig. *Entering a restore value in the Set Value dialog*).

- All changeable entries in the slave are reset to the default values.
- The values can only be successfully restored if the reset is directly applied to the online CoE, i.e. to the slave. No values can be changed in the offline CoE.
- TwinCAT must be in the RUN or CONFIG/Freerun state for this; that means EtherCAT data exchange takes place. Ensure error-free EtherCAT transmission.
- No separate confirmation takes place due to the reset. A changeable object can be manipulated beforehand for the purposes of checking.
- This reset procedure can also be adopted as the first entry in the startup list of the slave, e.g. in the state transition PREOP->SAFEOP or, as in Fig. *CoE reset as a startup entry*, in SAFEOP->OP.

All backup objects are reset to the delivery state.

**Alternative restore value**

In some older terminals (FW creation approx. before 2007) the backup objects can be switched with an alternative restore value: Decimal value: 1819238756, Hexadecimal value: 0x6C6F6164.

An incorrect entry for the restore value has no effect.

8.4 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Support

The Beckhoff Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963 157
e-mail: support@beckhoff.com
web: www.beckhoff.com/support

Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963 460
e-mail: service@beckhoff.com
web: www.beckhoff.com/service

Headquarters Germany

Beckhoff Automation GmbH & Co. KG

Hülshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963 0
e-mail: info@beckhoff.com
web: www.beckhoff.com

Trademark statements

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Third-party trademark statements

BiSS is a trademark of IC Haus GmbH.

DeviceNet and EtherNet/IP are trademarks of ODVA, Inc.

DSP System Toolbox, Embedded Coder, MATLAB, MATLAB Coder, MATLAB Compiler, MathWorks, Predictive Maintenance Toolbox, Simscape, Simscape™ Multibody™, Simulink, Simulink Coder, Stateflow and ThingSpeak are registered trademarks of The MathWorks, Inc.

EnDat is a trademark of Dr. Johannes Heidenhain GmbH.

Microsoft, Microsoft Azure, Microsoft Edge, PowerShell, Visual Studio, Windows and Xbox are trademarks of the Microsoft group of companies.

More Information:
www.beckhoff.com/EL5042

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

