



**Documentation**

**KL6771**

**MP-Bus Master Terminals**

**Version: 2.0.0**  
**Date: 2018-01-16**

**BECKHOFF**



# Table of contents

<b>1 Foreword</b> .....	<b>5</b>
1.1 Notes on the documentation .....	5
1.2 Safety instructions .....	6
1.3 Documentation Issue Status .....	7
<b>2 Product overview</b> .....	<b>8</b>
2.1 Introduction .....	8
2.2 Basic Function Principles .....	9
2.3 Diagnostic LEDs .....	10
2.4 Technical Data .....	11
<b>3 Mounting and wiring</b> .....	<b>12</b>
3.1 Installation on mounting rails .....	12
3.2 Installation instructions for enhanced mechanical load capacity .....	14
3.3 Connection .....	15
3.3.1 Connection system .....	15
3.3.2 Wiring .....	17
3.4 Connection .....	19
3.5 MP-Bus cabling .....	20
3.6 ATEX - Special conditions (standard temperature range) .....	22
3.7 ATEX Documentation .....	23
<b>4 MP-Bus</b> .....	<b>24</b>
4.1 Introduction .....	24
4.2 Topology .....	24
<b>5 Programming</b> .....	<b>25</b>
5.1 TwinCAT libraries .....	25
<b>6 Appendix</b> .....	<b>26</b>
6.1 Support and Service .....	26



# 1 Foreword

## 1.1 Notes on the documentation

### Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

### Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

### Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, Safety over EtherCAT®, TwinSAFE®, XFC® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

### Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, DE102004044764, DE102007017835 with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents: EP0851348, US6167425 with corresponding applications or registrations in various other countries.

The logo for EtherCAT, featuring the word "EtherCAT" in a bold, black, sans-serif font. A red arrow points from the top of the "A" towards the right, ending above the "T". A registered trademark symbol (®) is located to the right of the "T".

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

### Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

## 1.2 Safety instructions

### Safety regulations

Please note the following safety instructions and explanations!  
Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

### Exclusion of liability






All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

### Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

### Description of symbols

In this documentation the following symbols are used with an accompanying safety instruction or note. The safety instructions must be read carefully and followed without fail!

 <b>DANGER</b>	<p><b>Serious risk of injury!</b> Failure to follow the safety instructions associated with this symbol directly endangers the life and health of persons.</p>
 <b>WARNING</b>	<p><b>Risk of injury!</b> Failure to follow the safety instructions associated with this symbol endangers the life and health of persons.</p>
 <b>CAUTION</b>	<p><b>Personal injuries!</b> Failure to follow the safety instructions associated with this symbol can lead to injuries to persons.</p>
 <b>Attention</b>	<p><b>Damage to the environment or devices</b> Failure to follow the instructions associated with this symbol can lead to damage to the environment or equipment.</p>
 <b>Note</b>	<p><b>Tip or pointer</b> This symbol indicates information that contributes to better understanding.</p>

### 1.3 Documentation Issue Status

Version	Comment
2.0.0	<ul style="list-style-type: none"> <li>• Migration</li> <li>• MP-bus wiring chapter updated</li> </ul>
1.4.0	<ul style="list-style-type: none"> <li>• <i>MP-bus wiring</i> chapter updated</li> <li>• Foreword updated</li> <li>• Technical data updated</li> </ul>
1.3.0	<ul style="list-style-type: none"> <li>• <i>MP-bus wiring</i> chapter updated: From firmware version B3, the MP-bus master terminal can also be used in cablings with 24 V<sub>AC</sub>.</li> <li>• <i>TwinCAT libraries</i> chapter revised.</li> </ul>
1.2.0	<ul style="list-style-type: none"> <li>• Programming description moved to the <a href="#">Beckhoff Information System [► 25]</a></li> <li>• TwinCAT library TcMPBus (formerly TcKL6771) updated to version 1.8.0</li> <li>• ATEX notes added</li> </ul>
1.1.0	<ul style="list-style-type: none"> <li>• UST-3 implemented</li> <li>• TwinCAT library TcKL6771 updated to version 1.005.000</li> <li>• Installation notes updated</li> </ul>
1.0.1	Sample programs updated
1.0.0	First release

#### Firmware and hardware versions

Documentation Version	KL6771-0000, KS6771-0000	
	Firmware	Hardware
2.0.0	B3	06
1.4.0	B3	06
1.3.0	B3	05
1.2.0	B2	02
1.1.0	B2	01
1.0.1	B1	00
1.0.0	B1	00

The firmware and hardware versions (delivery state) of the terminal can be found in the serial number printed on the side.

#### Syntax of the serial number

Structure of the serial number: WW YY FF HH

- WW - week of production (calendar week)
- YY - year of production
- FF - firmware version
- HH - hardware version

Example with ser. no.: 33 6 B1 00:

- 33 - week of production 33
- 6 - year of production 2006
- B1 - firmware version B1
- 00 - hardware version 00

## 2 Product overview

### 2.1 Introduction

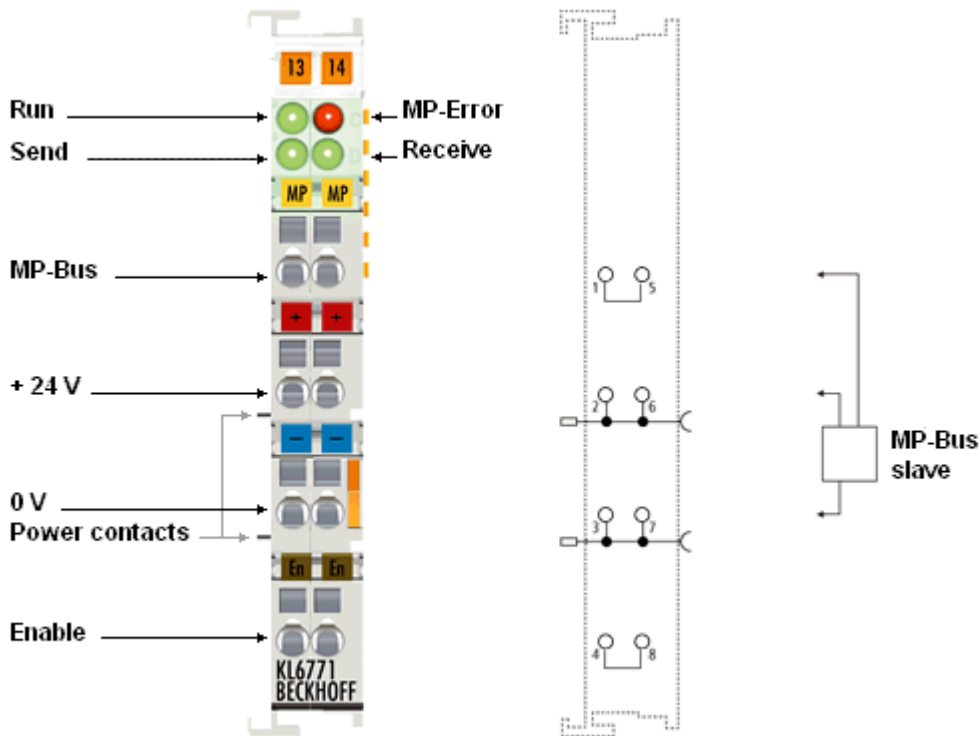


Fig. 1: KL6771

The MP-bus master terminal enables direct connection of MP-bus slaves. The MP-Bus was developed by Belimo for connecting valves, throttle valves, air valves, fire dampers, and for window ventilation systems. Up to 16 field devices, 8 drives and 8 sensors can be connected to the KL6771. Process data exchange is fieldbus-independent. The Bus Terminal is configured and commissioned via TwinCAT function blocks. Status LEDs directly indicate the bus status. Several KL6771 Bus Terminals can be connected to the same Bus Coupler or Bus Terminal Controller.



## 2.2 Basic Function Principles

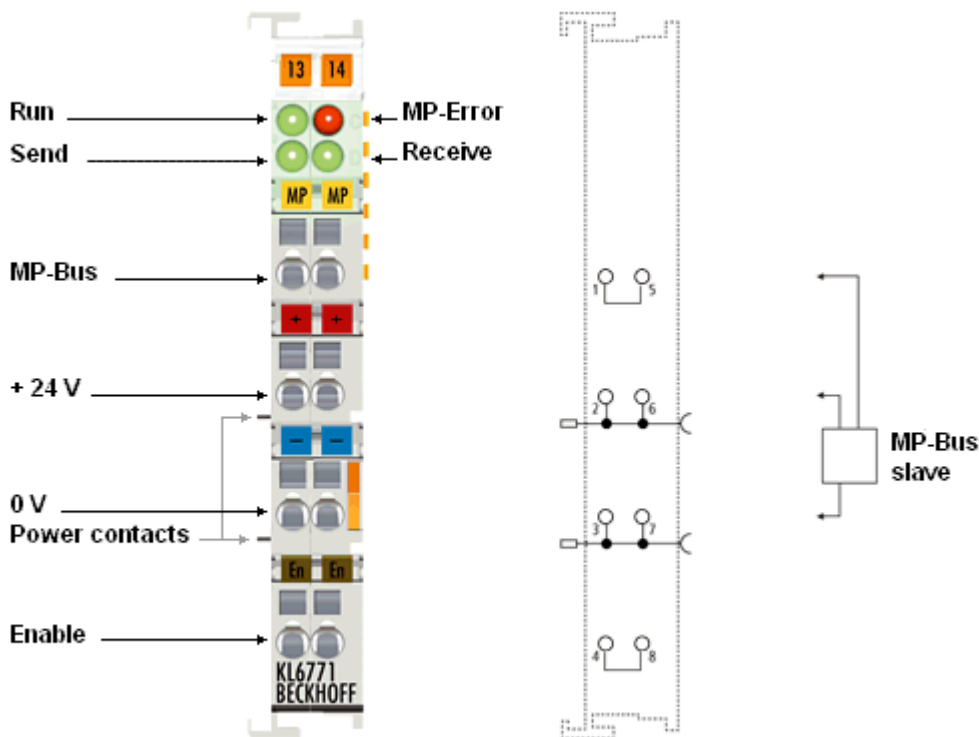


Fig. 2: Basic Function Principles

Operation of the MP-bus Bus Terminal requires function blocks that are available for [download \[► 25\]](#).

The following drives and sensors are supported:

- VAVs (e.g. NMV-D2M)
- FLS window opener
- Flap and positioning actuators (e.g. NM24-MFT2, NV23-MFT2)
- Fire dampers (e.g. BF24TL-T-ST)
- PTH sensors

There is a function block that carries out communication with the device for each of these drives or sensors.

The MP-Bus slave is addressed through an addressing block. The slaves can be addressed manually or automatically.

### Software required for use of the KL6771

TwinCAT PLC has a corresponding library for addressing the KL6771 from within the application.



**Note**

**Required TwinCAT library**

TwinCAT supports the KL6771 with its own library. If the KL6771 is to be used with an external controller, a Bus Terminal controller (BC or BX) is required on which the MP-Bus library can run. Operation of the KL6771 on a PC or CX without TwinCAT PLC is not supported!

## 2.3 Diagnostic LEDs

The LEDs indicate the operating state of the KL6771.

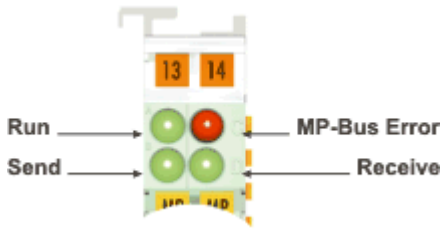


Fig. 3: LEDs

### Meaning of the LED displays

LED	Color	Chan- nel	State and significance		
			On	off	flashes
K-Bus Run	green	1	Lit, either weakly or strongly: K-bus communication OK	No K-Bus communication	K-Bus communication
MP-Bus Error	red		<ul style="list-style-type: none"> <li>• Enable input is set</li> <li>• PLC program has not started, or MP-Bus function block is not accessing the KL6771</li> </ul>	No error	Error detected
Send	green		Toggles when an MP telegram is sent	-	Data is being sent
Receive	green		Toggles when an MP telegram is received	-	Data is being received

## 2.4 Technical Data

Technical Data	KL6771-0000,	KS6771-0000
Master channels	1	
Transmission standard	MP-bus standard	
Number of slaves	max. 16 (8 actuators and 8 sensors)	
Data transfer rate	1200 baud	
Electrical isolation	500 V (K-bus / MP-bus)	
Power supply for the electronics	via the K-bus and through the power contacts	
Current consumption from the K-bus	typically 55 mA	
Current consumption from power contacts	typically 10 mA + current consumption of the connected MP-bus slaves	
Output process image	12 bytes data	
Process image of the inputs	12 bytes data	
Weight	approx. 85 g	
Dimensions (W x H x D)	approx. 12 mm x 100 mm x 70 mm	
Mounting [ <a href="#">▶ 12</a> ]	on 35 mm mounting rail conforms to EN 60715	
Permissible ambient temperature range during operation	0°C ... + 55°C	
Permissible ambient temperature range during storage	-25 °C ... + 85 °C	
Permissible relative air humidity	95 %, no condensation	
Vibration / shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27 see also <a href="#">installation instructions [▶ 14]</a> for terminals with enhanced mechanical load capacity	
EMC immunity / emission	conforms to EN 61000-6-2 / EN 61000-6-4	
Protection class	IP20	
Installation position	variable	
Pluggable wiring	no	yes
Approval	CE, cULus, ATEX [ <a href="#">▶ 22</a> ]	

## 3 Mounting and wiring

### 3.1 Installation on mounting rails



**WARNING**

#### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!

#### Assembly

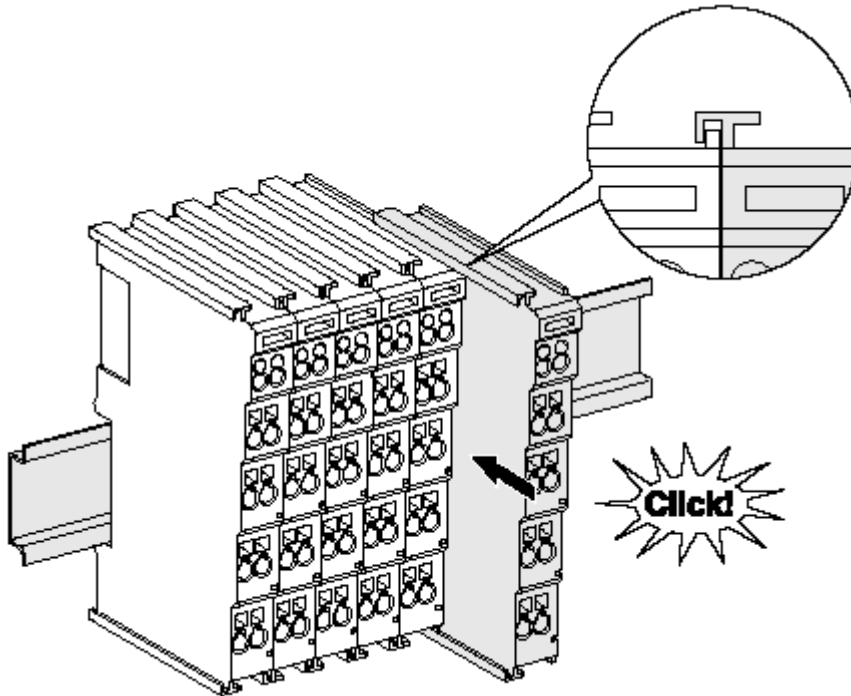


Fig. 4: Attaching on mounting rail

The Bus Coupler and Bus Terminals are attached to commercially available 35 mm mounting rails (DIN rails according to EN 60715) by applying slight pressure:

1. First attach the Fieldbus Coupler to the mounting rail.
2. The Bus Terminals are now attached on the right-hand side of the Fieldbus Coupler. Join the components with tongue and groove and push the terminals against the mounting rail, until the lock clicks onto the mounting rail.

If the Terminals are clipped onto the mounting rail first and then pushed together without tongue and groove, the connection will not be operational! When correctly assembled, no significant gap should be visible between the housings.



**Note**

#### Fixing of mounting rails

The locking mechanism of the terminals and couplers extends to the profile of the mounting rail. At the installation, the locking mechanism of the components must not come into conflict with the fixing bolts of the mounting rail. To mount the mounting rails with a height of 7.5 mm under the terminals and couplers, you should use flat mounting connections (e.g. countersunk screws or blind rivets).

## Disassembly

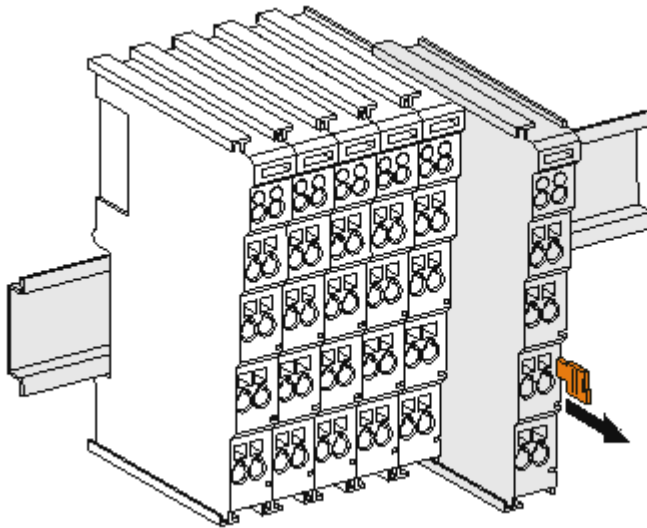


Fig. 5: Disassembling of terminal

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

1. Pull the terminal by its orange-colored lugs approximately 1 cm away from the mounting rail. In doing so for this terminal the mounting rail lock is released automatically and you can pull the terminal out of the bus terminal block easily without excessive force.
2. Grasp the released terminal with thumb and index finger simultaneous at the upper and lower grooved housing surfaces and pull the terminal out of the bus terminal block.

## Connections within a bus terminal block

The electric connections between the Bus Coupler and the Bus Terminals are automatically realized by joining the components:

- The six spring contacts of the K-Bus/E-Bus deal with the transfer of the data and the supply of the Bus Terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminals on the Bus Coupler (up to 24 V) or for higher voltages via power feed terminals.



### Note

#### Power Contacts

During the design of a bus terminal block, the pin assignment of the individual Bus Terminals must be taken account of, since some types (e.g. analog Bus Terminals or digital 4-channel Bus Terminals) do not or not fully loop through the power contacts. Power Feed Terminals (KL91xx, KL92xx or EL91xx, EL92xx) interrupt the power contacts and thus represent the start of a new supply rail.

## PE power contact

The power contact labeled PE can be used as a protective earth. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

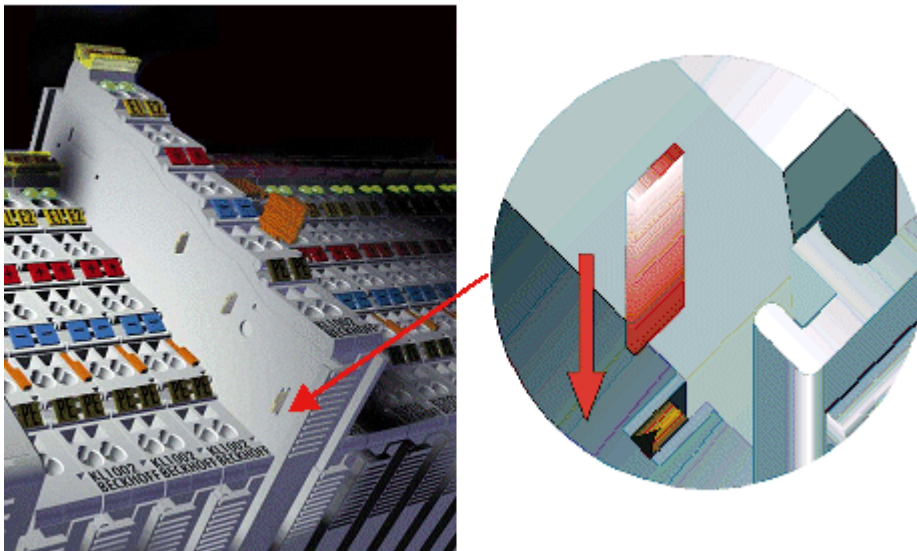





Fig. 6: Power contact on left side

 <b>Attention</b>	<p><b>Possible damage of the device</b></p> <p>Note that, for reasons of electromagnetic compatibility, the PE contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage on the terminal (e.g. disruptive discharge to the PE line during insulation testing of a consumer with a nominal voltage of 230 V). For insulation testing, disconnect the PE supply line at the Bus Coupler or the Power Feed Terminal! In order to decouple further feed points for testing, these Power Feed Terminals can be released and pulled at least 10 mm from the group of terminals.</p>
---	---

 <b>WARNING</b>	<p><b>Risk of electric shock!</b></p> <p>The PE power contact must not be used for other potentials!</p>
---	--

### 3.2 Installation instructions for enhanced mechanical load capacity

 <b>WARNING</b>	<p><b>Risk of injury through electric shock and damage to the device!</b></p> <p>Bring the Bus Terminal system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!</p>
---	--

**Additional checks**

The terminals have undergone the following additional tests:

Verification	Explanation
Vibration	10 frequency runs in 3 axes
	6 Hz < f < 60 Hz displacement 0.35 mm, constant amplitude
	60.1 Hz < f < 500 Hz acceleration 5 g, constant amplitude
Shocks	1000 shocks in each direction, in 3 axes
	25 g, 6 ms


### Additional installation instructions

For terminals with enhanced mechanical load capacity, the following additional installation instructions apply:

- The enhanced mechanical load capacity is valid for all permissible installation positions
- Use a mounting rail according to EN 60715 TH35-15
- Fix the terminal segment on both sides of the mounting rail with a mechanical fixture, e.g. an earth terminal or reinforced end clamp
- The maximum total extension of the terminal segment (without coupler) is: 64 terminals (12 mm mounting with) or 32 terminals (24 mm mounting with)
- Avoid deformation, twisting, crushing and bending of the mounting rail during edging and installation of the rail
- The mounting points of the mounting rail must be set at 5 cm intervals
- Use countersunk head screws to fasten the mounting rail
- The free length between the strain relief and the wire connection should be kept as short as possible. A distance of approx. 10 cm should be maintained to the cable duct.

## 3.3 Connection

### 3.3.1 Connection system

	<p><b>Risk of electric shock and damage of device!</b></p> <p>Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!</p>
<p><b>WARNING</b></p>	

#### Overview

The Bus Terminal system offers different connection options for optimum adaptation to the respective application:

- The terminals of ELxxxx and KLxxxx series with standard wiring include electronics and connection level in a single enclosure.
- The terminals of ESxxxx and KSxxxx series feature a pluggable connection level and enable steady wiring while replacing.
- The High Density Terminals (HD Terminals) include electronics and connection level in a single enclosure and have advanced packaging density.

#### Standard wiring (ELxxxx / KLxxxx)



Fig. 7: Standard wiring

The terminals of ELxxxx and KLxxxx series have been tried and tested for years. They feature integrated screwless spring force technology for fast and simple assembly.

**Pluggable wiring (ESxxxx / KSxxxx)**

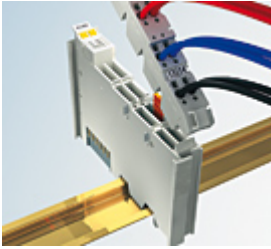


Fig. 8: Pluggable wiring

The terminals of ESxxxx and KSxxxx series feature a pluggable connection level. The assembly and wiring procedure is the same as for the ELxxxx and KLxxxx series. The pluggable connection level enables the complete wiring to be removed as a plug connector from the top of the housing for servicing. The lower section can be removed from the terminal block by pulling the unlocking tab. Insert the new component and plug in the connector with the wiring. This reduces the installation time and eliminates the risk of wires being mixed up.

The familiar dimensions of the terminal only had to be changed slightly. The new connector adds about 3 mm. The maximum height of the terminal remains unchanged.

A tab for strain relief of the cable simplifies assembly in many applications and prevents tangling of individual connection wires when the connector is removed.

Conductor cross sections between 0.08 mm<sup>2</sup> and 2.5 mm<sup>2</sup> can continue to be used with the proven spring force technology.


The overview and nomenclature of the product names for ESxxxx and KSxxxx series has been retained as known from ELxxxx and KLxxxx series.

**High Density Terminals (HD Terminals)**




Fig. 9: High Density Terminals

The Bus Terminals from these series with 16 terminal points are distinguished by a particularly compact design, as the packaging density is twice as large as that of the standard 12 mm Bus Terminals. Massive conductors and conductors with a wire end sleeve can be inserted directly into the spring loaded terminal point without tools.


 <b>Note</b>	<p><b>Wiring HD Terminals</b></p> <p>The High Density (HD) Terminals of the ELx8xx and KLx8xx series doesn't support pluggable wiring.</p>
--	--

**Ultrasonically "bonded" (ultrasonically welded) conductors**

 <b>Note</b>	<p><b>Ultrasonically "bonded" conductors</b></p> <p>It is also possible to connect the Standard and High Density Terminals with ultrasonically "bonded" (ultrasonically welded) conductors. In this case, please note the tables concerning the wire-size width below!</p>
--	--



### 3.3.2 Wiring

 <b>WARNING</b>	<p><b>Risk of electric shock and damage of device!</b></p> <p>Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!</p>
---	---

#### Terminals for standard wiring ELxxxx/KLxxxx and for pluggable wiring ESxxxx/KSxxxx

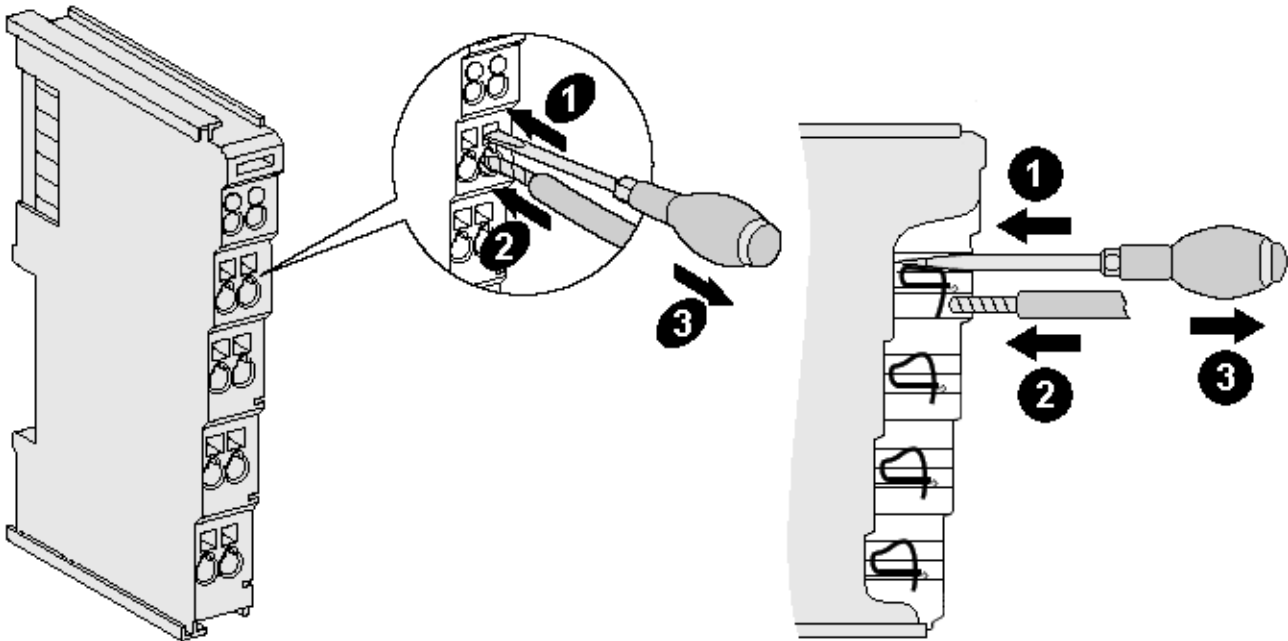


Fig. 10: Connecting a cable on a terminal point

Up to eight terminal points enable the connection of solid or finely stranded cables to the Bus Terminal. The terminal points are implemented in spring force technology. Connect the cables as follows:

1. Open a terminal point by pushing a screwdriver straight against the stop into the square opening above the terminal point. Do not turn the screwdriver or move it alternately (don't toggle).
2. The wire can now be inserted into the round terminal opening without any force.
3. The terminal point closes automatically when the pressure is released, holding the wire securely and permanently.

See the following table for the suitable wire size width.


Terminal housing	ELxxxx, KLxxxx	ESxxxx, KSxxxx
Wire size width (single core wires)	0.08 ... 2.5 mm <sup>2</sup>	0.08 ... 2.5 mm <sup>2</sup>
Wire size width (fine-wire conductors)	0.08 ... 2.5 mm <sup>2</sup>	0,08 ... 2.5 mm <sup>2</sup>
Wire size width (conductors with a wire end sleeve)	0.14 ... 1.5 mm <sup>2</sup>	0.14 ... 1.5 mm <sup>2</sup>
Wire stripping length	8 ... 9 mm	9 ... 10 mm

#### High Density Terminals ([HD Terminals](#) [► 16]) with 16 terminal points

The conductors of the HD Terminals are connected without tools for single-wire conductors using the direct plug-in technique, i.e. after stripping the wire is simply plugged into the terminal point. The cables are released, as usual, using the contact release with the aid of a screwdriver. See the following table for the suitable wire size width.

<b>Terminal housing</b>	<b>High Density Housing</b>
<b>Wire size width (single core wires)</b>	0.08 ... 1.5 mm <sup>2</sup>
<b>Wire size width (fine-wire conductors)</b>	0.25 ... 1.5 mm <sup>2</sup>
<b>Wire size width (conductors with a wire end sleeve)</b>	0.14 ... 0.75 mm <sup>2</sup>
<b>Wire size width (ultrasonically "bonded" conductors)</b>	only 1.5 mm <sup>2</sup>
<b>Wire stripping length</b>	8 ... 9 mm

### 3.4 Connection



**WARNING**

**Risk of injury through electric shock and damage to the device!**

Bring the Bus Terminals system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!

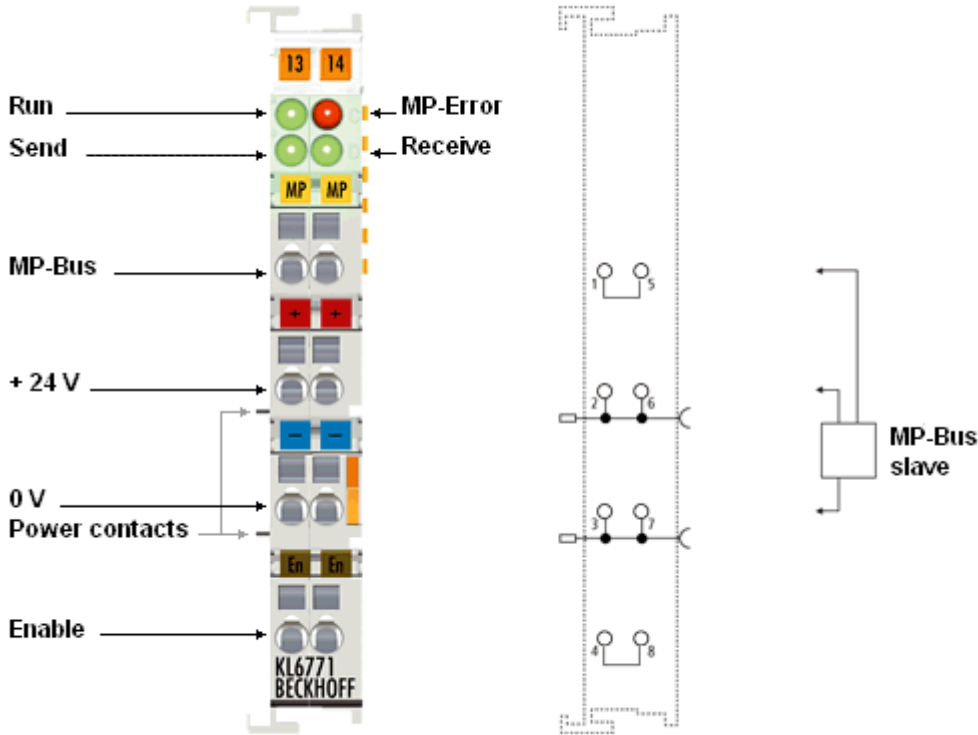



Fig. 11: Connection

Terminal point	No.	Connection for
MP-Bus	1	Cable 5 (white or orange)
+ 24 V <sub>DC</sub> (+)	2	Cable 2 (red)
0 V (-)	3	Cable 1 (black)
Enable	4	Deactivates the MP-Bus master on the KL6771
MP-Bus	5	Cable 5 (white or orange)
+ 24 V <sub>DC</sub> (+)	6	Cable 2 (red)
0 V (-)	7	Cable 1 (black)
Enable	8	Deactivates the MP-Bus master on the KL6771




**Note**

**Enable input**

If 24 V<sub>DC</sub> is applied to the Enable input, the KL6771 will halt the MP-Bus communication. The higher-level PLC receives a message, and the MP Error LED lights up.

### 3.5 MP-Bus cabling

 <b>WARNING</b>	<p><b>Risk of injury through electric shock and damage to the device!</b></p> <p>Bring the Bus Terminals system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!</p>
---	---

#### Maximum MP-bus length

The maximum cable length is obtained by considering the following points:

- The total of the power figures for all the connected bus devices
- Wire cross-section
- AC (from firmware version B3) or DC

#### Operation of MP-bus slaves (actuators) with DC power supply

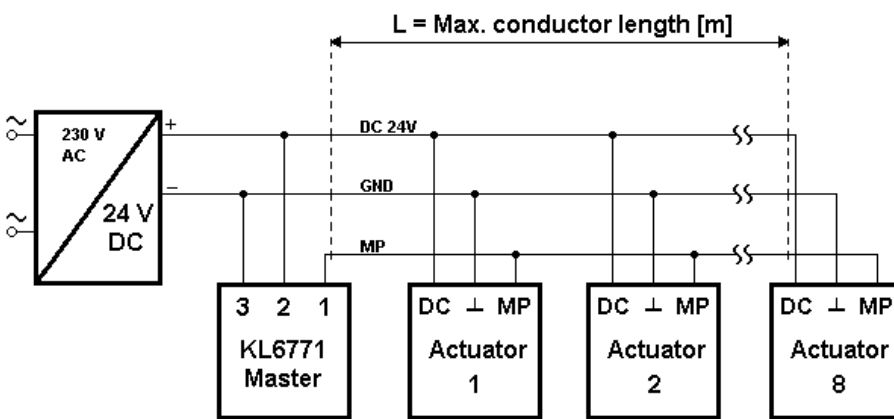


Fig. 12: Operation of MP-bus slaves (actuators) with DC power supply

#### Operation of MP-bus slaves (actuators) with AC power supply

(from firmware version B3)

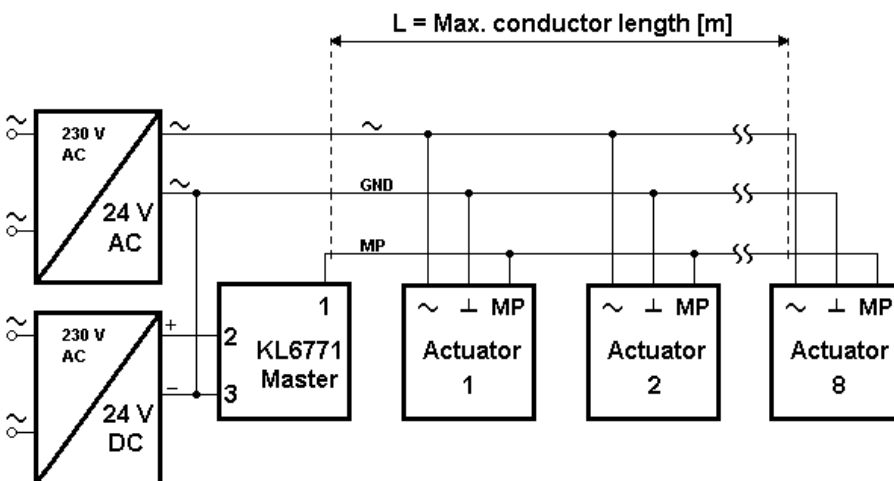


Fig. 13: Operation of MP-bus slaves (actuators) with AC power supply

The upper power supply unit supplies the actuators with AC voltage.

The lower power supply unit supplies the MP-bus master terminal (via the power contacts of the BK, BC, BX or CX).

**MP-Bus length in relation to the effective power of all drives**

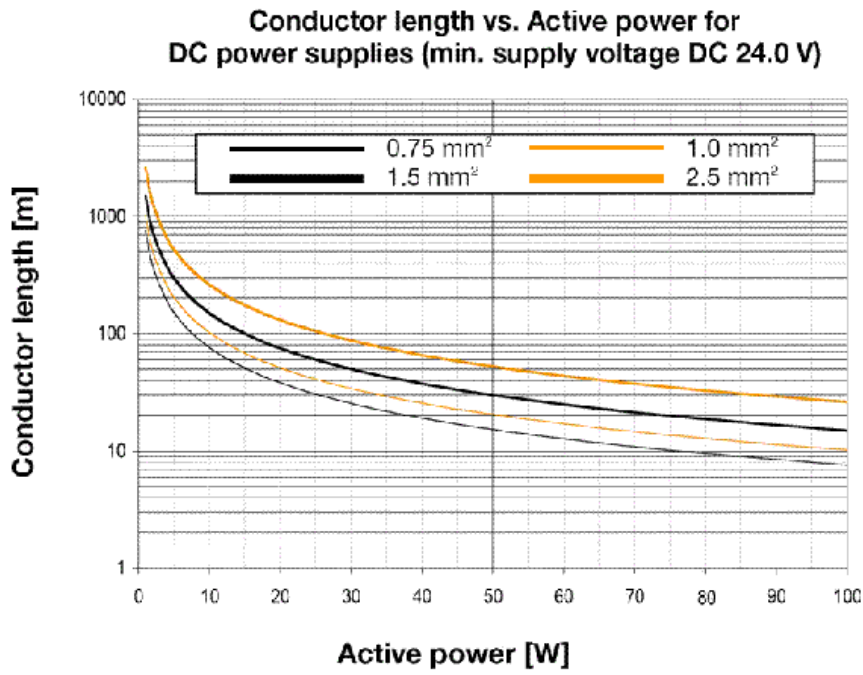


Fig. 14: MP-Bus length in relation to the effective power of all drives

**Example with 4 drives**

$$W_{total} = 1.3 \text{ W} + 2.5 \text{ W} + 6.0 \text{ W} + 3.0 \text{ W} = 12.8 \text{ W}$$

Wire cross-section in mm <sup>2</sup>	Maximum bus length
0.75	60 m
1.00	80 m
1.5	115 m
2.5	200 m

### 3.6 ATEX - Special conditions (standard temperature range)



**WARNING**

**Observe the special conditions for the intended use of Beckhoff fieldbus components with standard temperature range in potentially explosive areas (directive 94/9/EU)!**

- The certified components are to be installed in a suitable housing that guarantees a protection class of at least IP54 in accordance with EN 60529! The environmental conditions during use are thereby to be taken into account!
- If the temperatures during rated operation are higher than 70°C at the feed-in points of cables, lines or pipes, or higher than 80°C at the wire branching points, then cables must be selected whose temperature data correspond to the actual measured temperature values!
- Observe the permissible ambient temperature range of 0 to 55°C for the use of Beckhoff fieldbus components standard temperature range in potentially explosive areas!
- Measures must be taken to protect against the rated operating voltage being exceeded by more than 40% due to short-term interference voltages!
- The individual terminals may only be unplugged or removed from the Bus Terminal system if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The connections of the certified components may only be connected or disconnected if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- The fuses of the KL92xx/EL92xx power feed terminals may only be exchanged if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!
- Address selectors and ID switches may only be adjusted if the supply voltage has been switched off or if a non-explosive atmosphere is ensured!

#### Standards

The fundamental health and safety requirements are fulfilled by compliance with the following standards:

- EN 60079-0:2012+A11:2013
- EN 60079-15:2010

#### Marking

The Beckhoff fieldbus components with standard temperature range certified for potentially explosive areas bear one of the following markings:



II 3G KEMA 10ATEX0075 X Ex nA IIC T4 Gc Ta: 0 ... 55°C

or



II 3G KEMA 10ATEX0075 X Ex nC IIC T4 Gc Ta: 0 ... 55°C

## 3.7 ATEX Documentation



Note

**Notes about operation of the Beckhoff terminal systems in potentially explosive areas (ATEX)**

Pay also attention to the continuative documentation

Notes about operation of the Beckhoff terminal systems in potentially explosive areas (ATEX)

that is available in the download area of the Beckhoff homepage <http://www.beckhoff.com>!

## 4 MP-Bus

### 4.1 Introduction

MP-bus = multi-point bus

The MP-Bus (Multi-Point) is a simple sensor/actuator bus, which is used for certain sub-systems of the building automation system. The MP-Bus serves to control HVAC actuators for flaps, control valves and volume flow regulators from the Belimo product range. Up to eight different devices from HVAC systems can be connected to an MP-Bus master using 3-wire technology. Additionally, a sensor can be connected to each of these eight devices; the sensor is addressed by the MP-Bus. An additional range of products with an MP-Bus connection is the FLS window ventilation system by Belimo (see Belimo documentation for the connection of the Belimo drives).

The MP-Bus was developed by Belimo for connecting valves, throttle valves, air valves, fire dampers, and for window ventilation systems.

### 4.2 Topology

There are no restrictions in terms of the topological configuration of the MP-bus strands: Star, ring, tree or mixed topologies are possible. The length of the entire bus strand depends on the selected cable cross-section and the type as well as the number of connected drives! The documentation from the Belimo company contains further information.

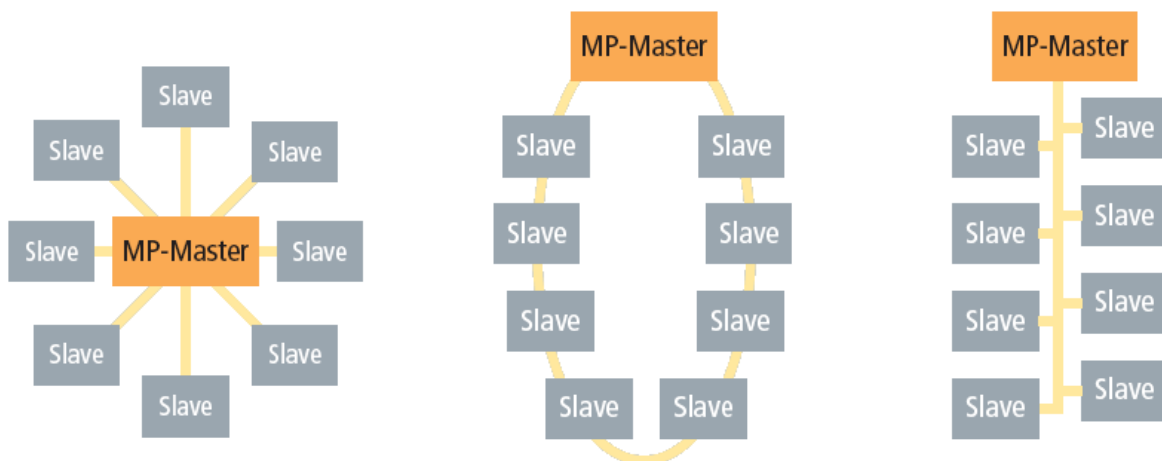


Fig. 15: MP-bus topologies



## **5 Programming**

### **5.1 TwinCAT libraries**

Software documentation in the Beckhoff Information System:

TwinCAT 2: TwinCAT 2 PLC Lib: MP-Bus

TwinCAT 3: TwinCAT 3 PLC Lib: Tc2\_MPBus

## 6 Appendix

### 6.1 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

#### **Beckhoff's branch offices and representatives**

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further [documentation](#) for Beckhoff components there.

#### **Beckhoff Headquarters**

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20  
33415 Verl  
Germany

Phone:	+49(0)5246/963-0
Fax:	+49(0)5246/963-198
e-mail:	info@beckhoff.com

#### **Beckhoff Support**

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline:	+49(0)5246/963-157
Fax:	+49(0)5246/963-9157
e-mail:	support@beckhoff.com

#### **Beckhoff Service**

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline:	+49(0)5246/963-460
Fax:	+49(0)5246/963-479
e-mail:	service@beckhoff.com

# List of illustrations

Fig. 1	KL6771 .....	8
Fig. 2	Basic Function Principles.....	9
Fig. 3	LEDs .....	10
Fig. 4	Attaching on mounting rail .....	12
Fig. 5	Disassembling of terminal.....	13
Fig. 6	Power contact on left side.....	14
Fig. 7	Standard wiring.....	15
Fig. 8	Pluggable wiring .....	16
Fig. 9	High Density Terminals.....	16
Fig. 10	Connecting a cable on a terminal point .....	17
Fig. 11	Connection.....	19
Fig. 12	Operation of MP-bus slaves (actuators) with DC power supply .....	20
Fig. 13	Operation of MP-bus slaves (actuators) with AC power supply.....	20
Fig. 14	MP-Bus length in relation to the effective power of all drives .....	21
Fig. 15	MP-bus topologies .....	24