



Installation and Operating instructions for **CP78xx Control Panel**

Version: 1.8
Date: 2016-03-14

BECKHOFF

Table of contents

1. General Notes	2
Notes on the documentation	2
Liability Conditions	2
Description of safety symbols	2
Basic safety measures	3
Operator's obligation to exercise diligence	4
Operator requirements	4
UL-Certificate of Compliance	4
2. Product Description	5
Appropriate Use	5
Connections	5
Pin assignment	5
Connector description	6
DVI (Digital Visual Interface)	6
Power supply	6
USB interfaces	6
Protective Earthing	6
Cable Set for connecting the Control Panel	6
3. Installation Instructions	7
Transport and Unpacking	7
Transport	7
Unpacking	7
Assembly	8
Assembly dimensions	8
Connecting the Control Panel	9
Connecting cables	9
Protective Earthing	9
4. Operating Instructions	10
Functional description	10
Keyboard codes	10
Servicing and maintenance	12
Cleaning the Control Panel	12
Servicing	12
Emergency procedures	12
Shutting down	12
Disposal	12
5. Troubleshooting	13
Fault correction	13
Service and Support	14
Beckhoff's branch offices and representatives	14
Beckhoff headquarters	14
Beckhoff Support	14
Beckhoff Service	14
6. Appendix	15
Technical data	15
Approvals	15
FCC: Federal Communications Commission Radio Frequency Interference Statement	15
FCC: Canadian Notice	15

General Notes

Notes on the documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components.

Liability Conditions

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

The documentation has been prepared with care. The products described are, however, constantly under development. For this reason, the documentation may not always have been fully checked for consistency with the performance data, standards or other characteristics described. None of the statements in this manual represent a guarantee for as set out in § 443 of the German Civil Code or a statement about the assumed use according to the contract as set out in § 434 para. 1 clause 1 no. 1 of the German Civil Code. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

© This documentation is protected by copyright. Any reproduction or third party use of this publication, whether in whole or in part, without the written permission of Beckhoff Automation GmbH & Co.KG, is forbidden.

Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.



Danger

This symbol is intended to highlight risks for the life or health of personnel.



Warning

This symbol is intended to highlight risks for equipment, materials or the environment.



Note

This symbol indicates information that contributes to better understanding.

Basic safety measures



Warning

Before opening the control panel housing, and whenever the control panel is not being used for control purposes (such as during functional checks after a repair), all parts of the equipment must first be switched off, after which the control panel is to be disconnected from the equipment.

Disconnect the device by unplugging the connectors on the Control Panel side.

Items of equipment that have been switched off must be secured against being switched on again.

The supply voltage must be disconnected before the housing of the Control Panel is opened.



Note

Assembly work on the Control Panel during operation may damage the panel:

- if metal objects such as screws or tools fall onto operating circuit boards.
- if connecting cables internal to the control panel are removed or inserted during operation

Operator's obligation to exercise diligence

The operator must ensure that

- the Control Panel is only used for its intended purpose (see [Product Description](#) section);
- the Control Panel is only operated in a sound condition and in working order;
- the instruction manual is in good condition and complete, and always available for reference at the place of installation of the Control Panel;
- the Control Panel is operated, maintained and repaired only by suitably qualified and authorised personnel.
- the personnel is instructed regularly about relevant occupational safety and environmental protection aspects, and is familiar with the operating manual and in particular the safety notes contained herein.
- none of the safety and warning notes attached to the Control Panel are removed, and all notes remain legible.

National regulations depending on the machine type

Depending on the type of machine and plant in which the Control Panel is used, national regulations governing the controllers of such machines will apply, and must be observed by the operator. These regulations cover, amongst other things, the intervals between inspections of the controller.

The operator must initiate such inspections in good time.

Procedure in the event of a fault

In the event of faults at the Control Panel, the list in the section [Troubleshooting](#) can be used to determine the measures to be taken.

Operator requirements

Read the operating instructions

Anyone who uses the Control Panel must have read these operating instructions.

Software knowledge

Every user must be familiar with any of the functions of the software installed on the PC that he can reach.

UL-Certificate of Compliance



We herewith confirm that the Control Panel CP78xx of Beckhoff Automation GmbH & Co.KG meets the requirements of the Underwriters Laboratories Inc.® (UL)-standard:

Certificate Number: 280607 – E220403
Report Reference: E220403, April 16th, 2007
Issue Date: 2007 June 28

Standards for Safety

The correspondance of the mentioned product with these requirements is proved by the fact that this product meets with the following single standards:

- UL 60950-1, 1st Edition, 2006-07-07 (Information Technology Equipment – Safety - Part 1: General Requirements)
- CSA C22.2 No. 60950-1-03, 1st Edition, 2006-07 (Information Technology Equipment - Safety - Part 1: General Requirements)

Product Description

Appropriate Use


The CP78xx Control Panel is designed for industrial application in machine and plant engineering. An aluminium housing contains a TFT display, touch-screen/pad (optional), and a PC keyboard (optional). The panel is installed via the 4 mounting holes in the backplane or the mounting arm system adapter (optional).

Do not use the Control Panel in areas of explosive hazard

The Control Panel must not be used where there is a risk of explosion.

Control Panel CP78XX connections

Connections

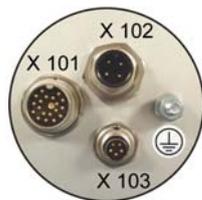

Pin assignment

*X 101
DVI interface*



SG 19POL M16 built-in-PCB-sold. IP67
BINDER (BINDER 09-0463-90-19 prod. 723 M16X0,75)

Pin	Signal	Pin	Signal
A	Shield C	L	RxC+
B	Rx2+	M	Shield C
C	Shield D2	N	Rx2-
D	Rx1-	O	Rx1+
E	Shield D1	P	Shield D0
F	Rx0-	R	Rx0+
G	GND	S	HPD
H	+5V DVI	T	Shield
I	DDC DAT	U	RxC-
K	DDC CLK		

*X 102
Power supply*



SG 4POL M12-built-in-PCB-sold. IP67
BINDER (BINDER 09-3431-90-04 prod. 763 M12X1)

Pin	Signal	Pin	Signal
1	+ 24V	3	GND
2	NC	4	NC

*X 103
USB input*



SG 5POL M9-built-in-PCB-sold. IP67
BINDER (BINDER 09-0415-30-05 prod. 712 M9X0,5)

Pin	Signal	Pin	Signal
1	V_Bus	4	GND
2	D -	5	Shield
3	D +		

Connector description

DVI-D

DVI (Digital Visual Interface)

The DVI connection (**X101**) is used for transferring the video signal from the Industrial PC to the Control Panel.
The purely digital part (DVI-D) is supported.

Power supply

Power supply

The power supply for the Control Panel is established via the 4-pole M12 socket (**X102**).

USB input

USB interfaces

The Control Panel is connected with the Industrial PC via the USB1.1 port (**X103**).
USB1.1 standard **with a maximum data rate of 1.5 or 12 Mbps** is supported.

Protective Earthing

Protective Earthing

The low resistance protective earthing connection is established via the ground bolt, which is located at the rear of the housing.



Cable Set for connecting the Control Panel

The power supply connector is provided with the Control Panel.

Cable Set	
C9900-K514	Kit for connecting CP78xx, containing 3 m DVI-cable and 3 m USB-cable
C9900-K516	Kit for connecting CP78xx, containing 5 m DVI-cable and 5 m USB-cable

Installation Instructions

Please also refer to chapter [General Notes](#).

Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, your Control Panel should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



Danger of damage to the unit!

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

Unpacking

Proceed as follows to unpack the unit:


1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

Assembly

Assembly dimensions

All dimensions are in mm.

CP78xx Control Panel

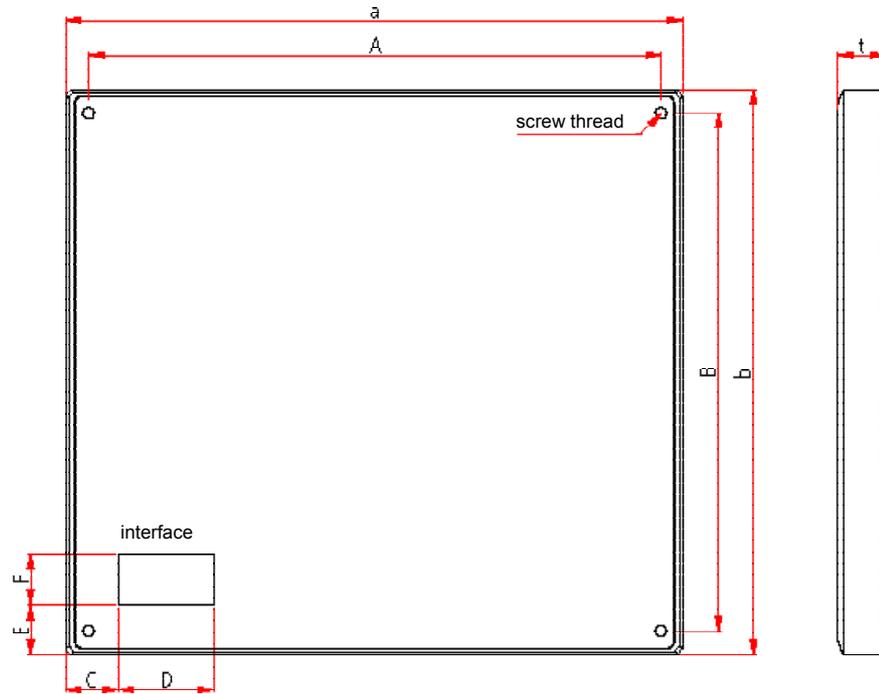

Dimensions		a	b	t	A	B	C	D	E	F
without keys										
CP7809	6,5" Display	267,9	173	38	241,9	149	160	50	50	50
CP7800	10" Display	353,8	308,3	27,5	327,6	280,7	35	50	16	50
CP7801	12" Display	353,8	326,3	27,5	327,6	303,7	33	50	12	50
CP7802	15" Display	426	395	28,5	399,8	367,4	35	50	18	50
CP7803	19" Display	504	455	45	474	430	30	50	20	50
CP7804	20" Display	524,6	426	50	494,6	401	222	50	200	50
function keys										
CP7819	6,5" Display	267,9	213	38	241,9	189	60	50	151	50
CP7810	10" Display	353,8	308,3	27,5	327,6	280,7	35	50	16	50
CP7811	12" Display	353,8	326,3	27,5	327,6	303,7	33	50	12	50
CP7812	15" Display	426	395	28,5	399,8	367,4	35	50	18	50
CP7813	19" Display	504	455	45	474	430	30	50	20	50
CP7814	20" Display	524,6	426	50	494,6	401	222	50	200	50
numerical										
CP7829	6,5" Display	336	213	38	310	189	30	50	15	50
CP7820	10" Display	406	308,3	27,5	374,8	280,7	86	50	14	50
CP7821-0000/1	12" Display	406	308,3	27,5	374,8	280,7	34	50	14	50
CP7821-0002	12" Display	439,8	308,3	27,5	408,6	280,7	66	50	14	50
CP7822	15" Display	515	370,2	28,5	483,8	342,6	36	50	30	50
CP7823	19" Display	563	426	45	533	401	30	50	20	50
CP7824	20" Display	605,6	426	50	575,6	395	30	50	20	50
alphanumeric										
CP7830	10" Display	403,2	368,2	27,5	372,15	340,6	56	50	69	50
CP7831-0000/1	12" Display	406	370,2	27,5	379,8	342,6	35	50	28	50
CP7831-0002	12" Display	426	370,2	27,5	399,8	342,6	44	50	74	50
CP7837	12" Display	426	370,2	27,5	399,8	342,6	44	50	74	50
CP7832	15" Display	483	410,2	28,5	458,8	387,6	32	50	78	50
CP7833	19" Display	504	535	45	474	510	30	50	100	50
CP7834	20" Display	524,6	506	50	494,6	481	30	50	20	50

Connecting the Control Panel



Danger



Warning

The Control Panel must never be connected or disconnected in an area that is subject to explosion hazard! Risk of explosion!

The mains plug of the Industrial PCs must be disconnected!

Please read the documentation for the external devices prior to connecting them.

During thunderstorms, plug connector must neither be inserted nor removed.

When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!

Connecting cables

The connections are located at the rear of the Control Panel and are documented in the [Product Description](#) section.

When connecting cables to the Control Panel, please adhere to the following order:

- Switch off the Industrial PC
- Disconnect the Industrial PC from the power supply
- Connect all cables at the Control Panel and at the devices to be connected
- Ensure that all screw connections between plug connectors and sockets are tight!
- Reconnect all devices to the power supply.

Protective Earthing

Protective Earthing

The low resistance protective earthing connection is established via the ground bolt, which is located at the rear of the housing.



Operating Instructions

Please also refer to chapter [General Notes](#).

Functional description

Switch on

The Control Panel does not have its own mains power switch. As soon as the power supply is switched on the control panel is activated.

Switching off

Control software, as typically applied in Control Panels, enables the assignment of different rights to all users. A user who is not entitled to shut down the software may not switch off the Control Panel as an attempt to shut it down when the software is running could result in the loss of software data on the Compact Flash memory card.

If the control panel is shut down while the software is writing a file onto the Compact Flash memory card, the file will be destroyed. Control software typically writes something to the CF memory card every few seconds, so that the probability of causing damage by switching off while the software is running is very high.

Operation

The Control Panel's membrane keypad may only be actuated by fingertips.



Note

Attempts to actuate it with other objects can easily result in the destruction of the device. Neither may the membrane keypad be operated with a touch screen pen.

The touch screen may only be actuated by finger tips or with the touch screen pen. The operator may wear gloves but there must be no hard particles such as metal shavings, glass splinters embedded in the glove.

Keyboard codes

Type-dependent number of keys

Depending on the precise type, the Control Panel can have fewer keys than those described here.

Operation



The cursor is the blinking character that marks the point at which the next character entered will be displayed. The cursor is also known as the insertion point. The cursor keys each move the cursor one place in the associated direction.



The Home key moves the cursor to the beginning of the line, while the End key moves it to the end of the line.



The *Pg Up* key scrolls one page back, the *Pg Dn* key scrolls one page forward.



The Tab key takes the cursor to the next input field, while Shift and Tab moves to the previous input field.



The mouse cursor can be moved over the screen with the aid of the touch screen or of the touch pad (optional). The keys correspond to the left and right hand keys of a Microsoft mouse.



The *Del* key deletes the character to the right of the cursor.



The *Ins* key causes characters to the right of the cursor to be overwritten. The overwrite mode is cancelled by pressing the key again.



Print-Screen prints a hard copy of a text screen on the printer.



The Pause key stops the computer until another key is pressed (only under MS-DOS).



Your input is confirmed with the Enter key.



Backspace deletes the character to the left of the cursor.



If the Shift key is pressed at the same time as another key, then instead of the numbers you obtain the character printed above the number, and you obtain upper case letters instead of lower case letters.



Pressing the *Caps Lock* key once activates and locks the *Shift* key. Pressing the *Shift* key cancels this function.



Rather like the effect of the *Shift* key, *Ctrl* and *Alt* also change the meaning of another key that is pressed at the same time.



This key brings up the Start menu of the operating system in use (Windows 95, 98, ME, NT, 2000, XP).



Pressing this key opens the property sheet of the active (or marked) object.




The *Esc* key has the effect of closing dialog windows and of interrupting some of the computer's working operations.



All other keys bring the character printed on them onto the display at the position of the cursor.



The meaning of the function keys, *F1* to *F10*, is determined by the software and is displayed at the bottom edge of the display.

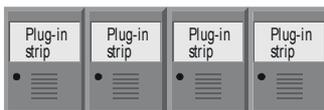

The function of the special keys above the display is also determined by the software. The function is displayed at the top edge of the display. The special keys each have an orange LED controlled by the software.

Servicing and maintenance

Please also refer to the section [General Notes](#).

Cleaning the Control Panel

First switch the Industrial PC off

Switch off the Industrial PC and all connected devices in order to prevent inadvertent operation of keys.

The front of the Control Panel can be cleaned with a soft, damp cleaning cloth. Do not use any aggressive cleaning materials, thinners, scouring material or hard objects that could cause scratches.

Servicing

The Control Panel is maintenance-free.

Emergency procedures

In case of fire, the control panel should be extinguished with powder or nitrogen.

Shutting down

Disposal

Dismantle the Control Panel

The device must be fully dismantled in order to dispose of it. The housing can be sent for metal recycling.

Observe national electronics scrap regulations

Electronic parts such as lamps and circuit boards must be disposed of in accordance with national electronics scrap regulations.

Troubleshooting

Please also refer to the section [General Notes](#).



Note

Pixel errors in the TFT display are production-caused and represent no complaint-reason!

Fault correction

Fault	Cause	Procedures
The control panel shows no function when the Industrial PC has been started	No power supply to the Industrial PC Cable not connected	Check power supply cable 1. Correctly connect cable 2. Call Beckhoff Service
The Industrial PC does not boot fully	Floppy disk in drive Hard disk damaged (e.g. by switching off while software running) Setup settings are incorrect Other cause	Remove floppy disk and press any key 1. Boot with boot diskette 2. Start SCANDISK Check the setup settings Call Beckhoff Service
Computer boots, software starts, but control does not operate correctly	The cause of the error is in the software or in parts of the equipment outside the control panel	Call the manufacturer of the machine or the software
Error during floppy disk access	Faulty floppy disk Faulty disk drive	Check the disk in another disk drive Call Beckhoff Service
The control panel only exhibits partial function, or only some of the time - e.g., no or dark picture, although disk drive operates when switched on	Defective components in control panel	Call Beckhoff Service

Service and Support

Beckhoff and their partners around the world offer comprehensive service and support, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further [documentation](#) for Beckhoff components there.

Beckhoff headquarters

Beckhoff Automation GmbH & Co. KG
Huelshorstweg 20
D-33415 Verl
Germany

Phone: +49(0)5246/963-0
Fax: +49(0)5246/963-198
e-mail: info@beckhoff.com

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- world-wide support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49(0)5246/963-157
Fax: +49(0)5246/963-9157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460
Fax: +49(0)5246/963-479
e-mail: service@beckhoff.com

Quote the project number

If servicing is required, please quote the **project number** of your Industrial PC.

Appendix

Technical data

Dimensions

Dimensions (W x H x D): see section [Assembly dimensions](#)

Operation in areas that are subject to explosion hazard

The Control Panel must not be used where there is a risk of explosion.

Environmental conditions

The following conditions must be observed during operation:

Ambient temperature: 0 to 55°C

Atmospheric humidity: Maximum 95%, non-condensing

Shock resistance

Sinusoidal vibration:
(EN 60068-2-6)

10 to 58 Hz: 0.035 mm

58 to 500 Hz: 0.5 G (~ 5 m/s²)

Impact:
(EN 60068-2-27)

5 G (~ 50 m/s²), duration: 30 ms

Protection class

Control Panel: IP65

Connector plug: IP65

Power supply

Supply voltage: 24 V_{DC} (20.4 – 28.8 V_{DC})

Power consumption: approx. 10 W with 6.5" display
approx. 14 W with 12" display
approx. 25 W with 15" display
approx. 32 W with 19" display

EMC compatibility

Resistance to interference: according to EN 61000-6-2

Emission of interference: according to EN 61000-6-4

Transport and storage

The same values for atmospheric humidity and shock resistance are to be observed during transport and storage as in operation. Suitable packaging of the Control Panel can improve the resistance to impact during transport. The ambient temperature during storage and transport must be between -20°C and +65°C.



Note

Pixel errors in the TFT display are production-caused and represent no complaint-reason!

Approvals

FCC: Federal Communications Commission Radio Frequency Interference Statement

FCC Approval for USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC: Canadian Notice

FCC Approval for Canada

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.