

Operating Instructions | EN

EJ19xx and EJ29xx

TwinSAFE EJ Modules with digital fail-safe inputs and outputs

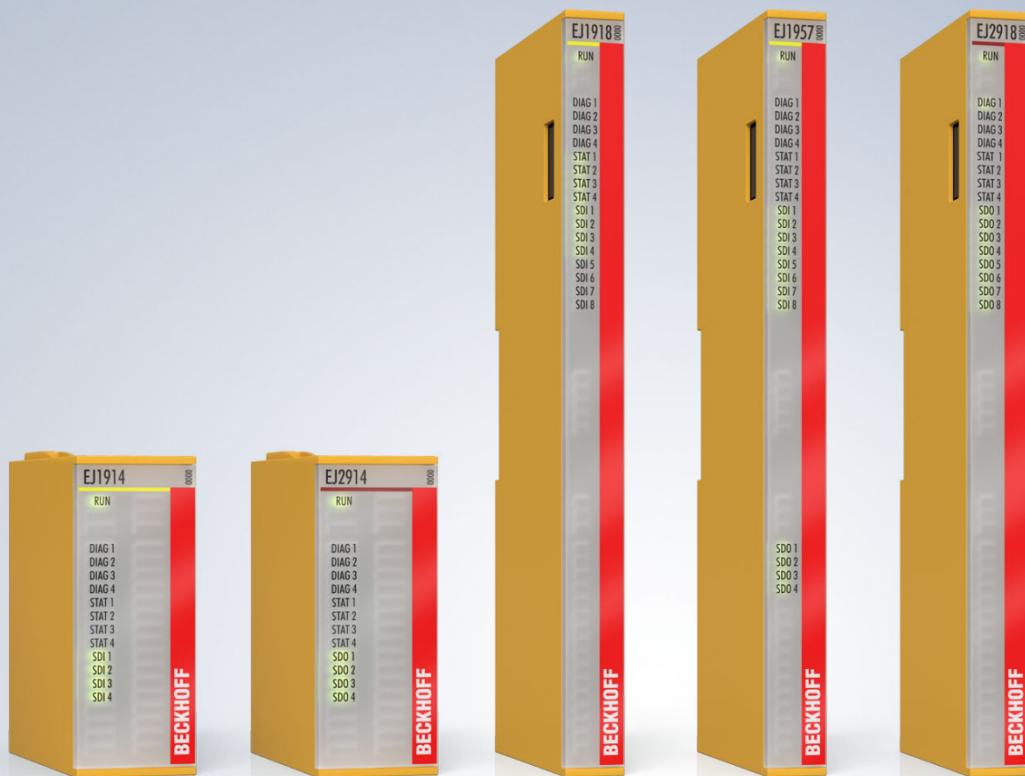


Table of contents

1	Notes on the documentation.....	5
1.1	Disclaimer.....	5
1.1.1	Trademarks.....	5
1.1.2	Patents.....	5
1.1.3	Limitation of liability.....	6
1.1.4	Copyright.....	6
1.2	Documentation issue status.....	7
1.3	References.....	8
1.4	Staff qualification.....	8
1.5	Safety and instruction.....	9
1.5.1	Explanation of symbols.....	9
1.6	Beckhoff Support and Service.....	10
2	For your safety.....	11
2.1	Duty of care.....	11
2.2	Safety image signs.....	12
2.3	General safety instructions.....	13
2.3.1	Before operation.....	13
2.3.2	In operation.....	13
2.3.3	After operation.....	14
3	System description TwinSAFE.....	15
3.1	Extension of the Beckhoff I/O system with safety functions.....	15
3.2	Safety concept.....	15
3.3	EtherCAT plug-in module system (EJ).....	16
4	Intended use.....	17
5	General operation / function.....	18
5.1	Environmental conditions.....	18
5.1.1	EJ backplane.....	18
5.2	Installation.....	19
5.2.1	Safety instructions.....	19
5.2.2	Transport / storage.....	19
5.2.3	Mechanical installation.....	19
5.2.4	Electrical installation.....	21
5.3	Digital input.....	22
5.3.1	Parameterization.....	22
5.3.2	Characteristic curve of the inputs.....	23
5.4	Digital output.....	23
5.4.1	Parameterization.....	24
5.4.2	Actuators.....	25
5.5	General technical data.....	26
5.6	Dimensions.....	28
5.7	Status LEDs.....	29
5.8	Diagnostic LEDs.....	29
5.8.1	Flashing codes.....	29

5.8.2	Flash code display	30
6	EJ1914	31
6.1	Overview	31
6.1.1	Version history	31
6.2	Inserting the EJ module	32
6.3	Specific technical data	32
6.4	Safety parameters	33
7	EJ1918	34
7.1	Overview	34
7.1.1	Version history	34
7.2	Inserting the EJ module	35
7.3	Specific technical data	35
7.4	Safety parameters	36
8	EJ1957	37
8.1	Overview	37
8.1.1	Version history	37
8.2	Inserting the EJ module	37
8.3	Specific technical data	38
8.4	Safety parameters	38
9	EJ2914	40
9.1	Overview	40
9.1.1	Version history	40
9.2	Inserting the EJ module	41
9.3	Specific technical data	41
9.4	Safety parameters	42
10	EJ2918	43
10.1	Overview	43
10.1.1	Version history	43
10.2	Inserting the EJ module	44
10.3	Specific technical data	44
10.4	Safety parameters	45
11	Service life	46
12	Maintenance and cleaning	47
13	Decommissioning	48
13.1	Disposal	48
13.1.1	Returning to the vendor	48
14	Appendix	49
14.1	Volatility	49
14.2	Focus of certificates	50
14.3	Certificate	51

1 Notes on the documentation

1.1 Disclaimer

Beckhoff products are subject to continuous further development. We reserve the right to revise the operating instructions at any time and without prior announcement. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in these operating instructions.

In these operating instructions we define all permissible use cases whose properties and operating conditions we can guarantee. The use cases we define are fully tested and certified. Use cases beyond this, which are not described in these operating instructions, require the approval of Beckhoff Automation GmbH & Co KG.

1.1.1 Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered and licensed trademarks of Beckhoff Automation GmbH.

The use of other brand names or designations by third parties may lead to an infringement of the rights of the owners of the corresponding designations.

1.1.2 Patents

The EtherCAT technology is protected by patent rights through the following registrations and patents with corresponding applications and registrations in various other countries:

- EP1590927
- EP1789857
- EP1456722
- EP2137893
- DE102015105702



EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH.



Safety over EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH.

1.1.3 Limitation of liability

All components in this product as described in the operating instructions are delivered in a specific configuration of hardware and software, depending on the application regulations. Modifications and changes to the hardware and/or software configuration that go beyond the documented options are prohibited and nullify the liability of Beckhoff Automation GmbH & Co. KG.

The following is excluded from the liability:

- Failure to observe these operating instructions
- Improper use
- Use of untrained personnel
- Use of unauthorized spare parts

1.1.4 Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The distribution and reproduction of this document as well as the use and communication of its contents without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

1.2 Documentation issue status

Version	Comment
2.0.0	<ul style="list-style-type: none"> • Foreword changed to Notes on the documentation [▶ 5] and For your safety [▶ 11] • Service life [▶ 46] moved • Maintenance and cleaning [▶ 47] and Decommissioning [▶ 48] added • Appendix adapted and extended
1.4.0	<ul style="list-style-type: none"> • In chapter General technical data [▶ 26] link to download page of certificates added • Version histories added • Updated software versions added • The chapters "Inserting an EJ module" revised • Beckhoff Support and Service [▶ 10] updated
1.3.0	<ul style="list-style-type: none"> • Maximum permissible operating temperature changed • Added warning in chapter General technical data [▶ 26] • New layout
1.2.0	<ul style="list-style-type: none"> • Description temperature measurement updated
1.1.0	<ul style="list-style-type: none"> • Description of the test pulses of the outputs updated
1.0.0	<ul style="list-style-type: none"> • Certificate added • Technical data updated • Description <i>Digital input</i> updated
0.0.2	<ul style="list-style-type: none"> • LED description adapted
0.0.1	<ul style="list-style-type: none"> • First preliminary version

Currentness

Please check whether you are using the current and valid version of this document. The current version can be downloaded from the Beckhoff homepage at <http://www.beckhoff.de/twinsafe>. In case of doubt, please contact Technical Support (see [Beckhoff Support and Service \[▶ 10\]](#)).

Origin of the document

The original documentation is written in German. All other languages are derived from the German original.

Product features

Only the product properties specified in the current operating instructions are valid. Further information given on the product pages of the Beckhoff homepage, in emails or in other publications is not authoritative.

1.3 References

No	Version	Title / description
[1]	1.3.0 or newer	Design guide for EJ backplane for TwinSAFE modules The design guide contains specifications for the development of an EJ backplane when EJ modules are to be used
[2]	1.5.1 or newer	Operating instructions for EJ6910 TwinSAFE Logic module The document contains a description of the logic functions of the EJ6910 and their programming
[3]	3.1.0 or newer	Documentation TwinSAFE-Logic-FB The document describes the safety function blocks that are available in the EJ6910 and form the safety application.
[4]	4.7 or newer	EJxxxx EtherCAT plug-in modules - design guide The design guide contains general specifications for the development of an EJ backplane.

1.4 Staff qualification

These operating instructions are intended exclusively for trained specialists in control technology and automation with the relevant knowledge.

The trained specialist personnel must ensure that the applications and use of the described product meet all safety requirements. This includes all applicable and valid laws, regulations, provisions and standards.

Trained specialists

Trained specialists have extensive technical knowledge from studies, apprenticeships or technical training. Understanding of control technology and automation is available. Trained specialists can:

- Independently identify, avoid and eliminate sources of hazard.
- Apply relevant standards and directives.
- Implement specifications from accident prevention regulations.
- Evaluate, prepare and set up the workplaces.
- Evaluate, optimize and execute work independently.

1.5 Safety and instruction

Read the contents that refer to the activities you have to perform with the product. Always read the chapter [For your safety \[▶ 11\]](#) in the operating instructions.

Observe the warnings in the chapters so that you can handle and work with the product as intended and safely.

1.5.1 Explanation of symbols

Various symbols are used for a clear arrangement:

1. The numbering indicates an action that should be taken.
 - The bullet point indicates an enumeration.
- [...] The square brackets indicate cross-references to other text passages in the document.
- [1] The number in square brackets indicates the numbering of a referenced document.

1.5.1.1 Pictograms

In order to make it easier for you to find text passages, pictograms and signal words are used in warning notices:

DANGER

Failure to observe will result in serious or fatal injuries.

WARNING

Failure to observe may result in serious or fatal injuries.

CAUTION

Failure to observe may result in minor or moderate injuries.

NOTE

Notes

Notes are used for important information on the product. The possible consequences of failure to observe these include:

- Malfunctions of the product
- Damage to the product
- Damage to the environment

Information

This sign indicates information, tips and notes for dealing with the product or the software.

1.6 Beckhoff Support and Service

Support

Beckhoff Support offers technical advice on the use of individual Beckhoff products and system planning. The employees support you in the programming and commissioning of sophisticated automation systems.

Hotline: +49 5246/963-157
E-mail: support@beckhoff.com
Web: www.beckhoff.com/support

Training

Training in Germany takes place in our training center at the Beckhoff headquarters in Verl, at subsidiaries or, by arrangement, at the customer's premises.

Hotline: +49 5246/963-5000
E-mail: training@beckhoff.com
Web: www.beckhoff.com/training

Service

The Beckhoff Service Center supports you with after-sales services such as on-site service, repair service or spare parts service.

Hotline: +49 5246/963-460
E-mail: service@beckhoff.com
Web: www.beckhoff.com/service

Download area

In the download area you can obtain product information, software updates, the TwinCAT automation software, documentation and much more.

Web: www.beckhoff.com/download

Headquarters

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany

Phone: +49 5246/963-0
E-mail: info@beckhoff.com
Web: www.beckhoff.com

For the addresses of our worldwide locations, please visit our website at [Global Presence](#).

2 For your safety

Read this chapter containing general safety information. In addition, always observe the safety instructions and warnings in these operating instructions for your own safety, the safety of other persons and the safety of the product.

When working with control and automation products, many dangers can result from careless or incorrect use. Work particularly thoroughly, not under time pressure and responsibly towards other people.

2.1 Duty of care



Read entire documentation for TwinSAFE component

- TwinSAFE application manual
- EL6910 TwinSAFE logic terminal operating manual
- TwinSAFE Logic FB documentation manual

The operator must comply with all the requirements and notes specified in these operating instructions in order to fulfill his duty of care. This includes in particular that you

- comply with the provisions defined in the chapter [Limitation of liability](#) [▶ 6].
- only operate the TwinSAFE component when it is in perfect working order.
- provide the operating instructions in a legible condition and complete at the place of use of the TwinSAFE component.
- do not remove the safety markings attached to the TwinSAFE component and maintain their legibility.





No disposal in domestic waste


Products marked with a crossed-out waste bin must not be disposed of with domestic waste. The device is considered waste electrical and electronic equipment when it is disposed of. Observe the national regulations for the disposal of waste electrical and electronic equipment.

2.2 Safety image signs

On Beckhoff products you will find attached or lasered safety pictograms, which vary depending on the product. They serve to ensure safety for people and to prevent damage to the products. Safety pictograms must not be removed and must be legible for the user.

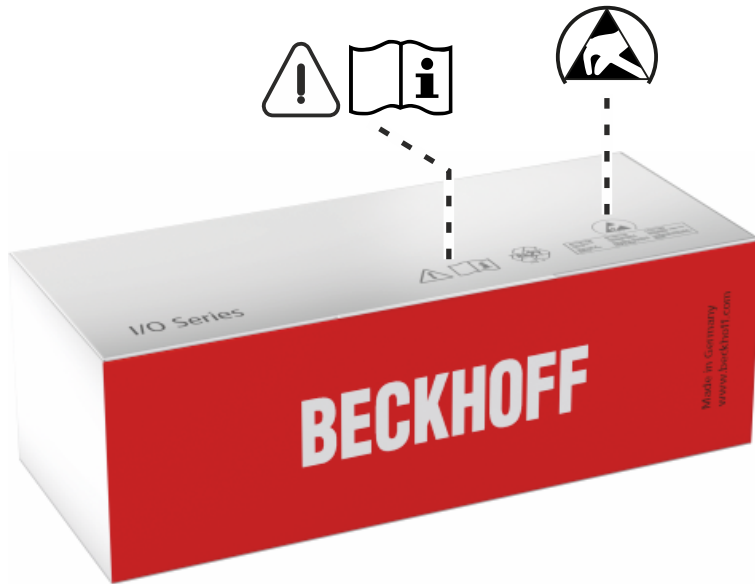

-  **Read and observe the operating instructions**
Commissioning is only permitted if the operating instructions have been read and understood beforehand. This applies in particular to the safety instructions and warnings.

-  **Electrostatic sensitive components**
Work with and on the TwinSAFE component is only permitted in protected workplaces.

2.3 General safety instructions

2.3.1 Before operation

Use in machines according to the Machinery Directive

Only use the TwinSAFE component in machines that comply with the Machinery Directive. This is how you ensure safe operation.

Ensure traceability

Ensure the traceability of the TwinSAFE component via the serial number.

Use SELV/PELV power supply

Use a SELV/PELV power supply unit with an output-side voltage limit of $U_{\max} = 36 V_{\text{DC}}$ to supply the TwinSAFE component with $24 V_{\text{DC}}$.

Failure to observe this will endanger the safety function of the product. Depending on the machine, death and danger to life, serious physical injury and damage to the machine may result.

Carry out commissioning test

Before commissioning, wiring faults to the sensors must be excluded. Before commissioning, carry out a commissioning test. After a successful commissioning test, you can use the TwinSAFE component for the intended safety-related task.

In case of wiring errors, the safety function of the product is at risk. Depending on the machine, death and danger to life, serious bodily injury and damage to the machine may result.

Use permissible engineering tools and procedures

The TÜV SÜD certificate applies to the TwinSAFE component, the function blocks available in it, the documentation and the engineering tool. Approved engineering tools are *TwinCAT 3.1*, the *TwinSAFE Loader* and *CODESYS Safety for EtherCAT Safety Module*.

Procedures or engineering tools that deviate from this are not covered by the certificate. This is especially true for externally generated xml files for the TwinSAFE import or externally generated automatic project creation procedures.

2.3.2 In operation

Interference due to emitted interference

Do not operate the following devices in the vicinity of the TwinSAFE component: for example, radio telephones, radios, transmitters or high-frequency systems.

TwinSAFE components comply with the requirements of the applicable electromagnetic compatibility standards with regard to interference emission and immunity. If you exceed the limits for emitted interference specified in the standards, the function of the TwinSAFE component may be impaired.

2.3.3 After operation

De-energize and switch off components before working on them

Check all safety-relevant equipment for functionality before working on the TwinSAFE component. Secure the working environment. Secure the machine or plant against being inadvertently started up. Observe the chapter [Decommissioning](#) [[▶ 48](#)].

3 System description TwinSAFE

3.1 Extension of the Beckhoff I/O system with safety functions

The TwinSAFE products from Beckhoff enable convenient expansion of the Beckhoff I/O system with safety components, and integration of all the cabling for the safety circuit within the existing fieldbus cable. Safe signals can be mixed with standard signals as required. The transfer of safety-related TwinSAFE telegrams is handled by the standard controller. Maintenance is simplified significantly thanks to faster diagnosis and simple replacement of components.

The following basic functionalities are included in the TwinSAFE components: digital inputs (e.g. EL19xx, EP1908), digital outputs (e.g. EL29xx), drive components (e.g. AX5805) and logic units (e.g. EL6900, EL6910). For a large number of applications, the complete safety sensor and actuator technology can be wired on these components. The required logical link of the inputs and the outputs is handled by the EL69xx. In addition to Boolean operations, the EL6910 now also enables analog operations.

3.2 Safety concept

TwinSAFE: Safety and I/O technology in one system

- Extension of the familiar Beckhoff EJ system with TwinSAFE components
- Safe and non-safe EJ components can be combined as required
- Logical link of the I/Os in the EJ69xx TwinSAFE logic terminal
- Suitable for applications up to SIL 3 according to EN 61508:2010 and Cat 4, PL e according to EN ISO 13849-1:2015
- Safety-relevant networking of machines via bus systems
- In the event of an error, all TwinSAFE components always switch to the wattless and therefore safe state
- No safety requirements for the higher-level standard TwinCAT system

Safety over EtherCAT protocol (FSoE)

- Transfer of safety-relevant data via any media (“genuine black channel”)
- TwinSAFE communication via fieldbus systems such as EtherCAT, Lightbus, PROFIBUS, PROFINET or Ethernet
- IEC 61508:2010 SIL 3 compliant
- FSoE is IEC standard (IEC 61784-3-12) and ETG standard (ETG.5100)

Fail-safe principle (fail stop)

The basic rule for a safety system such as TwinSAFE is that failure of a part, a system component or the overall system must never lead to a dangerous condition. The safe state is always the switched off and wattless state.

CAUTION

Safe state

For all TwinSAFE components the safe state is always the switched-off, wattless state.

3.3 EtherCAT plug-in module system (EJ)

Similar to the EtherCAT terminal system, a module strand consists of a Bus Coupler and any desired I/O modules. In contrast to the EtherCAT Terminals, however, the EtherCAT plug-in modules have no spring-loaded contacts, since the wiring level is outsourced: communication, signal distribution and the supply of power to the modules takes place via plug connectors on the back side of the modules and the conductive tracks of the signal distribution board.

The EtherCAT plug-in modules and the plug level for sensors and actuators can be placed flexibly on the signal distribution board. Signal distribution boards can be user-developed or provided as custom solutions by Beckhoff Automation GmbH & Co. KG.

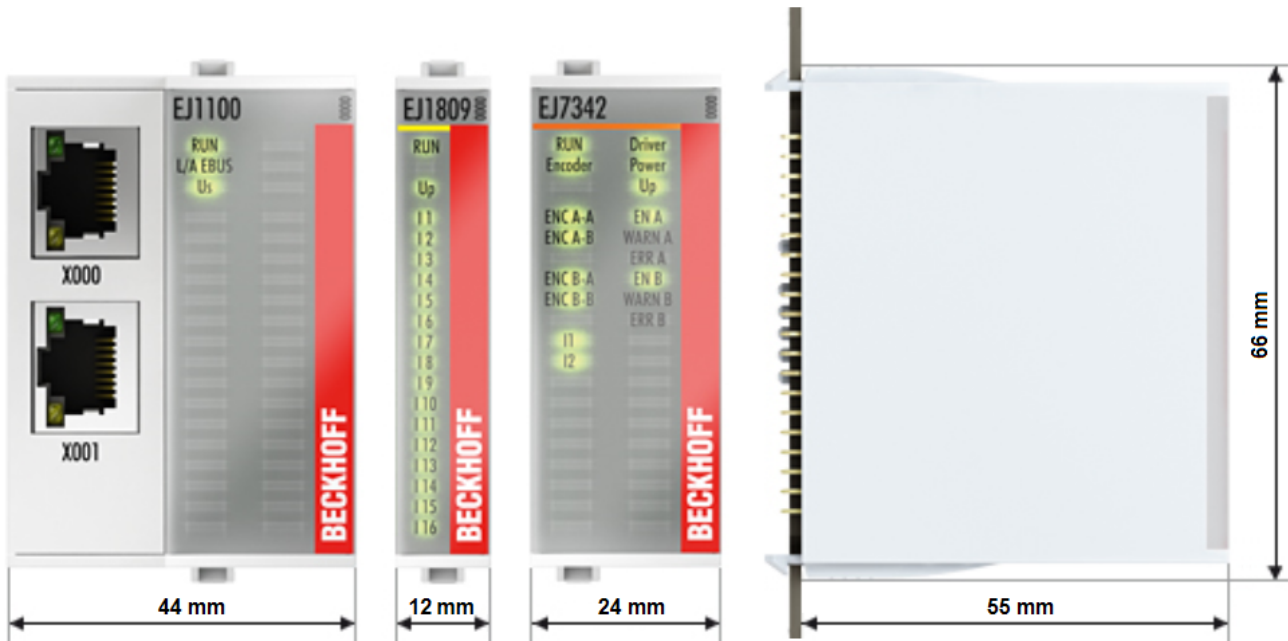


Fig. 1: EtherCAT plug-in module system (EJ)

4 Intended use

WARNING

Caution - Risk of injury!

TwinSAFE EJ modules may only be used for the purposes described below!

The TwinSAFE EJ modules expand the application range of the Beckhoff EtherCAT system by functions that enable it to be used in the field of machine safety as well. The TwinSAFE EJ modules are designed for machine safety functions and directly associated to industrial automation tasks. It is therefore approved only for applications with a defined fail-safe state. This safe state is the wattless state.

The TwinSAFE EJ modules are suitable for operation on an EJ distribution board.

WARNING

System limits

The TÜV-SÜD certificate applies to the TwinSAFE EJ modules, the function blocks available in it, the documentation and the engineering tool. Approved engineering tools are *TwinCAT 3.1*, *TwinSAFE Loader* and *CODESYS Safety for EtherCAT Safety Module*. Any deviations from these procedures or tools, particularly externally generated xml files for TwinSAFE import or externally generated automatic project creation procedures, are not covered by the certificate.

WARNING

Power supply

An SELV/PELV power supply unit with a voltage limit of $U_{\max} = 36 \text{ V}_{\text{DC}}$ on the output side must be used to supply power for the TwinSAFE EJ modules with 24 V_{DC} . Failure to observe this can result in a loss of safety.

WARNING

Commissioning test

Before the TwinSAFE EJ modules can be used for the safety task, the user must carry out a commissioning test so that sensor and actuator wiring errors can be ruled out.

CAUTION

Note the Machinery Directive

The TwinSAFE EJ modules may only be used in machines according to the machinery directive.

CAUTION

Ensure traceability

The buyer has to ensure the traceability of the device via the serial number.

5 General operation / function

5.1 Environmental conditions

Please ensure that the TwinSAFE components are only transported, stored and operated under the specified conditions (see technical data)!

WARNING

Risk of injury!

The TwinSAFE components must not be used under the following operating conditions.

- under the influence of ionizing radiation (that exceeds the level of the natural environmental radiation)
- in corrosive environments
- in an environment that leads to unacceptable soiling of the TwinSAFE component

NOTE

Electromagnetic compatibility

The TwinSAFE components comply with the current standards on electromagnetic compatibility with regard to spurious radiation and immunity to interference in particular.

However, in cases where devices such as mobile phones, radio equipment, transmitters or high-frequency systems that exceed the interference emissions limits specified in the standards are operated near TwinSAFE components, the function of the TwinSAFE components may be impaired.

5.1.1 EJ backplane

CAUTION

EJ backplane

Make sure that the TwinSAFE EJ modules are used only on an EJ backplane that has been developed and manufactured in accordance with the *Design guide for EJ backplanes for TwinSAFE modules* (see [References](#) [▶ 8]).

Pin-out and coding of the TwinSAFE EJ modules

The pin-out and description of the coding via the coding pins of the TwinSAFE EJ modules are listed in the document *Design guide for EJ backplanes for TwinSAFE modules* (see [References](#) [▶ 8]).

5.2 Installation

5.2.1 Safety instructions

Before installing and commissioning the TwinSAFE components please read the safety instructions in the foreword of this documentation.

5.2.2 Transport / storage

Use the original packaging in which the components were delivered for transporting and storing the TwinSAFE components.

CAUTION

Note the specified environmental conditions

Please ensure that the digital TwinSAFE components are only transported and stored under the specified environmental conditions (see technical data).

5.2.3 Mechanical installation

WARNING

Risk of injury!

Bring the bus system into a safe, de-energized state before starting installation, disassembly or wiring of the devices!

5.2.3.1 Control cabinet / terminal box

The TwinSAFE EJ modules must be installed in a control cabinet or terminal box with IP54 protection class according to IEC 60529 as a minimum.

5.2.3.2 Installation position and minimum distances

For the prescribed installation position the backplane is mounted horizontally (EJ plug connector vertical), and the connection surfaces of the EJ modules face forward (see diagram below). The EJ modules are ventilated from below, which enables optimum cooling of the electronics through convection. The direction indication “down” corresponds to the direction of positive acceleration due to gravity.

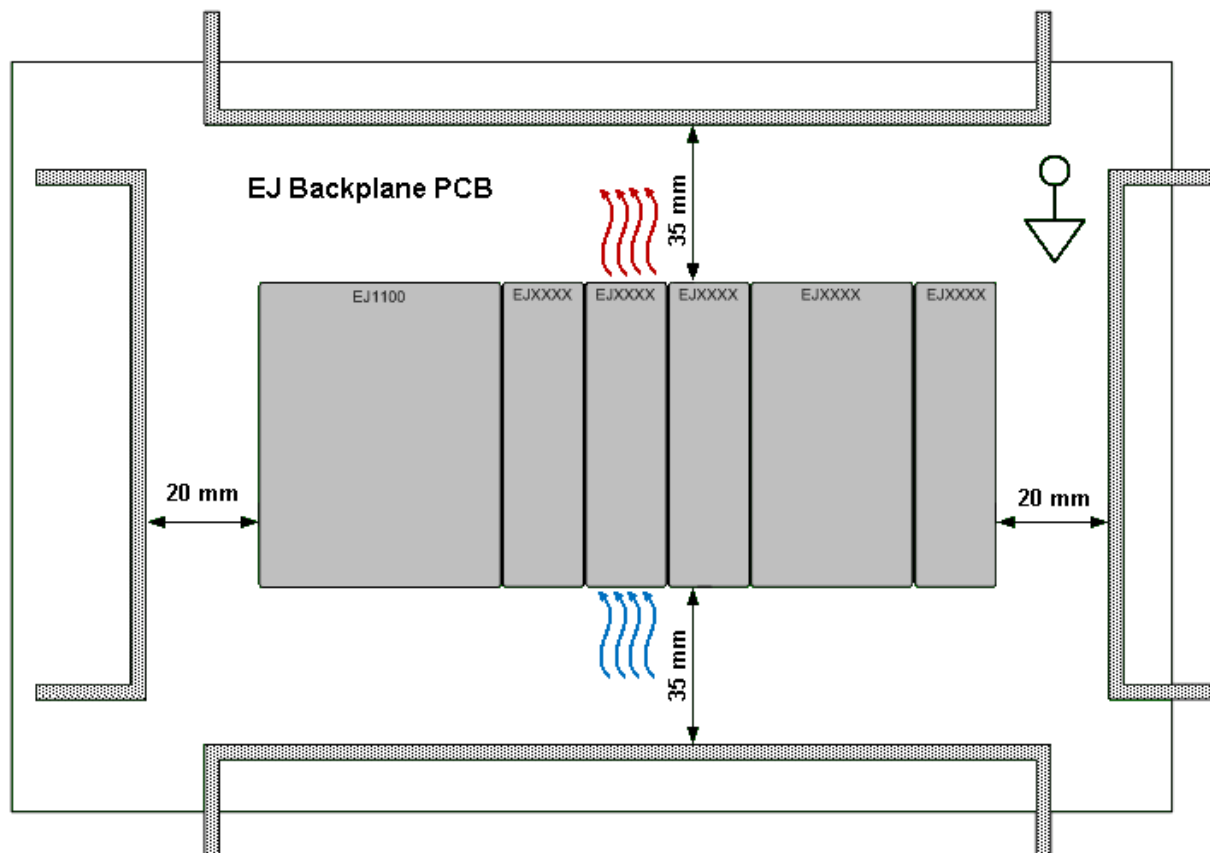


Fig. 2: Installation position and minimum distances

In order to ensure optimum convection cooling, the distances to neighboring devices and to control cabinet walls must not be smaller than those shown in the diagram.

5.2.3.3 Temperature measurement

The temperature measurement consists of an EJ1100 EtherCAT coupler, to which EJ modules are attached, based on the typical distribution of digital and analog signal types at a machine. On the EJ6910 a safety project is active, which reads safe inputs and enables safe outputs during the measurement.

● External heat sources / radiant heat / impaired convection

i The maximum permissible ambient temperature of 45 °C was checked with the example configuration described above. Impaired convection; an unfavorable location near heat sources or an unfavorable configuration of the EtherCAT EJ modules may result in overheating of the modules.

The key parameter is always the maximum permitted internally measured temperature of 110 °C, above which the TwinSAFE components switch to safe state and report an error. The internal temperature can be read from the TwinSAFE components via CoE.

5.2.4 Electrical installation

WARNING

Risk of injury!

Bring the bus system into a safe, de-energized state before starting installation, disassembly or wiring of the devices!

5.2.4.1 Connections between EJ modules

The electrical connections between the EJ Bus Coupler and EJ modules are realized automatically by plugging the components into the EJ backplane.

Note the maximum E-bus current!

i Observe the maximum current that your EJ Bus Coupler can supply to the E-bus! Use the EJ9400 power supply module if the current consumption of your modules exceeds the maximum current your EJ Bus Coupler can provide.

5.2.4.2 Overvoltage protection

If protection against overvoltage is necessary in your plant, provide a surge filter for the voltage supply to the Bus Terminal blocks and the TwinSAFE EJ modules.

5.3 Digital input

5.3.1 Parameterization

Two indices are provided under the safety parameters for the parameterization of the inputs. These are the general settings for the test pulse outputs and the channel-specific settings for the input filter. In the TwinSAFE EJ modules an input module consists of two channels.

Index	Name	Value	Unit
▲ 8000:0	FSIN Module 1 Settings Common	>4<	
8000:01	ModuloDiagTestPulse	0x00 (0)	
8000:02	MultiplierDiagTestPulse	0x01 (1)	
8000:04	Diag TestPulse active	TRUE (1)	
▲ 8001:0	FSIN Module 1 Settings Channel	>5<	
8001:01	Channel 1.InputFilterTime	0x0019 (25)	x 10 ⁻⁴ second
8001:02	Channel 1.DiagTestPulseFilterTime	0x0002 (2)	x 10 ⁻⁴ second
8001:04	Channel 2.InputFilterTime	0x0019 (25)	x 10 ⁻⁴ second
8001:05	Channel 2.DiagTestPulseFilterTime	0x0002 (2)	x 10 ⁻⁴ second
▷ 8010:0	FSIN Module 2 Settings Common	>4<	
▷ 8011:0	FSIN Module 2 Settings Channel	>5<	

Fig. 3: Digital input - safety parameters

Index	Name	Default value / unit	Description
80x0:01	ModuloDiagTestPulse	0x00 / integer	Modulo value for the frequency of the generation of a test pulse. 0 -> every time 1 -> every second time ...
80x0:02	MultiplierDiagTestPulse	0x01 / integer	Length of the test pulse in multiples of 2 ms
80x0:04	Diag TestPulse active	TRUE / Boolean	Activation of test pulses for the corresponding input module
80x1:01	Channel 1.InputFilterTime	0x0019 / 0.1 ms	Input filter of safe input 1. Following this time the internal input signal changes to the applied signal state.
80x1:02	Channel 1.DiagTestPulseFilterTime	0x0002 / 0.1 ms	Input filter for the test pulse signal
80x1:04	Channel 2.InputFilterTime	0x0019 / 0.1 ms	Input filter of safe input 2. Following this time the internal input signal changes to the applied signal state.
80x1:05	Channel 2.DiagTestPulseFilterTime	0x0002 / 0.1 ms	Input filter for the test pulse signal

The index is incremented by 0x10 for each input module in accordance with the number of inputs.

5.3.2 Characteristic curve of the inputs

The characteristic curve of the inputs is similar to type 3 according to EN 61131-2.

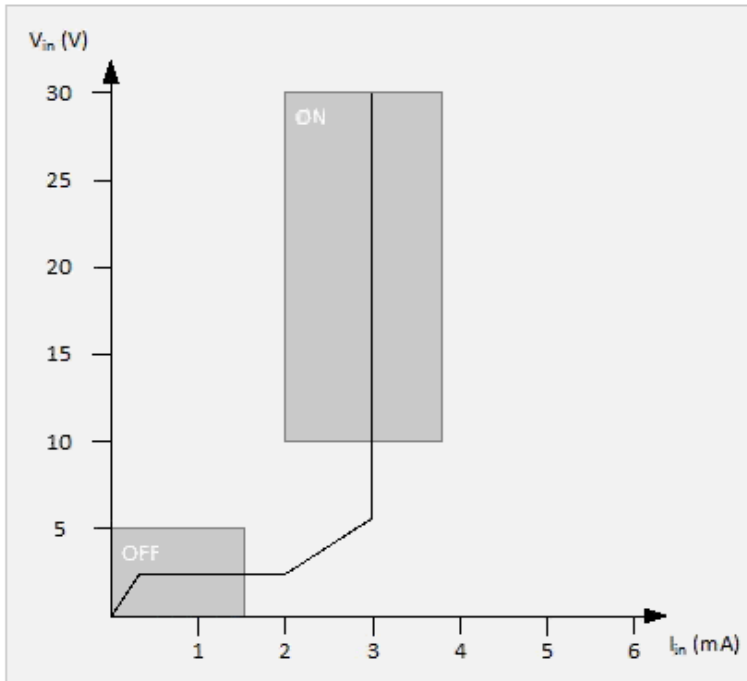


Fig. 4: Characteristic curve of the inputs

5.4 Digital output

NOTE

protected wiring

If the wiring of the outputs or the connected actuators leaves the control cabinet, the user must ensure that the wiring is protected.

⚠ WARNING

Active loads

The use of active loads (with their own power supply) is not permissible unless the manufacturer of the load ensures the non-reactivity of the power supply to the control signal.

⚠ DANGER

Clocked signals inside a sheathed cable

If clocked signals from different output modules are used inside a single sheathed cable, then a module error such as a cross-circuit or external power supply must lead to the switch-off of all of these modules. This switch-off must be executed by the user program.

5.4.1 Parameterization

The outputs are parameterized via the *Safety Parameters* tab of the alias devices. A TwinSAFE EJ output module consists of four channels.

Index	Name	Value	Unit
8000:0	FSOUT Module 1 Settings Common	>4<	
8000:01	ModuloDiagTestPulse	0x00 (0)	
8000:02	MultiplierDiagTestPulse	0x02 (2)	
8000:03	Standard Outputs active	FALSE (0)	
8000:04	Diag TestPulse active	TRUE (1)	
8010:0	FSOUT Module 2 Settings Common	>4<	

Edit

Fig. 5: Digital output –safety parameters

Index	Name	Default value / unit	Description
80x0:01	ModuloDiagTestPulse	0x00 / integer	Modulo value for the frequency of the generation of a test pulse. 0 -> every time 1 -> every second time ...
80x0:02	MultiplierDiagTestPulse	0x02 / integer	Length of the test pulse in multiples of 400 μ s
80x0:03	Standard outputs active	FALSE / Boolean	Activation of the logical AND operator of the safe and standard outputs of the module
80x0:04	Diag TestPulse active	TRUE / Boolean	Activation of test pulses for the corresponding output module

The index is incremented by 0x10 for each output module in accordance with the number of outputs.

Testpulse length of the output signals

The setting via the parameter `MultiplierDiagTestPulse` controls the test pulses of the individual channels. In addition, the second internal switch off path is also tested. This leads to a prolongation of the length of the test pulses by approx. 700 μ s.

Together with the setting `MultiplierDiagTestPulse = 2` results in a minimum test pulse length of 1.5 ms.

The parameter `MultiplierDiagTestPulse` can not be reduced to 1 since a reliable readback of the test pulse at the output is not possible.

● Testpulse length of the output



The minimum useful setting of `MultiplierDiagTestPulse = 2` results in a total test pulse length of approx. 1.5 ms.

5.4.2 Actuators

The outputs have a maximum permissible output current of 0.5 A. This must not be exceeded. The simultaneity factor of the outputs of an EJ module is 100%.

Inductive, resistive and capacitive loads are supported.

5.5 General technical data

The current certificates of all TwinSAFE products with the underlying standards and directives can be found at <https://www.beckhoff.com/en-en/support/download-finder/certificates-approvals/>.

⚠ WARNING

Keep a distance from the maximum values

The EJ modules are integrated into an overall system by the user. Due to complexity and variability, exact technical limits for environmental conditions are not universally applicable. In addition, many influencing factors exist that cannot be fully derived in this documentation.

Therefore, keep as large a distance as possible from the maximum values.

Non-observance can endanger safety.

Product property	EJ19xx and EJ29xx
Supply voltage (SELV / PELV)	24 V _{DC} (-15% / +20%)
Permissible ambient temperature (operation)	-25 °C ... +45 °C
Permissible ambient temperature (transport/storage)	-40 °C ... +70 °C
Permissible air humidity	5% to 95%, non-condensing
Permissible air pressure (operation/storage/transport)	750 hPa to 1100 hPa (this is equivalent to an altitude of approx. -690 m to 2450 m above sea level assuming an international standard atmosphere)
Minimum/maximum cycle time	approx. 500 µs / according to project size (if a user-specific project is used)
Fault reaction time	≤ watchdog times
Watchdog time	min. 2 ms, max. 60000 ms
Cable length between sensor/actuator and terminal	unshielded max. 100 m (with 0.75 or 1 mm ²) shielded max. 100 m (with 0.75 or 1 mm ²)
Input process image	dynamic in accordance with the configuration
Output process image	dynamic in accordance with the configuration
Response time (read input/write to E-bus)	typically: 4 ms, maximum: see fault reaction time
Output current of the clock outputs	typically 8 mA, max. 11 mA
Output current of the outputs	max. 500 mA
Actuators	<ul style="list-style-type: none"> • inductive • ohmic • capacitive When selecting actuators please ensure that the test pulses do not lead to actuator switching
Actuator switching frequency (inductive load)	max. 2.5 mH at 100 Hz max. 1 H at 1 Hz These are example working points. The user must evaluate the actuators used in relation to energy.
Reading back the outputs (diagnostic thresholds)	Signal voltage "1": > 5.61 V Signal voltage "0": < 1.68 V
Signal voltage "0" inputs	-3 V ... 5 V (EN 61131-2, type 3) see chapter Characteristic curve of the inputs ▶ 23
Signal voltage "1" inputs	11 V ... 30 V (EN 61131-2, type 3) see chapter Characteristic curve of the inputs ▶ 23

Product property	EJ19xx and EJ29xx
Climate category according to EN 60721-3-3	3K3 (the deviation from 3K3 is possible only with optimal environmental conditions and also applies only to the technical data which are specified differently in this documentation)
Permissible degree of pollution according to EN 60664-1	Degree of pollution 2
Product property	EJx9xx
Inadmissible operating conditions	TwinSAFE EJ modules must not be used under the following conditions: <ul style="list-style-type: none"> • under the influence of ionizing radiation (exceeding the natural background radiation) • in corrosive environments • in an environment that leads to impermissible contamination of the EJ module
Vibration / shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27
EMC immunity / emission	conforms to EN 61000-6-2 / EN 61000-6-4
Shocks	15 g with pulse duration 11 ms in all three axes
Protection rating	IP20
Permitted operating environment	In the control cabinet or terminal box, with minimum protection rating IP54 according to IEC 60529
Permissible installation position	horizontal (see chapter Installation position and minimum distances [► 20])
Approvals	CE, TÜV SÜD

● Specific technical data



The specific technical data for the respective product together with the safety parameters can be found in the respective product-specific sub-chapter.

5.6 Dimensions

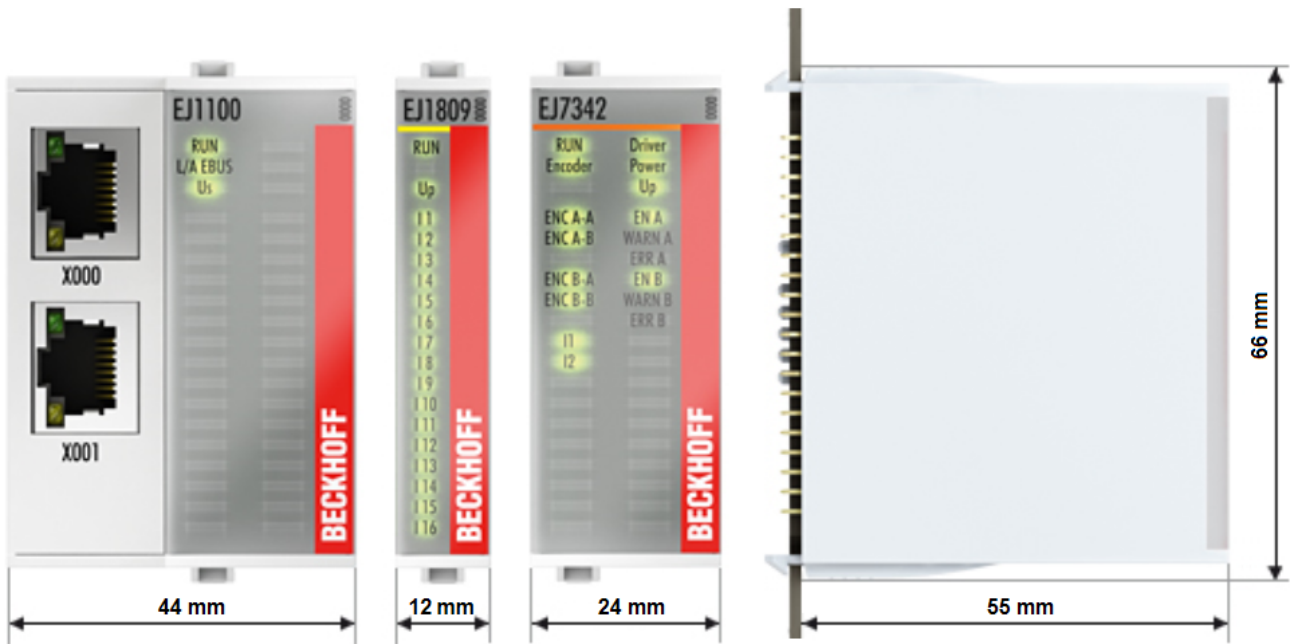


Fig. 6: EJxxxx - dimensions (short modules)

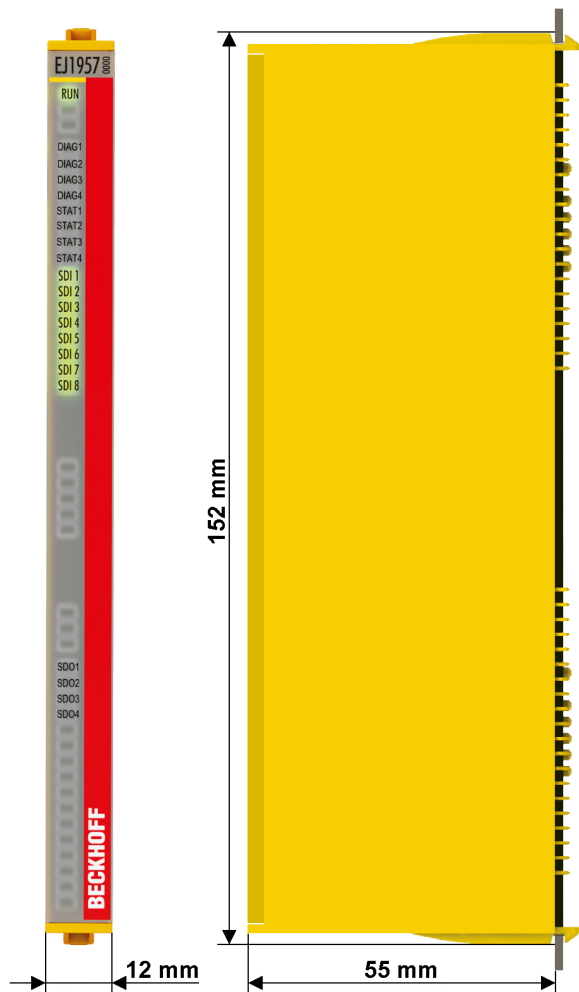


Fig. 7: EJxxxx - dimensions (long modules)

Dimension table

Product	Width	Height	Depth (above EJ distribution board)
Single module EJ6910	12 mm	66 mm	55 mm
Double module EJ1914, EJ2914	24 mm	66 mm	55 mm
Single module (long) EJ1918, EJ1957, EJ2918	12 mm	152 mm	55 mm

5.7 Status LEDs

The status LEDs of the TwinSAFE EJ modules are labeled STAT1 to STAT4.

STAT1	STAT2	STAT3	STAT4	Meaning
Off	Off	Off	lit	No TwinSAFE project available on the component
Off	Off	lit	lit	TwinSAFE project loaded, but not yet in RUN state
lit	Off	lit	lit	TwinSAFE project loaded and in RUN state. Customization is active for at least one TwinSAFE group
lit	lit	lit	lit	TwinSAFE project loaded and in RUN state. Customization is NOT active

5.8 Diagnostic LEDs

The diagnostic LEDs of the TwinSAFE EJ modules are labeled DIAG1 to DIAG4.

5.8.1 Flashing codes

LED	lit	flashes	flickers	off
DIAG1 (green)	Environment variables, operating voltage and internal tests are in the valid range <ul style="list-style-type: none"> If DIAG2 flashes, a logic error code applies 	-		Environment variables, operating voltage and internal tests are outside the valid range <ul style="list-style-type: none"> If DIAG2 flashes, an environment error code applies
DIAG2 (red)	Together with DIAG3 and 4: Global shutdown ¹⁾ has occurred (see diag history of the TwinSAFE components).	Logic or environment error code according to Diag1 and tables below is output	Error of the safe input or output module	Together with DIAG3 and 4: Global fault ¹⁾ has occurred (see diag history of the TwinSAFE components).
DIAG3 (red)	Global fault or global shutdown on μ C1 ¹⁾	-		No global fault or global shutdown on μ C1 ¹⁾
DIAG4 (red)	Global fault or global shutdown on μ C2 ¹⁾	-		No global fault or global shutdown on μ C2 ¹⁾

1. A global fault permanently disables the TwinSAFE component, so that it has to be replaced. A global shutdown temporarily disables the TwinSAFE component. The error can be reset by switching off and back on again.

Logic error codes of LED DIAG2 (if LED DIAG1 is lit)



Flashing Code	Description
1	Function block error in one of the TwinSAFE groups
2	Communication error in one of the TwinSAFE groups

Flashing Code	Description
3	Error combination: Function block and communication
4	General error in one of the TwinSAFE groups
5	Error combination: General and function block
6	Error combination: General and communication
7	Error combination: General, function block and communication

Environment error codes of LED DIAG2 (if LED DIAG1 is off)

Flashing Code	Description
1	Maximum supply voltage μ C1 exceeded
2	Supply voltage μ C1 below minimum value
3	Maximum supply voltage μ C2 exceeded
4	Supply voltage μ C2 below minimum value
5	Maximum internal temperature exceeded
6	Internal temperature below minimum value
7	Valid temperature difference between μ C1 and μ C2 exceeded
8	not used
9	not used
10	General error

5.8.2 Flash code display

LED	Display	Description
flashing		400 ms ON / 400 ms OFF 1 second pause between the flash codes
flickering		50 ms ON / 50 ms OFF

6 EJ1914

6.1 Overview

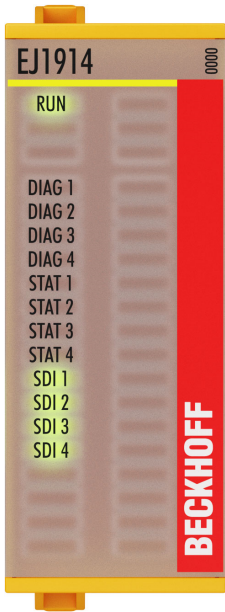


Fig. 8: EJ1914 - TwinSAFE module with 4 fail-safe inputs

The EJ1914 Safety EtherCAT plug-in module is a digital input module for sensors with potential-free contacts for 24 V_{DC}. The plug-in module has 4 fail-safe inputs and 4 clock outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 PL e.

The EJ module is parameterized via two input modules.

6.1.1 Version history

This version history lists the software and hardware version numbers. You will also find a description of the changes to previous versions contained in each case. See the following table.

Software version	Hardware version	Modifications
01 (0104)	01	I/O port register settings changed
01 (0102)	01	First release of the EJ1914

6.2 Inserting the EJ module

An EJ module is inserted in exactly the same way as any other Beckhoff EtherCAT module. In the list, open *Safety Terminals* and select the EJ module.

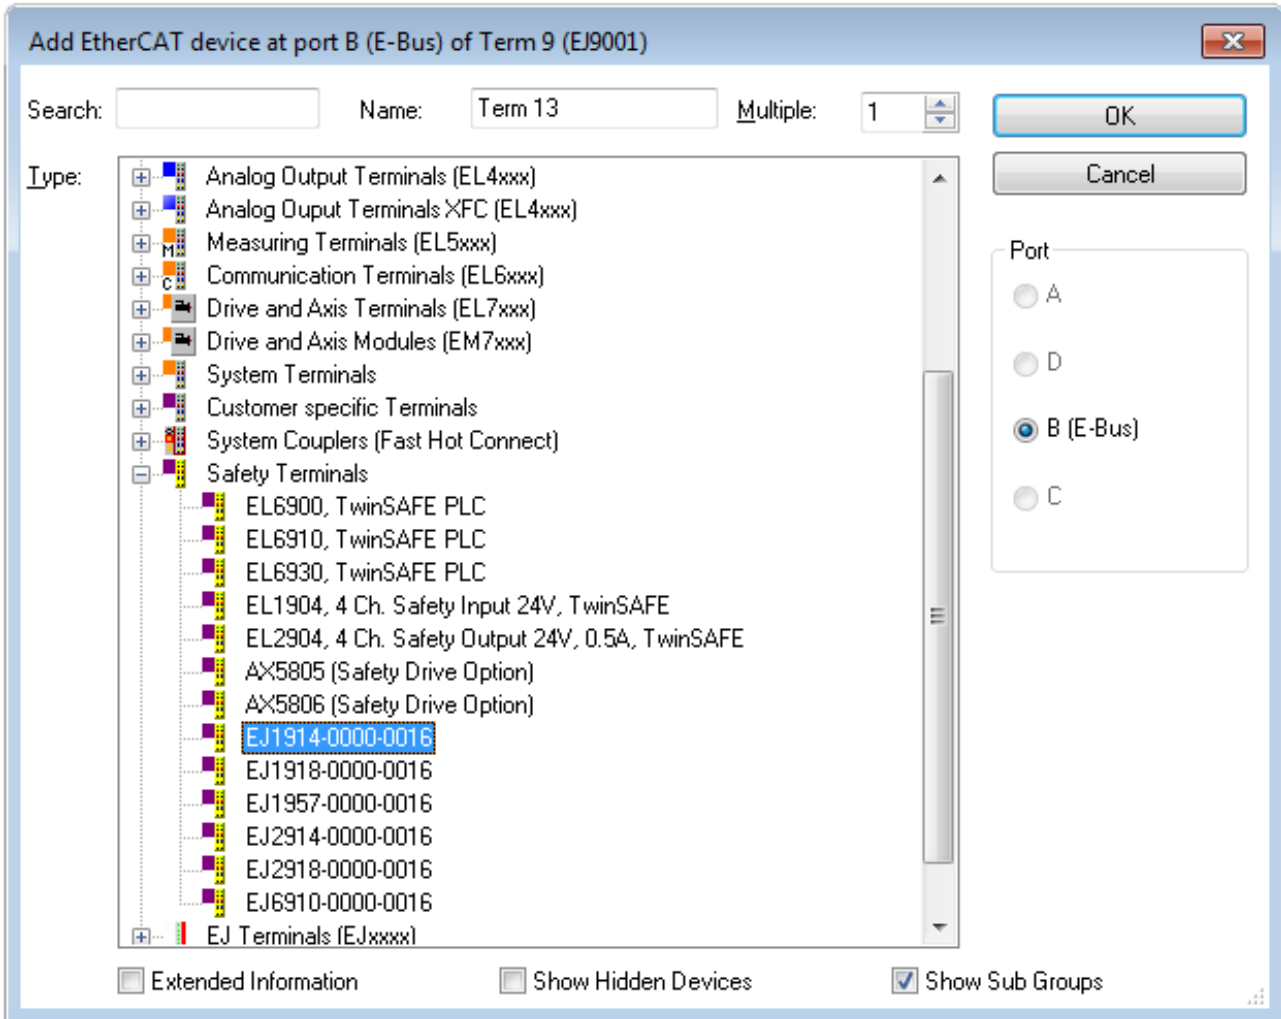


Fig. 9: Adding the EJ module

6.3 Specific technical data

The EJ1914 Safety EtherCAT plug-in module is a digital input module for sensors for 24 V_{DC}. The EJ plug-in module has 4 fail-safe inputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 Category 4 / PL e.

Product property	EJ1914
Number of inputs	4
Number of clock outputs	4
Number of outputs	-
Status display	4 (one green LED per input)
Diagnostic display	4 (1 green, 3 red LEDs)
Current consumption of the module electronics at 24 V (without current consumption of sensors)	4 channels occupied: typically 15 mA 0 channels occupied: typically 2 mA
Current consumption via E-bus	4 channels occupied: approx. 260 mA
Weight	approx. 45 g

6.4 Safety parameters

Key data	EJ1914
Lifetime [a]	20
Proof test interval [a]	not required ¹⁾
PFH _D	3.21E-09
%SIL3 of PFH _D	3.2%
PFD _{avg}	5.1E-05
%SIL3 of PFD _{avg}	5.1%
MTTF _D	2406 a
DC	98.3% (CAT 4)
Performance Level	PL e
Category	4
HFT	1
Classification element ²⁾	Type B

1. Special proof tests are not required during the entire service life of the EtherCAT module.
2. Classification according to IEC 61508-2:2010 (see chapters 7.4.4.1.2 and 7.4.4.1.3)

The EtherCAT module can be used for safety-related applications within the meaning of IEC 62061 and IEC 61508:2010 up to SIL 3 and EN ISO 13849-1:2015 up to PL e (Cat4).

Further information on calculating or estimating the MTTF_D value from the PFH_D value can be found in the TwinSAFE Application Guide or in EN ISO 13849-1:2015, Table K.1.

In terms of safety-related parameters, the Safety-over-EtherCAT communication is already considered with 1% of SIL 3 according to the protocol specification.

7 EJ1918

7.1 Overview



Fig. 10: EJ1918 - TwinSAFE module with 8 digital fail-safe inputs

The EJ1918 Safety EtherCAT plug-in module is a digital input module for sensors with potential-free contacts for 24 V_{DC}. The plug-in module has 8 fail-safe inputs and 8 clock outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 PL e.

The EJ module is parameterized via four input modules.

7.1.1 Version history

This version history lists the software and hardware version numbers. You will also find a description of the changes to previous versions contained in each case. See the following table.

Software version	Hardware version	Modifications
01 (0104)	01	I/O port register settings changed
01 (0102)	01	First release of the EJ1918

7.2 Inserting the EJ module

An EJ module is inserted in exactly the same way as any other Beckhoff EtherCAT module. In the list, open *Safety Terminals* and select the EJ module.

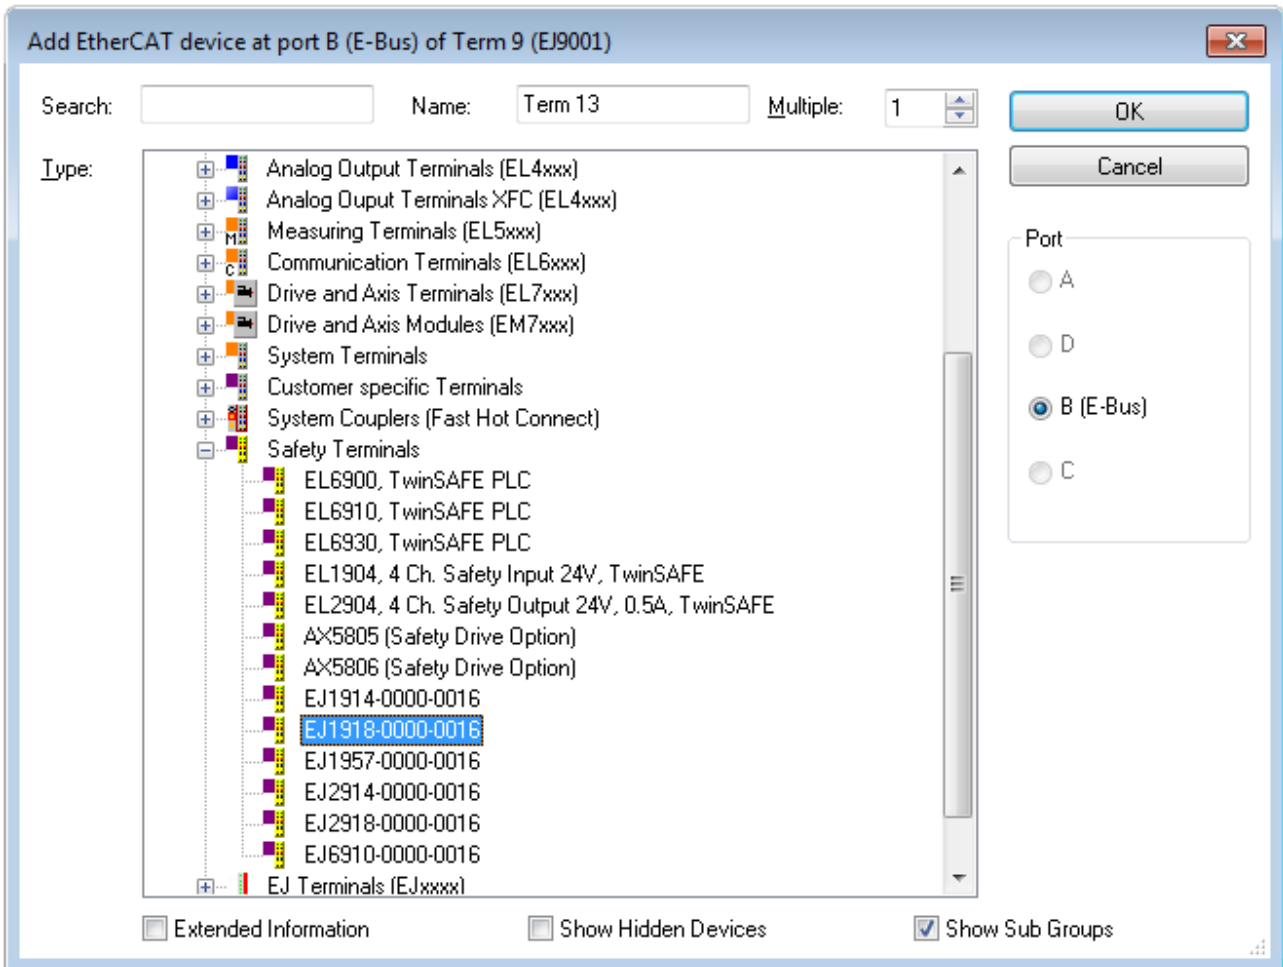


Fig. 11: Adding the EJ module

7.3 Specific technical data

The EJ1918 Safety EtherCAT plug-in module is a digital input module for sensors for 24 V_{DC}. The EJ plug-in module has 8 fail-safe inputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 Category 4 / PL e.

Product property	EJ1918
Number of inputs	8
Number of clock outputs	8
Number of outputs	-
Status display	8 (one green LED per input)
Diagnostic display	4 (1 green, 3 red LEDs)
Current consumption of the module electronics at 24 V (without current consumption of sensors)	8 channels occupied: typically 26 mA 0 channels occupied: typically 3 mA
Current consumption via E-bus	8 channels occupied: approx. 290 mA
Weight	approx. 60 g

7.4 Safety parameters

Key data	EJ1918
Lifetime [a]	20
Proof test interval [a]	not required ¹⁾
PFH _D	3.21E-09
%SIL3 of PFH _D	3.2%
PFD _{avg}	4.95E-05
%SIL3 of PFD _{avg}	5.0%
MTTF _D	2406 a
DC	98.3% (CAT 4)
Performance Level	PL e
Category	4
HFT	1
Classification element ²⁾	Type B

1. Special proof tests are not required during the entire service life of the EtherCAT module.
2. Classification according to IEC 61508-2:2010 (see chapters 7.4.4.1.2 and 7.4.4.1.3)

The EtherCAT module can be used for safety-related applications within the meaning of IEC 62061 and IEC 61508:2010 up to SIL 3 and EN ISO 13849-1:2015 up to PL e (Cat4).

Further information on calculating or estimating the MTTF_D value from the PFH_D value can be found in the TwinSAFE Application Guide or in EN ISO 13849-1:2015, Table K.1.

In terms of safety-related parameters, the Safety-over-EtherCAT communication is already considered with 1% of SIL 3 according to the protocol specification.

8 EJ1957

8.1 Overview



Fig. 12: EJ1957 – TwinSAFE module with 8 digital fail-safe inputs and 4 digital fail-safe outputs

The EJ1957 TwinSAFE module is a digital input and output terminal for sensors with potential-free contacts for 24 V_{DC}. The plug-in module has 8 fail-safe inputs with 8 clock outputs and 4 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 PL e.

The EJ module is parameterized via four input modules and one output module.

8.1.1 Version history

This version history lists the software and hardware version numbers. You will also find a description of the changes to previous lists contained in each case. See the following table.

Software version	Hardware version	Modifications
01 (0104)	01	I/O port register settings changed
01 (0102)	01	First release of the EJ1957

8.2 Inserting the EJ module

An EJ module is inserted in exactly the same way as any other Beckhoff EtherCAT module. In the list, open *Safety Terminals* and select the EJ module.

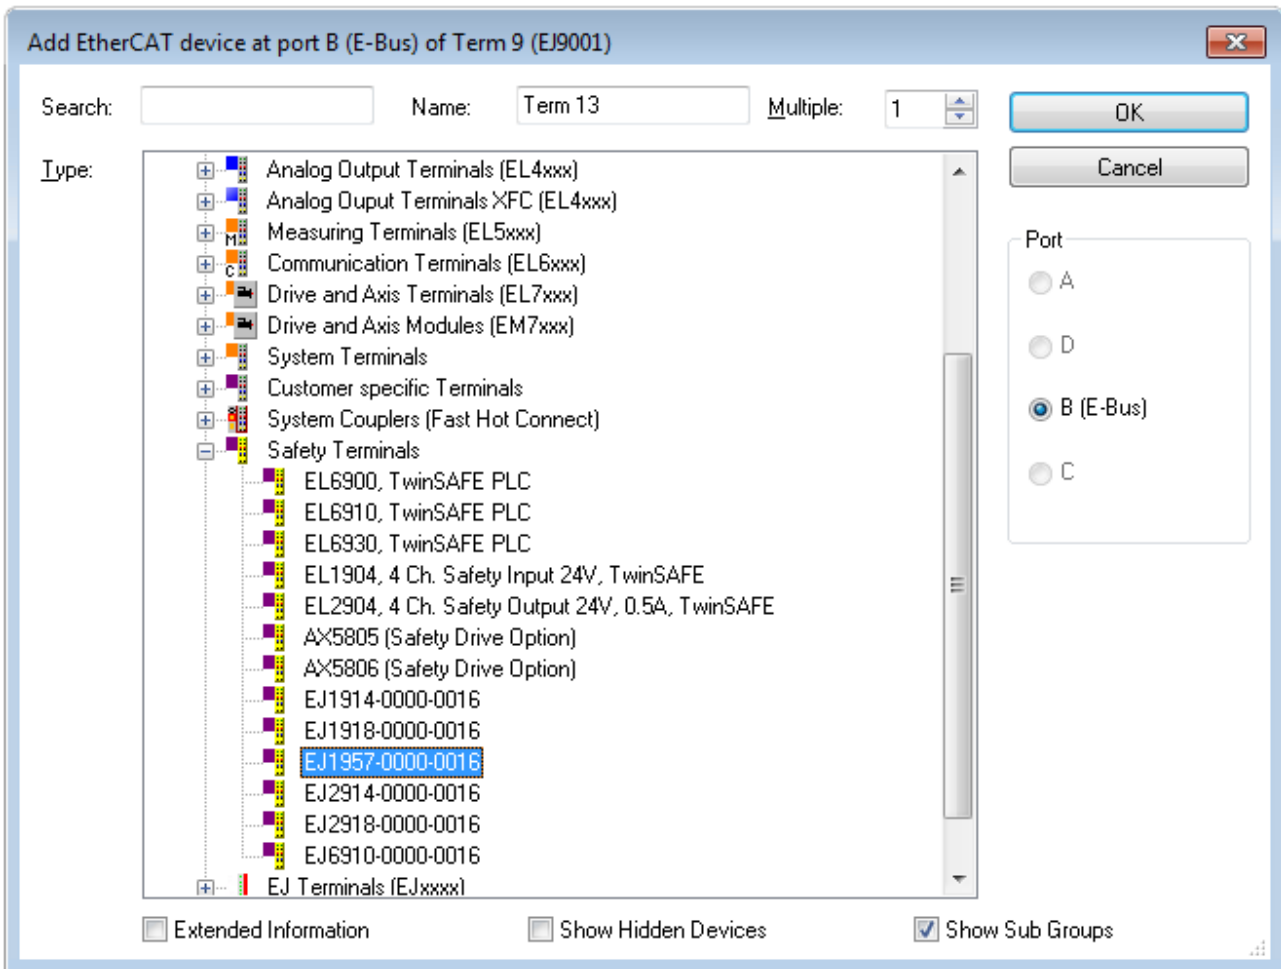


Fig. 13: Adding the EJ module

8.3 Specific technical data

The EJ1957 Safety EtherCAT plug-in module is a digital input/output module for sensors for 24 V_{DC}. The EJ plug-in module has 8 fail-safe inputs, 4 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 Category 4 / PL e.

Product property	EJ1957
Number of inputs	8
Number of clock outputs	8
Number of outputs	4
Status display	12 (one green LED per input/output)
Diagnostic display	4 (1 green, 3 red LEDs)
Current consumption of the module electronics from 24 V (without current consumption of sensors and actuators)	12 channels occupied: typically 46 mA 0 channels occupied: typically 3 mA
Current consumption via E-bus	12 channels occupied: approx. 330 mA
Weight	approx. 64 g

8.4 Safety parameters

Key data	EJ1957
Lifetime [a]	20

Key data	EJ1957
Proof test interval [a]	not required ¹⁾
PFH _D	4.43E-09
%SIL3 of PFH _D	4.4%
PFD _{avg}	5.0E-05
%SIL3 of PFD _{avg}	5.0%
MTTF _D	1731 a
DC	98.4% (CAT 4)
Performance Level	PL e
Category	4
HFT	1
Classification element ²⁾	Type B

1. Special proof tests are not required during the entire service life of the EtherCAT module.
2. Classification according to IEC 61508-2:2010 (see chapters 7.4.4.1.2 and 7.4.4.1.3)

The EtherCAT module can be used for safety-related applications within the meaning of IEC 62061 and IEC 61508:2010 up to SIL 3 and EN ISO 13849-1:2015 up to PL e (Cat4).

Further information on calculating or estimating the MTTF_D value from the PFH_D value can be found in the TwinSAFE Application Guide or in EN ISO 13849-1:2015, Table K.1.

In terms of safety-related parameters, the Safety-over-EtherCAT communication is already considered with 1% of SIL 3 according to the protocol specification.

9 EJ2914

9.1 Overview

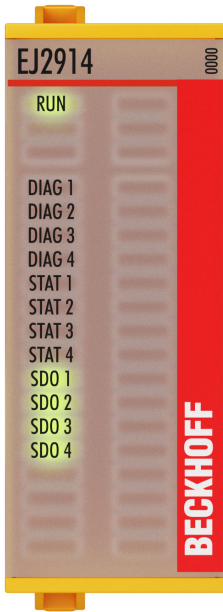


Fig. 14: EJ2914 - TwinSAFE module with 4 digital fail-safe outputs

The EJ2914 TwinSAFE module is a digital output module for actuators with 24 V_{DC}. The plug-in module has 4 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 PL e.

The EJ module is parameterized via one output module.

9.1.1 Version history

This version history lists the software and hardware version numbers. You will also find a description of the changes to previous versions contained in each case. See the following table.

Software version	Hardware version	Modifications
01 (0104)	01	I/O port register settings changed
01 (0102)	01	First release of the EJ2914

9.2 Inserting the EJ module

An EJ module is inserted in exactly the same way as any other Beckhoff EtherCAT module. In the list, open *Safety Terminals* and select the EJ module.

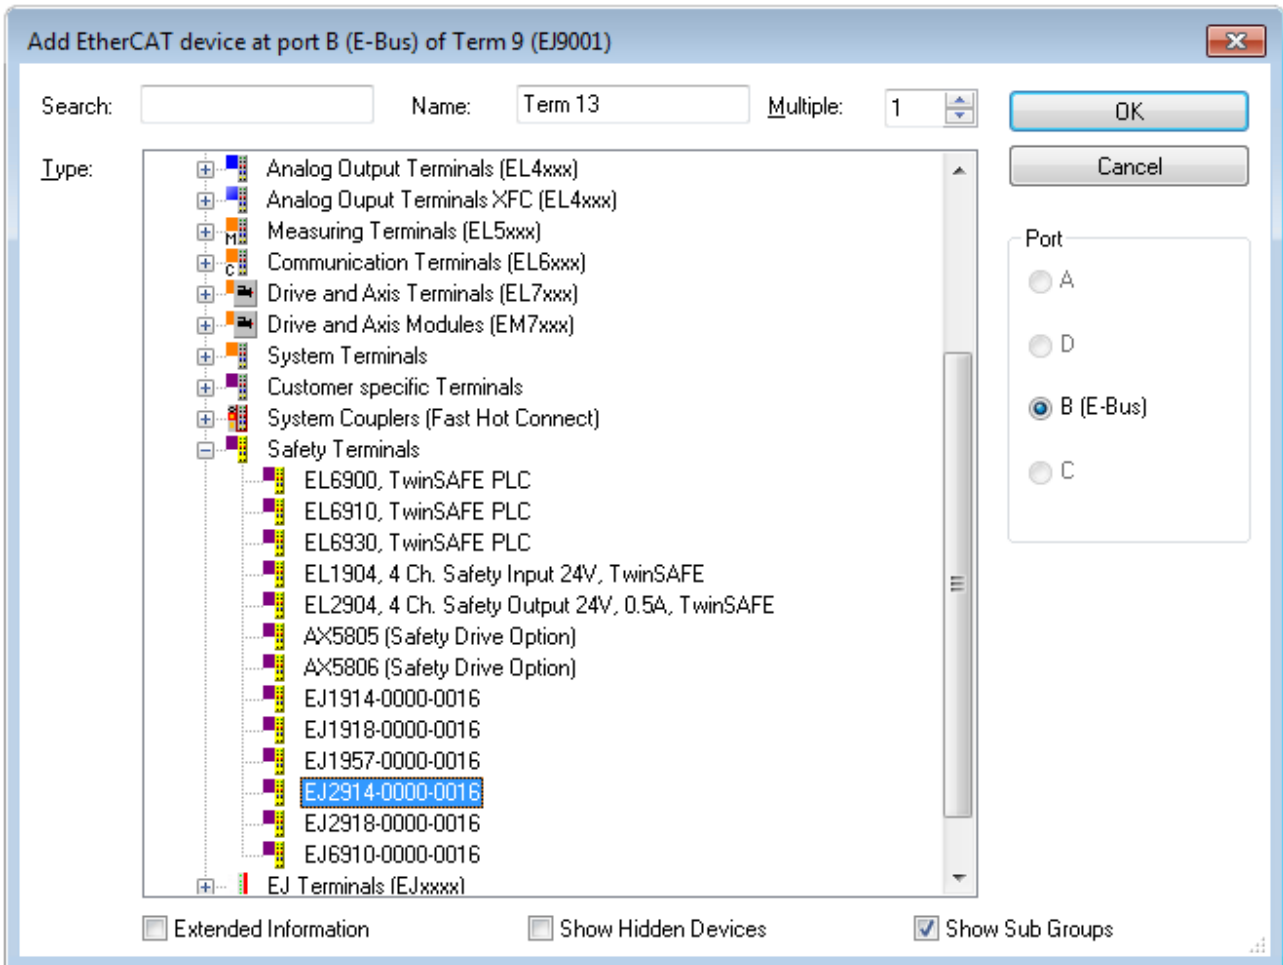


Fig. 15: Adding the EJ module

9.3 Specific technical data

The EJ2914 Safety EtherCAT plug-in module is a digital output module for actuators for 24 V_{DC}. The EJ plug-in module has 4 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 Category 4 / PL e.

Product property	EJ2914
Number of inputs	-
Number of clock outputs	-
Number of outputs	4
Status display	4 (one green LED per output)
Diagnostic display	4 (1 green, 3 red LEDs)
Current consumption of the module electronics from 24 V (without current consumption of actuators)	0 channels occupied: typically 1 mA 4 channels occupied: typically 22 mA
Current consumption via E-bus	4 channels occupied: approx. 260 mA
Weight	approx. 47 g

9.4 Safety parameters

Key data	EJ2914
Lifetime [a]	20
Proof test interval [a]	not required ¹⁾
PFH _D	3.03E-09
%SIL3 of PFH _D	3.0%
PFD _{avg}	2.6E-05
%SIL3 of PFD _{avg}	2.6%
MTTF _D	1994 a
DC	98.1% (CAT 4)
Performance Level	PL e
Category	4
HFT	1
Classification element ²⁾	Type B

1. Special proof tests are not required during the entire service life of the EtherCAT module.
2. Classification according to IEC 61508-2:2010 (see chapters 7.4.4.1.2 and 7.4.4.1.3)

The EtherCAT module can be used for safety-related applications within the meaning of IEC 62061 and IEC 61508:2010 up to SIL 3 and EN ISO 13849-1:2015 up to PL e (Cat4).

Further information on calculating or estimating the MTTF_D value from the PFH_D value can be found in the TwinSAFE Application Guide or in EN ISO 13849-1:2015, Table K.1.

In terms of safety-related parameters, the Safety-over-EtherCAT communication is already considered with 1% of SIL 3 according to the protocol specification.

10 EJ2918

10.1 Overview



Fig. 16: EJ2918 - TwinSAFE module with 8 digital fail-safe outputs

The EJ2918 TwinSAFE module is a digital output module for actuators with 24 V_{DC}. The plug-in module has 8 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 PL e.

The EJ module is parameterized via two output modules.

10.1.1 Version history

This version history lists the software and hardware version numbers. You will also find a description of the changes to previous versions contained in each case. See the following table.

Software version	Hardware version	Modifications
02 (0105)	01	I/O port register settings changed
02 (0103)	01	First release of the EJ2918

10.2 Inserting the EJ module

An EJ module is inserted in exactly the same way as any other Beckhoff EtherCAT module. In the list, open *Safety Terminals* and select the EJ module.

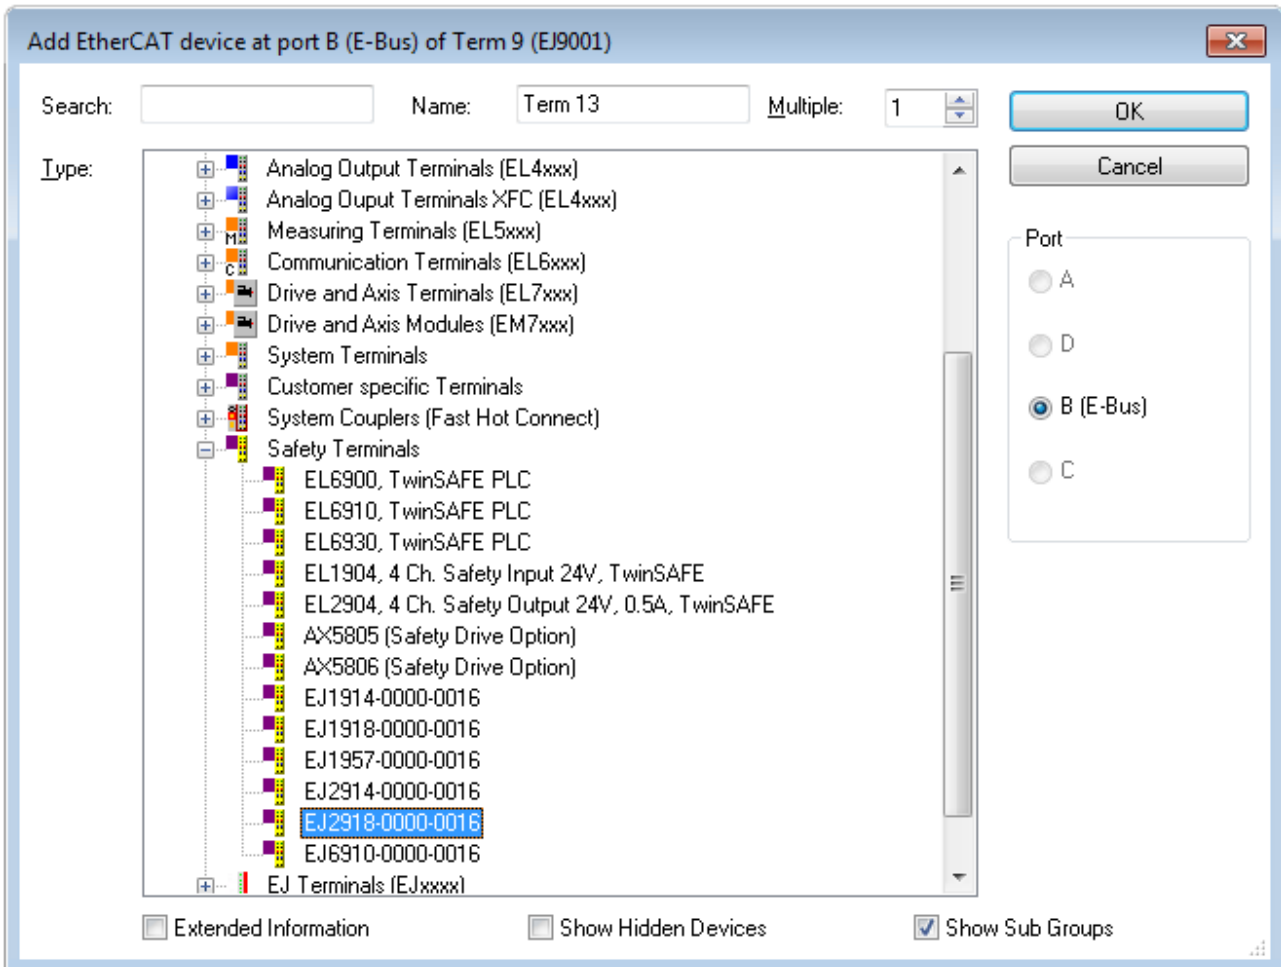


Fig. 17: Adding the EJ module

10.3 Specific technical data

The EJ2918 Safety EtherCAT plug-in module is a digital output module for actuators for 24 V_{DC}. The EJ plug-in module has 8 fail-safe outputs and meets the requirements of IEC 61508:2010 SIL 3 and EN ISO 13849-1:2015 Category 4 / PL e.

Product property	EJ2918
Number of inputs	-
Number of clock outputs	-
Number of outputs	8
Status display	8 (one green LED per output)
Diagnostic display	4 (1 green, 3 red LEDs)
Current consumption of the module electronics from 24 V (without current consumption of actuators)	8 channels occupied: typically 42 mA 0 channels occupied: typically 1 mA
Current consumption via E-bus	8 channels occupied: approx. 310 mA
Weight	approx. 62 g

10.4 Safety parameters

Key data	EJ2918
Lifetime [a]	20
Proof test interval [a]	not required ¹⁾
PFH _D	3.03E-09
%SIL3 of PFH _D	3.0%
PFD _{avg}	2.6E-05
%SIL3 of PFD _{avg}	2.6%
MTTF _D	1994 a
DC	98.1% (CAT 4)
Performance Level	PL e
Category	4
HFT	1
Classification element ²⁾	Type B

1. Special proof tests are not required during the entire service life of the EtherCAT module.
2. Classification according to IEC 61508-2:2010 (see chapters 7.4.4.1.2 and 7.4.4.1.3)

The EtherCAT module can be used for safety-related applications within the meaning of IEC 62061 and IEC 61508:2010 up to SIL 3 and EN ISO 13849-1:2015 up to PL e (Cat4).

Further information on calculating or estimating the MTTF_D value from the PFH_D value can be found in the TwinSAFE Application Guide or in EN ISO 13849-1:2015, Table K.1.

In terms of safety-related parameters, the Safety-over-EtherCAT communication is already considered with 1% of SIL 3 according to the protocol specification.

11 Service life

The TwinSAFE EJ modules are designed for a service life of 20 years.

Due to the high diagnostic coverage within the lifecycle no special proof tests are required.

The TwinSAFE EJ modules bear a date code, which is composed as follows:

Date code: CW YY SW HW

Legend:	Sample: Date Code 17 11 05 00
CW: Calendar week of manufacture	Calendar week: 17
YY: Year of manufacture	Year: 2011
SW: Software version	Software version: 05
HW: Hardware version	Hardware version: 00

In addition the TwinSAFE EJ modules bear a unique serial number.



Fig. 18: Unique serial number of a TwinSAFE EJ module

12 Maintenance and cleaning

- **Cleaning by the manufacturer only**



Do not operate the TwinSAFE component if it is impermissibly dirty according to protection class IP20. Send impermissibly dirty TwinSAFE components to the manufacturer for cleaning.

TwinSAFE components are basically maintenance-free.

13 Decommissioning

13.1 Disposal

NOTE

Correct disposal

Observe the applicable national laws and guidelines for disposal.

Incorrect disposal may result in environmental damage.

Remove the TwinSAFE component for disposal.

Depending on your application and the products used, make sure that the respective components are disposed of properly:

Cast iron and metal

Hand over cast iron and metal parts to scrap metal recycling.

Cardboard, wood and polystyrene

Dispose of packaging materials made of cardboard, wood or Styrofoam in accordance with regulations.

Plastic and hard plastic

You can recycle parts made of plastic and hard plastic via the waste management center or reuse them in accordance with the component regulations and markings.

Oils and lubricants

Dispose of oils and lubricants in separate containers. Hand over containers to the waste oil collection point.

Batteries and accumulators

Batteries and accumulators may also be marked with the crossed-out wheeled garbage can symbol. You must separate these components from waste. You are legally obliged to return used batteries and accumulators within the EU. Outside the validity of the EU Directive 2006/66/EC, observe the respective regulations.

13.1.1 Returning to the vendor

In accordance with the WEEE-2012/19/EU directives, you can return used devices and accessories for professional disposal. The transport costs are borne by the sender.

Send the used devices with the note "For disposal" to:

Beckhoff Automation GmbH & Co. KG
Gebäude „Service“
Stahlstraße 31
D-33415 Verl

In addition, you have the option to contact a local certified specialist company for the disposal of used electrical and electronic appliances. Dispose of the old components in accordance with the regulations applicable in your country.

14 Appendix

14.1 Volatility

If there are requirements concerning the volatility of products in your application, for example of the U.S. Department of Defense or similar authorities or security organizations, the following process applies:

The product has both volatile and non-volatile components. Volatile components lose their data immediately after removing power. Non-volatile components keep the data even after loss of power.


If there is customer specific data saved on the product, it cannot be ensured that this data might not be restored through for example forensic measures, even after the data is deleted through the provided tool chain. If this data is confidential, the scrapping of the product after usage is recommended to protect this data.

14.2 Focus of certificates

The most decisive document for certified components of the TwinSAFE department is the EC type examination certificate. The document contains both the test coverage and the regarded component and component family.

The current certificates of all TwinSAFE components with the underlying standards and directives can be found at <https://www.beckhoff.com/en-en/support/download-finder/certificates-approvals/>.

If the document refers only to the first four figures of a product (ELxxxx), the certificate is valid for all available variants of the component (ELxxxx-abcd). This is applicable for all components like EtherCAT Terminals, EtherCAT Boxes, EtherCAT plug-in modules and Bus Terminals.

書 ◆ CERTIFICADO ◆ CERTIFICAT		
	<h1>EC-Type Examination Certificate</h1>	
	No. M6A 062386 0055 Rev. 01	
	Holder of Certificate:	Beckhoff Automation GmbH & Co. KG Hülshorstweg 20 33415 Verl GERMANY
	Product:	Safety components
Model(s):	EL1918	
Parameters:	Supply voltage: 24VDC (-15%/+20%) Ambient temperature: -25°C...+55°C Protection class: IP20	
<p>This EC Type Examination Certificate is issued according to Article 12(3) b or 12(4) a of Council Directive 2006/42/EC relating to machinery. It confirms that the listed Annex-IV equipment complies with the principal protection requirements of the directive. It refers only to the sample submitted to TÜV SÜD Product Service GmbH for testing and certification. For details see: www.tuvsud.com/ps-cert</p>		
Test report no.:	BV99670C	

If you regard the example EL1918 in the picture, the certificate is valid for both the EL1918 and the available variant EL1918-2200.

14.3 Certificate

BECKHOFF New Automation Technology

EG-Konformitätserklärung
EC Declaration of Conformity

Nummer: 2017042EJx9xx-2, Datum: 06.01.2023
Number, Date

Originalerklärung
Original declaration

Hersteller <i>Manufacturer</i>	Beckhoff Automation GmbH & Co. KG Hülshorstweg 20, 33415 Verl, Germany
erklärt, dass das Produkt <i>declares that the product</i>	TwinSAFE EJx9xx TwinSAFE-EJ-Module mit digitalen fehlersicheren Ein- und Ausgängen <i>TwinSAFE EJ Modules with digital fail-safe inputs and outputs</i>

den Bestimmungen der folgenden EG-Richtlinien entspricht:
complies with the relevant requirements of the following EC directives:

2006/42/EG <i>2006/42/EC</i>	Richtlinie 2006/42/EG des Europäischen Parlaments und des Rates vom 17. Mai 2006 über Maschinen und zur Änderung der Richtlinie 95/16/EG (Neufassung) <i>Directive 2006/42/EC of the European Parliament and of the Council of 17 May 2006 on machinery, and amending Directive 95/16/EC (recast)</i>
2014/30/EU <i>2014/30/EU</i>	Richtlinie 2014/30/EU des Europäischen Parlaments und des Rates vom 26. Februar 2014 zur Harmonisierung der Rechtsvorschriften der Mitgliedstaaten über die elektromagnetische Verträglichkeit (Neufassung) <i>Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility (recast)</i>
2011/65/EU <i>2011/65/EU</i>	Richtlinie 2011/65/EU des Europäischen Parlaments und des Rates vom 8. Juni 2011 zur Beschränkung der Verwendung bestimmter gefährlicher Stoffe in Elektro- und Elektronikgeräten <i>Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment (recast)</i>

Die Konformität mit den Bestimmungen der genannten Richtlinien wird durch Einhaltung der folgenden Normen nachgewiesen:
The conformity with the listed directives is proved by compliance with the following standards:

EN ISO 13849-1:2015	EN IEC 63000:2018	EN 61131-2:2007
EN 62061:2005/A2:2015		EN 61000-6-2:2005
		EN 61000-6-4:2007

Die Übereinstimmung eines Baumusters des bezeichneten Produkts mit den EU-Richtlinien wurde bescheinigt von
The accordance of a production sample of the designated product with the EC directives is certified by

Richtlinie <i>Directive</i>	Benannte Stelle <i>Notified Body</i>	Baumusterprüfbescheinigung <i>type examination certificate</i>
2006/42/EG <i>2006/42/EC</i>	TÜV SÜD Product Service GmbH Ridlerstraße 65, 80339 München, Germany	M6A 062386 0042 Rev. 01 2022-12-12

Verantwortlich für die Zusammenstellung der technischen Unterlagen
Responsible for the compilation of technical documentation

Bevollmächtigter <i>Authorised person</i>	Beckhoff Automation GmbH & Co. KG Hülshorstweg 20, 33415 Verl, Germany
---	--

Verl, 31.1.2023

Ort / Datum
Place / Date

Dipl.-Phys. Hans Beckhoff, Geschäftsführer
Dipl.-Phys. Hans Beckhoff, CEO

Fig. 19: EJx9xx EC Declaration of Conformity

List of figures

Fig. 1	EtherCAT plug-in module system (EJ).....	16
Fig. 2	Installation position and minimum distances.....	20
Fig. 3	Digital input - safety parameters	22
Fig. 4	Characteristic curve of the inputs.....	23
Fig. 5	Digital output –safety parameters	24
Fig. 6	EJxxxx - dimensions (short modules)	28
Fig. 7	EJxxxx - dimensions (long modules).....	28
Fig. 8	EJ1914 - TwinSAFE module with 4 fail-safe inputs	31
Fig. 9	Adding the EJ module	32
Fig. 10	EJ1918 - TwinSAFE module with 8 digital fail-safe inputs	34
Fig. 11	Adding the EJ module	35
Fig. 12	EJ1957 – TwinSAFE module with 8 digital fail-safe inputs and 4 digital fail-safe outputs	37
Fig. 13	Adding the EJ module	38
Fig. 14	EJ2914 - TwinSAFE module with 4 digital fail-safe outputs.....	40
Fig. 15	Adding the EJ module	41
Fig. 16	EJ2918 - TwinSAFE module with 8 digital fail-safe outputs.....	43
Fig. 17	Adding the EJ module	44
Fig. 18	Unique serial number of a TwinSAFE EJ module	46
Fig. 19	EJx9xx EC Declaration of Conformity	51

More Information:
www.beckhoff.com/EJx9xx

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

