

Manual | EN

CX2500-1061

Power over Ethernet module for CX20xx, CX52x0, CX53x0, CX56x0



Table of contents

1	Notes on the documentation	5
1.1	Representation and structure of warnings	6
1.2	Documentation issue status	7
2	For your safety	8
2.1	Intended use	8
2.2	Staff qualification	8
2.3	Safety instructions	8
2.4	Notes on information security	9
3	Product overview	10
3.1	Structure	10
3.2	Ethernet interface (X610)	11
4	Mounting	12
4.1	Plug in extension module	12
4.2	Installing the housing locking clips	13
5	Error handling and diagnostics	14
5.1	Diagnostic LEDs	14
5.2	Faults	15
6	Technical data	16
7	Appendix	17
7.1	Accessories	17
7.2	Certifications	18
7.3	Support and Service	19
	List of tables	20
	List of figures	21

1 Notes on the documentation

This description is intended exclusively for trained specialists in control and automation technology who are familiar with the applicable national standards.

For installation and commissioning of the components, it is absolutely necessary to comply with the documentation and the following notes and explanations.

The qualified personnel is always obliged to use the currently valid documentation.

The responsible staff must ensure that the application or use of the products described satisfies all safety requirements, including all the relevant laws, regulations, guidelines, and standards.

Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without notice.

No claims to modify products that have already been supplied may be made on the basis of the data, diagrams, and descriptions in this documentation.

Trademarks

Beckhoff®, TwinCAT®, TwinCAT/BSD®, TC/BSD®, EtherCAT®, EtherCAT G®, EtherCAT G10®, EtherCAT P®, Safety over EtherCAT®, TwinSAFE®, XFC®, XTS® and XPlanar® are registered and licensed trademarks of Beckhoff Automation GmbH.

If third parties make use of designations or trademarks used in this publication for their own purposes, this could infringe upon the rights of the owners of the said designations.

Patents

The EtherCAT Technology is covered by the following patent applications and patents, without this constituting an exhaustive list:

EP1590927, EP1789857, EP1456722, EP2137893, DE102015105702

and similar applications and registrations in several other countries.

EtherCAT 

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The distribution and reproduction of this document, as well as the use and communication of its contents without express authorization, are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event that a patent, utility model, or design are registered.

1.1 Representation and structure of warnings

The following warnings are used in the documentation. Read and follow the warnings.

Warnings relating to personal injury:

 **DANGER**

Hazard with high risk of death or serious injury.

 **WARNING**

Hazard with medium risk of death or serious injury.

 **CAUTION**

There is a low-risk hazard that can result in minor injury.

Warnings relating to damage to property or the environment:

NOTICE

There is a potential hazard to the environment and equipment.

Notes showing further information or tips:



This notice provides important information that will be of assistance in dealing with the product or software. There is no immediate danger to product, people or environment.

1.2 Documentation issue status

Version	Changes
1.0	First version

2 For your safety

Read the chapter on safety and follow the instructions in order to protect from personal injury and damage to equipment.

Limitation of liability

All the components are supplied in particular hardware and software configurations appropriate for the application. Unauthorized modifications and changes to the hardware or software configuration, which go beyond the documented options, are prohibited and nullify the liability of Beckhoff Automation GmbH & Co. KG.

In addition, the following actions are excluded from the liability of Beckhoff Automation GmbH & Co. KG:

- Failure to comply with this documentation.
- Improper use.
- Use of untrained personnel.
- Use of unauthorized replacement parts.

2.1 Intended use

The Power over Ethernet module CX2500-1061 is an extension module for the CX20x2, CX20x3, CX52x0, CX53x0 and CX56x0 Embedded PC series. The CX2500-1061 extension module is used to integrate additional interfaces into the system and is connected to the left of the basic CPU module via a multi-pin connector. For the CX20x2 and CX20x3 series, up to four extension modules can be connected in any order, while for the CX52x0, CX53x0 and CX56x0 series, only one extension module can be connected at a time.

Together with an embedded PC, the extension module is designed for installation in a control cabinet or terminal box and meets the IP20 protection rating. This means:

- It is protected against the penetration of fingers and solid foreign bodies of 12.5 mm or larger in size.
- It is not protected against water.

Operation of the devices in wet and dusty environments is not permitted, unless specified otherwise. The specified limits for electrical and technical data must be adhered to.

The extension module is not suitable for operation in the following areas:

Improper use

- Hazardous area.
- Areas with an aggressive environment, e.g. aggressive gases or chemicals.
- Living areas. In living areas, the relevant standards and guidelines for interference emissions must be adhered to, and the devices must be installed in housings or control boxes with suitable attenuation of shielding.

2.2 Staff qualification

All operations involving Beckhoff software and hardware may only be carried out by qualified personnel with knowledge of control and automation engineering. The qualified personnel must have knowledge of the administration of the Industrial PC and the associated network.

All interventions must be carried out with knowledge of control programming, and the qualified personnel must be familiar with the current standards and guidelines for the automation environment.

2.3 Safety instructions

The following safety instructions must be followed during installation and working with networks and the software.

Mounting

- Never work on live equipment. Always switch off the power supply for the device before installation, troubleshooting or maintenance. Protect the device against unintentional switching on.
- Observe the relevant accident prevention regulations for your machine (e.g. the BGV A 3, electrical systems and equipment).
- Ensure standard-compliant connection and avoid risks to personnel. Ensure that data and supply cables are laid in a standard-compliant manner and ensure correct connection.
- Observe the relevant EMC guidelines for your application.
- Avoid polarity reversal of the data and supply cables, as this may cause damage to the equipment.
- The devices contain electronic components, which may be destroyed by electrostatic discharge when touched. Observe the safety precautions against electrostatic discharge according to DIN EN 61340-5-1/-3.

Working with networks

- Restrict access to all devices to an authorized circle of persons.
- Change the default passwords to reduce the risk of unauthorized access.
- Protect the devices with a firewall.
- Apply the IT security precautions according to IEC 62443, in order to limit access to and control of devices and networks.

Working with the software

- The sensitivity of a PC against malicious software increases with the number of installed and active software.
- Uninstall or disable unnecessary software.

Further information on the safe handling of networks and software can be found in the Beckhoff Information System:

<http://infosys.beckhoff.com>

Document name
IPC Security Guideline

2.4 Notes on information security

The products of Beckhoff Automation GmbH & Co. KG (Beckhoff), insofar as they can be accessed online, are equipped with security functions that support the secure operation of plants, systems, machines and networks. Despite the security functions, the creation, implementation and constant updating of a holistic security concept for the operation are necessary to protect the respective plant, system, machine and networks against cyber threats. The products sold by Beckhoff are only part of the overall security concept. The customer is responsible for preventing unauthorized access by third parties to its equipment, systems, machines and networks. The latter should be connected to the corporate network or the Internet only if appropriate protective measures have been set up.

In addition, the recommendations from Beckhoff regarding appropriate protective measures should be observed. Further information regarding information security and industrial security can be found in our <https://www.beckhoff.com/secguide>.

Beckhoff products and solutions undergo continuous further development. This also applies to security functions. In light of this continuous further development, Beckhoff expressly recommends that the products are kept up to date at all times and that updates are installed for the products once they have been made available. Using outdated or unsupported product versions can increase the risk of cyber threats.

To stay informed about information security for Beckhoff products, subscribe to the RSS feed at <https://www.beckhoff.com/secinfo>.

3 Product overview

The CX2500-1061 Power over Ethernet module supports devices with PoE Class 0, 1, 2, 3 and 4 in accordance with the PoE standard IEEE 802.3af-2003. The maximum PoE power output is 15.4 W. The PoE supply voltage is generated internally, no external power supply is necessary. In the case of an overload of the CX2500-1061, the PoE supply shuts down for two seconds, then restarts. The diagnostic LEDs PWR, PoE, PM1 and PM2 provide information about the type of PoE supply (Mode A or B) as well as about the PoE class reported by the powered device.

The extension modules are connected on the left-hand side of the basic CPU module via a multi-pin connector. A maximum of four CX2500-xxxx modules can be plugged into the CX20xx series in any order, and one module can be plugged into the CX52x0, CX53x0 or CX56x0 series.

Scope of supply

The extension module is supplied by default with a protective cap for the left-hand multi-pin connector and two housing locking clips. The housing locking clips are used to securely connect the housing of the extension module to the embedded PC after installation.

3.1 Structure



Fig. 1: Structure of a CX2500-1061 extension module.

Table 1: Legend for the structure.

No.	Component	Description
1	Ethernet interface RJ45 (X610)	1 x RJ45, 10/100/1000 Mbit/s with Power over Ethernet (PoE)
2	Multi-pin connection, left	Connector under the protective cap, for connecting additional modules, only for CX20xx series. The CX20xx series supports a maximum of four CX2500-xxxx modules
3	Multi-pin connection, right	Connector for connection to a basic CPU module.

3.2 Ethernet interface (X610)

The system module CX2500-1061 supplies PoE-capable devices with power via the Ethernet interface (X610). The required voltage is generated internally in the system module CX2500-1061. An external power supply is not required.

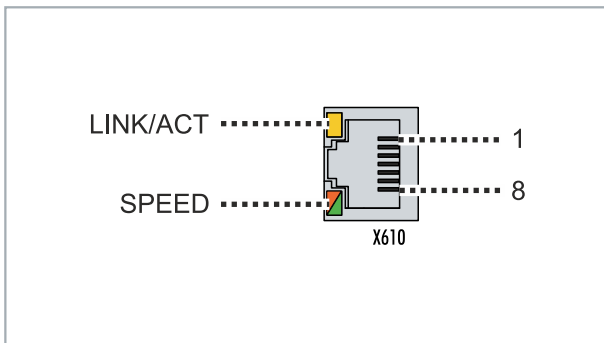


Fig. 2: Ethernet interface (X610)

Devices that are not PoE-capable can also be connected to the Ethernet interface (X610). The system module CX2500-1061 checks the connected devices before starting and tests them for PoE capability.

Energy supply

The following methods are available for the energy supply and data rates of **up to 100 Mbit/s**:

- Mode A: the power is transmitted on the data wires of the Ethernet cable. With this method, the voltage for the power supply is superimposed on the data signal. The same wire pairs (1/2 and 3/6) are used for the energy supply and the data transmission.
- Mode B: the power is transmitted on the free wires of the Ethernet cable. With this method, the free wire pairs (4/5 and 7/8) are used for the power supply. The data transmission and energy supply are cleanly separated.

Modes A and B are mixed for data rates of **1000 Mbit/s (Gigabit)**. The data transmission and energy supply are not separated and the voltage for the energy supply is superimposed on the data signal.

Table 2: Pin assignment of the PoE-capable interface

PIN	Description	10, 100 Mbit/s		1000 Mbit/s (1 Gigabit/s)	
		Mode A	Mode B	Mode A	Mode B
1	Pair 2	Rx+ / DC-	Rx+	TxRx+ / DC-	TxRx+
2		Rx- / DC-	Rx-	TxRx- / DC-	TxRx-
3	Pair 3	Tx+ / DC+	Tx+	TxRx+ / DC+	TxRx+
4	Pair 1	-	DC+	TxRx+	TxRx+ / DC+
5		-	DC+	TxRx-	TxRx- / DC+
6	Pair 3	Tx- / DC+	Tx-	TxRx- / DC+	TxRx-
7	Pair 4	-	DC-	TxRx+	TxRx+ / DC-
8		-	DC-	TxRx-	TxRx- / DC-

Requirements for the Ethernet cable

- Mode A: a 4-wire cable is sufficient for 10BASE-T and 100BASE-TX. Data rates of 10 and 100 Mbit/s are supported. An 8-wire cable is required for 1000BASE-T. Data rates of 1000 Mbit/s are supported.
- Mode B: an 8-wire cable is required for 10BASE-T, 100BASE-TX and 1000BASE-T. Speeds of 10, 100 and 1000 Mbit/s are supported.

Always use category Cat5e Ethernet cables to operate as many PoE-capable devices as possible from a wide range of manufacturers. The maximum cable length is 100 m.

4 Mounting

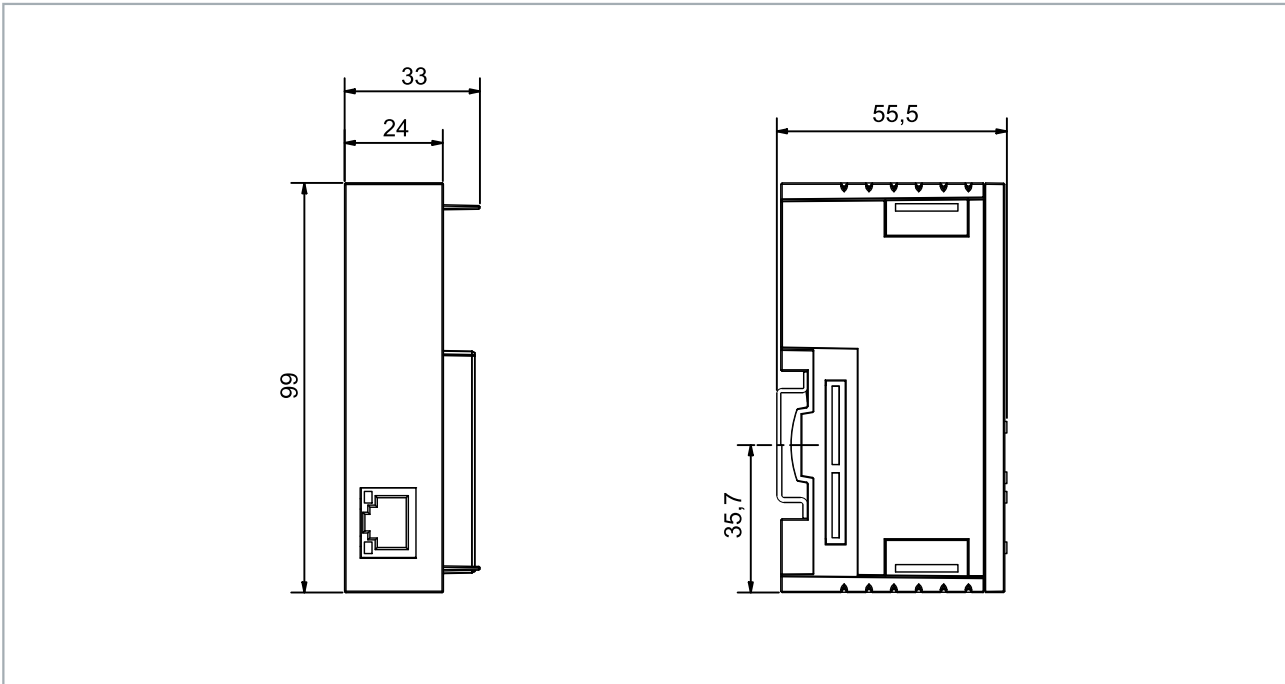


Fig. 3: CX2500-1061 extension module, dimensions


4.1 Plug in extension module

The extension module is connected to the left-hand side of the basic CPU module via a multi-pin connector.

A maximum of four CX2500-xxxx modules can be plugged into the CX20xx series in any order, and one module can be plugged into the CX52x0, CX53x0 or CX56x0 series.

Proceed as follows:

1. The left-hand multi-pin connection of a basic CPU module is fitted with a protective cap ex factory. Remove the protective cap from the basic CPU module.
2. Plug the extension module into the left-hand side of the basic CPU module.

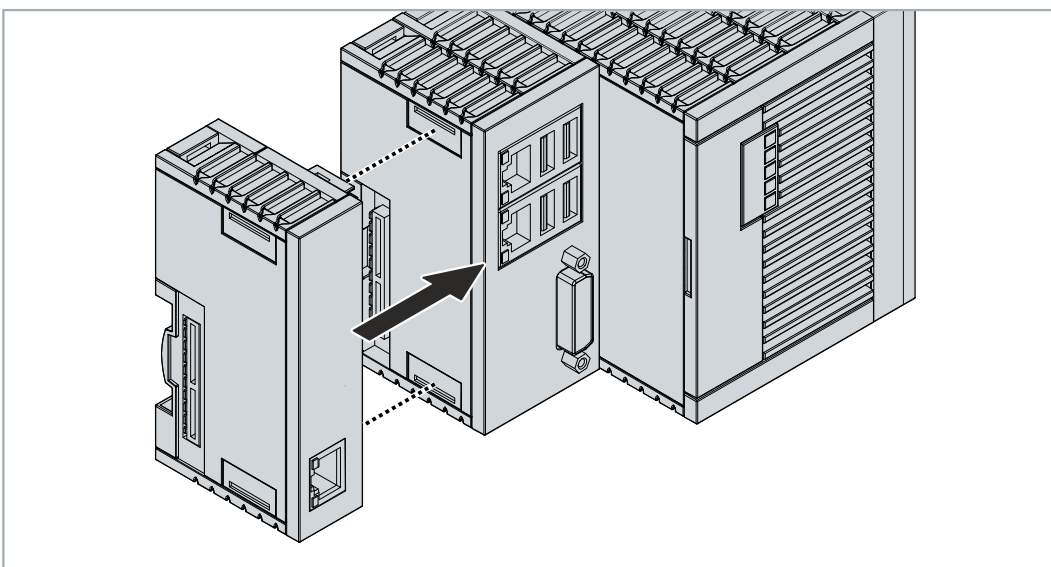


3. The module audibly clicks into place when the module is flush with the housing of the basic CPU module.
 - ⇒ Other modules are plugged in the same way if they are basic CPU modules of type CX20xx. The next step is to install the housing locking clips.

4.2 Installing the housing locking clips


The interlocking of the modules is usually strong enough. However, the controller and its modules may be exposed to shocks, vibrations or impacts. The modules can be securely connected to each other using locking clips.

Proceed as follows:

1. Slide the locking clips between the cooling fins as shown in the illustration until the locking clips are flush with the housing.

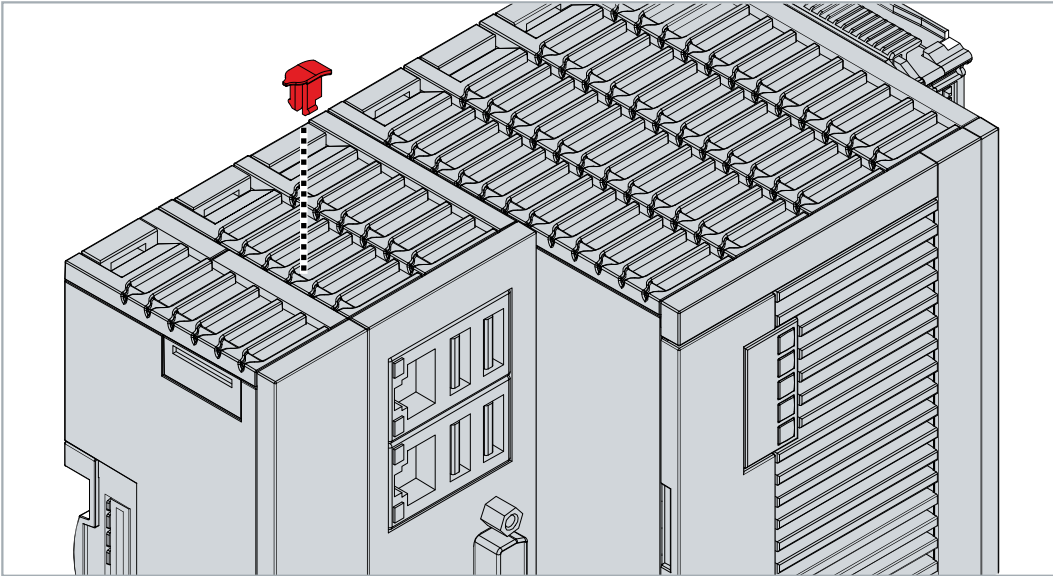



2. The locking clips are inserted on the top and bottom.

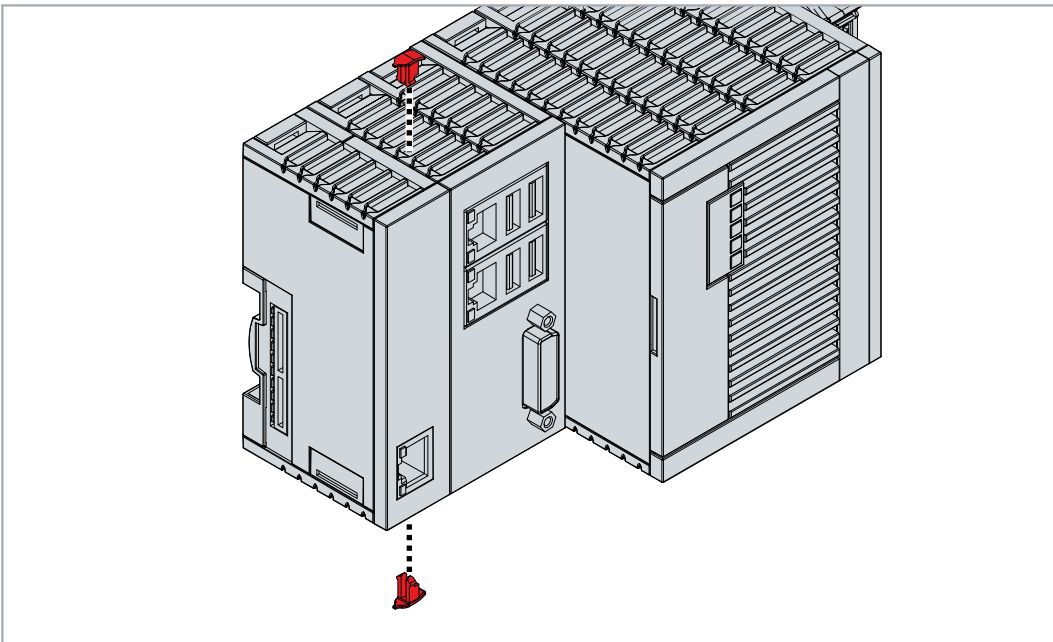

- ⇒ Once all extension modules are locked, the whole assembly can be installed on the DIN rail. To remove, the locking clips are lifted with a screwdriver and pulled out of the housing.

5 Error handling and diagnostics

5.1 Diagnostic LEDs

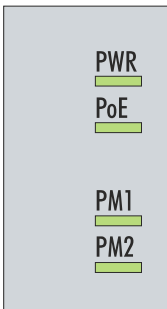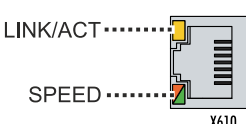Display	LED	Description	Color	Meaning
	PWR	Power supply	green	The power LED lights up when connected to a power supply unit and the power supply is switched on.
	PoE	Displays the state of the connected loads.	green	Lights up green when a load is connected and supplied.
			red	Flashes red in the event of an overload.
	PM1	Indicates the PoE mode	green	Lights up green for loads that are fed from a wire pair (mode A or mode B).
			blue	Lights up blue for loads that are fed from two wire pairs (mode A and mode B).
PM2	Indicates the PoE class of the loads	green	Lights up green for loads with PoE class 0 to 3.	
		blue	Lights up blue for loads with PoE class 4.	
	LINK / ACT	Indicates whether loads are connected.	yellow	The LED lights up yellow when a load is connected. The LED flashes during data traffic.
	SPEED	Indicates the speed of the connection.	green	At speeds of 10 or 100 Mbit/s, the LED lights up green.
			red	In 1000 Mbit/s (Gigabit) mode, the LED lights up red.

5.2 Faults

Please also refer to the Safety instructions section.

Possible faults and their correction

Fault	Cause	Measures
no function after the embedded PC has been switched on	no power supply for the embedded PC, other causes	1. Check the fuse 2. Measure the supply voltage, check the connection, call Beckhoff support
Embedded PC does not boot fully	Hard disk damaged (e.g. due to switching off while software is running), incorrect setup, other causes	Check setup, call Beckhoff Support
Computer boots, software starts, but control does not operate correctly	Cause of the fault is either in the software or in parts of the plant outside the embedded PC	Call the manufacturer of the machine or the software.
Error during CFast card access	CFast card faulty, CFast slot faulty	Use a different CFast card to check the CFast slot, call Beckhoff Support
Embedded PC only works partially or temporarily	Defective components in the embedded PC	Call Beckhoff support

Please make a note of the following information **before** contacting Beckhoff service or support:

1. Precise device ID: CXxxxx-xxxx
2. Serial Number
3. Hardware version
4. any interfaces (N030, N031, B110, ...)
5. TwinCAT version used
6. Any components / software used

The quickest response will come from support / service in your country. Therefore please contact your regional contact. For details please refer to our website at <https://www.beckhoff.com> or ask your distribution partner.

6 Technical data

Technical data	CX2500-1061
Interfaces	1 x Ethernet
Chipset	Intel®-Ethernet-Controller I210
Data transfer rates	10/100/1000 Mbit/s with Power over Ethernet (PoE)
Connection type	1 x RJ45
Power supply	via system bus (through CX2100-0xxx power supply modules)
PoE class	0, 1, 2, 3 and 4 according to PoE standard IEEE 802.3af-2003
max. PoE power output	15.4 W
Max. power consumption	3 W
Dimensions (W x H x D)	24 mm x 99 mm x 54.5 mm
Weight	approx. 208 g
Relative humidity	95 % no condensation
Operating/storage temperature	-25...+60 °C/-40...+85 °C
Vibration/shock resistance	conforms to EN 60068-2-6/EN 60068-2-27
EMC immunity/emission	conforms to EN 61000-6-2/EN 61000-6-4
Protection rating	IP20

7 Appendix

7.1 Accessories

Table 3: Further spare parts.

Order number	Description
CX2900-0101	Housing locking clips (black) for CX52x0, CX56x0 and CX20xx. 10 locking sets of two clips each.
CX2900-0102	Cover for left-side bus connector, 5 pieces

7.2 Certifications

FCC Approvals for the United States of America

FCC: Federal Communications Commission Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Approval for Canada

FCC: Canadian Notice

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.

7.3 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Download finder

Our [download finder](#) contains all the files that we offer you for downloading. You will find application reports, technical documentation, technical drawings, configuration files and much more.

The downloads are available in various formats.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on our internet page: www.beckhoff.com

You will also find further documentation for Beckhoff components there.

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49 5246 963-157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49 5246 963-460
e-mail: service@beckhoff.com

Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20
33415 Verl
Germany

Phone: +49 5246 963-0
e-mail: info@beckhoff.com
web: www.beckhoff.com

List of tables

Table 1	Legend for the structure.....	10
Table 2	Pin assignment of the PoE-capable interface	11
Table 3	Further spare parts.....	17

List of figures

Fig. 1	Structure of a CX2500-1061 extension module.	10
Fig. 2	Ethernet interface (X610).....	11
Fig. 3	CX2500-1061 extension module, dimensions.....	12

More Information:
www.beckhoff.com/CX2500-1061

Beckhoff Automation GmbH & Co. KG
Hülshorstweg 20
33415 Verl
Germany
Phone: +49 5246 9630
info@beckhoff.com
www.beckhoff.com

